



AUDIO CONTROL SWITCH INSPECTION

B3E092000148W02

1. Disconnect the negative battery cable.
2. Remove the driver-side air bag module.(See [DRIVER-SIDE AIR BAG MODULE REMOVAL/INSTALLATION.](#))
3. Disconnect the audio control switch connector.
4. Verify the resistance and continuity between the audio control switch terminals.

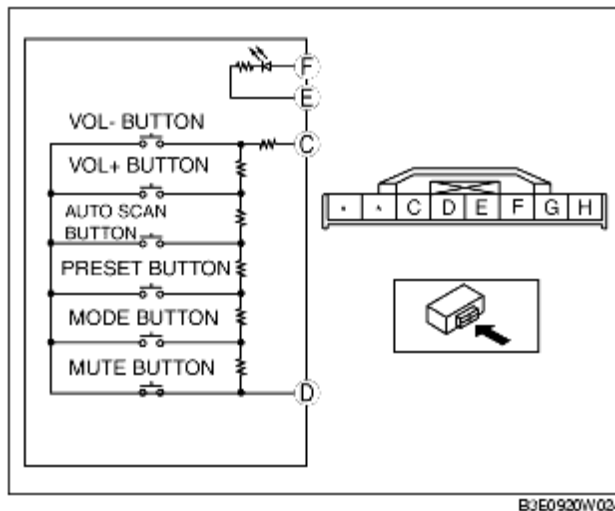

- If the resistance and continuity are not as indicated in the tables, replace the audio control light switch.

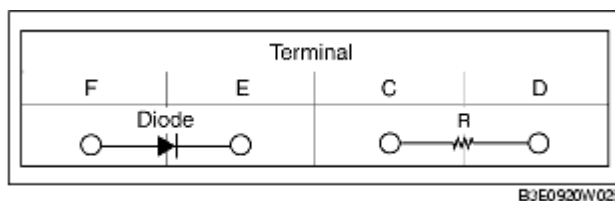

R: : Resistance. See the table.

Switch position	Resistance (ohm)
VOL- button ON	51-56
VOL+ button ON	140-154
AUTO SCAN button ON	286-315
PRESET button ON	534-589
MODE button ON	985-1,080
MUTE button ON	1,940-2,130
OFF	4,800-5,290