


CENTER PANEL MODULE CONSTRUCTION

B3E092066900T02

Structural View

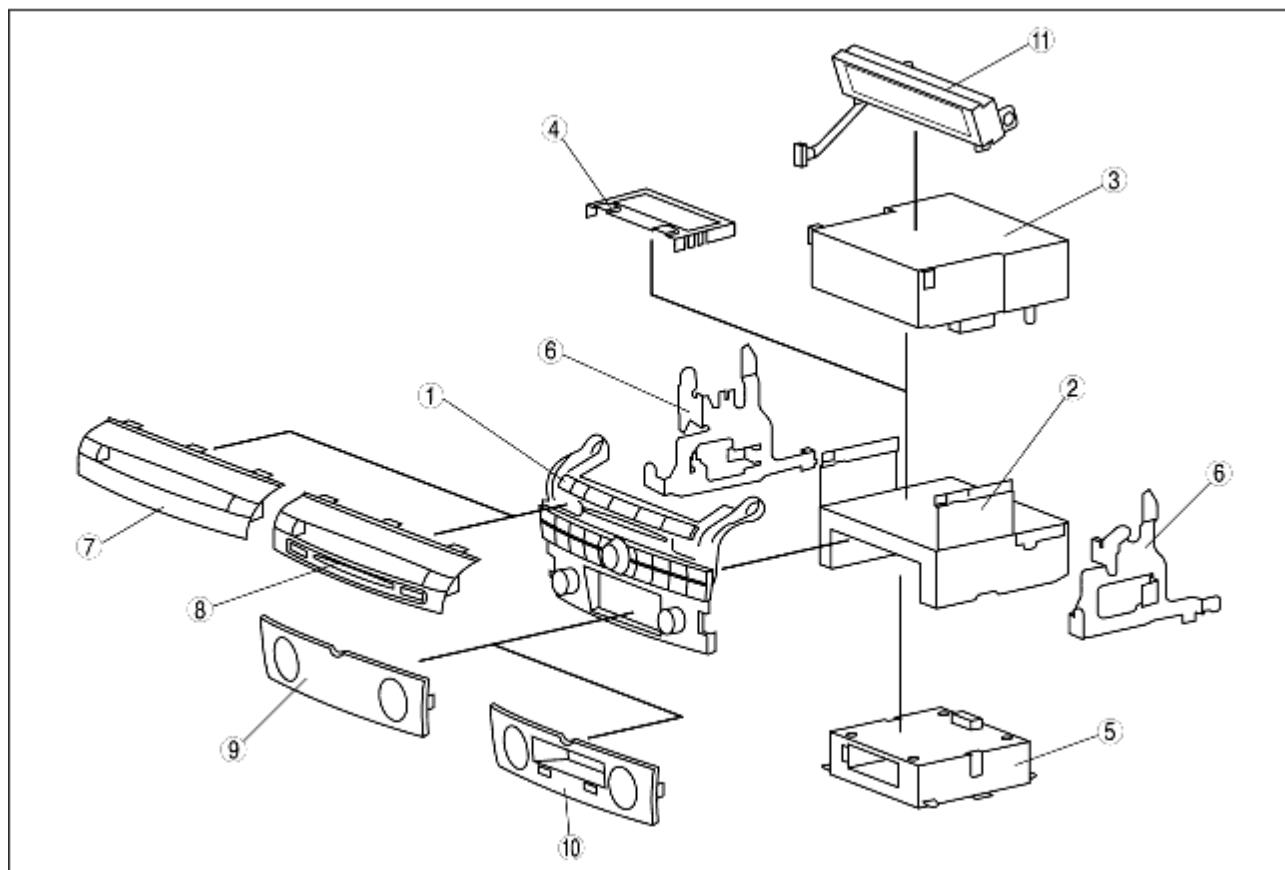


B3E0920T003


1	Center panel
2	Base unit
3	Upper module
4	Cover (without upper module)
5	Lower module
6	Bracket
7	Cover (without upper module)
8	Cover (with upper module)
9	Cover (without lower module)
10	Cover (with lower module)
11	Information display

Terminal Layout and Signal


Audio unit

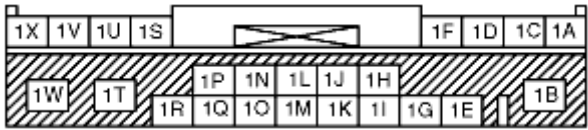Terminal	Signal
	A Left front door speaker (+)
	B B+ (Power back up)
	C Left front door speaker (-)
	D Right front door speaker (+)
	E Illumination (+)
	F Right front door speaker (-)
	G Illumination (-)
	H -
	I -
	J -
	K -
	L -
	M UART 1
	N Audio control switch 1
	O CAN (+)
	P Audio control switch 2
	Q CAN (-)
	R ACC
	S Left rear door speaker (+)
	T Signal ground
	U Left rear door speaker (-)
	V Right rear door speaker (+)
	W Power ground
	X Right rear door speaker (-)

Information display harness

Terminal	Signal
	A LCD DRV+
	B ACC
	C LCD RS
	D LCD AC
	E LCD CS
	F LCD SCL
	G LCD DATA
	H SUB RST
	I LCD INH
	J Digital ground
	K Illumination (+)
	L Illumination (-)
	M -
	N -

Button Location

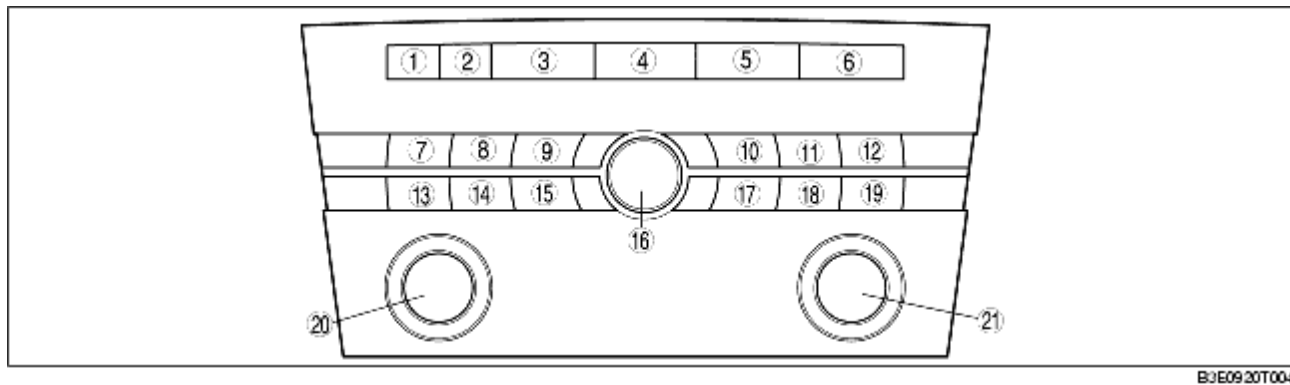

B3E09.20T004

No.	Button	Related system
1	CLOCK button	Information display
2	INFO button (with drive information system)	Information display
	SET button (without drive information system)	Information display
3	FM1/2 button	Audio system
4	AM button	Audio system
5	CD button	Audio system
6	TAPE/MD button	Audio system
7	SEEK UP button (with RDS)	Audio system
	Preset button "1" (without RDS)	Audio system
8	TA button (with RDS)	Audio system
	Preset button "2" (without RDS)	Audio system
9	PTY button (with RDS)	Audio system
	Preset button "3" (without RDS)	Audio system
10	Preset button "1" (with RDS)	Audio system
	RPT button (with RDS)	Audio system
11	Preset button "2" (with RDS)	Audio system
	SCAN button (without RDS)	Audio system
12	Preset button "3" (with RDS)	Audio system
	SEEK UP button (without RDS)	Audio system
13	SEEK DOWN button (with RDS)	Audio system
	Preset button "4" (without RDS)	Audio system
14	PROG button (with RDS)	Audio system
	Preset button "5" (without RDS)	Audio system
15	AF button (with RDS)	Audio system
	Preset button "6" (without RDS)	Audio system
16	POWER/VOLUME button	Audio system
17	Preset button "4" (with RDS)	Audio system
	RDM button (without RDS)	Audio system
18	Preset button "5" (with RDS)	Audio system
	PROG button (without RDS)	Audio system
19	Preset button "6" (with RDS)	Audio system
	SEEK DOWN button (without RDS)	Audio system
20	TUNE/TEXT/AUTO-M button (with RDS)	Audio system

	AUDIO CONT button (without RDS)	Audio system
21	AUDIO CONT button (with RDS)	Audio system
	TUNE/TEXT/AUTO-M button (without RDS)	Audio system