


# LCD UNIT REMOVAL/INSTALLATION

B3E092066901W01

1. Disconnect the negative battery cable.
2. Remove the decoration panel. (See [DECORATION PANEL REMOVAL/INSTALLATION](#).)
3. Remove in the order indicated in the table.

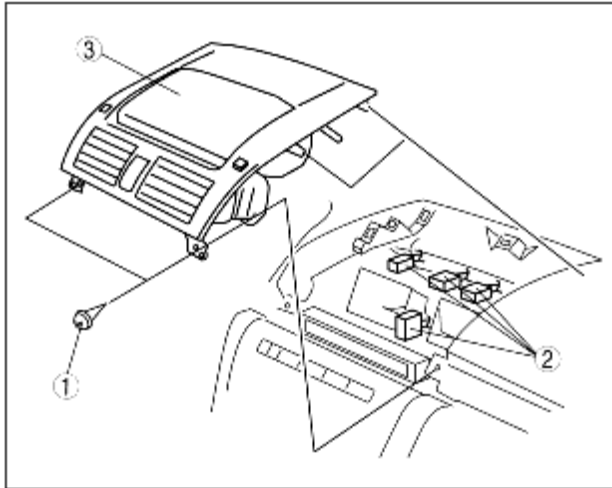


B3E0920W011

1	Screw
2	Connector
3	LCD unit (See <a href="#">LCD Unit Removal Note</a> .)

4. Install in the reverse order of removal.

## LCD Unit Removal Note

1. Pull the lower LCD unit outward, detach clip A and pin B from the dashboard, and then remove the LCD unit.

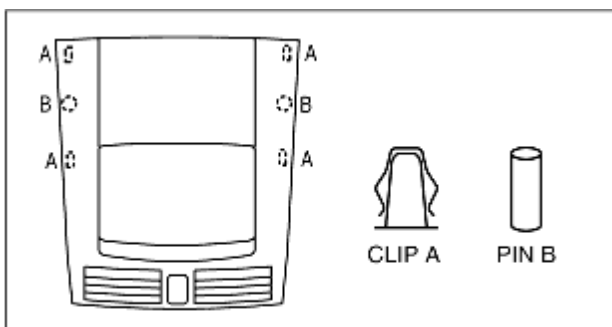

B3E0920W012