

## GYRO SENSOR FUNCTION

---

B3E092066902T03

- The gyro sensor is located in the navigation unit. The sensor converts yaw rate, which is one of the inputs used in calculating the vehicle direction of travel from the vehicle cornering angle, into electrical signals. It then sends these signals to the navigation unit.