


CENTER ROOF ANTENNA REMOVAL/INSTALLATION

B3E092066931W01

1. Disconnect the negative battery cable.
2. Remove the following parts:
 - (1) Sunroof seaming welt (vehicles with sunroof)
 - (2) Console (4SD) (See [CONSOLE REMOVAL/INSTALLATION.](#))
 - (3) A-pillar trim (See [A-PILLAR TRIM REMOVAL/INSTALLATION.](#))
 - (4) Upper anchor of the front seat belt (See [FRONT SEAT BELT REMOVAL/INSTALLATION.](#))
 - (5) Front scuff plate (See [FRONT SCUFF PLATE REMOVAL/INSTALLATION.](#))
 - (6) Rear scuff plate (See [REAR SCUFF PLATE REMOVAL/INSTALLATION.](#))
 - (7) B-pillar lower trim (See [B-PILLAR LOWER TRIM REMOVAL/INSTALLATION.](#))
 - (8) B-pillar upper trim (See [B-PILLAR UPPER TRIM REMOVAL/INSTALLATION.](#))
 - (9) Rear seat (See [REAR SEAT REMOVAL/INSTALLATION.](#))
 - (10) Tire house trim (See [TIRE HOUSE TRIM REMOVAL/INSTALLATION.](#))
 - (11) Trunk side upper trim (5HB) (See [TRUNK SIDE UPPER TRIM REMOVAL/INSTALLATION.](#))
 - (12) C-pillar trim (See [C-PILLAR TRIM REMOVAL/INSTALLATION.](#))
 - (13) Map light (See [MAP LIGHT REMOVAL/INSTALLATION.](#))
 - (14) Interior light (See [INTERIOR LIGHT REMOVAL/INSTALLATION.](#))
 - (15) Sunvisor (See [SUNVISOR REMOVAL/INSTALLATION.](#))
 - (16) Assist handle (See [ASSIST HANDLE REMOVAL/INSTALLATION.](#))
 - (17) Remove the headliner. (See [HEADLINER REMOVAL/INSTALLATION.](#))
3. Remove in the order indicated in the table.

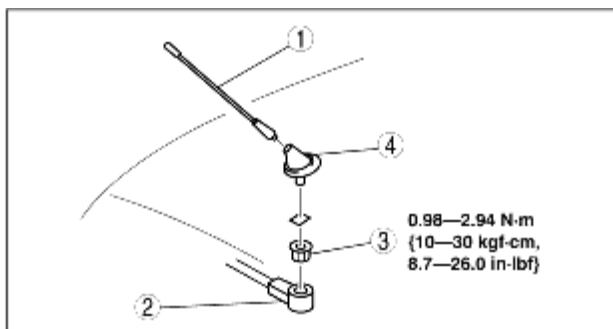

1	Antenna rod
2	Antenna feeder
3	Nut
4	Center roof antenna

4. Install in the reverse order of removal.
5. After installation, verify that the rubber of the center roof antenna is installed to the roof panel with no space between them.