


FRONT DOOR SPEAKER INSPECTION

B3E092066961W02

1. Verify the resistance between front door speaker terminals.

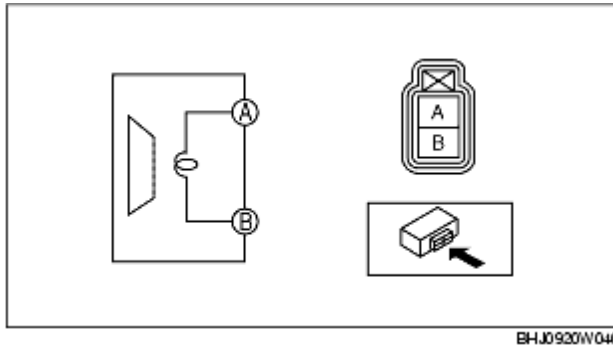

- If the resistance is not within the specification, replace the front door speaker.

Resistance
4 ohms

2. Connect a **1.5 V** battery to the front door speaker and verify that noise is sound from the front door speaker.

- If no sound is output, replace the front door speaker.