


REAR DOOR SPEAKER INSPECTION

B3E092066961W04

1. Verify the resistance between rear door speaker terminals.

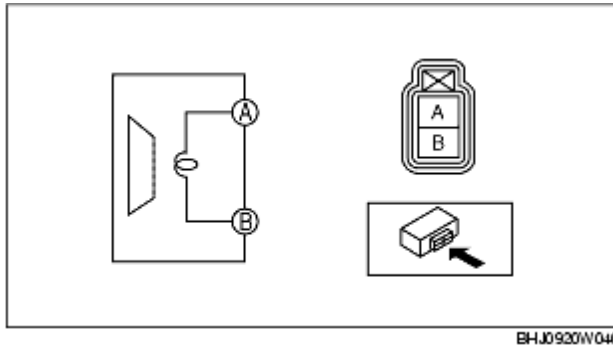

- If the resistance is not within the specification, replace the rear door speaker.

Resistance
4 ohms

2. Connect a **1.5 V** battery to the rear door speaker and verify that noise is sound from the rear door speaker.

- If no sound is output, replace the rear door speaker.