


FRONT TWEETER INSPECTION

B3E092066961W06

1. Verify the resistance between front tweeter terminals.

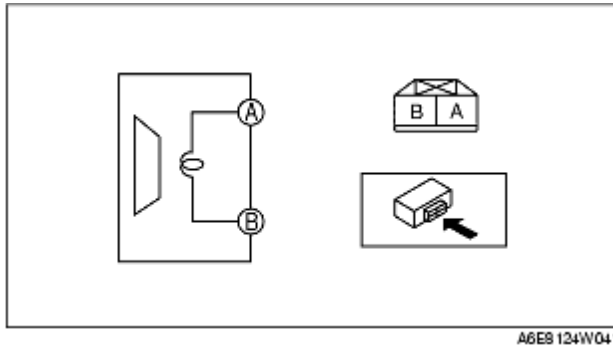

- If the resistance is not within the specification, replace the front tweeter.

Resistance
3.2 ohms

2. Connect a **1.5 V** battery to the front tweeter and verify that noise is sound from the front tweeter.

- If no sound is output, replace the front tweeter.