

# POWER SYSTEMS OUTLINE

---

B3E092101072T01

- All relays and fuses are located in the main fuse block of the engine compartment and passenger junction box (PJB).
- The keyless switch is built into the ignition switch.