


IGNITION SWITCH REMOVAL/INSTALLATION

B3E092166151W01

1. Disconnect the negative battery cable.
2. Remove the column cover. (See [COLUMN COVER REMOVAL/INSTALLATION](#).)
3. Remove in the order indicated in the table.

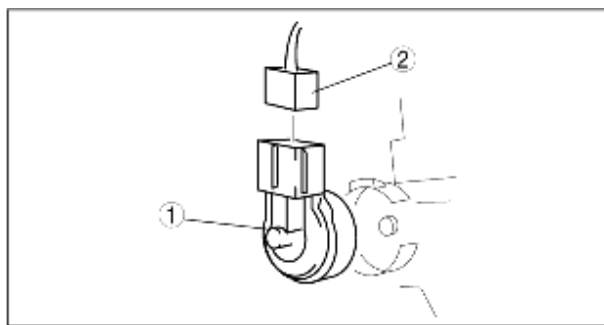


B3E0921W005

1	Ignition switch
2	Connector (See Connector Removal Note .) (See Connector Installation Note .)

4. Install in the reverse order of removal.

Connector Removal Note

1. Rotate the lever in the direction of the arrow and remove the connector.

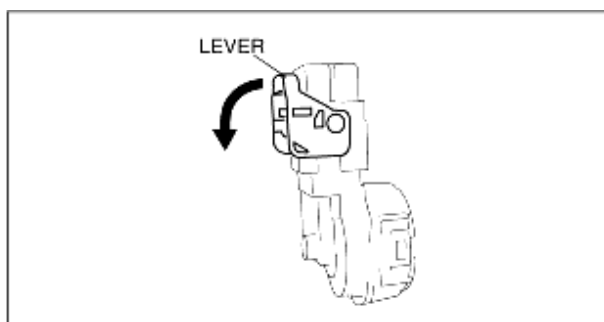

B3E0921W006

Connector Installation Note

1. After connecting the connector, rotate the lever in the direction of the arrow to install the connector.

