


IGNITION SWITCH INSPECTION

B3E092166151W02

1. Verify that the continuity between the ignition switch terminals is as indicated in the table.

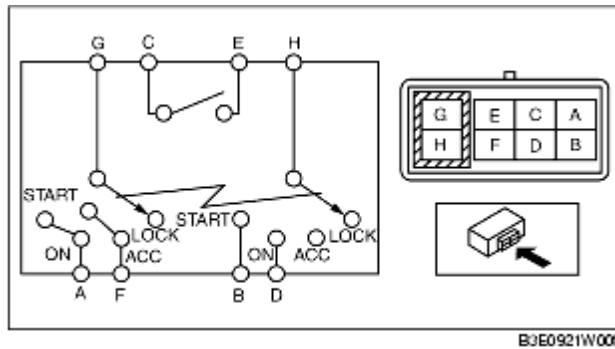

- If not as indicated in the table, replace the ignition switch.

○—○: Continuity

Ignition key position	Terminal							
	A	B	C	D	E	F	G	H
LOCK								
ACC						○—○		
ON	○—○					○—○		
START	○—○						○—○	
Key inserted			○—○					
Key removed								

B3E0921W009