

RELAY INSPECTION


B3E092167730W02

Relay type

Terminal type	Part name
4 terminals	Type A <ul style="list-style-type: none"> • Front fog light relay • Running light relay • A/C relay • Rear window defroster relay • Fuel pump relay • Horn relay
	Type B <ul style="list-style-type: none"> • Main relay • Starter relay • Blower relay • Headlight cleaner relay

Type A

1. Verify the continuity between the relay terminals.

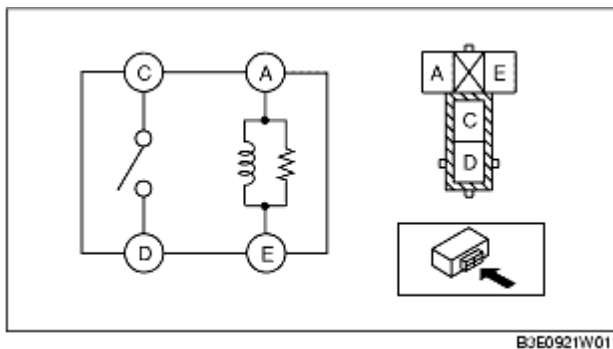

- If not as indicated in the table, replace the relay.

○—○ : Continuity				
Step	Terminal			
	A	E	C	D
1	○	○		
2	B+	GND	○	○

CHU0921W005

Type B

1. Verify the continuity between the relay terminals.

- If not as indicated in the table, replace the relay.

Step	Terminal			
	B	D	A	E
1	○	○		
2	B+	GND	○	○

○—○ : Continuity

B3E0921W002