


INSTRUMENTATION/DRIVER INFO. LOCATION INDEX

B3E092201067W01

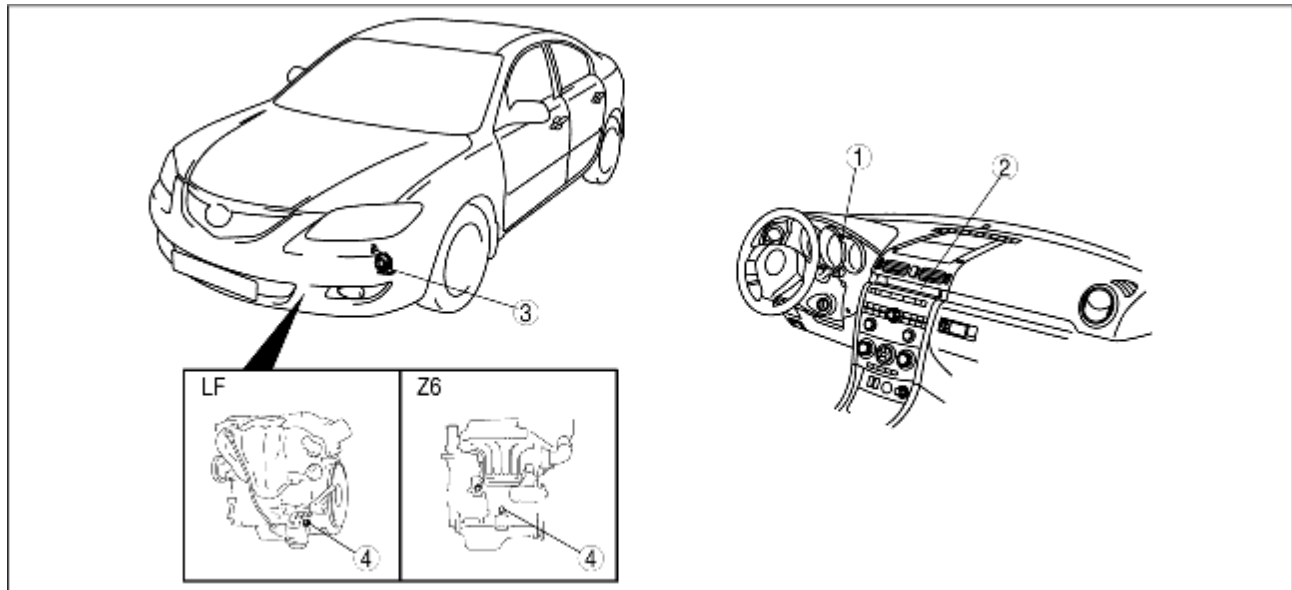

B3E0922W012

1	Instrument cluster (See INSTRUMENT CLUSTER REMOVAL/INSTALLATION) (See INSTRUMENT CLUSTER DISASSEMBLY/ASSEMBLY) (See INSTRUMENT CLUSTER INSPECTION) (See INSTRUMENT CLUSTER INPUT/OUTPUT CHECK MODE)
2	Information display (See INFORMATION DISPLAY REMOVAL/INSTALLATION)
3	Horn (See HORN REMOVAL/INSTALLATION)
4	Oil pressure switch (See OIL PRESSURE SWITCH INSPECTION)