

OIL PRESSURE SWITCH INSPECTION

B3E092218500W01

1. Verify that the oil pressure warning light illuminates when the ignition switch is at the ON position.
2. Verify that the oil pressure warning light goes out when the engine is started.
 - If the oil pressure warning light does not illuminate or remains illuminated, inspect the related wiring harness.
 - If the related wiring harness is normal, inspect the oil pressure. (See [OIL PRESSURE INSPECTION \[LF\]](#), [OIL PRESSURE INSPECTION \[ZJ, Z6\]](#).)
 - If the oil pressure is normal, replace the oil pressure switch.