


INSTRUMENT CLUSTER SYSTEM WIRING DIAGRAM


B3E092255430T04

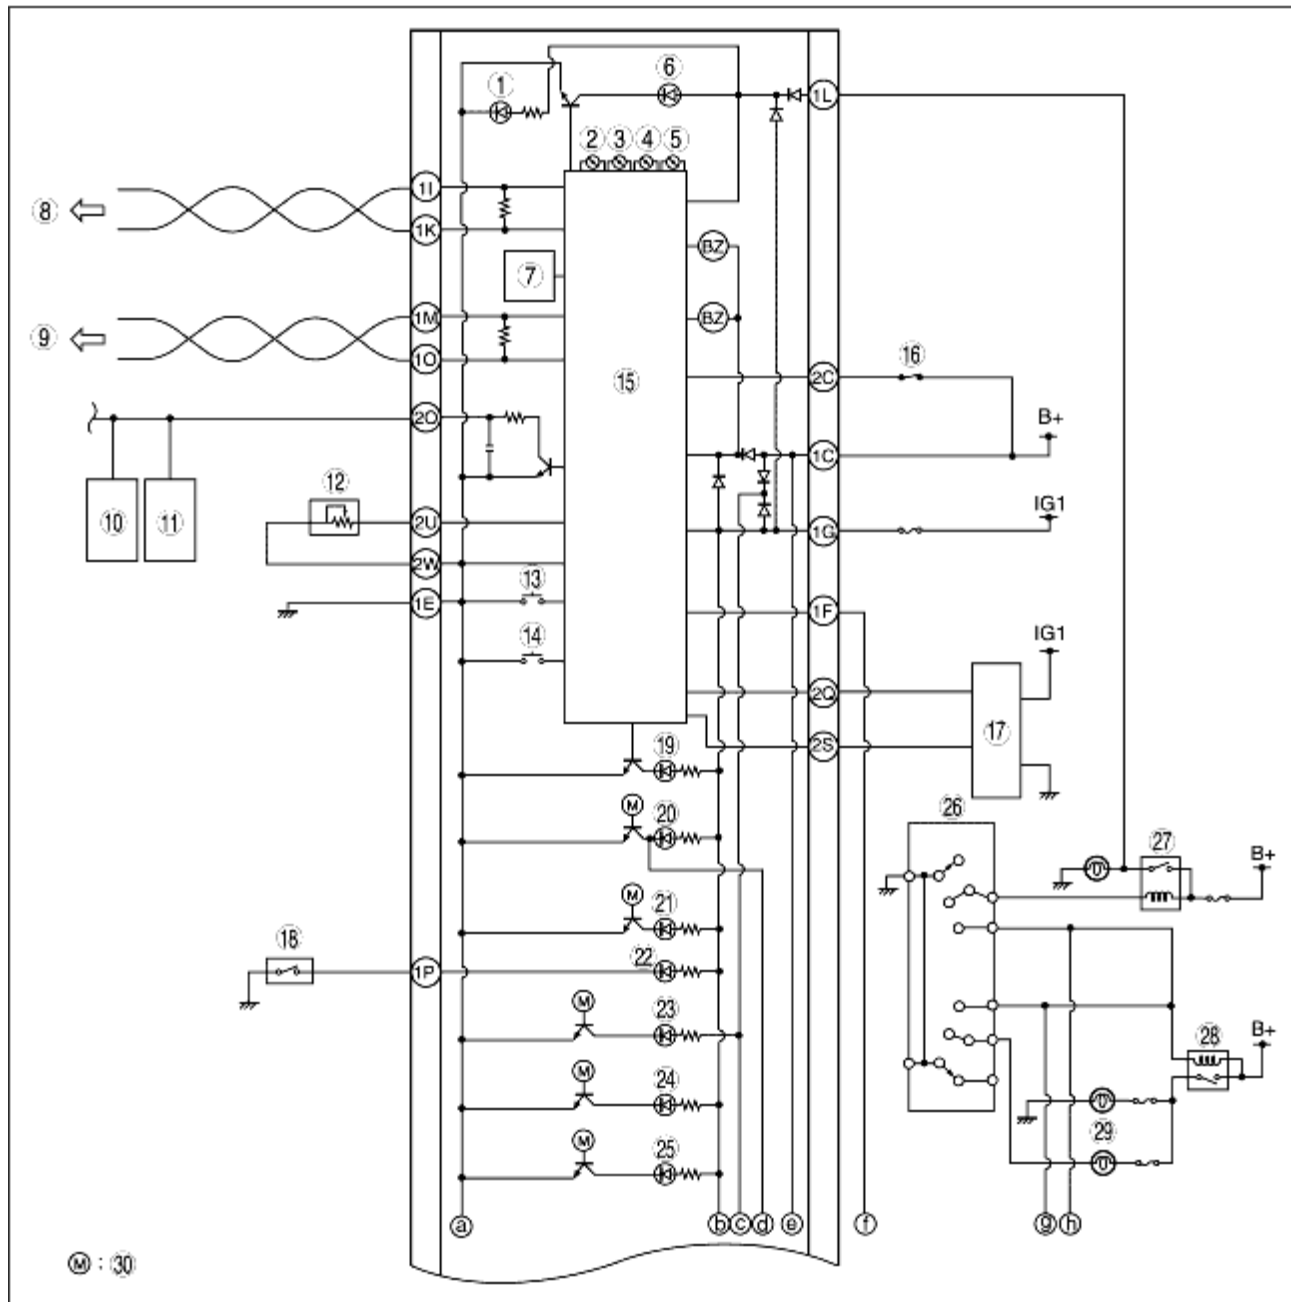

B3E0922T001

1	TNS indicator light
2	Water temperature gauge
3	Fuel gauge
4	Tachometer
5	Speedometer
6	Instrument cluster illumination

7	Odometer/tripmeter
8	CAN system-related module (PCM, EHPAS control module, DSC HU/CM or ABS HU/CM)
9	CAN system-related module (PJB, Climate control unit, SAS unit, Audio unit (base module))
10	Car-navigation unit
11	Auto leveling control unit
12	Fuel gauge sender unit
13	Tripmeter switch
14	Dimmer switch
15	Microcomputer
16	Key reminder switch (ignition switch)
17	Coil
18	Washer fluid-level sensor
19	Fuel-level warning light
20	Generator warning light
21	MIL
22	Washer fluid-level warning light
23	Door ajar warning light
24	Seat belt warning light
25	AT warning light
26	Light switch
27	TNS relay (passenger junction box (PJB))
28	Headlight relay (passenger junction box (PJB))
29	Headlight
30	To microcomputer

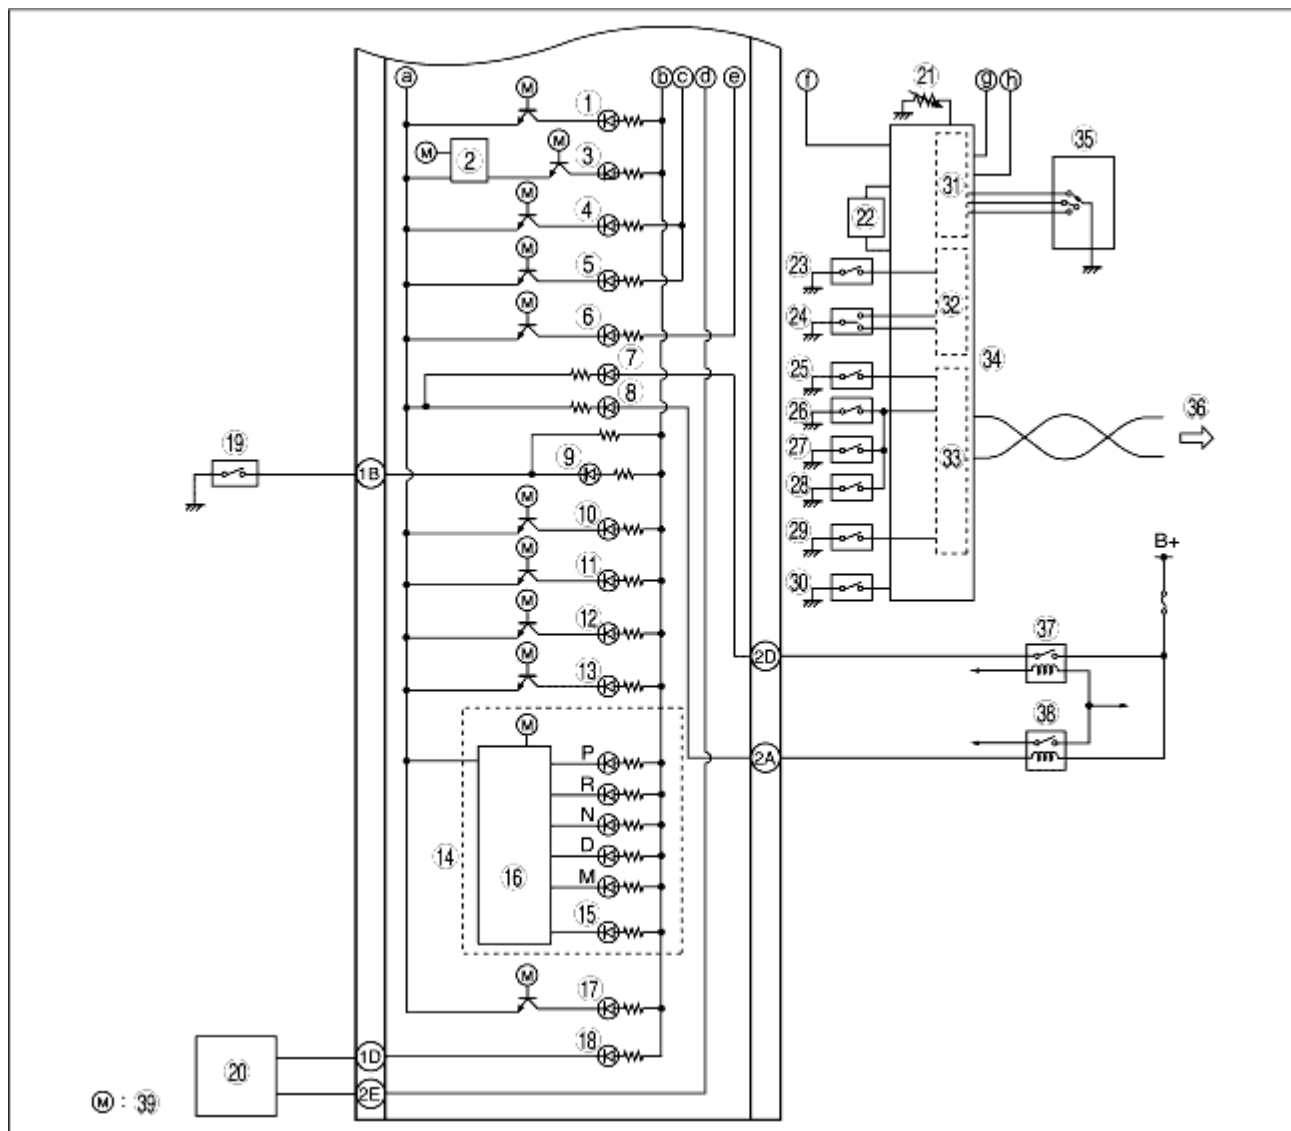

B3E09 22T002

1	High-beam indicator light
2	Circuit for failure detection
3	Air bag system warning light
4	Turn indicator light (LH)
5	Turn indicator light (RH)
6	Security light
7	Front fog indicator light
8	Rear fog indicator light
9	Oil pressure warning light
10	DSC indicator light
11	DSC OFF light
12	ABS warning light
13	Brake system warning light
14	ATX only
15	Gear position indicator
16	Selector indicator drive circuit

17	EHPAS warning light
18	Auto leveling indicator light
19	Oil pressure switch
20	Auto leveling control unit
21	Panel light control switch
22	Ambient temperature sensor
23	Hazard warning switch
24	Turn switch
25	Door latch switch (driver's side)
26	Door latch switch (passenger's side)
27	Door latch switch (RR)
28	Door latch switch (RL)
29	Liftgate latch switch
30	Parking brake switch
31	Headlight control
32	Flasher control
33	Door lock control
34	Passenger junction box (PJB)
35	Light switch
36	Can system-related module
37	Front fog light relay
38	Rear fog light relay
39	To microcomputer