


LIGHTS-ON REMINDER WARNING ALARM CONSTRUCTION/OPERATION

B3E092255430T08

System Wiring Diagram

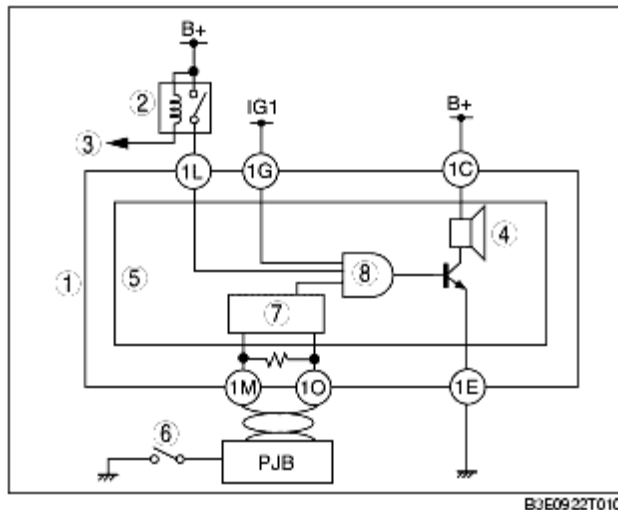

1	Instrument cluster
2	TNS relay
3	To light switch
4	Buzzer
5	Microcomputer
6	Door switch (driver's side)
7	CAN control circuit
8	AND

Operation

- The buzzer in the instrument cluster sounds continuously when all the following three conditions are met:
 - The ignition switch is in the LOCK or ACC position.
 - The headlight switch is in the TNS or headlight position.
 - The driver-side door is open (driver-side door switch is on).