


COWL SIDE REINFORCEMENT REMOVAL

B3E098053290B01

1. Remove the cowl side reinforcement.

Caution

- Be careful not to damage the windshield when drilling the 2 locations indicated by (A).

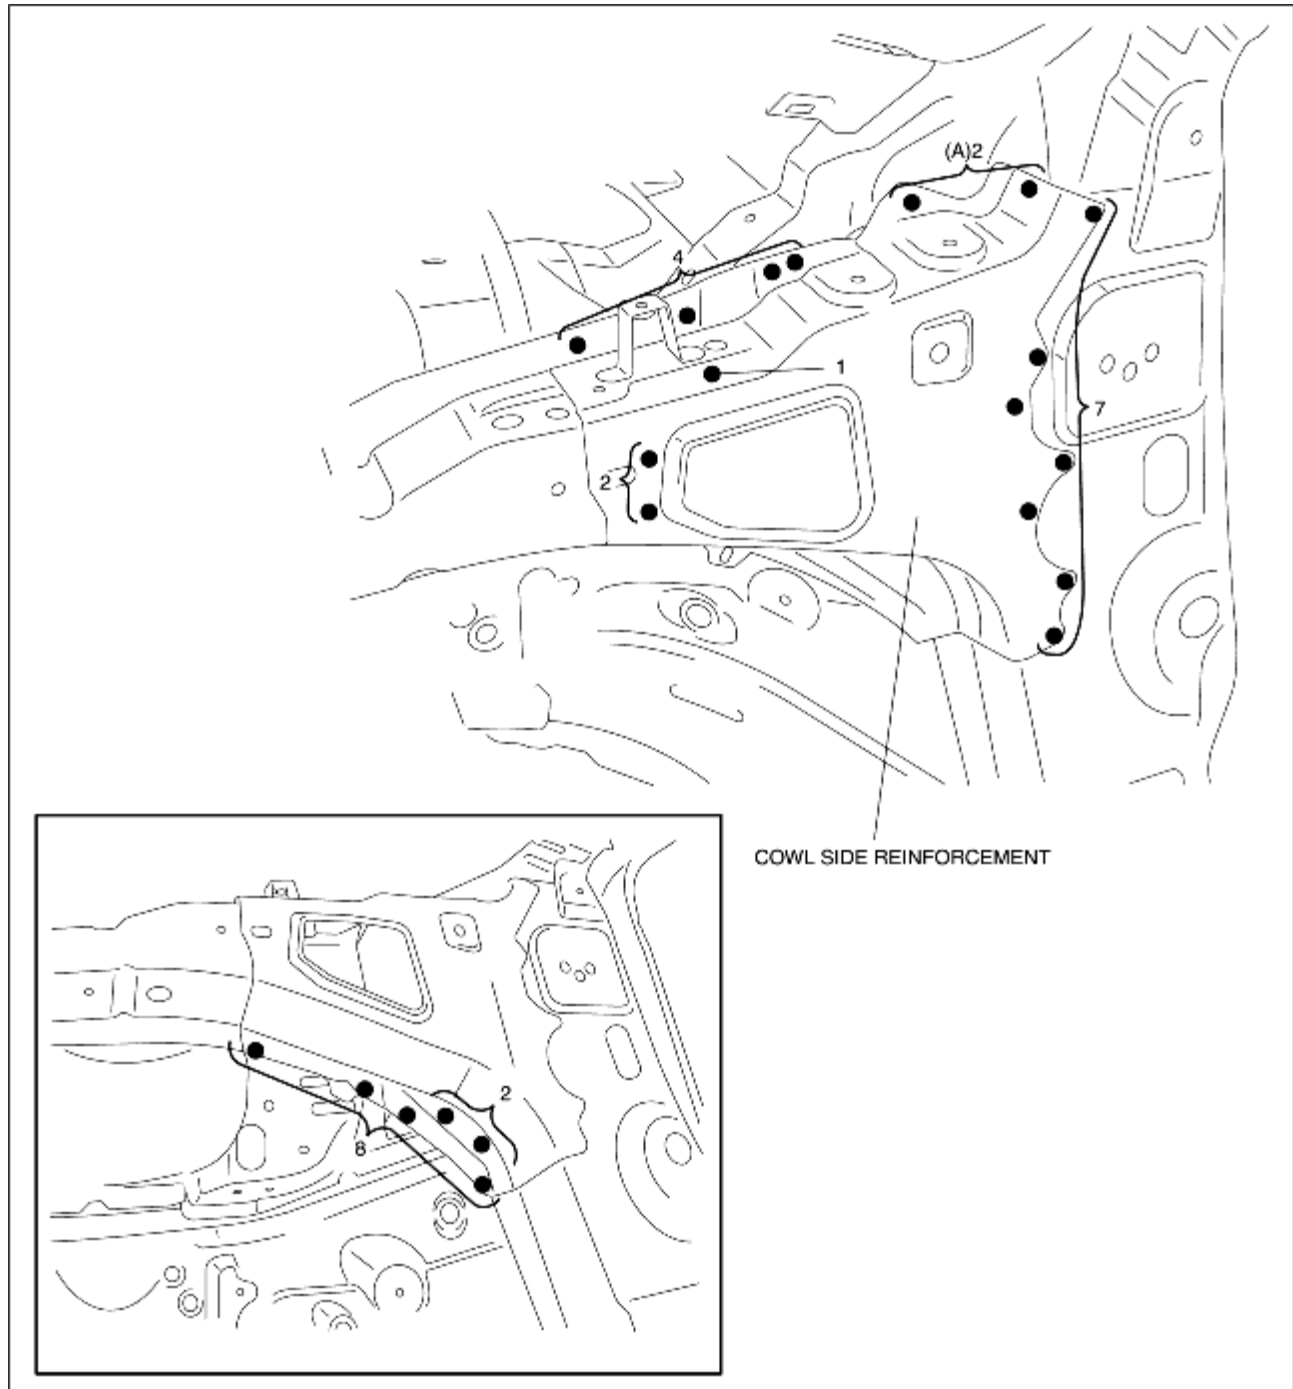

B3E0980B051