

SIDE SILL PANEL REMOVAL

B3E098070270B01


1. Rough cut area (A), drill the 99 locations indicated by (B), the 2 locations (4SD) or 3 locations (5HB) indicated by (C), and then remove the side sill (outer).

Caution

- Avoid cutting with a blowtorch or similar tools as the insulator (shaded area) is flammable.

2. Rough cut area (D) and drill the 3 locations indicated by (E).

3. Drill the 4 locations indicated by (F) from the interior and remove the side sill reinforcement.

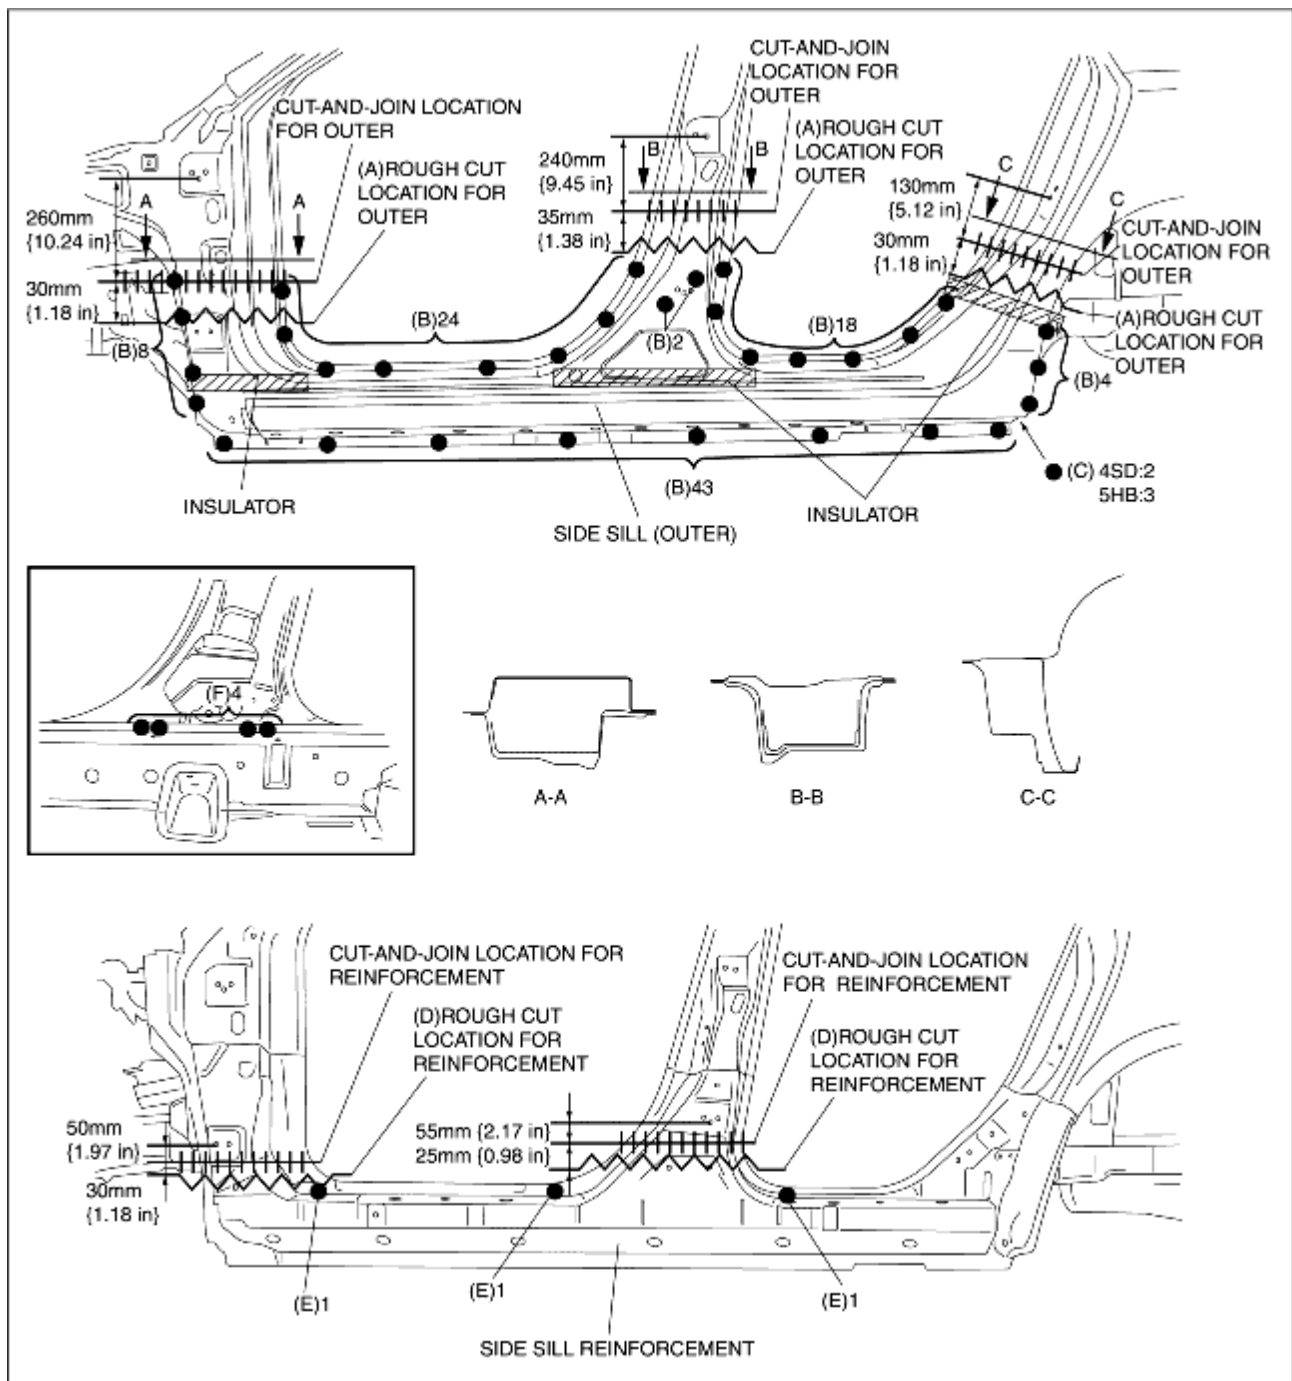

B3E0980B092