

## CENTER PILLAR REMOVAL

---

B3E098070350B01

1. Rough cut area (A), drill the 59 locations indicated by (B), and then remove the center pillar (outer).

### **Caution**

- Avoid cutting with a blowtorch or similar tools as the insulator (shaded area) is flammable.

2. Rough cut area (C), drill the 18 locations indicated by (D), and then remove the center pillar reinforcement.
3. Rough cut area (E), drill the 4 locations indicated by (F), and then remove the side sill reinforcement.
4. Drill the 19 locations indicated by (G) and remove the center pillar (inner).



