

REAR FENDER PANEL REMOVAL


B3E098074100B01

4SD

Caution

- Avoid cutting with a blowtorch or similar tools as the insulator (shaded area) is flammable.

1. The rear fender panel and the rear pillar (inner) are joined with glue at the wheel arch line. Use a chisel or similar tool to separate the rear fender panel from the rear pillar (inner), then remove the rear fender panel.

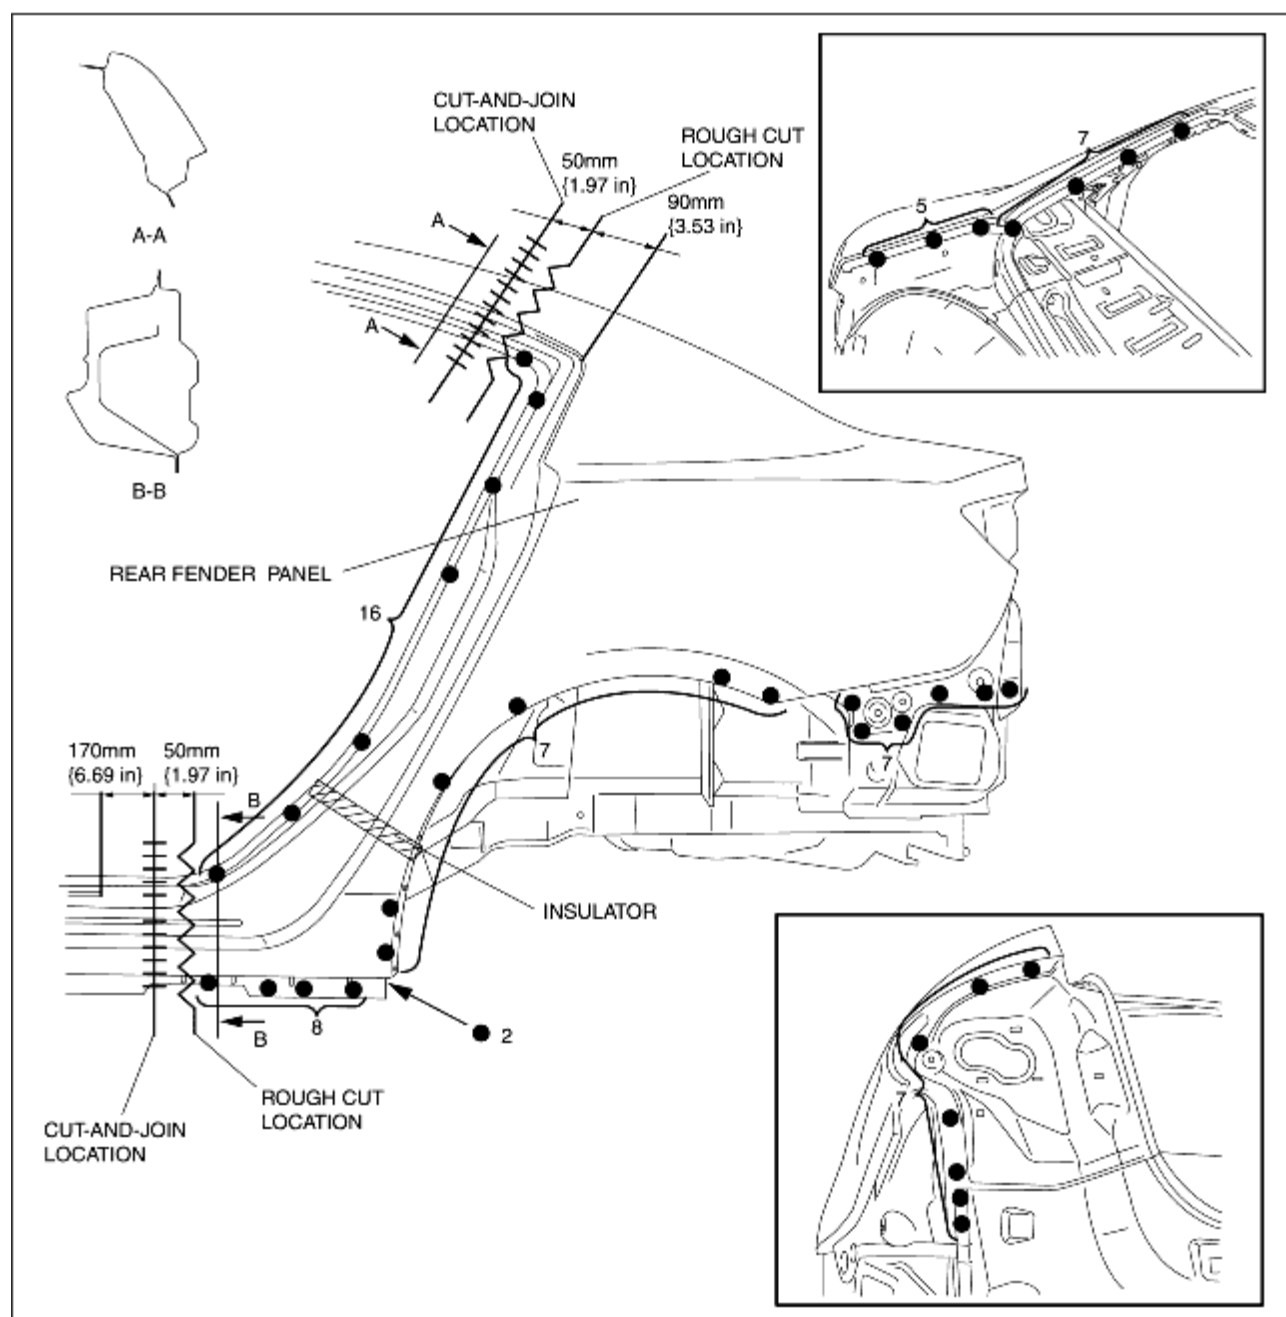


B3E0980B094

5HB

Caution

- Avoid cutting with a blowtorch or similar tools as the insulator (shaded area) is flammable.

1. The rear fender panel and the rear pillar (inner) are joined with glue at the wheel arch line. Use a chisel or similar tool to separate the rear fender panel from the rear pillar (inner), then remove the rear fender panel.

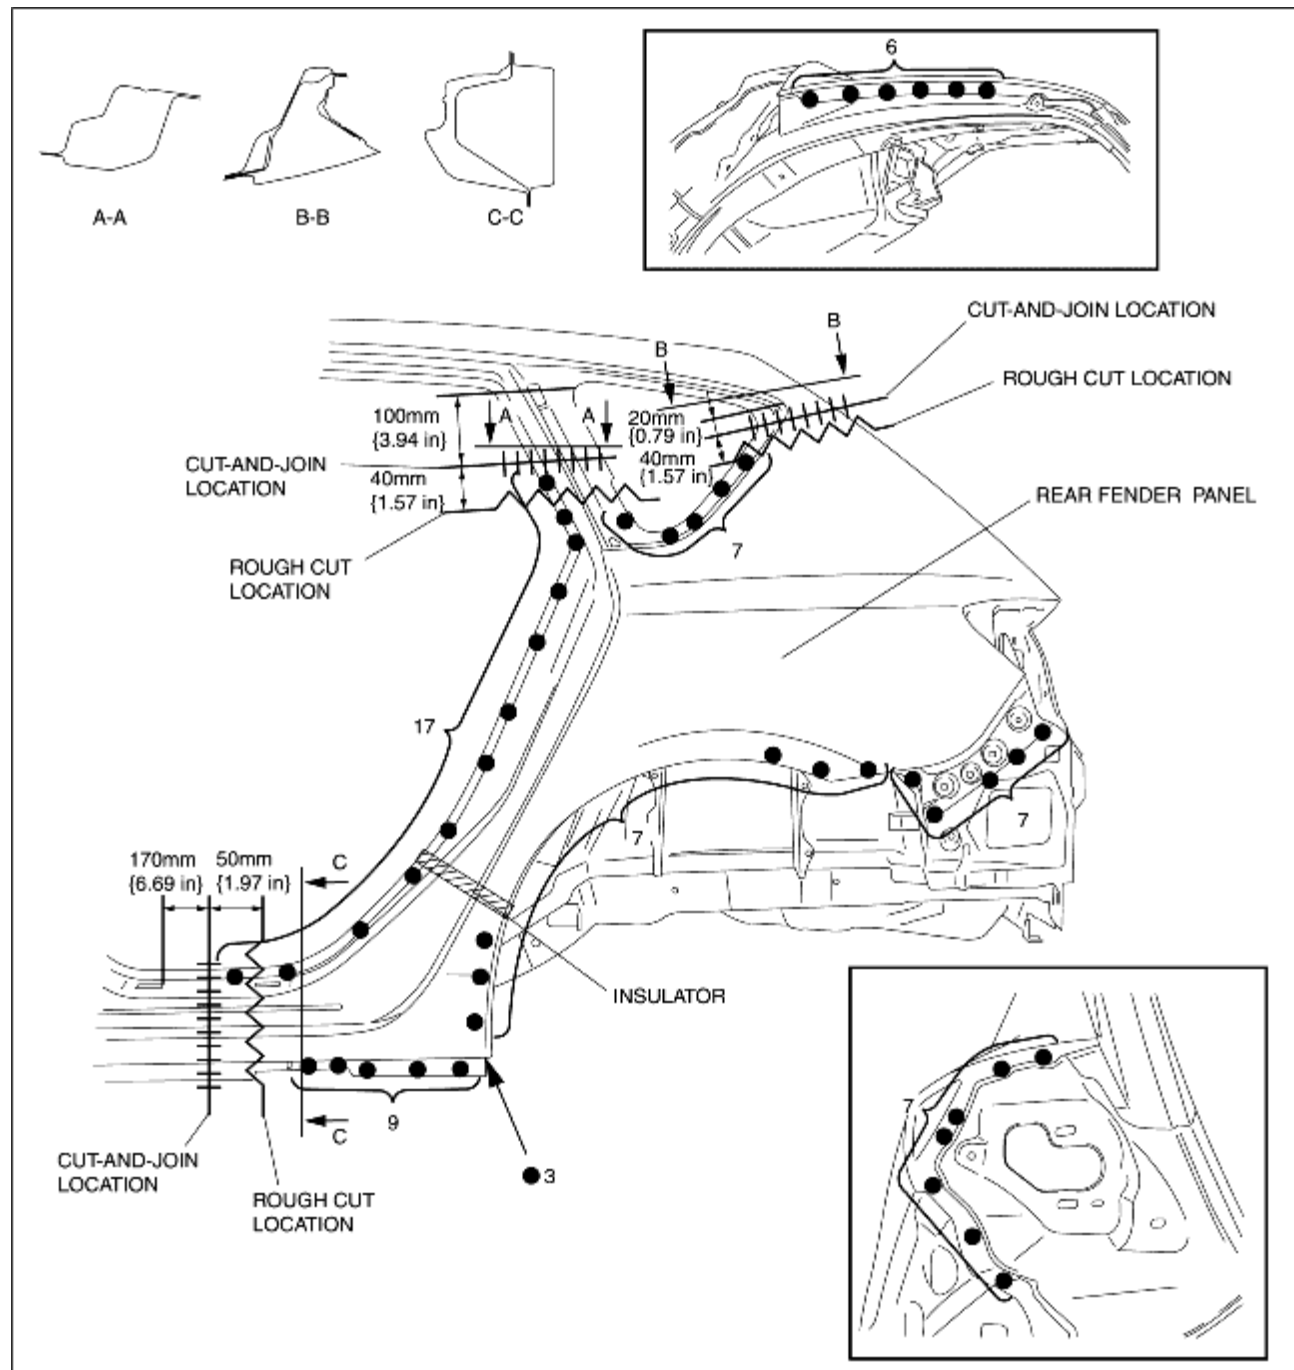

B3E0980B085