

- [!\[\]\(1207edb9a08751d3d55970560645ed23_img.jpg\) INTAKE-AIR SYSTEM LOCATION INDEX \[ZJ, Z6\]](#)
- [!\[\]\(d7a34a706cfa4ef37c62a369101e1b36_img.jpg\) INTAKE-AIR SYSTEM DIAGRAM \[ZJ, Z6\]](#)
- [!\[\]\(7325769475e8f4bf67f57a0cbebc8ab9_img.jpg\) INTAKE-AIR SYSTEM HOSE ROUTING DIAGRAM \[ZJ, Z6\]](#)
- [!\[\]\(1a468f12cdfc63dc07896d0781cf55ec_img.jpg\) INTAKE-AIR SYSTEM MANIFOLD VACUUM INSPECTION \[ZJ, Z6\]](#)
- [!\[\]\(a9a0baec8ceb7d7c04180806eca8d32a_img.jpg\) INTAKE-AIR SYSTEM REMOVAL/INSTALLATION \[ZJ, Z6\]](#)
- [!\[\]\(c1ab807d6aebb565b3082513037b5622_img.jpg\) AIR CLEANER ELEMENT INSPECTION \[ZJ, Z6\]](#)
- [!\[\]\(083bb479299cb5e55cd99db0433ca6ba_img.jpg\) IDLE AIR CONTROL \(IAC\) VALVE REMOVAL/INSTALLATION \[ZJ, Z6\]](#)
- [!\[\]\(ede41f318336daae6cce8449321d11ea_img.jpg\) IDLE AIR CONTROL \(IAC\) VALVE INSPECTION \[ZJ, Z6\]](#)
- [!\[\]\(b0cd9d88e5935e4c3891570bfdded05c_img.jpg\) VARIABLE INTAKE-AIR SHUTTER VALVE ACTUATOR REMOVAL/INSTALLATION \[Z6\]](#)
- [!\[\]\(81bb4e52f43acc06353225c332f66031_img.jpg\) VARIABLE INTAKE-AIR SHUTTER VALVE ACTUATOR INSPECTION \[Z6\]](#)
- [!\[\]\(4862a3d83a50b6aa02d9ef677ec36116_img.jpg\) VARIABLE TUMBLE SHUTTER VALVE ACTUATOR REMOVAL/INSTALLATION \[ZJ, Z6\]](#)
- [!\[\]\(b564abb3972f4216a833af91832e1619_img.jpg\) VARIABLE TUMBLE SHUTTER VALVE ACTUATOR INSPECTION \[ZJ, Z6\]](#)
- [!\[\]\(3e91863309aa91e589b5ab92c8ebd53f_img.jpg\) ACCELERATOR PEDAL REMOVAL/INSTALLATION \[ZJ, Z6\]](#)
- [!\[\]\(bf6def3f21dfdb4b0473718404626f2c_img.jpg\) ACCELERATOR CABLE INSPECTION/ADJUSTMENT \[ZJ, Z6\]](#)