

- [!\[\]\(1207edb9a08751d3d55970560645ed23\_img.jpg\) CONTROL SYSTEM LOCATION INDEX \[LF\]](#)
- [!\[\]\(d7a34a706cfa4ef37c62a369101e1b36\_img.jpg\) CONTROL SYSTEM DIAGRAM \[LF\]](#)
- [!\[\]\(7325769475e8f4bf67f57a0cbebc8ab9\_img.jpg\) CONTROL SYSTEM WIRING DIAGRAM \[LF\]](#)
- [!\[\]\(1a468f12cdfc63dc07896d0781cf55ec\_img.jpg\) PCM REMOVAL/INSTALLATION \[LF\]](#)
- [!\[\]\(a9a0baec8ceb7d7c04180806eca8d32a\_img.jpg\) PCM INSPECTION \[LF\]](#)
- [!\[\]\(c1ab807d6aebb565b3082513037b5622\_img.jpg\) PCM CONFIGURATION \[LF\]](#)
- [!\[\]\(083bb479299cb5e55cd99db0433ca6ba\_img.jpg\) NEUTRAL SWITCH INSPECTION \[LF\]](#)
- [!\[\]\(ede41f318336daae6cce8449321d11ea\_img.jpg\) CLUTCH PEDAL POSITION \(CPP\) SWITCH INSPECTION \[LF\]](#)
- [!\[\]\(b0cd9d88e5935e4c3891570bfdded05c\_img.jpg\) ENGINE COOLANT TEMPERATURE \(ECT\) SENSOR REMOVAL/INSTALLATION \[LF\]](#)
- [!\[\]\(81bb4e52f43acc06353225c332f66031\_img.jpg\) ENGINE COOLANT TEMPERATURE \(ECT\) SENSOR INSPECTION \[LF\]](#)
- [!\[\]\(4862a3d83a50b6aa02d9ef677ec36116\_img.jpg\) INTAKE AIR TEMPERATURE \(IAT\) SENSOR INSPECTION \[LF\]](#)
- [!\[\]\(b564abb3972f4216a833af91832e1619\_img.jpg\) CRANKSHAFT POSITION \(CKP\) SENSOR INSPECTION \[LF\]](#)
- [!\[\]\(3e91863309aa91e589b5ab92c8ebd53f\_img.jpg\) CRANKSHAFT POSITION \(CKP\) SENSOR REMOVAL/INSTALLATION \[LF\]](#)
- [!\[\]\(bf6def3f21dfdb4b0473718404626f2c\_img.jpg\) CAMSHAFT POSITION \(CMP\) SENSOR INSPECTION \[LF\]](#)
- [!\[\]\(b0485233f98b941f2381b77fe3b6686f\_img.jpg\) CAMSHAFT POSITION \(CMP\) SENSOR REMOVAL/INSTALLATION \[LF\]](#)
- [!\[\]\(fd5c36680d4471e605732b36788643ca\_img.jpg\) THROTTLE POSITION \(TP\) SENSOR INSPECTION \[LF\]](#)
- [!\[\]\(cfcb6e3fe14cf2366208370376c5c0f9\_img.jpg\) THROTTLE POSITION \(TP\) SENSOR REMOVAL/INSTALLATION \[LF\]](#)
- [!\[\]\(17fbea93b96fb691279feb16b3dfba47\_img.jpg\) MASS AIR FLOW \(MAF\) SENSOR INSPECTION \[LF\]](#)
- [!\[\]\(c943c40aac9d4dd9481d8d4b932db11b\_img.jpg\) HEATED OXYGEN SENSOR \(HO2S\) REMOVAL/INSTALLATION \[LF\]](#)
- [!\[\]\(78722dd8a40b4b8cba6c4bc2496af0ff\_img.jpg\) FRONT HEATED OXYGEN SENSOR \(HO2S\) INSPECTION \[LF\]](#)
- [!\[\]\(7ca57550f01dd657cd5fb0b4b39070e5\_img.jpg\) REAR HEATED OXYGEN SENSOR \(HO2S\) INSPECTION \[LF\]](#)
- [!\[\]\(27d08d42762e05345080235dfb8fd4f5\_img.jpg\) MANIFOLD ABSOLUTE PRESSURE \(MAP\) SENSOR INSPECTION \[LF\]](#)
- [!\[\]\(a0120eed5345e3ef041f32d510bbaaa4\_img.jpg\) MANIFOLD ABSOLUTE PRESSURE \(MAP\) SENSOR REMOVAL/INSTALLATION \[LF\]](#)
- [!\[\]\(5d135eaf0db5ba5bb50522e31d409887\_img.jpg\) KNOCK SENSOR \(KS\) INSPECTION \[LF\]](#)
- [!\[\]\(999a3b623d1b2e259ce371a576a89b57\_img.jpg\) KNOCK SENSOR \(KS\) REMOVAL/INSTALLATION \[LF\]](#)
- [!\[\]\(b6fcbc36e74bb8f6df2b3fdc5d230a1a\_img.jpg\) BAROMETRIC PRESSURE \(BARO\) SENSOR REMOVAL/INSTALLATION \[LF\]](#)
- [!\[\]\(32a22410411096e2c8d32731f78c9ccc\_img.jpg\) BAROMETRIC PRESSURE \(BARO\) SENSOR INSPECTION \[LF\]](#)