

- [!\[\]\(1207edb9a08751d3d55970560645ed23\_img.jpg\) MANUAL TRANSAXLE LOCATION INDEX \[G35M-R\]](#)
- [!\[\]\(d7a34a706cfa4ef37c62a369101e1b36\_img.jpg\) NEUTRAL SWITCH REMOVAL/INSTALLATION \[G35M-R\]](#)
- [!\[\]\(7325769475e8f4bf67f57a0cbebc8ab9\_img.jpg\) TRANSAXLE OIL INSPECTION \[G35M-R\]](#)
- [!\[\]\(1a468f12cdfc63dc07896d0781cf55ec\_img.jpg\) TRANSAXLE OIL REPLACEMENT \[G35M-R\]](#)
- [!\[\]\(a9a0baec8ceb7d7c04180806eca8d32a\_img.jpg\) OIL SEAL \(DIFFERENTIAL\) REPLACEMENT \[G35M-R\]](#)
- [!\[\]\(c1ab807d6aebb565b3082513037b5622\_img.jpg\) MANUAL TRANSAXLE REMOVAL/INSTALLATION \[G35M-R\]](#)
- [!\[\]\(083bb479299cb5e55cd99db0433ca6ba\_img.jpg\) INSPECTION AFTER TRANSAXLE OVERHAUL \[G35M-R\]](#)