

- [!\[\]\(1207edb9a08751d3d55970560645ed23_img.jpg\) AUTOMATIC TRANSAXLE LOCATION INDEX](#)
- [!\[\]\(d7a34a706cfa4ef37c62a369101e1b36_img.jpg\) MECHANICAL SYSTEM TEST](#)
- [!\[\]\(7325769475e8f4bf67f57a0cbebc8ab9_img.jpg\) ROAD TEST](#)
- [!\[\]\(1a468f12cdfc63dc07896d0781cf55ec_img.jpg\) AUTOMATIC TRANSAXLE FLUID \(ATF\) INSPECTION](#)
- [!\[\]\(a9a0baec8ceb7d7c04180806eca8d32a_img.jpg\) AUTOMATIC TRANSAXLE FLUID \(ATF\) REPLACEMENT](#)
- [!\[\]\(c1ab807d6aebb565b3082513037b5622_img.jpg\) TRANSAXLE RANGE \(TR\) SWITCH INSPECTION](#)
- [!\[\]\(083bb479299cb5e55cd99db0433ca6ba_img.jpg\) TRANSAXLE RANGE \(TR\) SWITCH REMOVAL/INSTALLATION](#)
- [!\[\]\(ede41f318336daae6cce8449321d11ea_img.jpg\) TRANSAXLE RANGE \(TR\) SWITCH ADJUSTMENT](#)
- [!\[\]\(b0cd9d88e5935e4c3891570bfdded05c_img.jpg\) TRANSAXLE FLUID TEMPERATURE \(TFT\) SENSOR INSPECTION](#)
- [!\[\]\(81bb4e52f43acc06353225c332f66031_img.jpg\) TRANSAXLE FLUID TEMPERATURE \(TFT\) SENSOR REMOVAL/INSTALLATION](#)
- [!\[\]\(4862a3d83a50b6aa02d9ef677ec36116_img.jpg\) INPUT/TURBINE SPEED SENSOR INSPECTION](#)
- [!\[\]\(b564abb3972f4216a833af91832e1619_img.jpg\) INPUT/TURBINE SPEED SENSOR REMOVAL/INSTALLATION](#)
- [!\[\]\(3e91863309aa91e589b5ab92c8ebd53f_img.jpg\) VEHICLE SPEED SENSOR \(VSS\) INSPECTION](#)
- [!\[\]\(bf6def3f21dfdb4b0473718404626f2c_img.jpg\) VEHICLE SPEED SENSOR \(VSS\) REMOVAL/INSTALLATION](#)
- [!\[\]\(b0485233f98b941f2381b77fe3b6686f_img.jpg\) SOLENOID VALVE INSPECTION](#)
- [!\[\]\(fd5c36680d4471e605732b36788643ca_img.jpg\) SOLENOID VALVE REMOVAL/INSTALLATION](#)
- [!\[\]\(cfcb6e3fe14cf2366208370376c5c0f9_img.jpg\) PCM INSPECTION](#)
- [!\[\]\(17fbea93b96fb691279feb16b3dfba47_img.jpg\) PCM REMOVAL/INSTALLATION](#)
- [!\[\]\(c943c40aac9d4dd9481d8d4b932db11b_img.jpg\) AUTOMATIC TRANSAXLE REMOVAL/INSTALLATION \[Z6\]](#)
- [!\[\]\(78722dd8a40b4b8cba6c4bc2496af0ff_img.jpg\) AUTOMATIC TRANSAXLE REMOVAL/INSTALLATION \[LF\]](#)
- [!\[\]\(7ca57550f01dd657cd5fb0b4b39070e5_img.jpg\) OIL SEAL REPLACEMENT \[AUTOMATIC TRANSAXLE\]](#)
- [!\[\]\(27d08d42762e05345080235dfb8fd4f5_img.jpg\) CONTROL VALVE BODY REMOVAL](#)
- [!\[\]\(a0120eed5345e3ef041f32d510bbaaa4_img.jpg\) CONTROL VALVE BODY INSTALLATION](#)
- [!\[\]\(5d135eaf0db5ba5bb50522e31d409887_img.jpg\) OIL COOLER FLUSHING \[AUTOMATIC TRANSAXLE\]](#)
- [!\[\]\(999a3b623d1b2e259ce371a576a89b57_img.jpg\) OIL COOLER REMOVAL/INSTALLATION \(AUTOMATIC TRANSAXLE\) \[Z6\]](#)
- [!\[\]\(b6fcbc36e74bb8f6df2b3fdc5d230a1a_img.jpg\) OIL COOLER REMOVAL/INSTALLATION \(AUTOMATIC TRANSAXLE\) \[LF\]](#)
- [!\[\]\(32a22410411096e2c8d32731f78c9ccc_img.jpg\) DRIVE PLATE REMOVAL/INSTALLATION](#)