

- [!\[\]\(1207edb9a08751d3d55970560645ed23_img.jpg\) POWER WINDOW SYSTEM WIRING DIAGRAM](#)
- [!\[\]\(d7a34a706cfa4ef37c62a369101e1b36_img.jpg\) INTERMITTENT CONCERN TROUBLESHOOTING](#)
- [!\[\]\(7325769475e8f4bf67f57a0cbebc8ab9_img.jpg\) FOREWORD](#)
- [!\[\]\(1a468f12cdfc63dc07896d0781cf55ec_img.jpg\) BASIC POWER WINDOW SYSTEM INSPECTION](#)
- [!\[\]\(a9a0baec8ceb7d7c04180806eca8d32a_img.jpg\) SYMPTOM TROUBLESHOOTING CHART](#)
- [!\[\]\(c1ab807d6aebb565b3082513037b5622_img.jpg\) NO. 1 DOOR GLASS DOES NOT MOVE UP AND DOWN IN AUTOMATIC MODE](#)
- [!\[\]\(083bb479299cb5e55cd99db0433ca6ba_img.jpg\) NO. 2 DOOR GLASS DOES NOT REVERSE, EVEN WHEN ENCOUNTERING A FOREIGN OBJECT IN ITS PATH](#)
- [!\[\]\(ede41f318336daae6cce8449321d11ea_img.jpg\) NO. 3 DOOR GLASS REVERSES EVEN THOUGH THE GLASS DOES NOT ENCOUNTER A FOREIGN OBJECT WHILE IT IS MOVING UP IN AUTOMATIC MODE](#)