

- [!\[\]\(1207edb9a08751d3d55970560645ed23_img.jpg\) AUTOMATIC TRANSAXLE OUTLINE](#)
- [!\[\]\(d7a34a706cfa4ef37c62a369101e1b36_img.jpg\) AUTOMATIC TRANSAXLE CROSS-SECTIONAL VIEW](#)
- [!\[\]\(7325769475e8f4bf67f57a0cbebc8ab9_img.jpg\) OUTLINE OF OPERATION](#)
- [!\[\]\(1a468f12cdfc63dc07896d0781cf55ec_img.jpg\) EC-AT OPERATION CHART](#)
- [!\[\]\(a9a0baec8ceb7d7c04180806eca8d32a_img.jpg\) POWER FLOW OUTLINE](#)
- [!\[\]\(c1ab807d6aebb565b3082513037b5622_img.jpg\) POWER FLOW STRUCTURE](#)
- [!\[\]\(083bb479299cb5e55cd99db0433ca6ba_img.jpg\) POWER FLOW OPERATION](#)
- [!\[\]\(ede41f318336daae6cce8449321d11ea_img.jpg\) CENTRIFUGAL BALANCE CLUTCH OUTLINE](#)
- [!\[\]\(b0cd9d88e5935e4c3891570bfdded05c_img.jpg\) CENTRIFUGAL BALANCE CLUTCH STRUCTURE](#)
- [!\[\]\(81bb4e52f43acc06353225c332f66031_img.jpg\) CENTRIFUGAL BALANCE CLUTCH OPERATION](#)
- [!\[\]\(4862a3d83a50b6aa02d9ef677ec36116_img.jpg\) OUTPUT GEAR OUTLINE](#)
- [!\[\]\(b564abb3972f4216a833af91832e1619_img.jpg\) TORQUE CONVERTER OUTLINE](#)
- [!\[\]\(3e91863309aa91e589b5ab92c8ebd53f_img.jpg\) OIL PUMP OUTLINE](#)
- [!\[\]\(bf6def3f21dfdb4b0473718404626f2c_img.jpg\) OIL PUMP STRUCTURE](#)
- [!\[\]\(b0485233f98b941f2381b77fe3b6686f_img.jpg\) OIL PUMP OPERATION](#)
- [!\[\]\(fd5c36680d4471e605732b36788643ca_img.jpg\) CONTROL VALVE BODY OUTLINE](#)
- [!\[\]\(cfcb6e3fe14cf2366208370376c5c0f9_img.jpg\) FORWARD CLUTCH, 3-4 CLUTCH HYDRAULIC CIRCUIT OUTLINE](#)
- [!\[\]\(17fbea93b96fb691279feb16b3dfba47_img.jpg\) TRANSAXLE RANGE \(TR\) SWITCH FUNCTION](#)
- [!\[\]\(c943c40aac9d4dd9481d8d4b932db11b_img.jpg\) TRANSAXLE RANGE \(TR\) SWITCH CONSTRUCTION/OPERATION](#)
- [!\[\]\(78722dd8a40b4b8cba6c4bc2496af0ff_img.jpg\) VEHICLE SPEED SENSOR \(VSS\) FUNCTION](#)
- [!\[\]\(7ca57550f01dd657cd5fb0b4b39070e5_img.jpg\) VEHICLE SPEED SENSOR \(VSS\) CONSTRUCTION/OPERATION](#)
- [!\[\]\(27d08d42762e05345080235dfb8fd4f5_img.jpg\) INPUT/TURBINE SPEED SENSOR FUNCTION](#)
- [!\[\]\(a0120eed5345e3ef041f32d510bbaaa4_img.jpg\) INPUT/TURBINE SPEED SENSOR CONSTRUCTION/OPERATION](#)
- [!\[\]\(5d135eaf0db5ba5bb50522e31d409887_img.jpg\) TRANSAXLE FLUID TEMPERATURE \(TFT\) SENSOR FUNCTION](#)
- [!\[\]\(999a3b623d1b2e259ce371a576a89b57_img.jpg\) TRANSAXLE FLUID TEMPERATURE \(TFT\) SENSOR CONSTRUCTION/OPERATION](#)
- [!\[\]\(b6fcbc36e74bb8f6df2b3fdc5d230a1a_img.jpg\) ELECTRONIC CONTROL SYSTEM OUTLINE](#)
- [!\[\]\(32a22410411096e2c8d32731f78c9ccc_img.jpg\) ELECTRONIC CONTROL SYSTEM CONSTRUCTION](#)
- [!\[\]\(c0c9b82c73e1cc6d7e87bf54578e2a82_img.jpg\) ELECTRONIC CONTROL SYSTEM BLOCK DIAGRAM](#)
- [!\[\]\(3a6ac41b3f099dd17a52d14a1994c5e3_img.jpg\) ELECTRONIC CONTROL ITEMS AND CONTENTS](#)
- [!\[\]\(d8728fc7d0d18b43bb799e0b75e28476_img.jpg\) COMPONENT DESCRIPTIONS \(ELECTRONIC CONTROL\)](#)
- [!\[\]\(70bb55f7aa836a2ee4c67662da4967eb_img.jpg\) INPUT/OUTPUT SIGNAL AND RELATED CONTROLS](#)
- [!\[\]\(b2232297cce97c56f57b421760817d12_img.jpg\) LINE PRESSURE CONTROL OUTLINE](#)
- [!\[\]\(55709881e7481dfc15adc40dcd59becf_img.jpg\) PRESSURE CONTROL SOLENOID \(LINEAR TYPE\) OUTLINE](#)
- [!\[\]\(8d83d449d7624cdb4d2f61b11873010a_img.jpg\) PRESSURE CONTROL SOLENOID \(LINEAR TYPE\) OPERATION](#)
- [!\[\]\(08e72e8a418b20d39ee1ac7f725378d8_img.jpg\) SHIFT CONTROL STRUCTURE](#)
- [!\[\]\(1472b7e8436c1b3bc5eeea25b271593e_img.jpg\) SHIFT SOLENOID A, B AND C \(DUTY-CYCLE TYPE\) OUTLINE](#)
- [!\[\]\(57e556a88107516655813e6c23d2abae_img.jpg\) SHIFT SOLENOID A, B AND C \(DUTY-CYCLE TYPE\) FUNCTION](#)
- [!\[\]\(c030b7e6eb2494eaedb757293e6adf2c_img.jpg\) SHIFT SOLENOID A, B AND C \(DUTY-CYCLE TYPE\) OPERATION](#)
- [!\[\]\(5bad85d70f3eb6f5fbcfc80073eb6615_img.jpg\) SHIFT SOLENOID D AND E \(ON/OFF TYPE\) OUTLINE](#)
- [!\[\]\(1809a30bd9cc86d1611d658a2943747d_img.jpg\) SHIFT SOLENOID D AND E \(ON/OFF TYPE\) FUNCTION](#)
- [!\[\]\(ebce444f4bff1003b265f30c0e6b85ba_img.jpg\) SHIFT SOLENOID D AND E \(ON/OFF TYPE\) OPERATION](#)
- [!\[\]\(8e0f7d31a6b42179701b60b1a6e779d2_img.jpg\) DRIVING MODE DETERMINATION OPERATION](#)
- [!\[\]\(9a27f7f6603fb7c664d1a82b91188a1b_img.jpg\) DIRECT ELECTRIC SHIFT CONTROL OUTLINE](#)
- [!\[\]\(1b742e4ee6400795e0df67c7dfb0086a_img.jpg\) DIRECT ELECTRIC SHIFT CONTROL OPERATION](#)
- [!\[\]\(0e9bbe3ce0b63cba3e62e7505c75b23d_img.jpg\) MANUAL MODE SHIFT CONTROL STRUCTURE](#)
- [!\[\]\(b2a85a2d36bbfb78243c2f3a3b713215_img.jpg\) MANUAL MODE SHIFT CONTROL OPERATION](#)
- [!\[\]\(57bf822198782e0d369418c7fa79597a_img.jpg\) AT WARNING LIGHT FUNCTION](#)
- [!\[\]\(4aef421f48e50ead6f550d3ebb37791f_img.jpg\) AT WARNING LIGHT CONSTRUCTION/OPERATION](#)
- [!\[\]\(b874be678b40627c3fd867c598d84ba0_img.jpg\) SELECTOR INDICATOR LIGHT FUNCTION](#)
- [!\[\]\(60120098c63d9dcc2f1488927d63058f_img.jpg\) SELECTOR INDICATOR LIGHT CONSTRUCTION/OPERATION](#)
- [!\[\]\(67e846cf4ac8a4c0ff229459c1450837_img.jpg\) FEEDBACK CONTROL OPERATION](#)
- [!\[\]\(099a30e56809ec7f0d4f3ff5de310c63_img.jpg\) ENGINE-TRANSAXLE TOTAL CONTROL OPERATION](#)
- [!\[\]\(604e05157c6add2ba6fcd15388a8180b_img.jpg\) TORQUE CONVERTER CLUTCH \(TCC\) CONTROL OUTLINE](#)
- [!\[\]\(3698bdfebcd31ae5590b30d1a33dc959_img.jpg\) TORQUE CONVERTER CLUTCH \(TCC\) OPERATION](#)
- [!\[\]\(8c5953bcc499bb001102eacdaaf3d627_img.jpg\) SLOPE MODE CONTROL OUTLINE](#)
- [!\[\]\(3b8f259d27158c9446acad7606ad2514_img.jpg\) SLOPE MODE CONTROL OPERATION](#)
- [!\[\]\(100a3ab26e7ecf8a118ea5433b4bd697_img.jpg\) COOLING SYSTEM OUTLINE](#)