

- [!\[\]\(1207edb9a08751d3d55970560645ed23\_img.jpg\) ABS SYSTEM WIRING DIAGRAM](#)
- [!\[\]\(d7a34a706cfa4ef37c62a369101e1b36\_img.jpg\) ON-BOARD DIAGNOSIS \[ABS\]](#)
- [!\[\]\(7325769475e8f4bf67f57a0cbebc8ab9\_img.jpg\) DTC B1317, B1318 \[ABS\]](#)
- [!\[\]\(1a468f12cdfc63dc07896d0781cf55ec\_img.jpg\) DTC B1342, C1267 \[ABS\]](#)
- [!\[\]\(a9a0baec8ceb7d7c04180806eca8d32a\_img.jpg\) DTC C1095 \[ABS\]](#)
- [!\[\]\(c1ab807d6aebb565b3082513037b5622\_img.jpg\) DTC C1141, C1142, C1143, C1144, C1233, C1234, C1235, C1236 \[ABS\]](#)
- [!\[\]\(083bb479299cb5e55cd99db0433ca6ba\_img.jpg\) DTC C1145, C1155, C1165, C1175 \[ABS\]](#)
- [!\[\]\(ede41f318336daae6cce8449321d11ea\_img.jpg\) DTC C1446 \[ABS\]](#)
- [!\[\]\(b0cd9d88e5935e4c3891570bfdded05c\_img.jpg\) DTC U1900, U2012, U2523 \[ABS\]](#)
- [!\[\]\(81bb4e52f43acc06353225c332f66031\_img.jpg\) DYNAMIC STABILITY CONTROL WIRING DIAGRAM](#)
- [!\[\]\(4862a3d83a50b6aa02d9ef677ec36116\_img.jpg\) ON-BOARD DIAGNOSIS \[DSC \(DYNAMIC STABILITY CONTROL\)\]](#)
- [!\[\]\(b564abb3972f4216a833af91832e1619\_img.jpg\) DTC B1317, B1318 \[DSC\]](#)
- [!\[\]\(3e91863309aa91e589b5ab92c8ebd53f\_img.jpg\) DTC B1342, C1267, C1730 \[DSC\]](#)
- [!\[\]\(bf6def3f21dfdb4b0473718404626f2c\_img.jpg\) DTC B2141 \[DSC\]](#)
- [!\[\]\(b0485233f98b941f2381b77fe3b6686f\_img.jpg\) DTC B2741 \[DSC\]](#)
- [!\[\]\(fd5c36680d4471e605732b36788643ca\_img.jpg\) DTC C1093 \[DSC\]](#)
- [!\[\]\(cfcb6e3fe14cf2366208370376c5c0f9\_img.jpg\) DTC C1095 \[DSC\]](#)
- [!\[\]\(17fbea93b96fb691279feb16b3dfba47\_img.jpg\) DTC C1141, C1142, C1143, C1144, C1233, C1234, C1235, C1236 \[DSC\]](#)
- [!\[\]\(c943c40aac9d4dd9481d8d4b932db11b\_img.jpg\) DTC C1145, C1155, C1165, C1175 \[DSC\]](#)
- [!\[\]\(78722dd8a40b4b8cba6c4bc2496af0ff\_img.jpg\) DTC C1277, C1295, C1306, C1307 \[DSC\]](#)
- [!\[\]\(7ca57550f01dd657cd5fb0b4b39070e5\_img.jpg\) DTC C1279, C1280, C1281, C1282, C2778 \[DSC\]](#)
- [!\[\]\(27d08d42762e05345080235dfb8fd4f5\_img.jpg\) DTC C1288, C1440 \[DSC\]](#)
- [!\[\]\(a0120eed5345e3ef041f32d510bbaaa4\_img.jpg\) DTC C1446 \[DSC\]](#)
- [!\[\]\(5d135eaf0db5ba5bb50522e31d409887\_img.jpg\) DTC C1470, C1994 \[DSC\]](#)
- [!\[\]\(999a3b623d1b2e259ce371a576a89b57\_img.jpg\) DTC C2785 \[DSC\]](#)
- [!\[\]\(b6fcbc36e74bb8f6df2b3fdc5d230a1a\_img.jpg\) DTC U1900, U2012, U2023, U2202, U2523 \[DSC\]](#)
- [!\[\]\(32a22410411096e2c8d32731f78c9ccc\_img.jpg\) DTC U1901, U2527 \[DSC\]](#)
- [!\[\]\(c0c9b82c73e1cc6d7e87bf54578e2a82\_img.jpg\) SYSTEM WIRING DIAGRAM](#)
- [!\[\]\(3a6ac41b3f099dd17a52d14a1994c5e3\_img.jpg\) FOREWORD](#)
- [!\[\]\(d8728fc7d0d18b43bb799e0b75e28476\_img.jpg\) PRECAUTION](#)
- [!\[\]\(70bb55f7aa836a2ee4c67662da4967eb\_img.jpg\) SYMPTOM TROUBLESHOOTING](#)
- [!\[\]\(b2232297cce97c56f57b421760817d12\_img.jpg\) NO.1 NEITHER ABS WARNING LIGHT NOR BRAKE SYSTEM WARNING LIGHT ILLUMINATE WHEN THE IGNITION SWITCH IS TURNED TO THE ON POSITION](#)
- [!\[\]\(55709881e7481dfc15adc40dcd59becf\_img.jpg\) NO.2 ABS WARNING LIGHT DOES NOT ILLUMINATE WHEN THE IGNITION SWITCH IS TURNED TO THE ON POSITION](#)
- [!\[\]\(8d83d449d7624cdb4d2f61b11873010a\_img.jpg\) NO.3 BRAKE SYSTEM WARNING LIGHT DOES NOT ILLUMINATE WHEN THE IGNITION SWITCH IS TURNED TO THE ON POSITION](#)
- [!\[\]\(08e72e8a418b20d39ee1ac7f725378d8\_img.jpg\) NO.4 BOTH ABS WARNING LIGHT AND BRAKE SYSTEM WARNING LIGHT STAY ON 4 S OR MORE WHEN THE IGNITION SWITCH IS TURNED TO THE ON POSITION](#)
- [!\[\]\(1472b7e8436c1b3bc5eeea25b271593e\_img.jpg\) NO.5 ABS WARNING LIGHT STAYS ON 4 S OR MORE WHEN THE IGNITION SWITCH IS TURNED TO THE ON POSITION](#)
- [!\[\]\(57e556a88107516655813e6c23d2abae\_img.jpg\) NO.6 BRAKE SYSTEM WARNING LIGHT STAYS ON 4 S OR MORE WHEN THE IGNITION SWITCH IS TURNED TO THE ON POSITION \(PARKING BRAKE IS RELEASED\)](#)
- [!\[\]\(c030b7e6eb2494eaedb757293e6adf2c\_img.jpg\) NO.7 THERE IS MALFUNCTION IN THE SYSTEM EVEN THOUGH ABS WARNING LIGHT, BRAKE SYSTEM WARNING LIGHT, DO NOT ILLUMINATE](#)
- [!\[\]\(5bad85d70f3eb6f5fbcfc80073eb6615\_img.jpg\) NO.8 ANY OF THE FOLLOWING LIGHTS DO NOT ILLUMINATE WHEN THE IGNITION SWITCH IS TURNED TO THE ON POSITION: \(ABS WARNING LIGHT, BRAKE SYSTEM WARNING LIGHT, DSC INDICATOR LIGHT AND/OR DSC OFF LIGHT\)](#)
- [!\[\]\(1809a30bd9cc86d1611d658a2943747d\_img.jpg\) NO.9 ANY OF THE FOLLOWING LIGHTS REMAIN ON: \(ABS WARNING LIGHT, BRAKE SYSTEM WARNING LIGHT, DSC INDICATOR LIGHT AND/OR DSC OFF LIGHT\)](#)
- [!\[\]\(ebce444f4bff1003b265f30c0e6b85ba\_img.jpg\) NO.10 THERE IS A MALFUNCTION IN THE SYSTEM EVEN THOUGH ABS WARNING LIGHT, BRAKE SYSTEM WARNING LIGHT, DSC INDICATOR LIGHT AND DSC OFF LIGHT DO NOT ILLUMINATE](#)
- [!\[\]\(8e0f7d31a6b42179701b60b1a6e779d2\_img.jpg\) NO.11 ABS OR TCS\\*1 OPERATES FREQUENTLY/TCS DOES NOT WORK CORRECTLY \\*1: DSC SYSTEM FUNCTION CONTAINS TRACTION CONTROL FUNCTION, DSC INDICATOR LIGHT GOES ON AND OUT WHILE DSC OPERATES](#)
- [!\[\]\(9a27f7f6603fb7c664d1a82b91188a1b\_img.jpg\) NO.12 DSC\\*2 OPERATES FREQUENTLY/DSC DOES NOT WORK CORRECTLY \\*2: DSC INDICATOR LIGHT GOES ON AND OUT WHILE DSC OPERATES](#)