

- [📖 FOREWORD \[IMMOBILIZER SYSTEM\]](#)
- [📖 DTC INSPECTION \[IMMOBILIZER SYSTEM\]](#)
- [📖 DTC TABLE \[IMMOBILIZER SYSTEM\]](#)
- [📖 PID/DATA MONITOR INSPECTION \[IMMOBILIZER SYSTEM\]](#)
- [📖 PID/DATA MONITOR TABLE \[IMMOBILIZER SYSTEM\]](#)
- [📖 SECURITY LIGHT 11, DTC B1681/P1260](#)
- [📖 SECURITY LIGHT 12, DTC B2103/P1260](#)
- [📖 SECURITY LIGHT 13, DTC B1600/P1260](#)
- [📖 SECURITY LIGHT 13, DTC B2431/P1260](#)
- [📖 SECURITY LIGHT 14, DTC B1602/P1260](#)
- [📖 SECURITY LIGHT 15, DTC B1601/P1260](#)
- [📖 SECURITY LIGHT 16, DTC U2510/P1260, U1147/P1260](#)
- [📖 SECURITY LIGHT 21, DTC B1213/P1260](#)
- [📖 SECURITY LIGHT 22, DTC B2141/P1260](#)
- [📖 SECURITY LIGHT 23, DTC B2139/P1260](#)
- [📖 DTC B1342 \[IMMOBILIZER SYSTEM\]](#)
- [📖 MULTIPLEX COMMUNICATION SYSTEM](#)
- [📖 DTC TABLE \[MULTIPLEX COMMUNICATION SYSTEM\]](#)
- [📖 PROCEDURES FOR DETERMINING THE LOCATION OF A MALFUNCTION](#)
- [📖 DTC U0073, U2012](#)
- [📖 DTC U0073, U0516, U1900, U2516](#)
- [📖 STARTING PROCEDURE FOR ON-BOARD DIAGNOSTIC TEST MODE](#)
- [📖 SUPPLIER IDENTIFICATION PROCEDURE](#)
- [📖 MEMORY CLEARING PROCEDURE](#)
- [📖 DTC TABLE \[AUDIO SYSTEM\]](#)
- [📖 DTC 09:ER22](#)
- [📖 DTC 09:ER20](#)
- [📖 DTC 00:ER10](#)
- [📖 DTC 03:ER10](#)
- [📖 DTC 06:ER10](#)
- [📖 DTC 07:ER10](#)
- [📖 DTC 03:ER01](#)
- [📖 DTC 03:ER02](#)
- [📖 DTC 03:ER07](#)
- [📖 DTC 00:ER01](#)
- [📖 DTC 00:ER03](#)
- [📖 DTC 00:ER04](#)
- [📖 DTC 06:ER01](#)
- [📖 DTC 06:ER02](#)
- [📖 DTC 06:ER07](#)
- [📖 DTC 07:ER01](#)
- [📖 DTC 07:ER02](#)
- [📖 DTC 07:ER07](#)
- [📖 DTC 07:ER08](#)
- [📖 DTC 10:ER01](#)
- [📖 DTC 10:ER02](#)
- [📖 DIAGNOSTIC ASSIST FUNCTION](#)
- [📖 DTC INSPECTION \[INSTRUMENT CLUSTER\]](#)
- [📖 DTC TABLE \[INSTRUMENT CLUSTER\]](#)
- [📖 DTC B1342 \[INSTRUMENT CLUSTER\]](#)
- [📖 DTC B2477 \[INSTRUMENT CLUSTER\]](#)
- [📖 DTC INSPECTION \[PJB\]](#)
- [📖 DTC TABLE \[PJB\]](#)
- [📖 DTC B1002](#)
- [📖 DTC B1014](#)

- [!\[\]\(467d80e979964f7f8c752fb22248b5b7_img.jpg\) DTC B1311](#)
- [!\[\]\(b71552d33dbf62adf5e5199a70ee02bf_img.jpg\) DTC B1317](#)
- [!\[\]\(03134b765d1473836ff001925b1b0550_img.jpg\) DTC B1318](#)
- [!\[\]\(aed6947356668967079310026052edc0_img.jpg\) DTC B1320](#)
- [!\[\]\(e61aeb0d9066d5d9e54d9b655f50da3d_img.jpg\) DTC B1328](#)
- [!\[\]\(f7af41ce0777e13bda91fa715111c02a_img.jpg\) DTC B1336](#)
- [!\[\]\(476ddb2354d4ad1cb23a2236b1e49873_img.jpg\) DTC B1342](#)
- [!\[\]\(1d505a46c82c5cefa23b88c2eee900ce_img.jpg\) DTC B1345](#)
- [!\[\]\(3a98690f11ee4baf67262bd776464219_img.jpg\) DTC B1350](#)
- [!\[\]\(35522fe6386206890679adb7b63391b6_img.jpg\) DTC B1447](#)
- [!\[\]\(d28d4a3445dac344f03b5cebc14c5170_img.jpg\) DTC B1472](#)
- [!\[\]\(3e37ae08976ee7fa41b108254fcb66a7_img.jpg\) DTC B1502](#)
- [!\[\]\(7b30e10e474a15019e378034a5556dd2_img.jpg\) DTC B1506](#)
- [!\[\]\(be2bdf77bab097eb6ddf17878ba7ec4d_img.jpg\) DTC B1547](#)
- [!\[\]\(a3b6961c19ef9a7399ba4d220fbe1b94_img.jpg\) DTC B1554](#)
- [!\[\]\(f8936a35f239803f29013161729262d8_img.jpg\) DTC B1570](#)
- [!\[\]\(1450f2e803fc906eeaaad04363880ce9_img.jpg\) DTC B1572](#)
- [!\[\]\(e1133a641f38be314cd75f50ed4924a6_img.jpg\) DTC B1607](#)
- [!\[\]\(64b8231e633e9e03e4b21734881f56cf_img.jpg\) DTC B1614](#)
- [!\[\]\(aee5e761ba1b99a3cd9435e499b75672_img.jpg\) DTC B1696](#)
- [!\[\]\(52709e745fb7eb31be4b8579af786742_img.jpg\) DTC B1798](#)
- [!\[\]\(75d779d4d319b7a003931ddd37118216_img.jpg\) DTC B1812](#)
- [!\[\]\(937dedd4570e46ee3c4a246710401be3_img.jpg\) DTC B1873](#)
- [!\[\]\(974c3738d4510157e1809ab73aeae104_img.jpg\) DTC B2060](#)
- [!\[\]\(c7bb2dd93c66a880db3e64904f24c88d_img.jpg\) DTC B2095](#)
- [!\[\]\(3bb700d7c40e9e2206af5942b8c5c319_img.jpg\) DTC B2096](#)
- [!\[\]\(3d178dee6dace1310eba6859d6ef1aff_img.jpg\) DTC B2114](#)
- [!\[\]\(8908d9c8b4c07c22abf7f32422281c85_img.jpg\) DTC B2175](#)
- [!\[\]\(d75070697de9f3219ae584cb916f690b_img.jpg\) DTC B2180](#)
- [!\[\]\(6790559f63632c70e8dec7396eec9933_img.jpg\) DTC B2181](#)
- [!\[\]\(529e178df0386c6bcad973393ec156f6_img.jpg\) DTC B2212](#)
- [!\[\]\(c14aca2db3a242e576f7b1a23d1606df_img.jpg\) DTC B2254](#)
- [!\[\]\(183f30884007c92c798fd9baac641f68_img.jpg\) DTC B2258](#)
- [!\[\]\(7fd049e3d5b09f66326886f90db7eee2_img.jpg\) DTC B2259](#)
- [!\[\]\(f4f14f714d179fc3ad6d33074c29cfda_img.jpg\) DTC B2264](#)
- [!\[\]\(ce6bc5635f395183862e744748f0e49a_img.jpg\) DTC B2477](#)
- [!\[\]\(250876b05dc5b921a0dffb4910b46ae7_img.jpg\) DTC B2479](#)
- [!\[\]\(7a8eadd346032312f0ff3b5ccb032575_img.jpg\) DTC B2555](#)
- [!\[\]\(850883bda31a07cad1f4ba52cc448645_img.jpg\) DTC B2574](#)
- [!\[\]\(bf4a97b2de6d114b5fab8067731171bd_img.jpg\) DTC B2721](#)
- [!\[\]\(acc579d5beb8f0ad2bcc66820631c8fa_img.jpg\) DTC B2840](#)
- [!\[\]\(b305bb53d76bf84fc88147b5e8150734_img.jpg\) DTC B2897](#)
- [!\[\]\(e3c7693316c351f4a030b11c1ec45ed4_img.jpg\) DTC B2898](#)
- [!\[\]\(8a167128ee017e053b61d73443a29b2c_img.jpg\) DTC B2899](#)
- [!\[\]\(ab818153ecdc6649e17f93f910c1dbef_img.jpg\) DTC B2966](#)
- [!\[\]\(1c3e705dc21e015df3827b895b0c69f2_img.jpg\) DTC B2973](#)
- [!\[\]\(da9cff860f1b25ab93c8000460344a4c_img.jpg\) DTC C1189](#)
- [!\[\]\(87c4696424c9b253829d34c43e257815_img.jpg\) DTC P0071](#)
- [!\[\]\(2520a28db95282109302246a432ce4f0_img.jpg\) DTC U2030](#)
- [!\[\]\(370c1d0e1c5597ea2c725b889edf7fe9_img.jpg\) PJB SELF-TEST](#)
- [!\[\]\(23e2c395108856781fbd63ec060085f6_img.jpg\) POWER WINDOW SYSTEM WIRING DIAGRAM](#)
- [!\[\]\(64c0f7b2ba39169fe177a09beccb7e89_img.jpg\) INTERMITTENT CONCERN TROUBLESHOOTING](#)
- [!\[\]\(78d69b6c5e1b1b896ee36e20ec38dfce_img.jpg\) FOREWORD](#)
- [!\[\]\(0131ca0397a27d3ff3313bcaa1de28e7_img.jpg\) BASIC POWER WINDOW SYSTEM INSPECTION](#)
- [!\[\]\(c8988c01cfea6fd5712fd3de3f6a536c_img.jpg\) SYMPTOM TROUBLESHOOTING CHART](#)

- [!\[\]\(6302aad5aed157b291fddf37b4870784_img.jpg\) NO. 1 DOOR GLASS DOES NOT MOVE UP AND DOWN IN AUTOMATIC MODE](#)
- [!\[\]\(a9ca2c237943a6d0a9f22252f295b6f3_img.jpg\) NO. 2 DOOR GLASS DOES NOT REVERSE, EVEN WHEN ENCOUNTERING A FOREIGN OBJECT IN ITS PATH](#)
- [!\[\]\(9a01a64e0b4ff865df7d32ee7991fe8b_img.jpg\) NO. 3 DOOR GLASS REVERSES EVEN THOUGH THE GLASS DOES NOT ENCOUNTER A FOREIGN OBJECT WHILE IT IS MOVING UP IN AUTOMATIC MODE](#)
- [!\[\]\(6aefe9a3d997eb8b55c40ecd5fa7053f_img.jpg\) KEYLESS ENTRY SYSTEM WIRING DIAGRAM](#)
- [!\[\]\(baa8f8ba8c970db55300f5bb45bb3460_img.jpg\) KEYLESS ENTRY SYSTEM PRELIMINARY INSPECTION](#)
- [!\[\]\(a6e28495607b2299466d3d5d3193848c_img.jpg\) KEYLESS ENTRY SYSTEM ON-BOARD DIAGNOSIS](#)
- [!\[\]\(ed205fcb6e75c95529564351570724d7_img.jpg\) SYMPTOM TROUBLESHOOTING CHART](#)
- [!\[\]\(27a992a1de9d3e89591e2e26256c5a71_img.jpg\) NO.1 ONE OR MORE ON-BOARD DIAGNOSTIC FUNCTIONS INOPERATIVE](#)
- [!\[\]\(4e3fbe2ef35291baab7a42cb80921f3b_img.jpg\) NO.2 ALL ON-BOARD DIAGNOSTIC FUNCTIONS INOPERATIVE](#)
- [!\[\]\(7e07afcbfd46dd92c708e363ec417c00_img.jpg\) NO.3 TRANSMITTER ID CODE CANNOT BE REPROGRAMMED](#)
- [!\[\]\(7e5084a8da4d5ff6d50d22c09ead9317_img.jpg\) FOREWORD](#)
- [!\[\]\(8c0fccc5cb44cb6c2349621b2f03ed16_img.jpg\) TROUBLESHOOTING INDEX](#)
- [!\[\]\(9a272a5aed417ba1b638a5decd49d86e_img.jpg\) NO.1 ALC \(AUTOMATIC LEVEL CONTROL\) DO NOT OPERATE. \(ABS HU/CM OPERATES NORMALLY.\)](#)
- [!\[\]\(41c0e1b925839722a4d1554dd00e2252_img.jpg\) CAR-NAVIGATION SYSTEM](#)
- [!\[\]\(00ff213f4755bda2684037849bc00d38_img.jpg\) NO.1 DISPLAY SCREEN DOES NOT OPEN EVEN IF THE IGNITION SWITCH IS TURNED TO THE ACC POSITION.](#)
- [!\[\]\(8ff4178385db741643d613d0a7d58379_img.jpg\) NO.2 DISPLAY SCREEN CHANGES TO BLACK.](#)
- [!\[\]\(7def4de0a99ddfe75d69cf0afe068e7a_img.jpg\) NO.3 DISPLAY SCREEN CHANGES TO WHITE.](#)
- [!\[\]\(79069f1973dd6e00fc1d60da2889cbd5_img.jpg\) NO.4 SYSTEM DOES NOT LOAD THE MAP DISC.](#)
- [!\[\]\(4f508e5d117c93060193de6e24fe377b_img.jpg\) NO.5 VEHICLE POSITION DEVIATES FROM THE ROUTE MAP.](#)
- [!\[\]\(cb019e7dc64ba1bb8bebbe5bffe6e051_img.jpg\) NO.6 CAR-NAVIGATION CONTROL SWITCH IS INOPERATIVE.](#)
- [!\[\]\(eb48a4dd3e934293628d697e7cf3388e_img.jpg\) NO.7 NO VOICE NAVIGATION](#)
- [!\[\]\(eccf00db8ce906ca827ef08d7ba852be_img.jpg\) NO.8 DISPLAY SCREEN DOES NOT CHANGE TO THE NIGHT MODE. \(FRONT AND REAR COMBINATION LIGHTS OPERATE NORMALLY.\)](#)