

 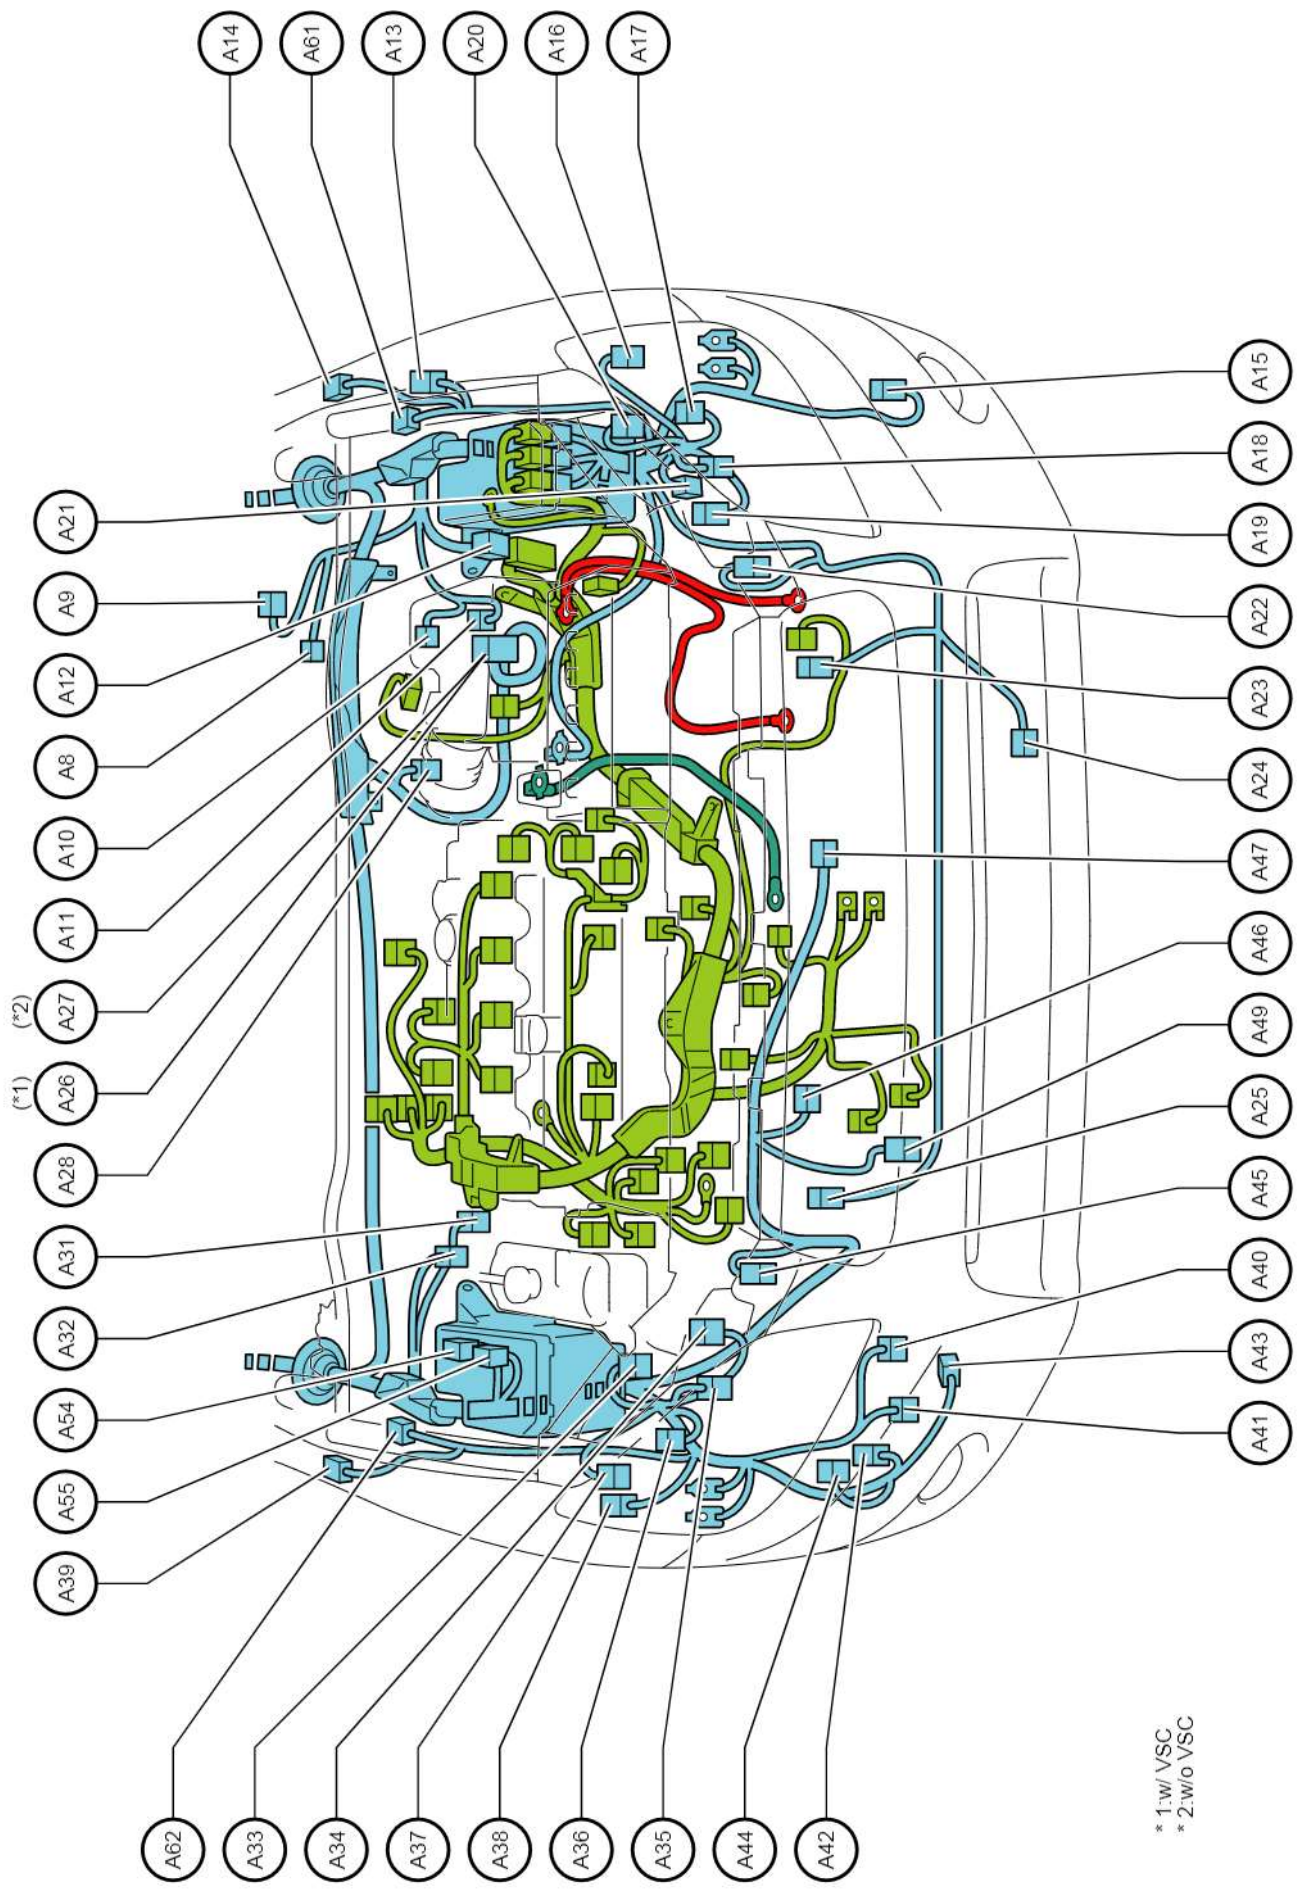
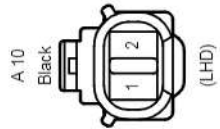













* 1:w/ VSC
* 2:w/o VSC


A 8	Windshield Wiper Motor
A 9	Front Wiper Deicer
A 10	Brake Fluid Level Warning SW
A 11	Fuel Filter Warning SW
A 12	Engine ECU
A 13	Wireless Door Lock Buzzer
A 14	Turn Signal Lamp (Front Side LH)
A 15	Fog Lamp (Front LH)
A 16	Turn Signal Lamp (Front LH)
A 17	Headlamp (LH Low)
A 18	Headlamp Leveling Motor (LH)
A 19	Headlamp (LH High)
A 20	Clearance Lamp (Front LH)
A 21	Option Connector
A 22	Airbag Sensor (Front LH)
A 23	Horn (Low)
A 24	Ambient Temp. Sensor
A 25	Horn (High)
A 26	Skid Control ECU with Actuator
A 27	Skid Control ECU with Actuator
A 28	Fuel Pump
A 31	Power Heater Assembly
A 32	A/C Pressure Sensor
A 33	Clearance Lamp (Front RH)
A 34	Headlamp (RH High)
A 35	Headlamp Leveling Motor (RH)
A 36	Headlamp (RH Low)
A 37	Turn Signal Lamp (Front RH)
A 38	Tire Pressure Warning Antenna (Front)
A 39	Turn Signal Lamp (Front Side RH)
A 40	Rear Washer Motor
A 41	Front Washer Motor
A 42	Fog Lamp (Front RH)
A 43	Headlamp Cleaner Motor
A 44	Headlamp Cleaner Control Relay
A 45	Airbag Sensor (Front RH)
A 46	A/C Condenser Fan Motor
A 47	Radiator Fan Motor
A 49	Inlet Air Temp. Sensor
A 54	Junction Connector
A 55	Junction Connector
A 61	Speed Sensor (Front LH)
A 62	Speed Sensor (Front RH)

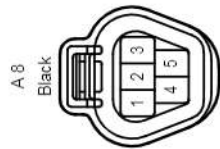



A 12
Black

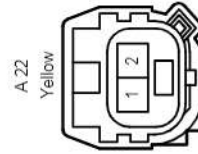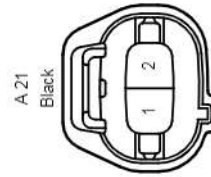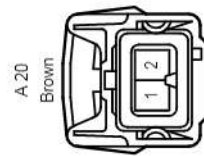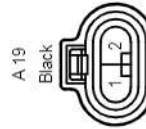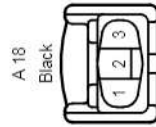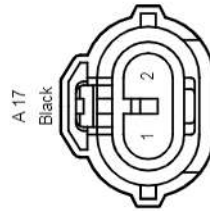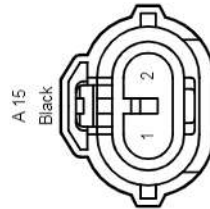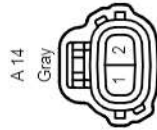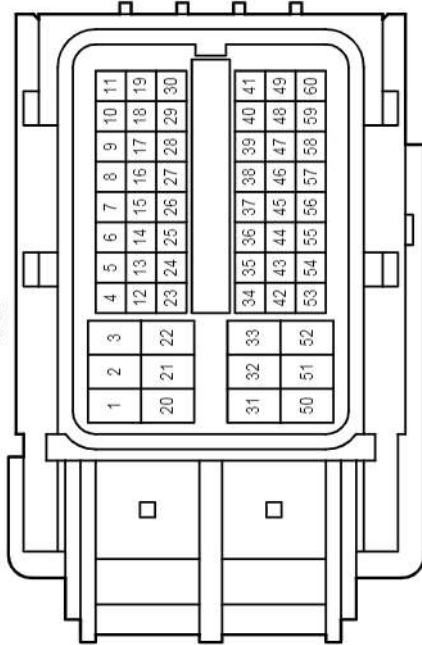

A 26
Black

 

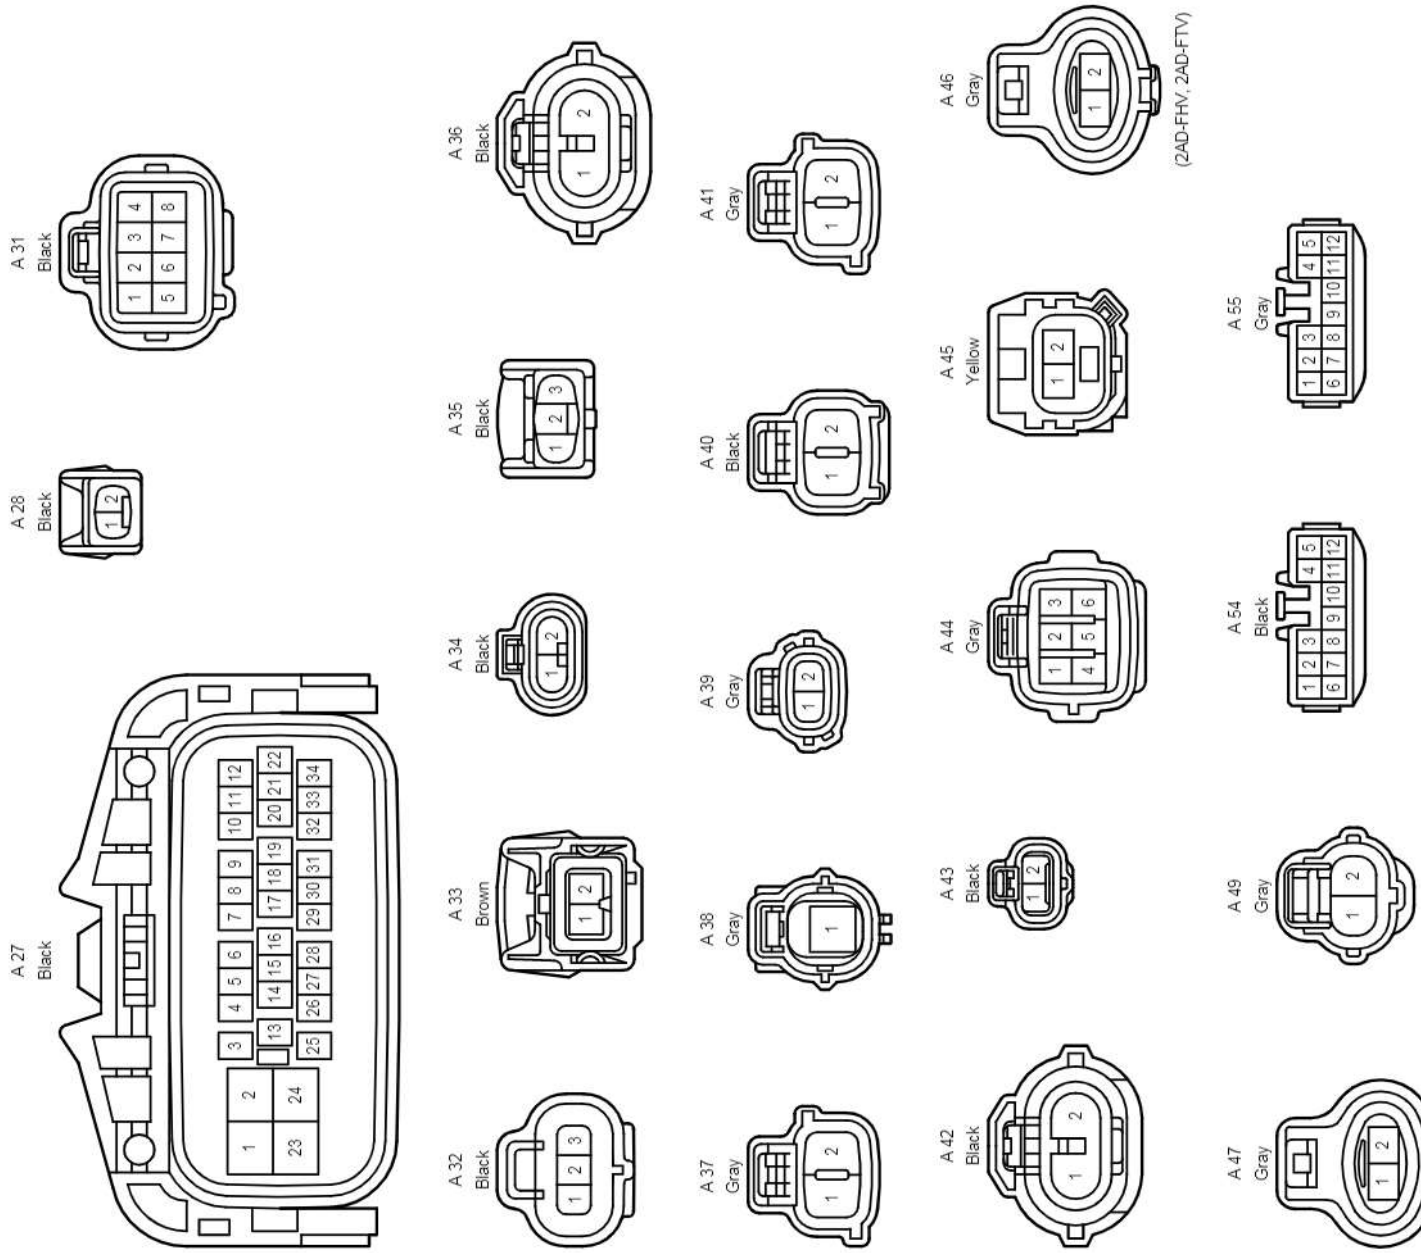
















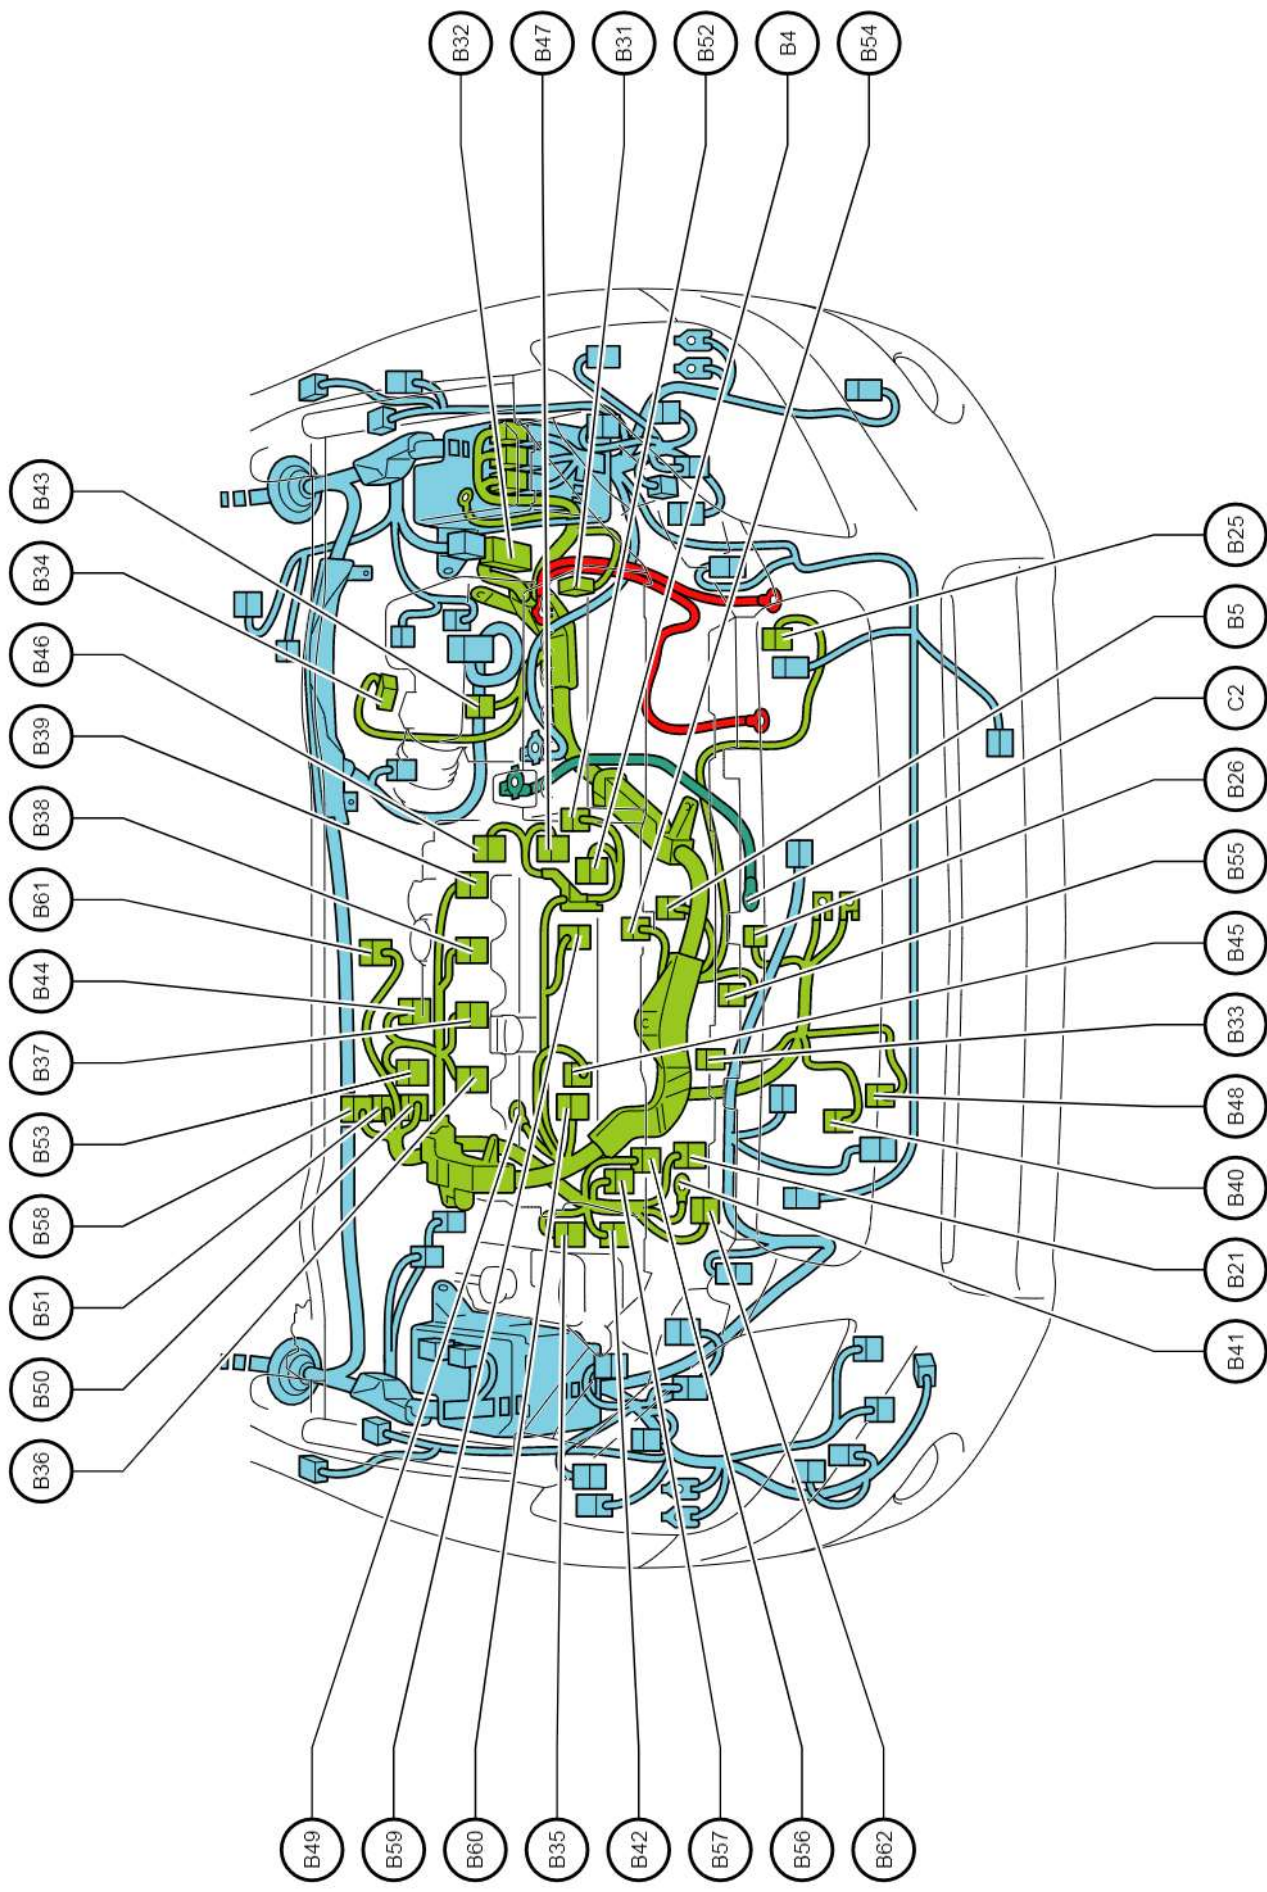



B 4	Water Temp. Sensor
B 5	Engine Oil Pressure SW
B 21	Alternator
B 25	Back-Up Light SW
B 26	Starter
B 31	Battery Current Sensor
B 32	Engine ECU
B 33	Throttle Body Assembly
B 34	Air Flow Meter
B 35	Camshaft Position Sensor
B 36	Fuel Injector (No.1)
B 37	Fuel Injector (No.2)
B 38	Fuel Injector (No.3)
B 39	Fuel Injector (No.4)
B 40	A/C Compressor
B 41	Alternator
B 42	Crankshaft Position Sensor
B 43	Glow Plug Relay
B 44	VRV (EGR)
B 45	Turbo Pressure Sensor
B 46	Suction Control Valve
B 47	Fuel Temp. Sensor
B 48	Engine Oil Level Sensor
B 49	Glow Plug
B 50	Injector Driver (EDU)
B 51	Injector Driver (EDU)
B 52	Exhaust Fuel Addition Injector Assembly
B 53	VSV (EGR)
B 54	EGR Valve Position Sensor
B 55	Throttle Body Assembly
B 56	Exhaust Gas Temperature Sensor (Front)
B 57	Exhaust Gas Temperature Sensor (Rear)
B 58	Injector Driver (EDU)
B 59	Pressure Discharge Valve
B 60	Fuel Pressure Sensor
B 61	Differential Pressure Sensor
B 62	Air Fuel Ratio Sensor (Bank 1 Sensor 1)


C 2 Starter

  
cardiagn.com



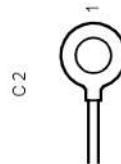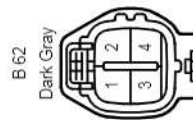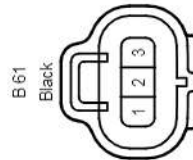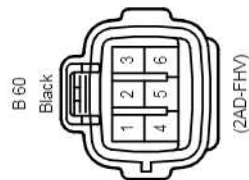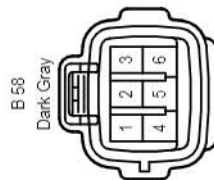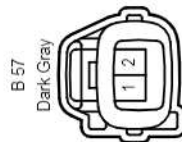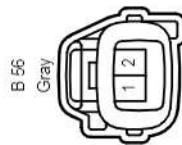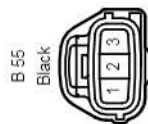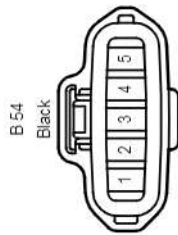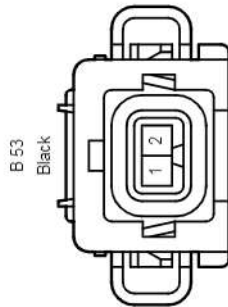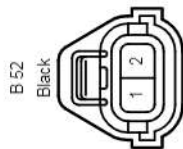
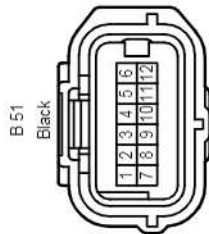
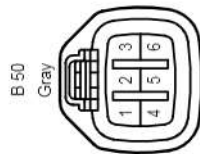
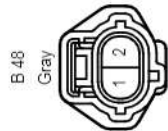



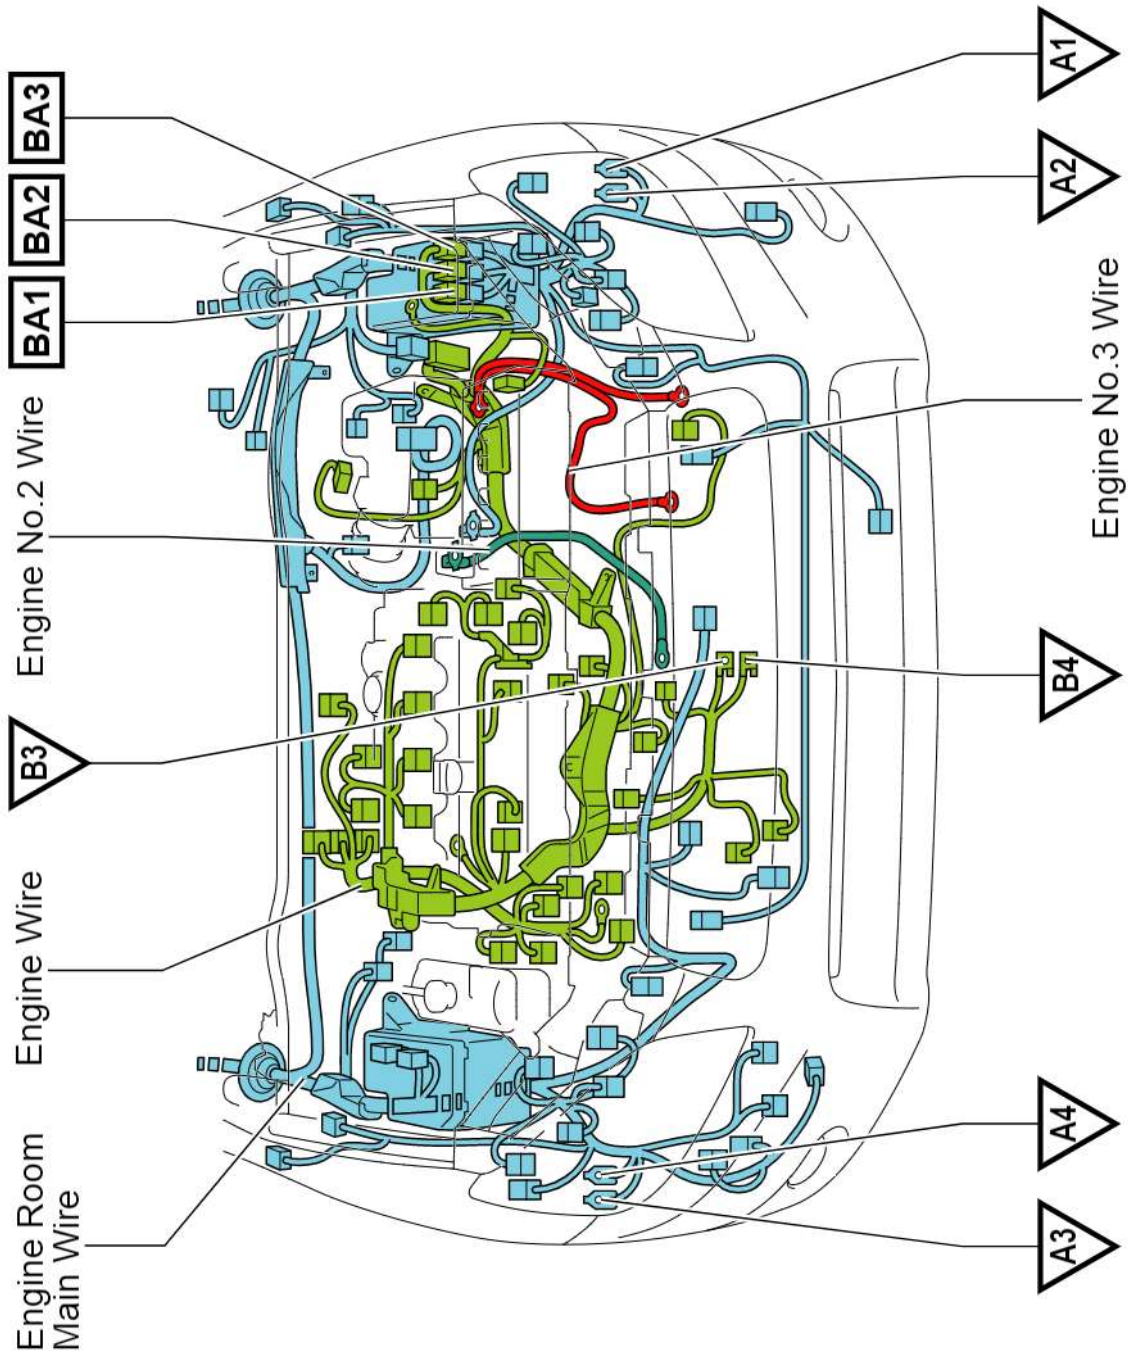


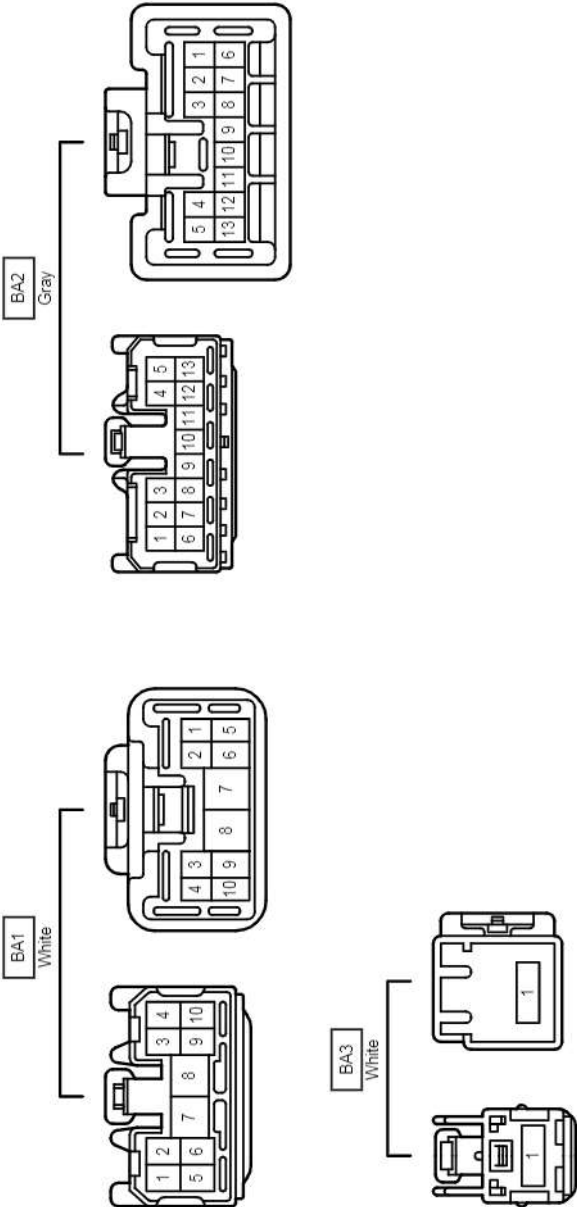

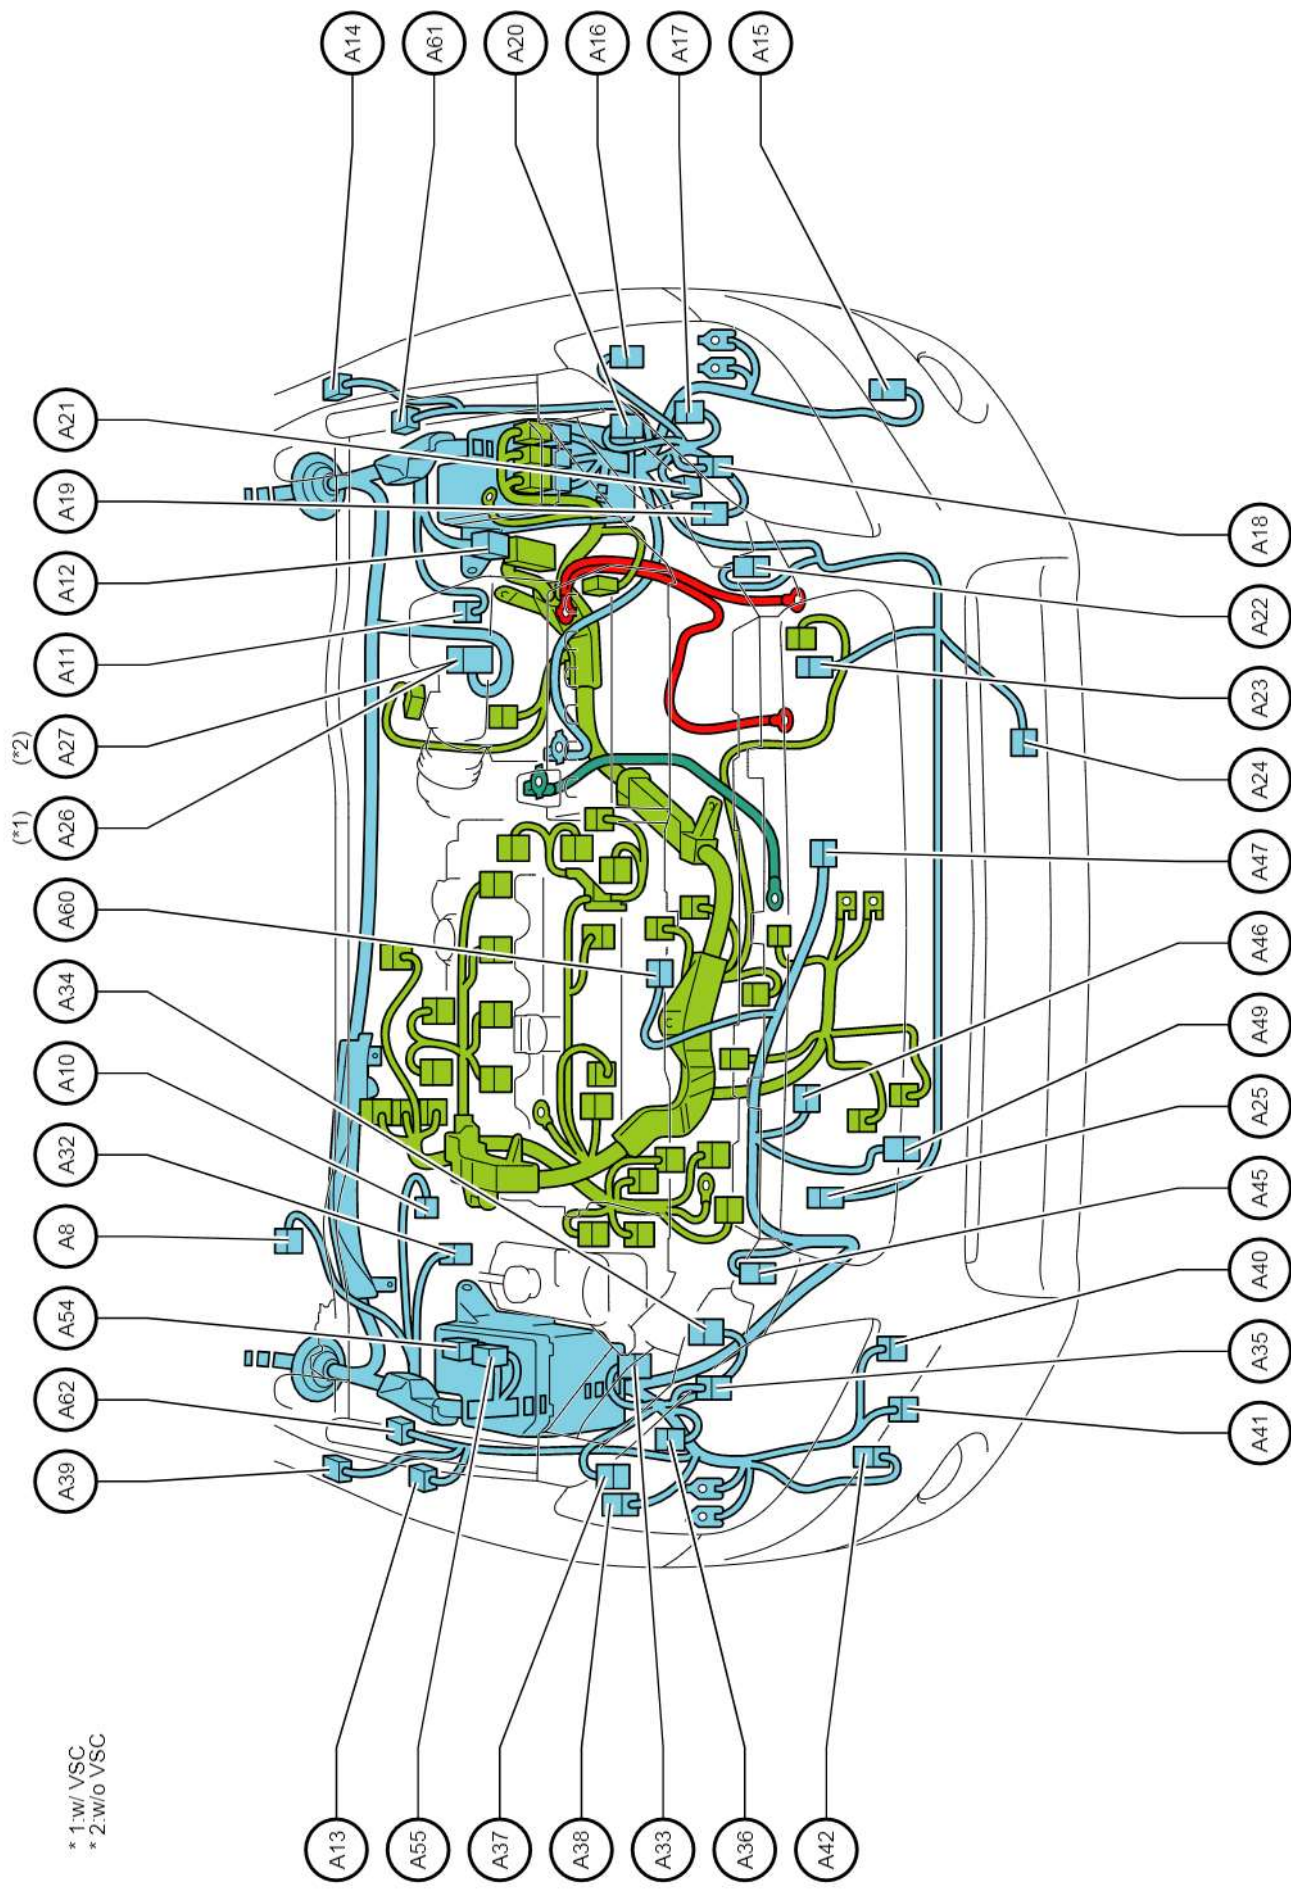


A 8	Windshield Wiper Motor
A 10	Brake Fluid Level Warning SW
A 11	Fuel Filter Warning SW
A 12	Engine ECU
A 13	Wireless Door Lock Buzzer
A 14	Turn Signal Lamp (Front Side LH)
A 15	Fog Lamp (Front LH)
A 16	Turn Signal Lamp (Front LH)
A 17	Headlamp (LH Low)
A 18	Headlamp Leveling Motor (LH)
A 19	Headlamp (LH High)
A 20	Clearance Lamp (Front LH)
A 21	Option Connector
A 22	Airbag Sensor (Front LH)
A 23	Horn (Low)
A 24	Ambient Temp. Sensor
A 25	Horn (High)
A 26	Skid Control ECU with Actuator
A 27	Skid Control ECU with Actuator
A 32	A/C Pressure Sensor
A 33	Clearance Lamp (Front RH)
A 34	Headlamp (RH High)
A 35	Headlamp Leveling Motor (RH)
A 36	Headlamp (RH Low)
A 37	Turn Signal Lamp (Front RH)
A 38	Tire Pressure Warning Antenna (Front)
A 39	Turn Signal Lamp (Front Side RH)
A 40	Rear Washer Motor
A 41	Front Washer Motor
A 42	Fog Lamp (Front RH)
A 45	Airbag Sensor (Front RH)
A 46	A/C Condenser Fan Motor
A 47	Radiator Fan Motor
A 49	Inlet Air Temp. Sensor
A 54	Junction Connector
A 55	Junction Connector
A 60	Engine Hood Courtesy SW
A 61	Speed Sensor (Front LH)
A 62	Speed Sensor (Front RH)

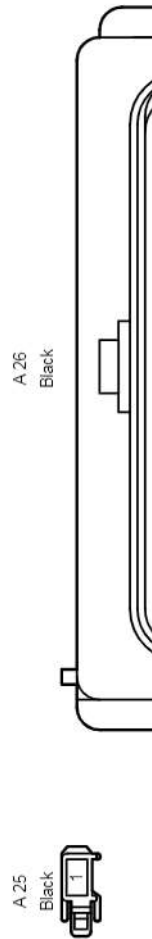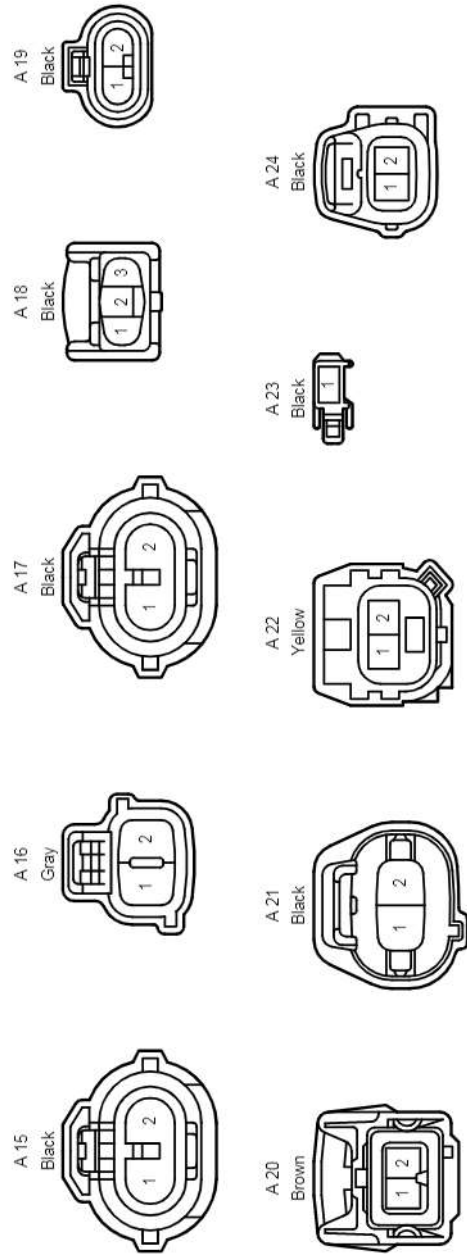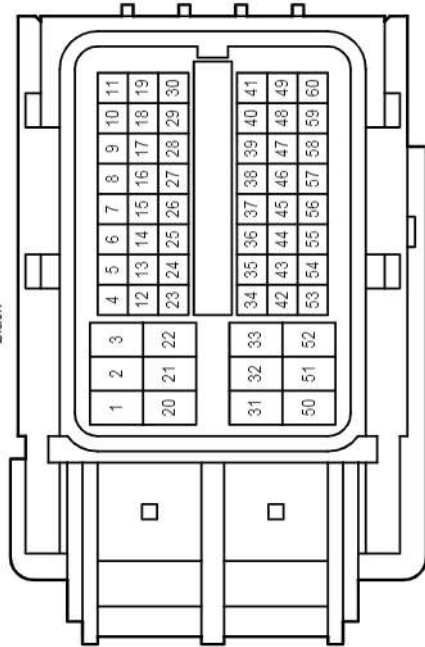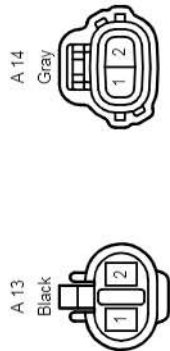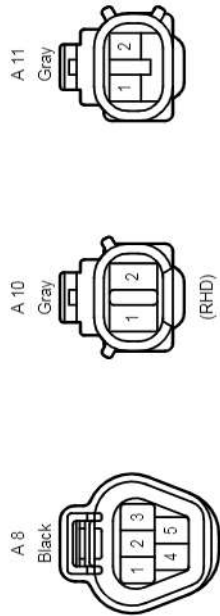

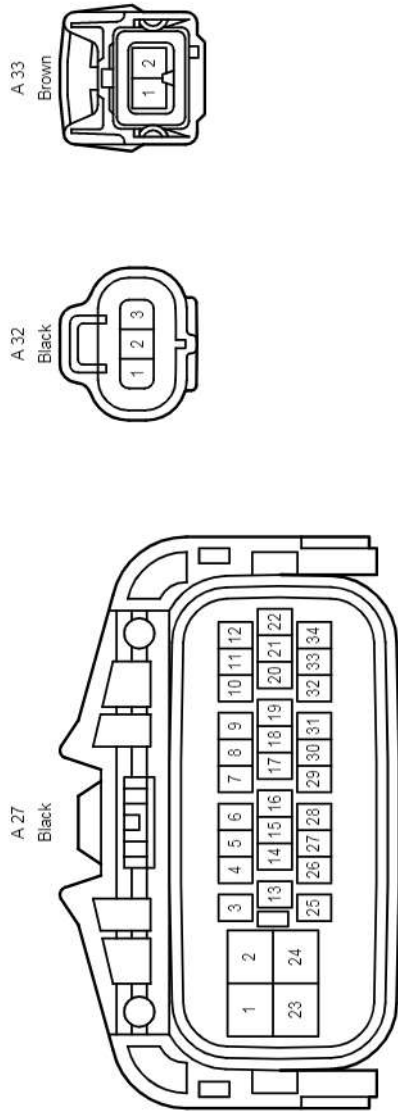





cardiagn.com


Position of Parts in Engine Compartment <RHD 2AD-FHV Before Dec. 2008 Production>

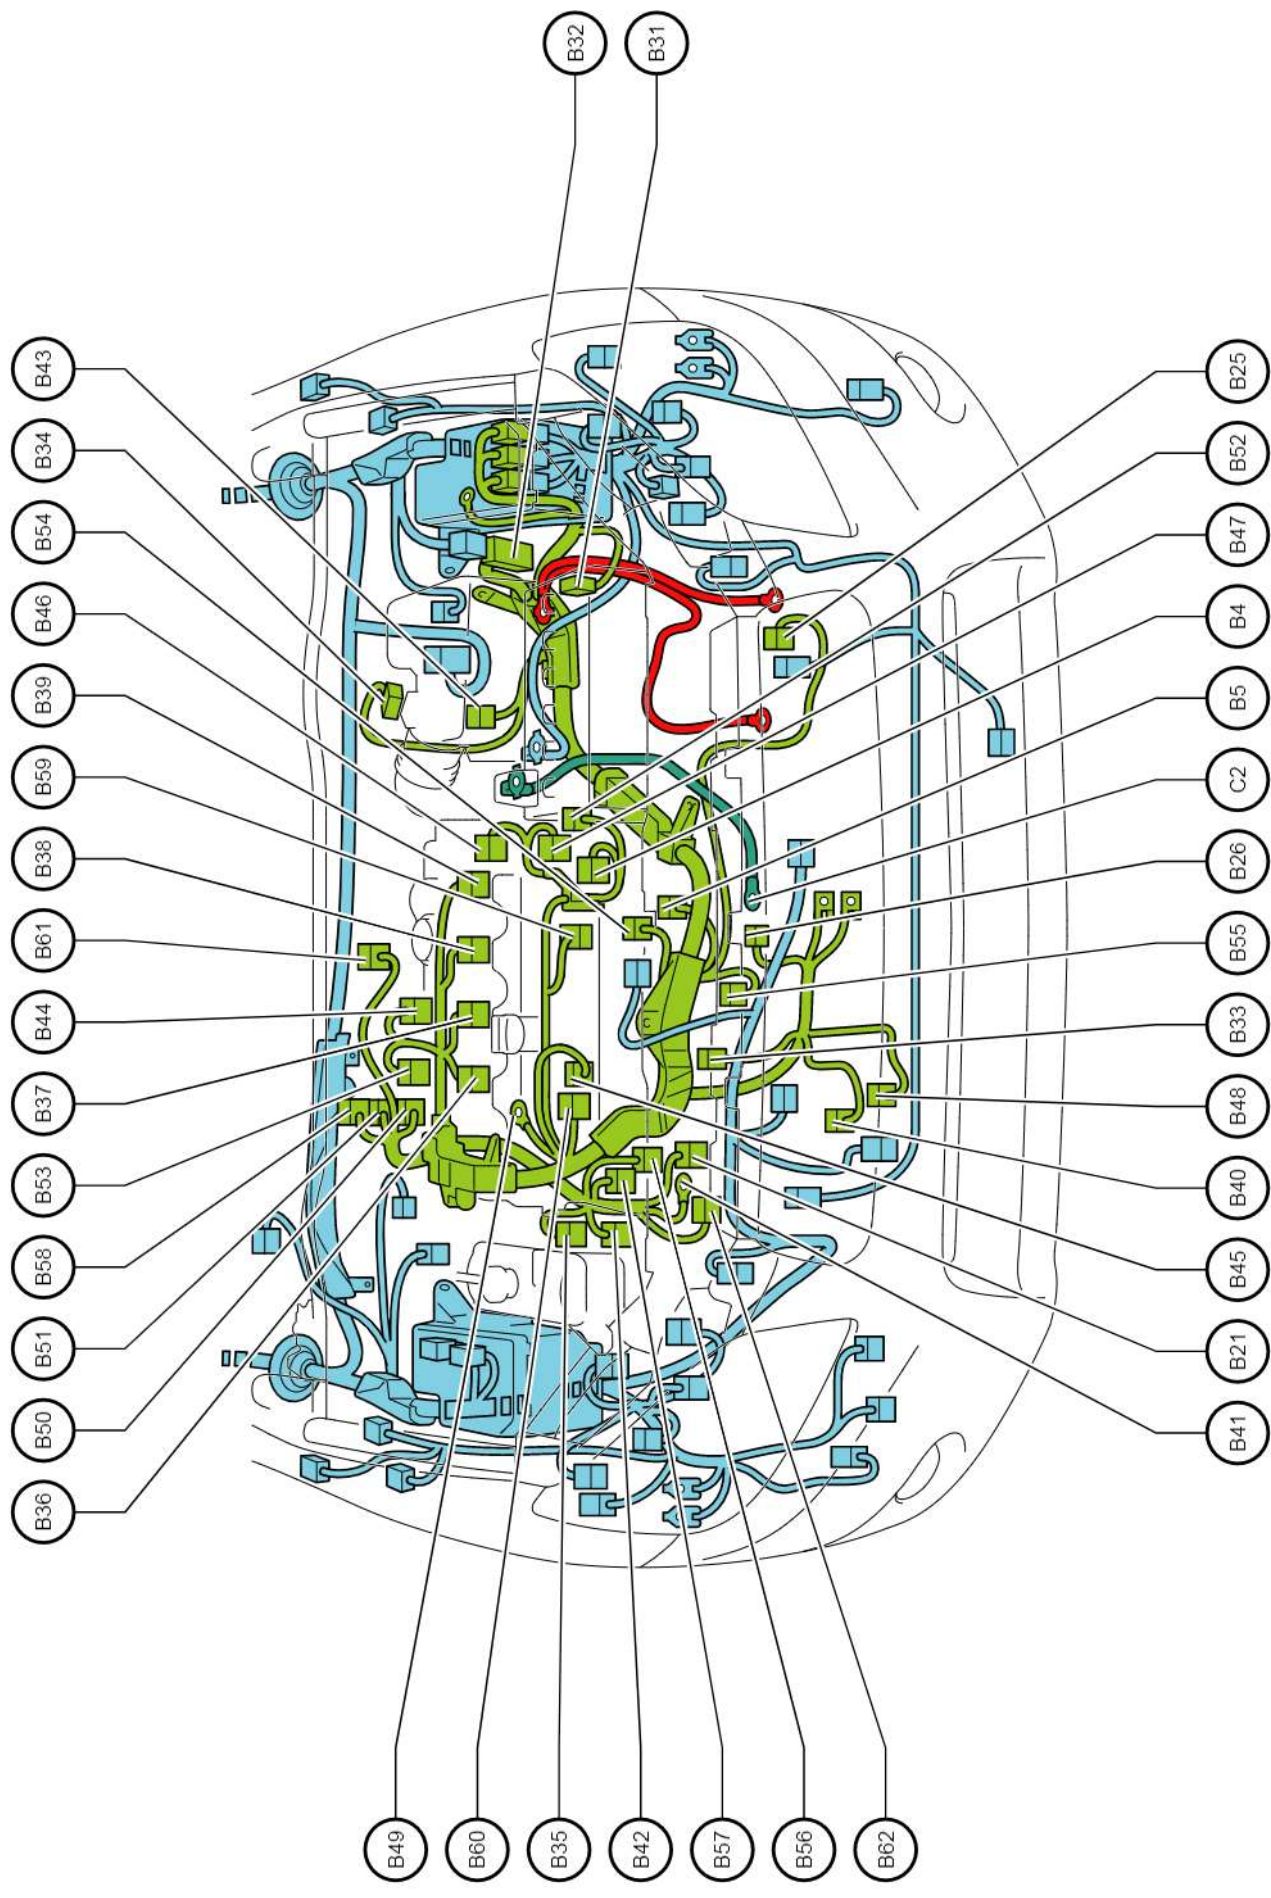



B 4	Water Temp. Sensor
B 5	Engine Oil Pressure SW
B 21	Alternator
B 25	Back-Up Light SW
B 26	Starter
B 31	Battery Current Sensor
B 32	Engine ECU
B 33	Throttle Body Assembly
B 34	Air Flow Meter
B 35	Camshaft Position Sensor
B 36	Fuel Injector (No.1)
B 37	Fuel Injector (No.2)
B 38	Fuel Injector (No.3)
B 39	Fuel Injector (No.4)
B 40	A/C Compressor
B 41	Alternator
B 42	Crankshaft Position Sensor
B 43	Glow Plug Relay
B 44	VRV (EGR)
B 45	Turbo Pressure Sensor
B 46	Suction Control Valve
B 47	Fuel Temp. Sensor
B 48	Engine Oil Level Sensor
B 49	Glow Plug
B 50	Injector Driver (EDU)
B 51	Injector Driver (EDU)
B 52	Exhaust Fuel Addition Injector Assembly
B 53	VSV (EGR)
B 54	EGR Valve Position Sensor
B 55	Throttle Body Assembly
B 56	Exhaust Gas Temperature Sensor (Front)
B 57	Exhaust Gas Temperature Sensor (Rear)
B 58	Injector Driver (EDU)
B 59	Pressure Discharge Valve
B 60	Fuel Pressure Sensor
B 61	Differential Pressure Sensor
B 62	Air Fuel Ratio Sensor (Bank 1 Sensor 1)


C 2 Starter

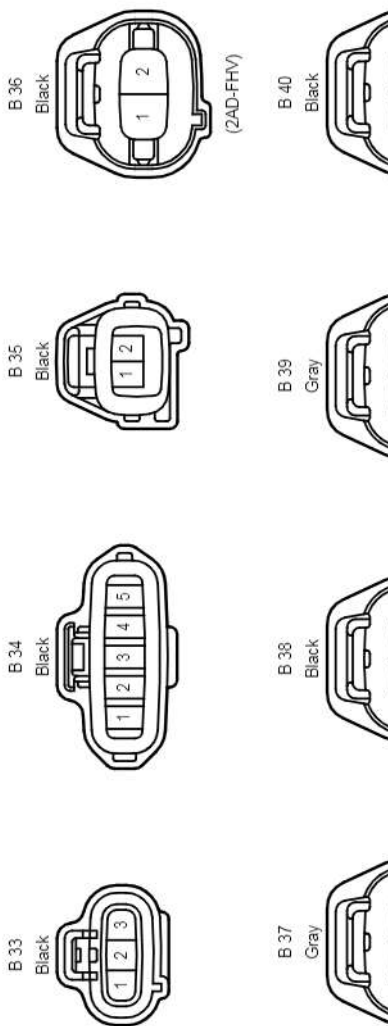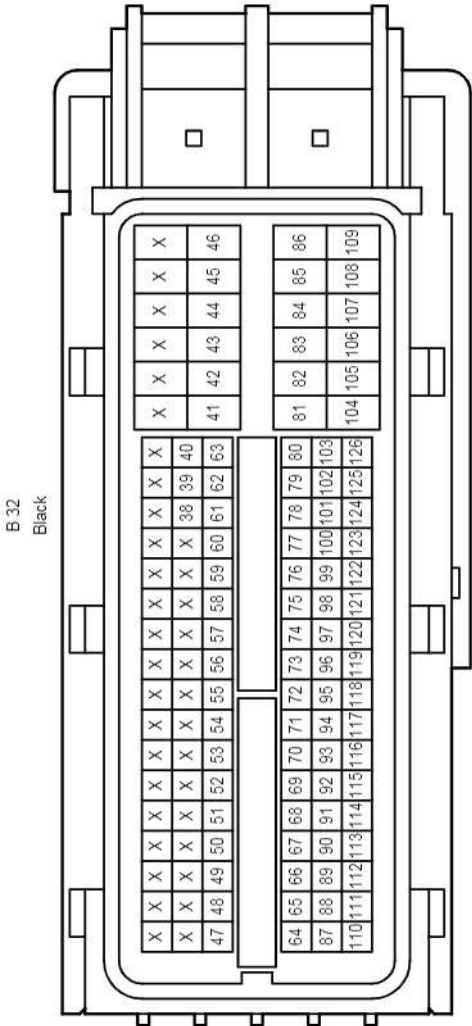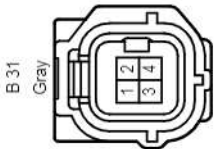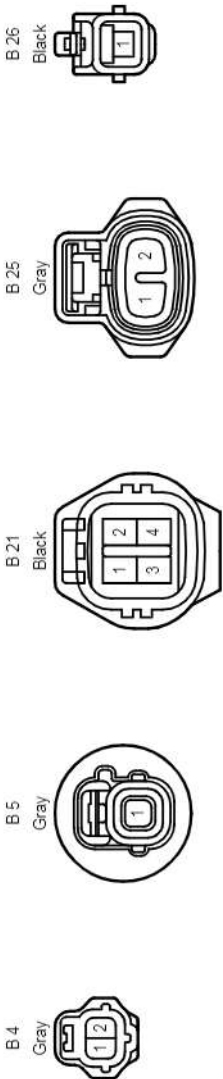



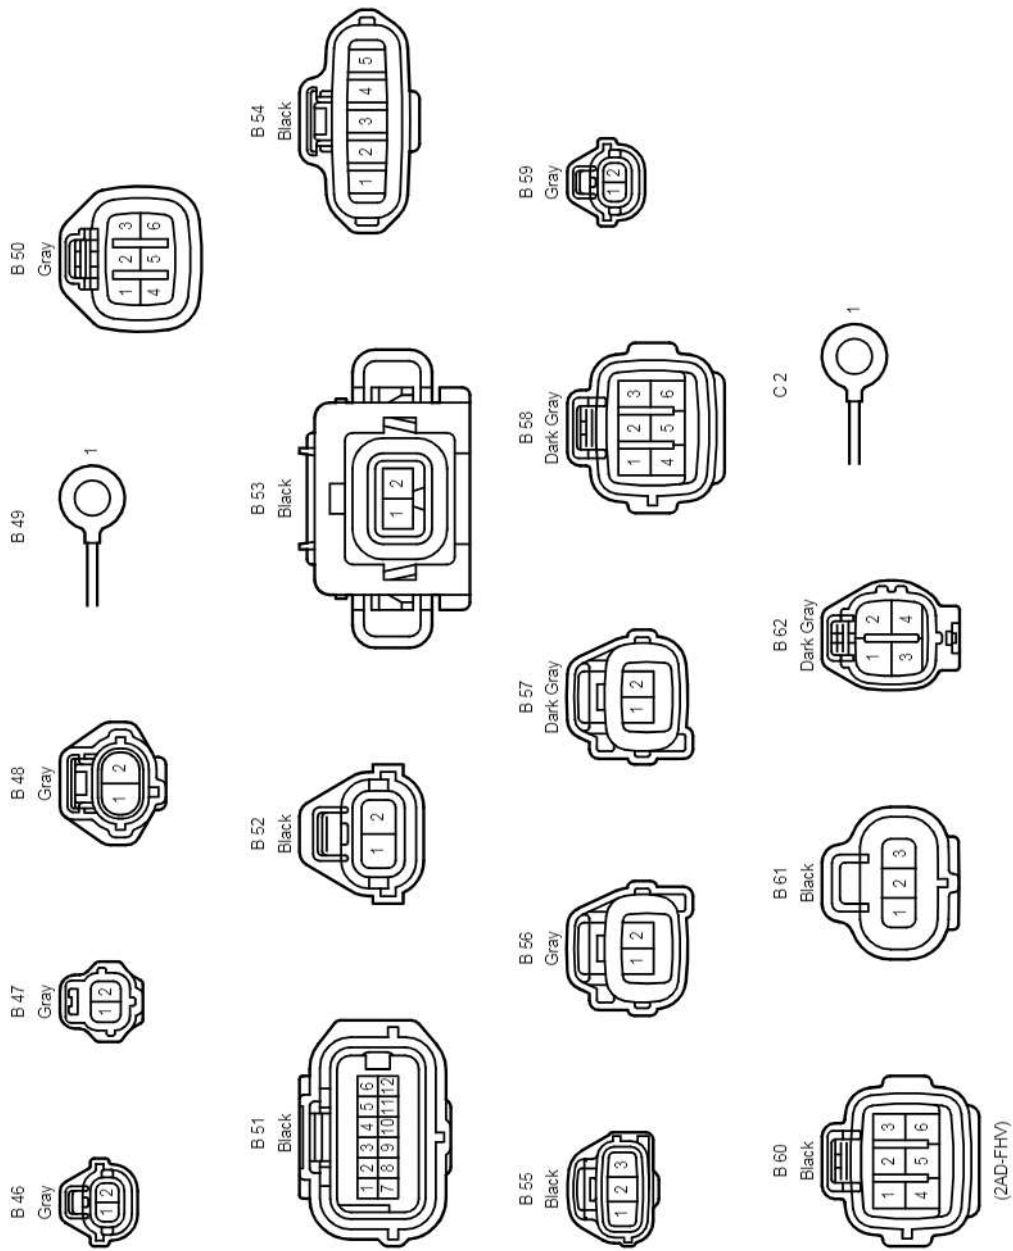


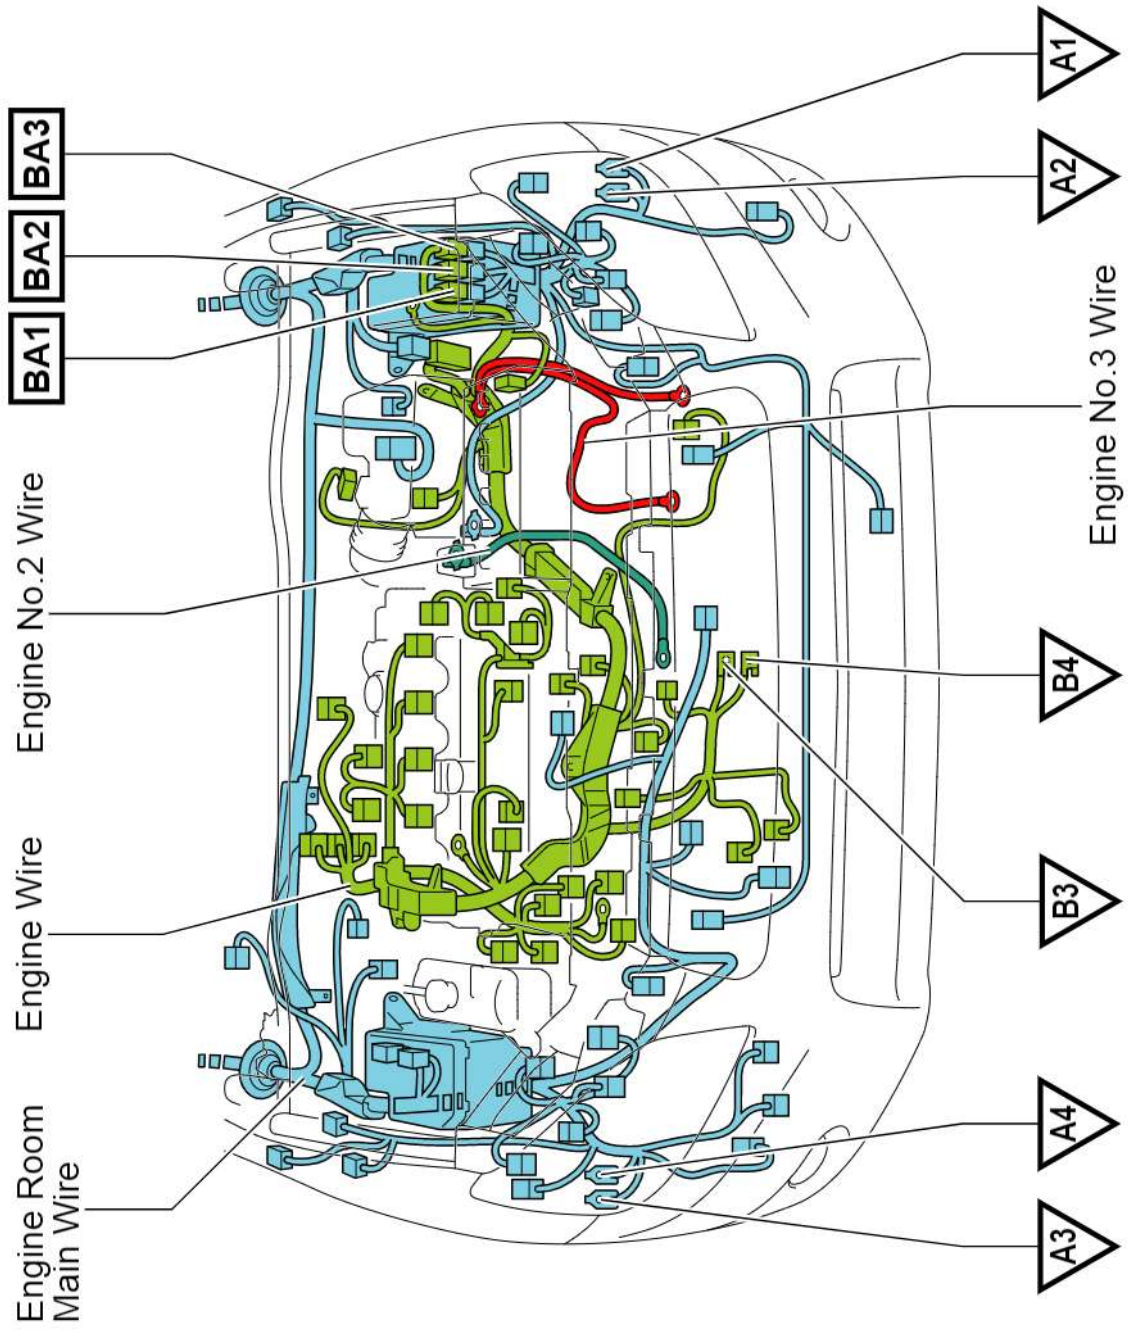









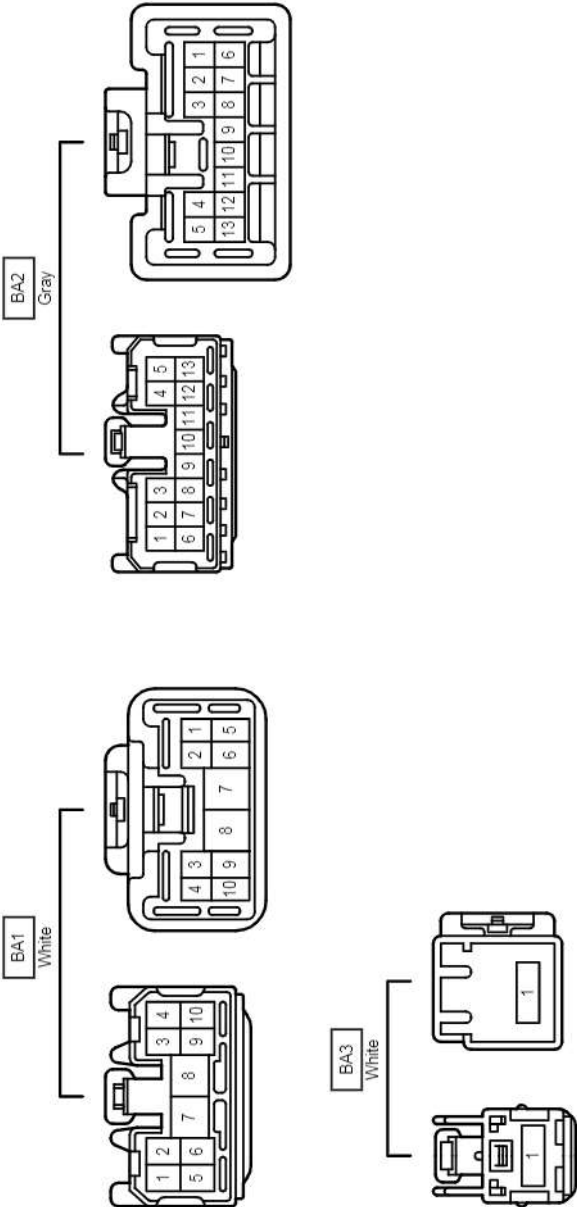


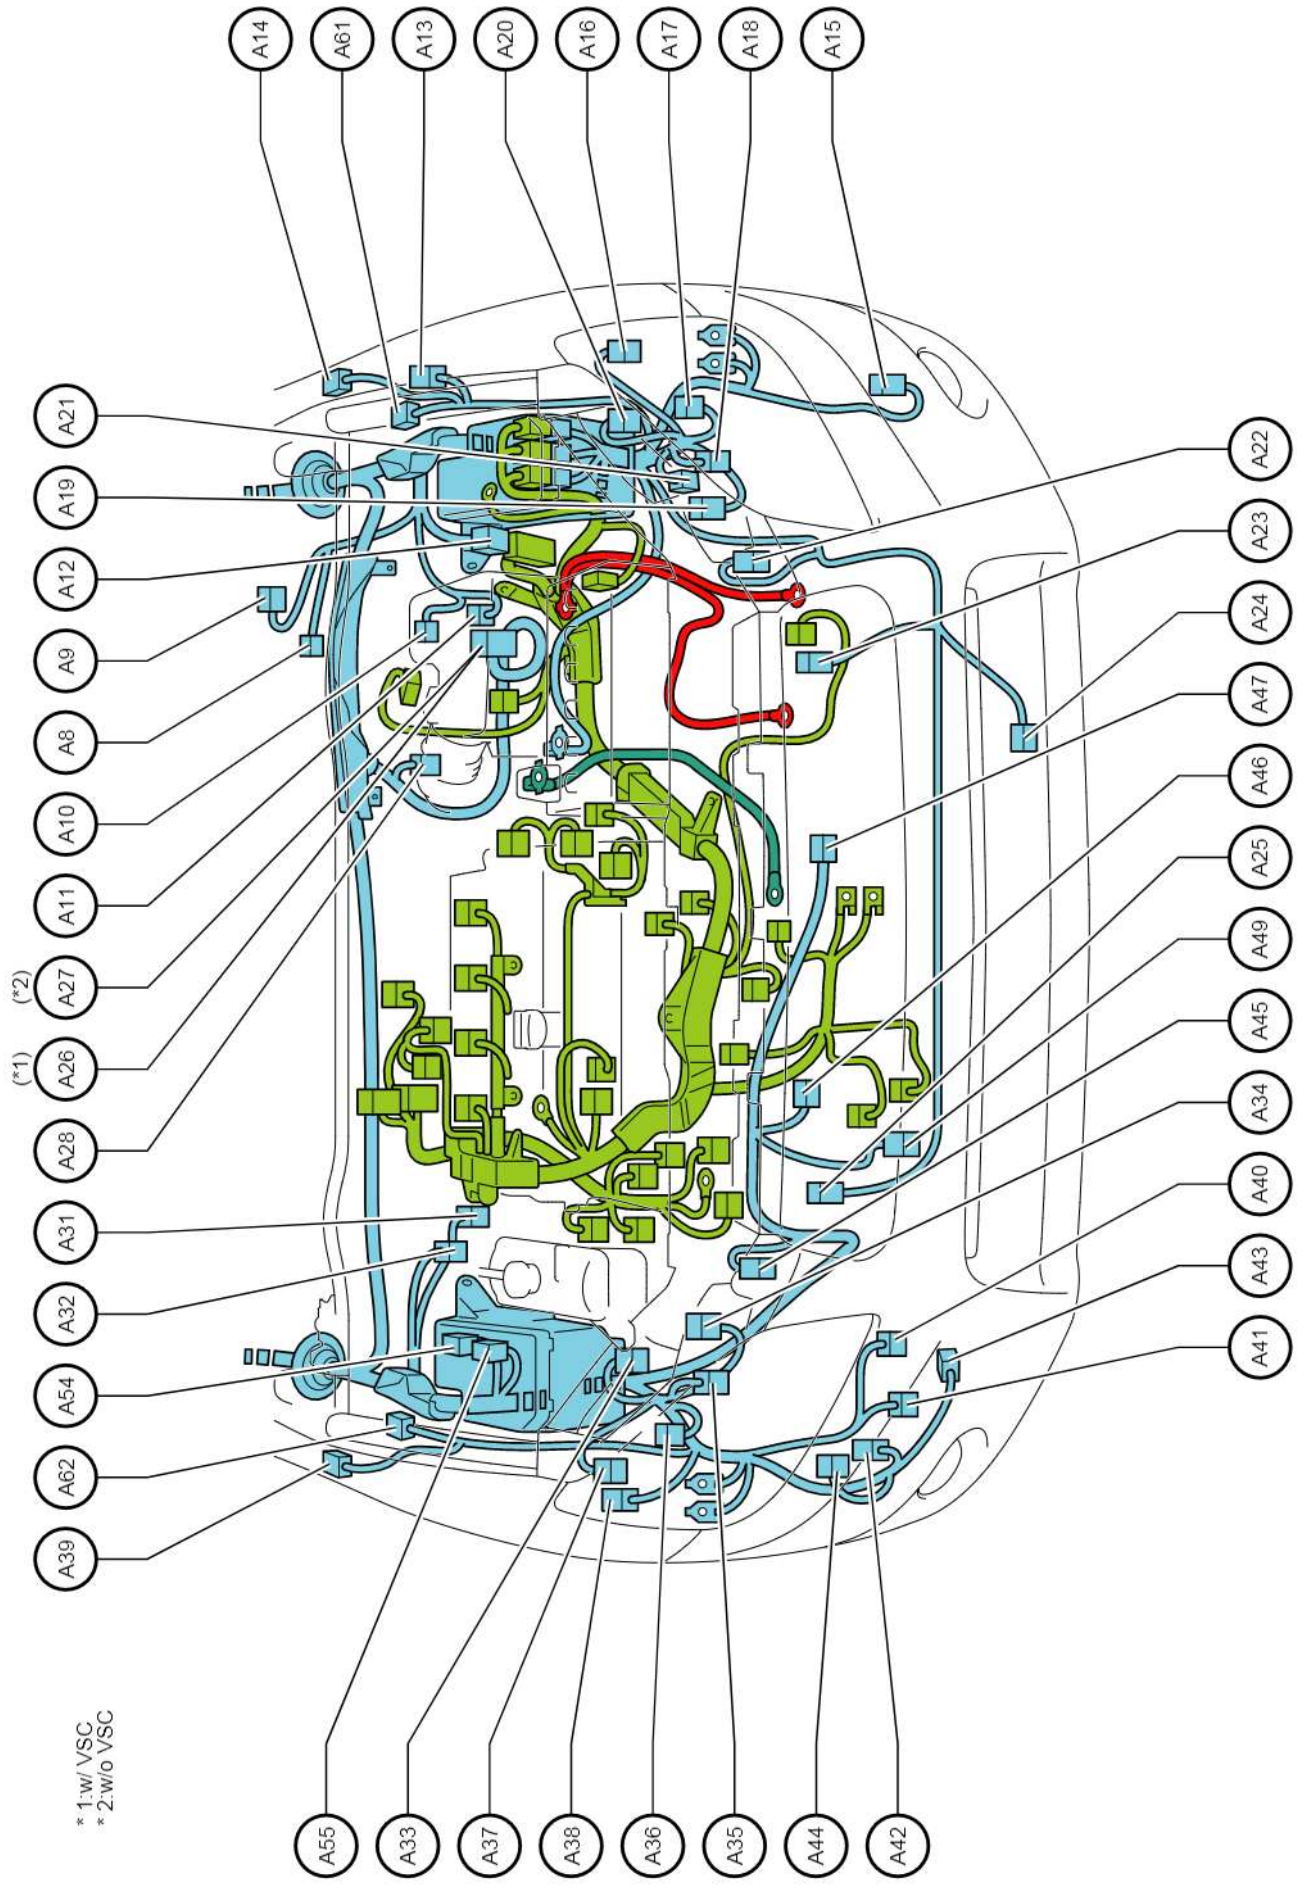


A 8	Windshield Wiper Motor
A 9	Front Wiper Deicer
A 10	Brake Fluid Level Warning SW
A 11	Fuel Filter Warning SW
A 12	Engine ECU
A 13	Wireless Door Lock Buzzer
A 14	Turn Signal Lamp (Front Side LH)
A 15	Fog Lamp (Front LH)
A 16	Turn Signal Lamp (Front LH)
A 17	Headlamp (LH Low)
A 18	Headlamp Leveling Motor (LH)
A 19	Headlamp (LH High)
A 20	Clearance Lamp (Front LH)
A 21	Option Connector
A 22	Airbag Sensor (Front LH)
A 23	Horn (Low)
A 24	Ambient Temp. Sensor
A 25	Horn (High)
A 26	Skid Control ECU with Actuator
A 27	Skid Control ECU with Actuator
A 28	Fuel Pump
A 31	Power Heater Assembly
A 32	A/C Pressure Sensor
A 33	Clearance Lamp (Front RH)
A 34	Headlamp (RH High)
A 35	Headlamp Leveling Motor (RH)
A 36	Headlamp (RH Low)
A 37	Turn Signal Lamp (Front RH)
A 38	Tire Pressure Warning Antenna (Front)
A 39	Turn Signal Lamp (Front Side RH)
A 40	Rear Washer Motor
A 41	Front Washer Motor
A 42	Fog Lamp (Front RH)
A 43	Headlamp Cleaner Motor
A 44	Headlamp Cleaner Control Relay
A 45	Airbag Sensor (Front RH)
A 46	A/C Condenser Fan Motor
A 47	Radiator Fan Motor
A 49	Inlet Air Temp. Sensor
A 54	Junction Connector
A 55	Junction Connector
A 61	Speed Sensor (Front LH)
A 62	Speed Sensor (Front RH)


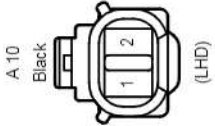
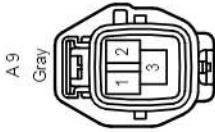
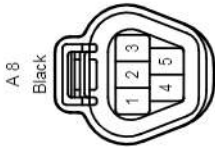



A 12
Black

 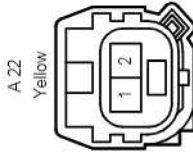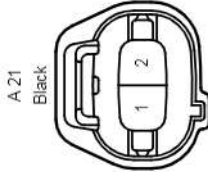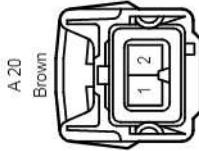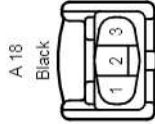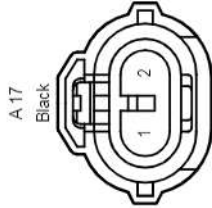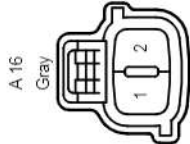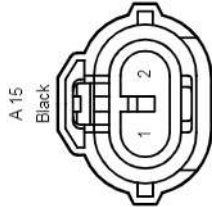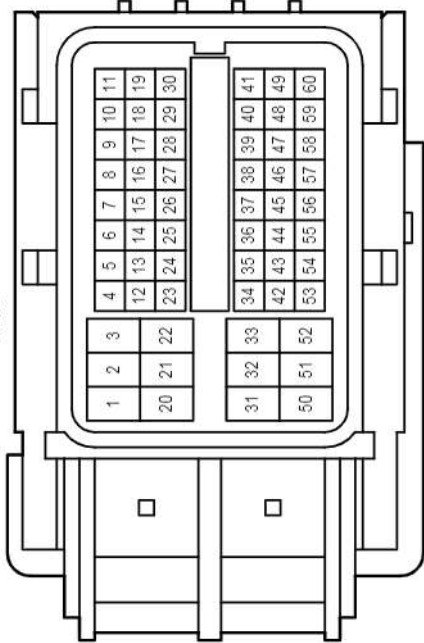





A 26
Black

 





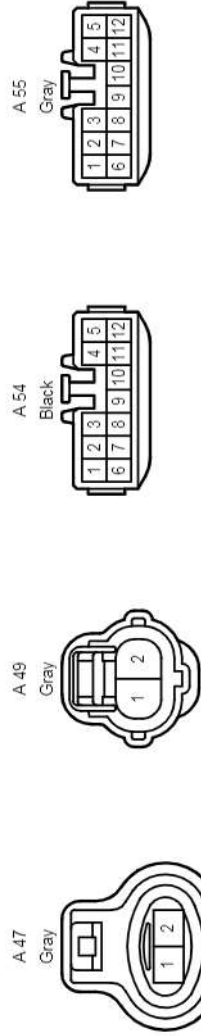
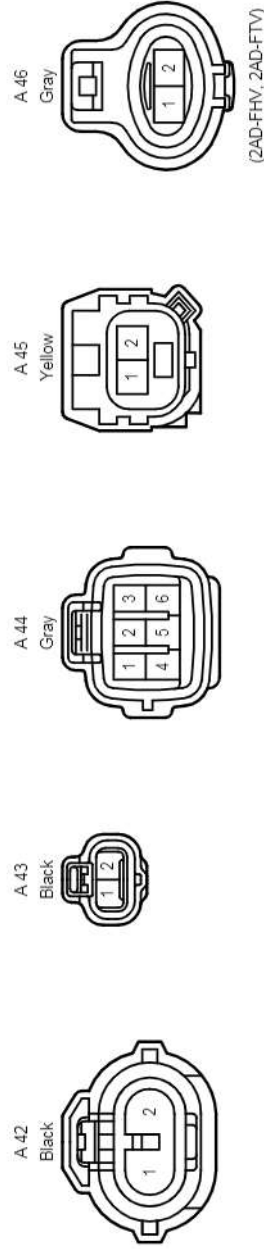
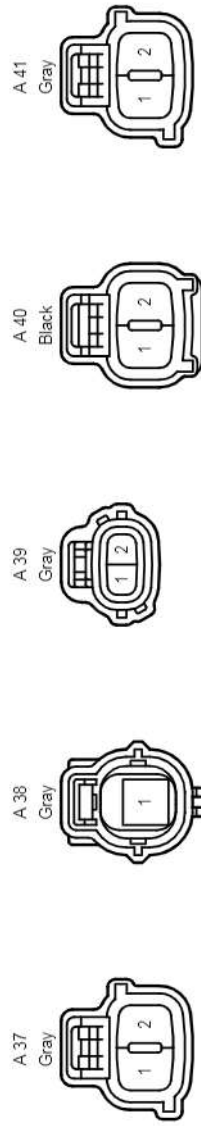
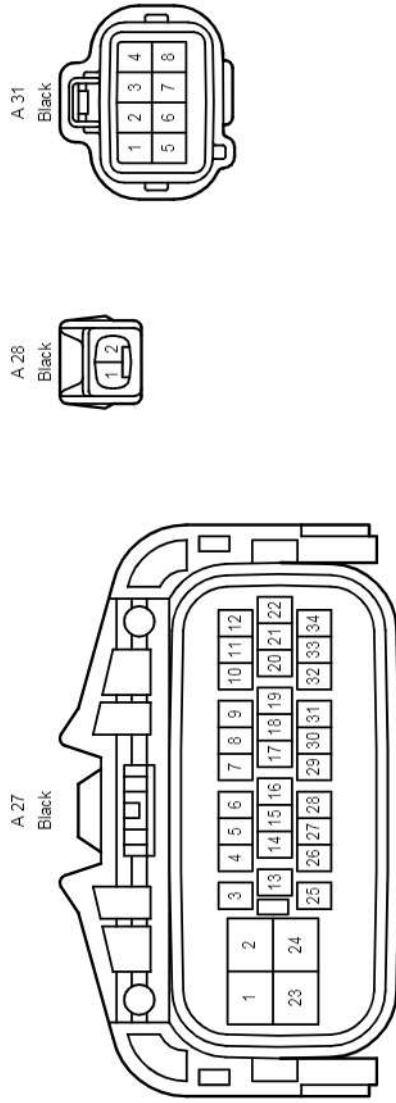


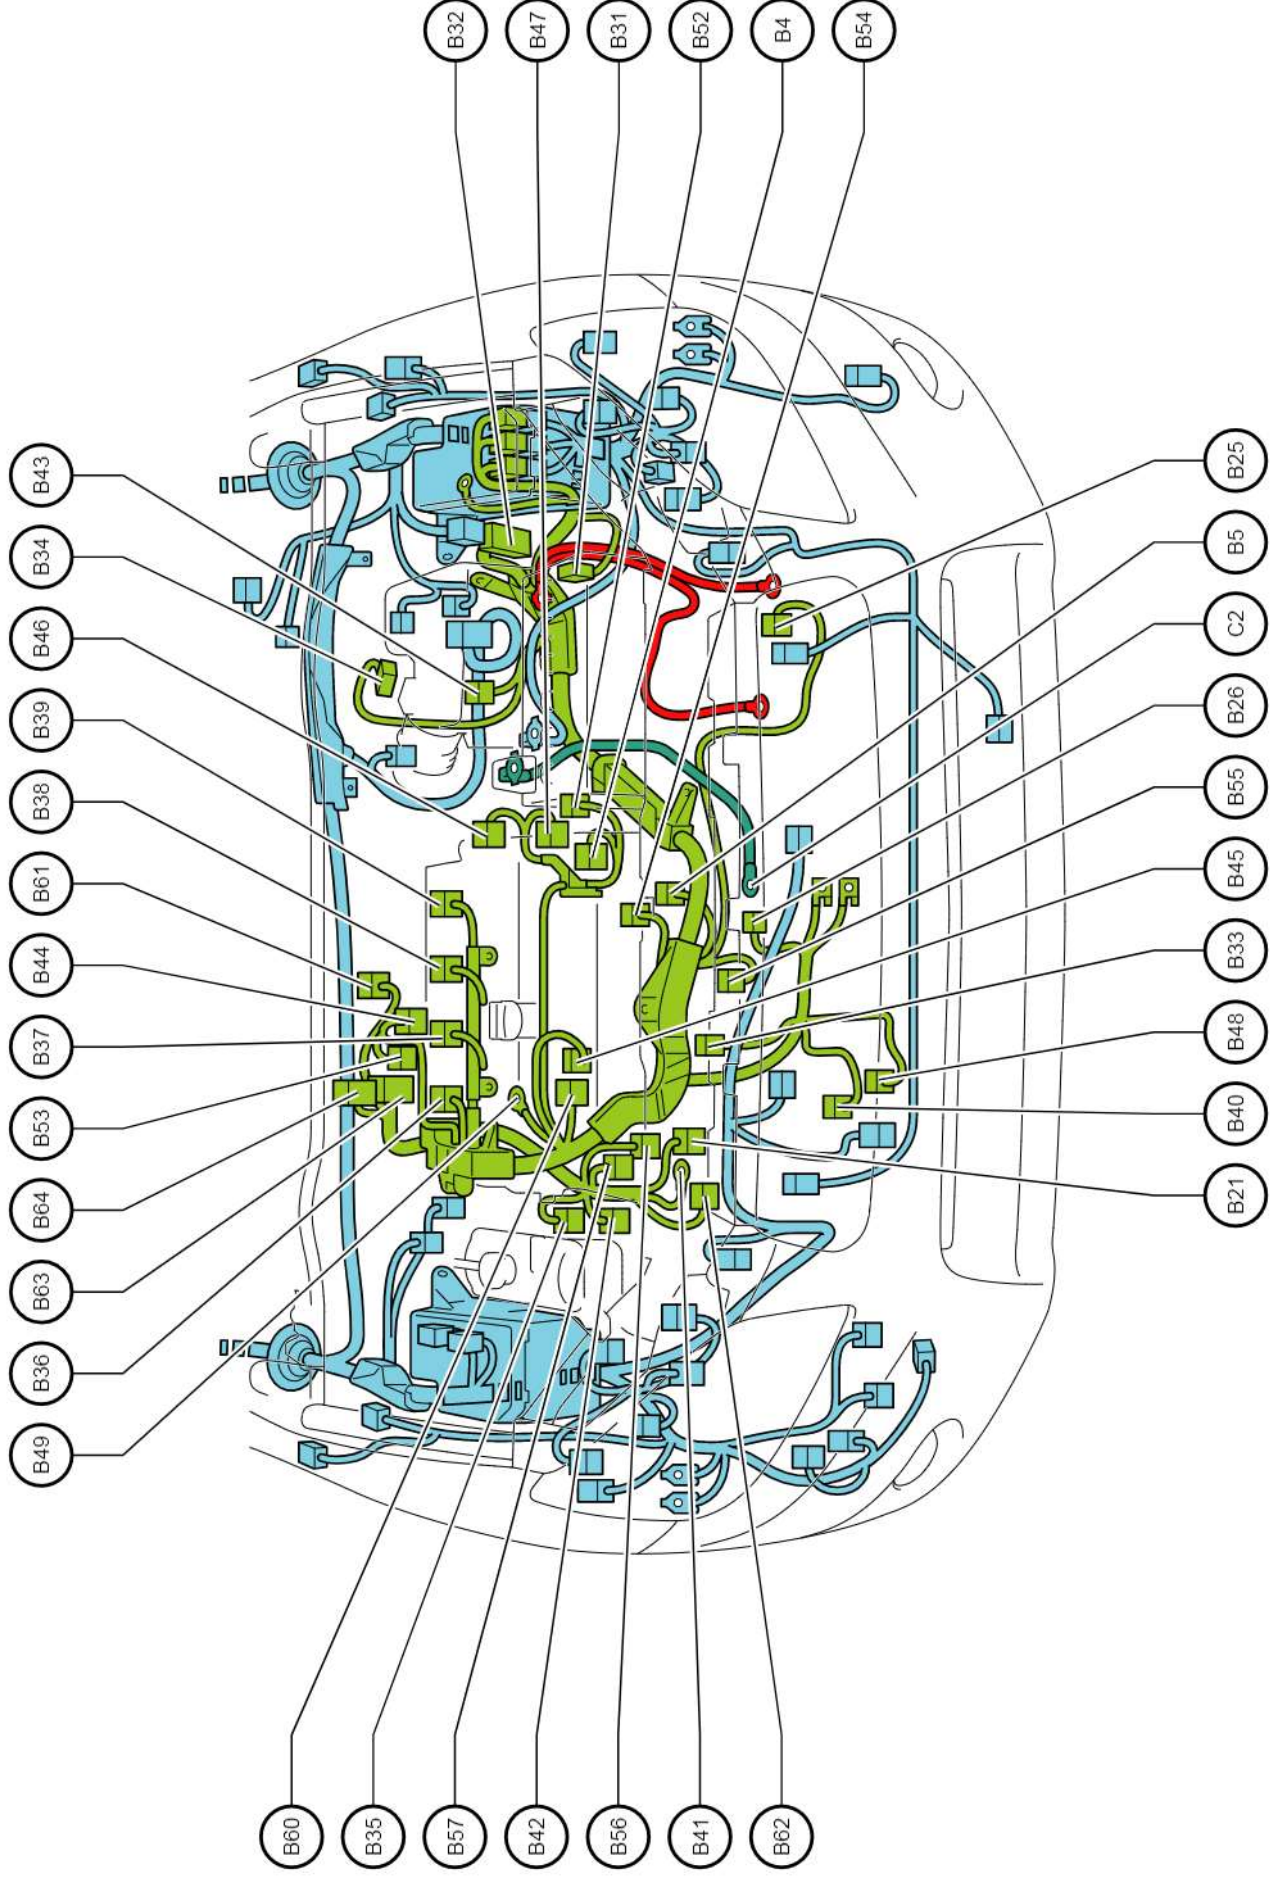

B	4	Water Temp. Sensor
B	5	Engine Oil Pressure SW
B	21	Alternator
B	25	Back-Up Light SW
B	26	Starter
B	31	Battery Current Sensor
B	32	Engine ECU
B	33	Throttle Body Assembly
B	34	Air Flow Meter
B	35	Camshaft Position Sensor
B	36	Fuel Injector (No.1)
B	37	Fuel Injector (No.2)
B	38	Fuel Injector (No.3)
B	39	Fuel Injector (No.4)
B	40	A/C Compressor
B	41	Alternator
B	42	Crankshaft Position Sensor
B	43	Glow Plug Relay
B	44	VRV (EGR)
B	45	Turbo Pressure Sensor
B	46	Suction Control Valve
B	47	Fuel Temp. Sensor
B	48	Engine Oil Level Sensor
B	49	Glow Plug
B	52	Exhaust Fuel Addition Injector Assembly
B	53	VSV (EGR)
B	54	EGR Valve Position Sensor
B	55	Throttle Body Assembly
B	56	Exhaust Gas Temperature Sensor (Front)
B	57	Exhaust Gas Temperature Sensor (Rear)
B	60	Fuel Pressure Sensor
B	61	Differential Pressure Sensor
B	62	Air Fuel Ratio Sensor (Bank 1 Sensor 1)
B	63	Injector Driver (EDU)
B	64	Injector Driver (EDU)
C	2	Starter

 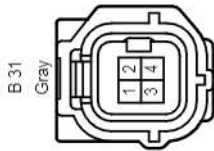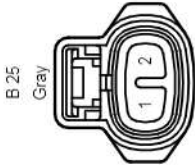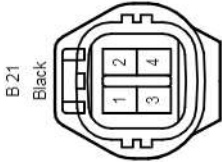

B 32
Black

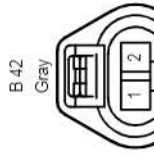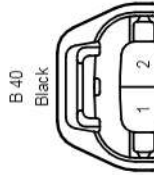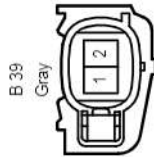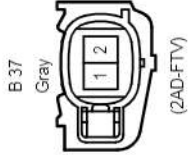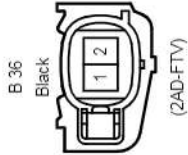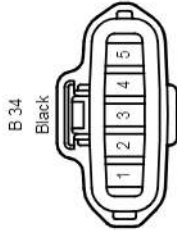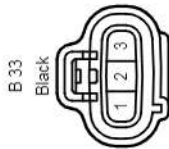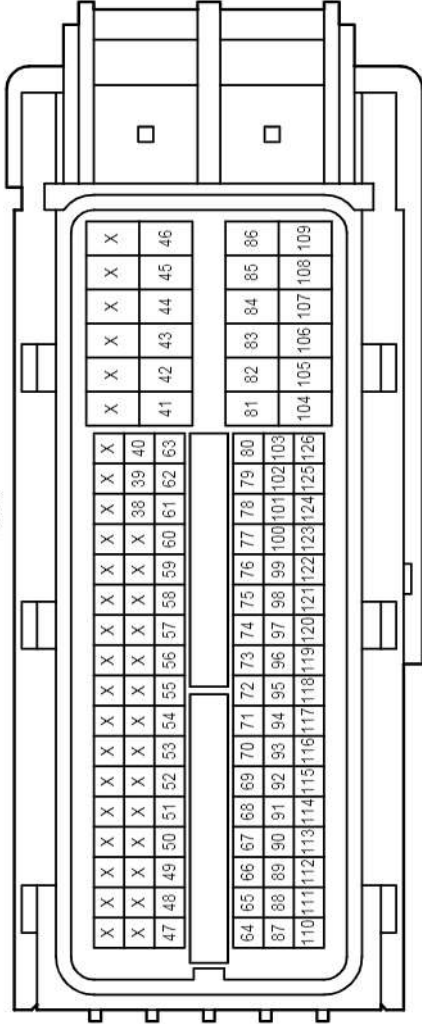


B 48
Gray




B 49




B 52
Black

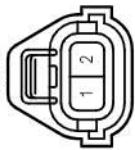

B 53
Black

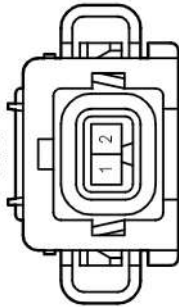

B 54
Black

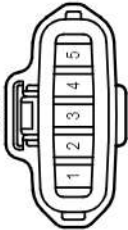

B 55
Black



B 56
Gray



B 57
Dark Gray



 
B 60
Black




B 61
Black




B 62
Dark Gray



B 63
Dark Gray

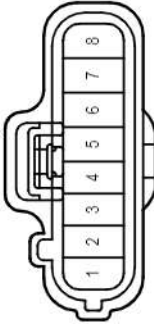



B 64
Black

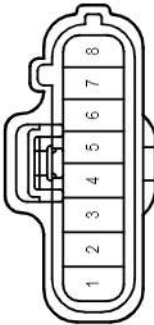

C 2












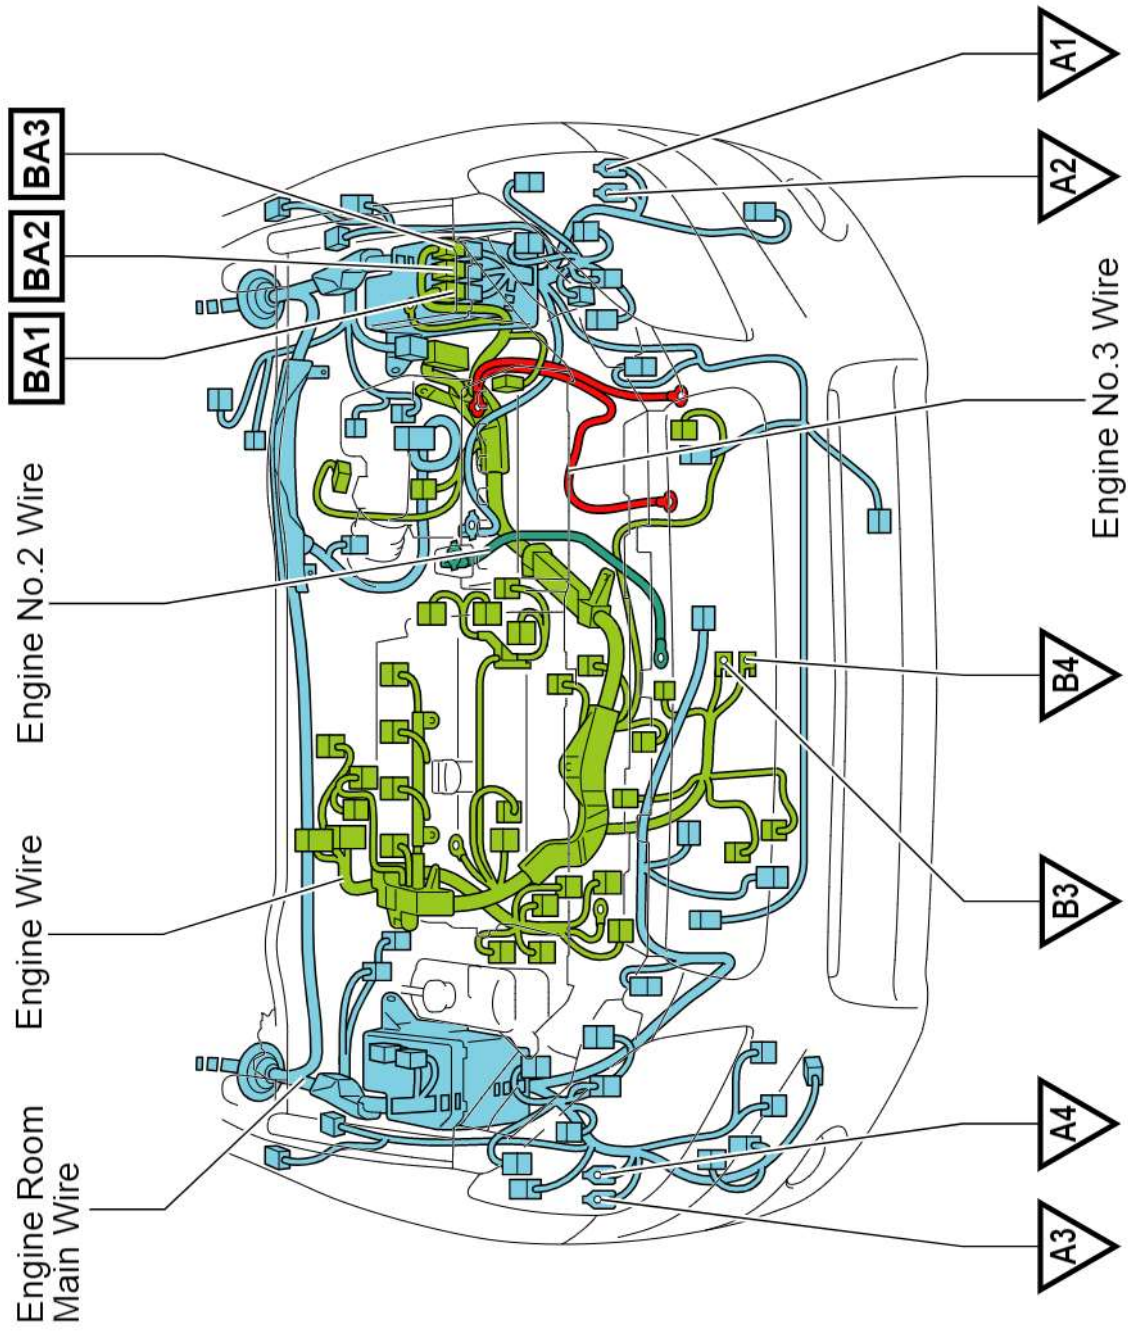






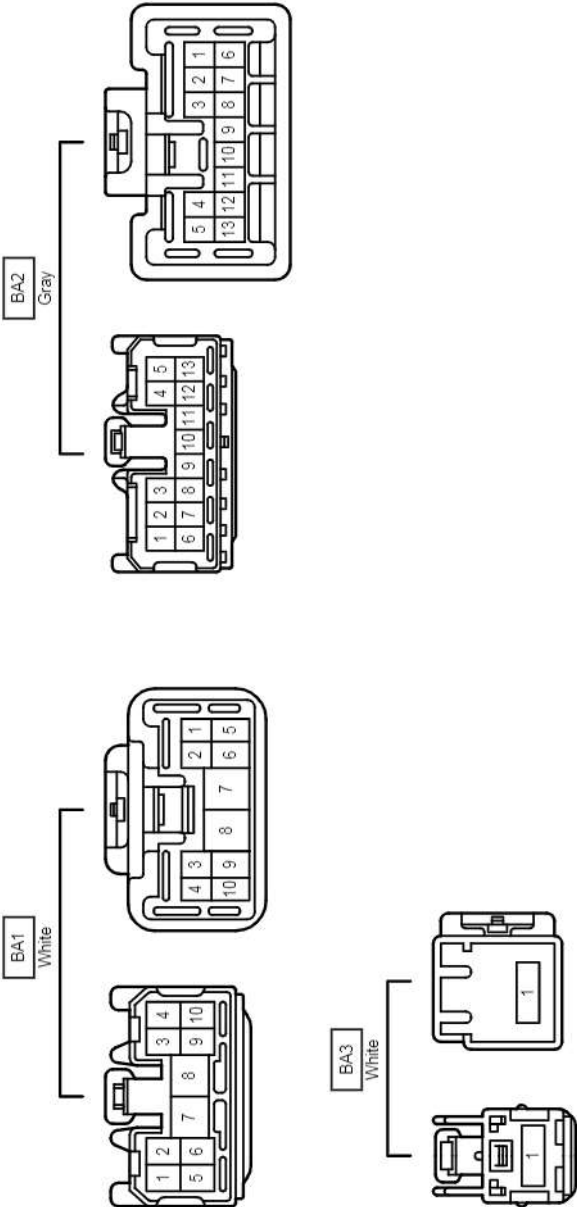





* 1:w/ VSC
* 2:w/o VSC














- A 8 Windshield Wiper Motor
- A 10 Brake Fluid Level Warning SW
- A 11 Fuel Filter Warning SW
- A 12 Engine ECU
- A 13 Wireless Door Lock Buzzer
- A 14 Turn Signal Lamp (Front Side LH)
- A 15 Fog Lamp (Front LH)
- A 16 Turn Signal Lamp (Front LH)
- A 17 Headlamp (LH Low)
- A 18 Headlamp Leveling Motor (LH)
- A 19 Headlamp (LH High)
- A 20 Clearance Lamp (Front LH)
- A 21 Option Connector
- A 22 Airbag Sensor (Front LH)
- A 23 Horn (Low)
- A 24 Ambient Temp. Sensor
- A 25 Horn (High)
- A 26 Skid Control ECU with Actuator
- A 27 Skid Control ECU with Actuator
- A 32 A/C Pressure Sensor
- A 33 Clearance Lamp (Front RH)
- A 34 Headlamp (RH High)
- A 35 Headlamp Leveling Motor (RH)
- A 36 Headlamp (RH Low)
- A 37 Turn Signal Lamp (Front RH)
- A 38 Tire Pressure Warning Antenna (Front)
- A 39 Turn Signal Lamp (Front Side RH)
- A 40 Rear Washer Motor
- A 41 Front Washer Motor
- A 42 Fog Lamp (Front RH)
- A 45 Airbag Sensor (Front RH)
- A 46 A/C Condenser Fan Motor
- A 47 Radiator Fan Motor
- A 49 Inlet Air Temp. Sensor
- A 54 Junction Connector
- A 55 Junction Connector
- A 60 Engine Hood Courtesy SW
- A 61 Speed Sensor (Front LH)
- A 62 Speed Sensor (Front RH)

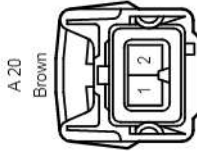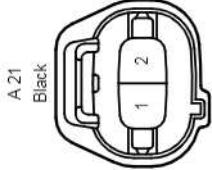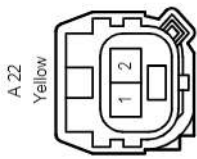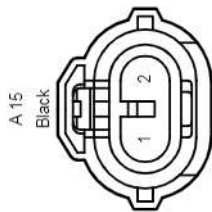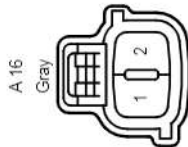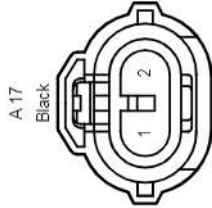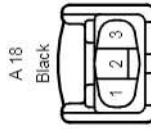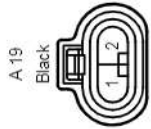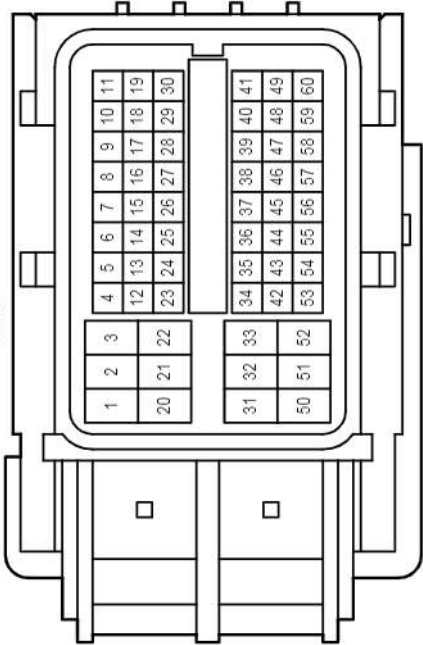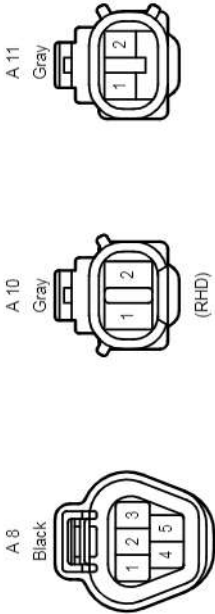

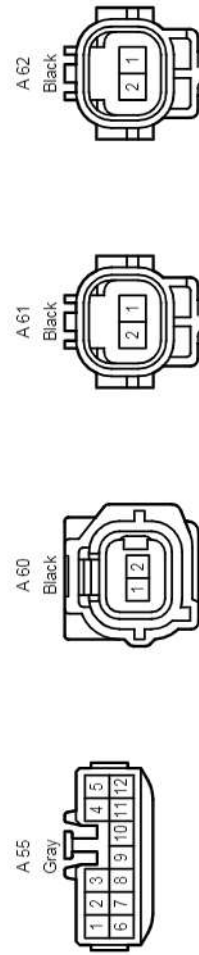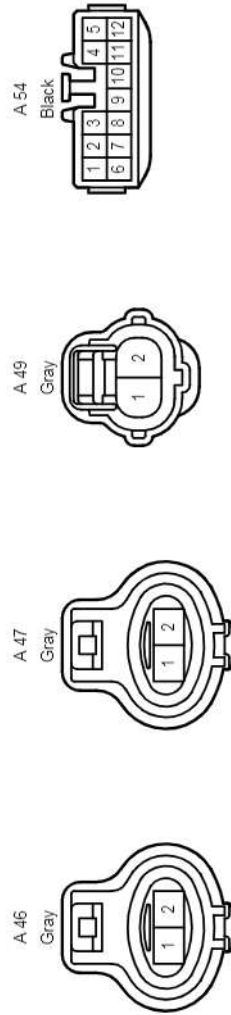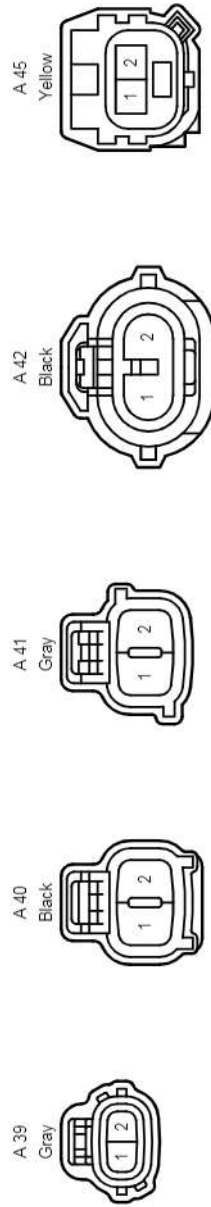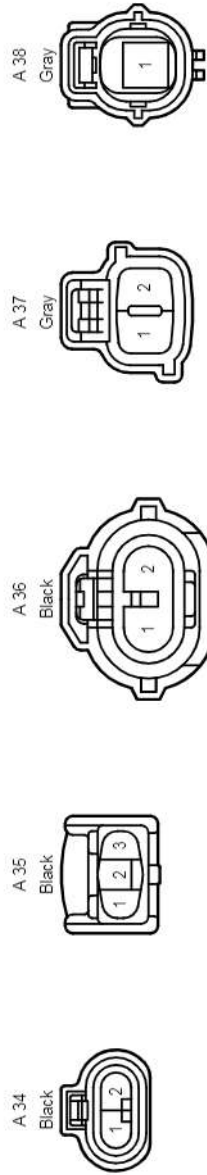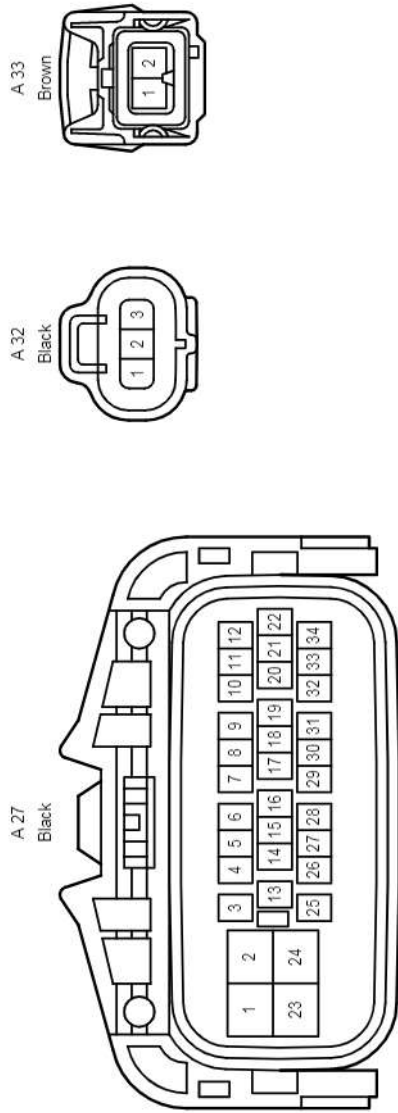

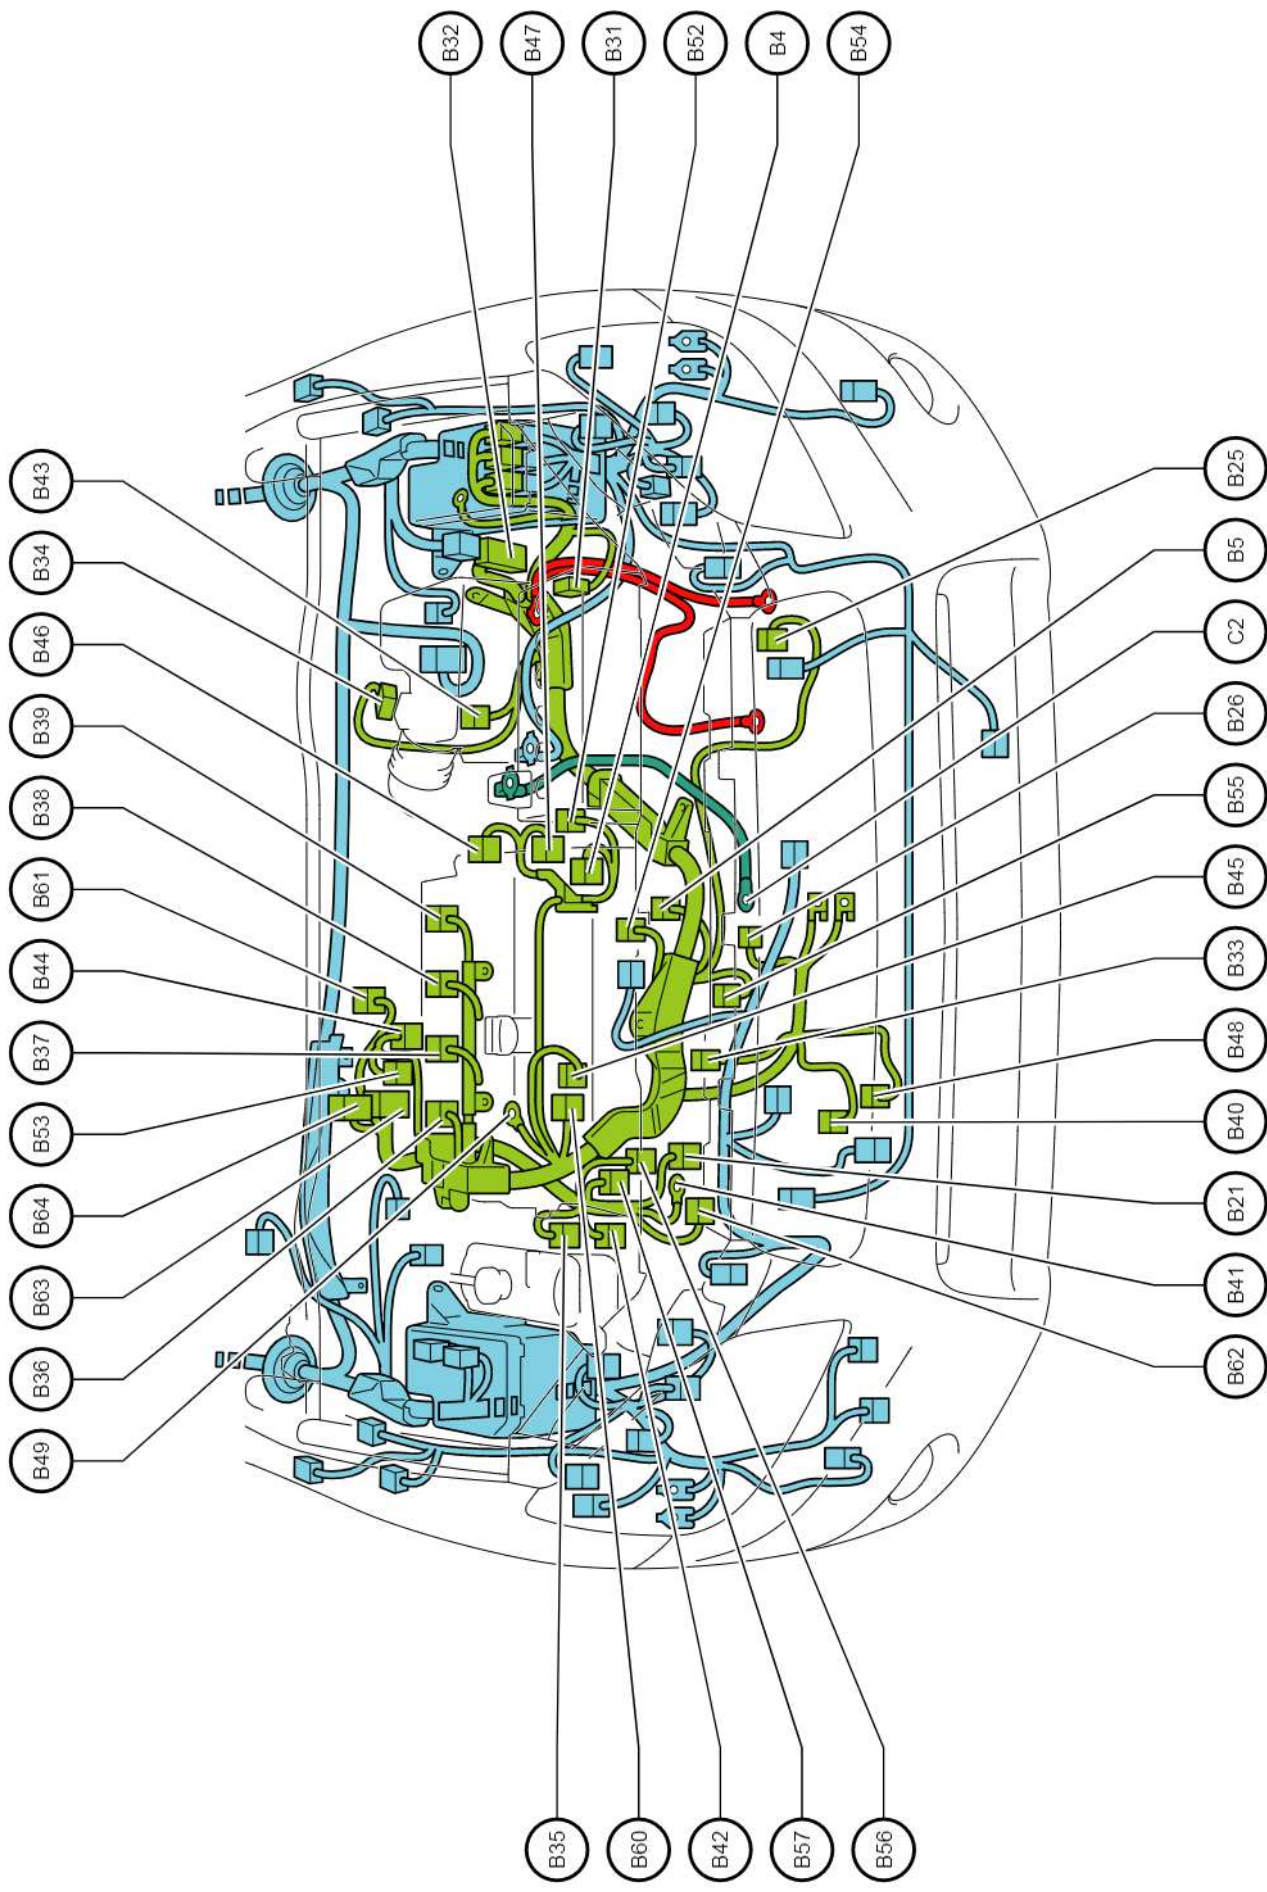

B	4	Water Temp. Sensor
B	5	Engine Oil Pressure SW
B	21	Alternator
B	25	Back-Up Light SW
B	26	Starter
B	31	Battery Current Sensor
B	32	Engine ECU
B	33	Throttle Body Assembly
B	34	Air Flow Meter
B	35	Camshaft Position Sensor
B	36	Fuel Injector (No.1)
B	37	Fuel Injector (No.2)
B	38	Fuel Injector (No.3)
B	39	Fuel Injector (No.4)
B	40	A/C Compressor
B	41	Alternator
B	42	Crankshaft Position Sensor
B	43	Glow Plug Relay
B	44	VRV (EGR)
B	45	Turbo Pressure Sensor
B	46	Suction Control Valve
B	47	Fuel Temp. Sensor
B	48	Engine Oil Level Sensor
B	49	Glow Plug
B	52	Exhaust Fuel Addition Injector Assembly
B	53	VSV (EGR)
B	54	EGR Valve Position Sensor
B	55	Throttle Body Assembly
B	56	Exhaust Gas Temperature Sensor (Front)
B	57	Exhaust Gas Temperature Sensor (Rear)
B	60	Fuel Pressure Sensor
B	61	Differential Pressure Sensor
B	62	Air Fuel Ratio Sensor (Bank 1 Sensor 1)
B	63	Injector Driver (EDU)
B	64	Injector Driver (EDU)
C	2	Starter

 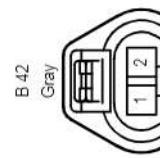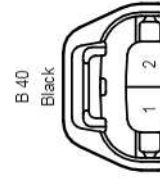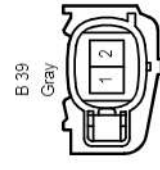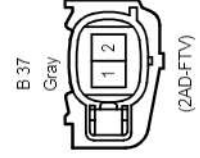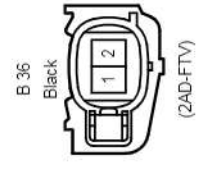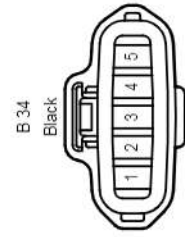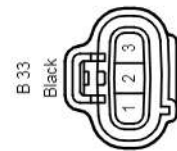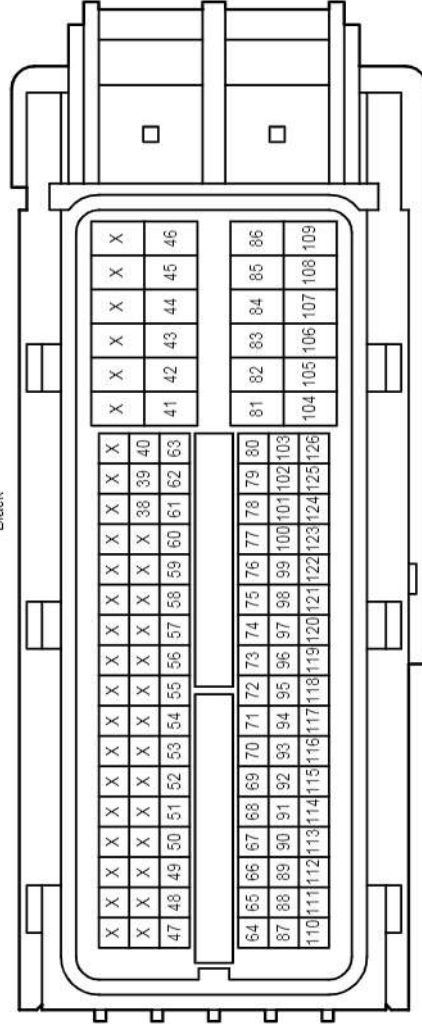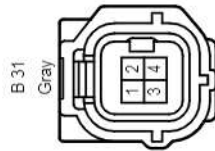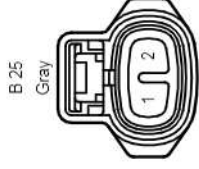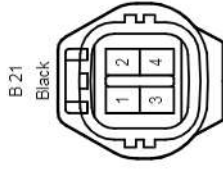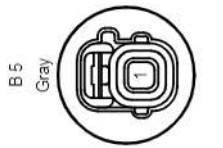


B 48
Gray




B 49




B 52
Black

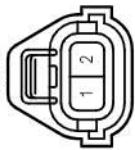

B 53
Black

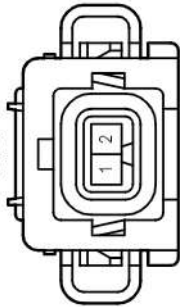

B 54
Black

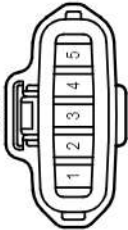

B 55
Black



B 56
Gray



B 57
Dark Gray



 
B 60
Black




B 61
Black




B 62
Dark Gray



B 63
Dark Gray

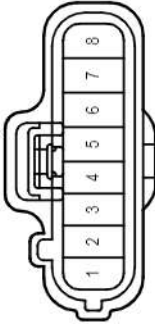



B 64
Black

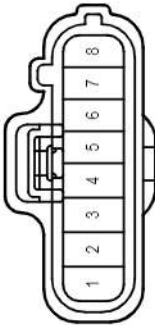


C 2




















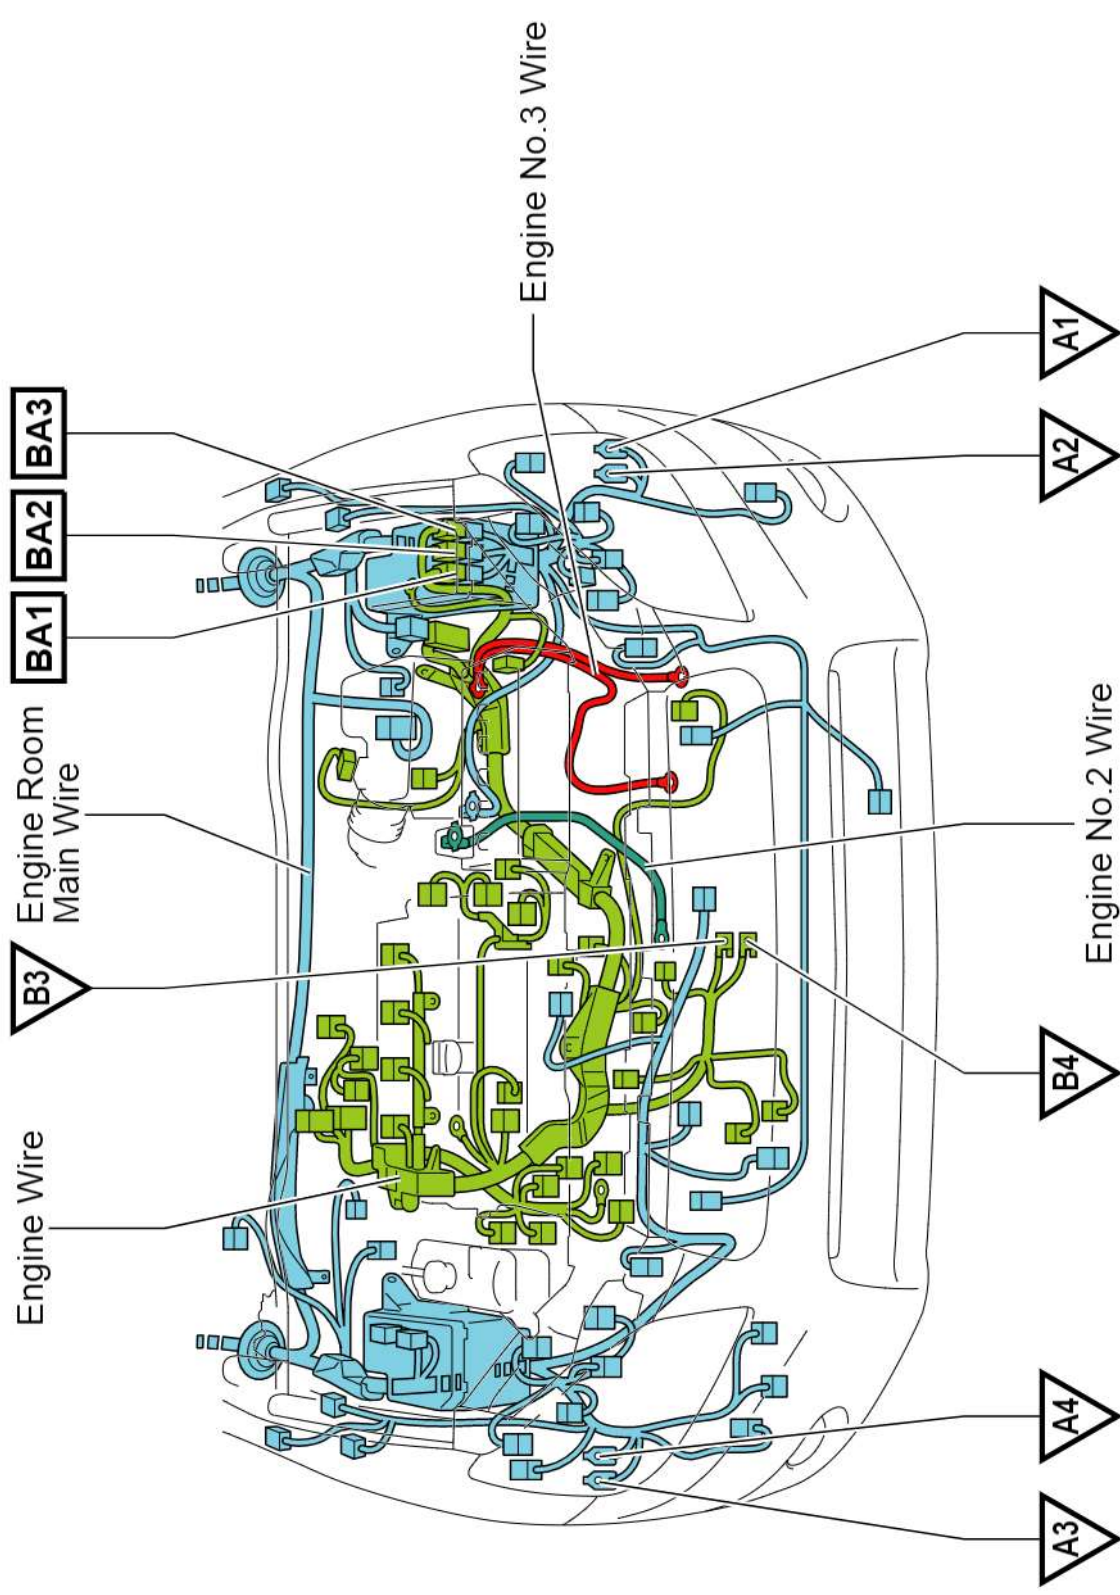


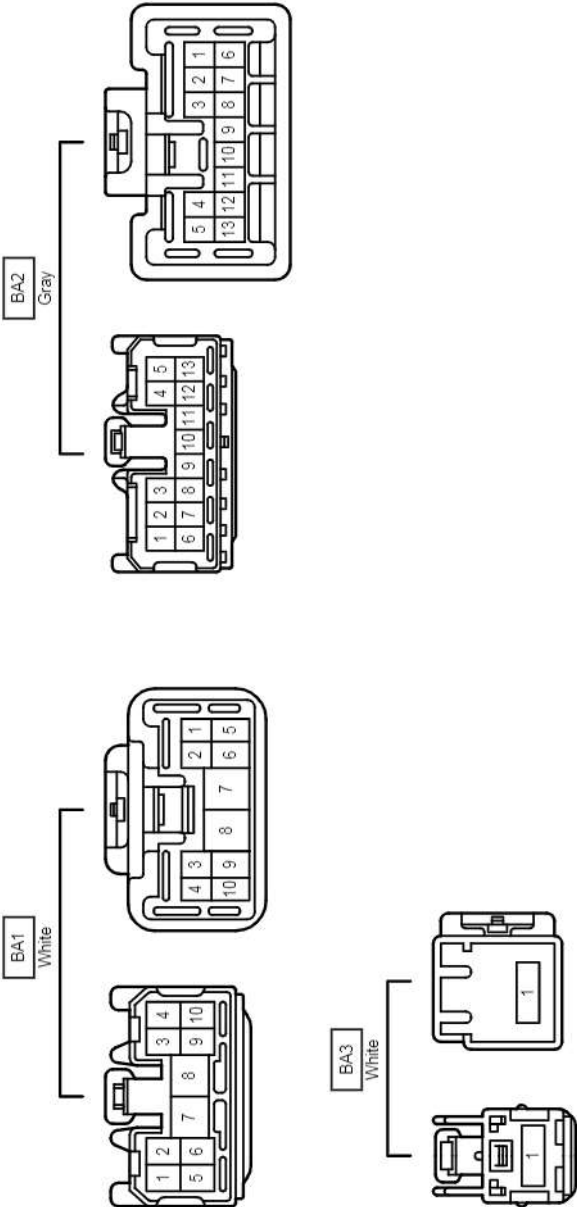

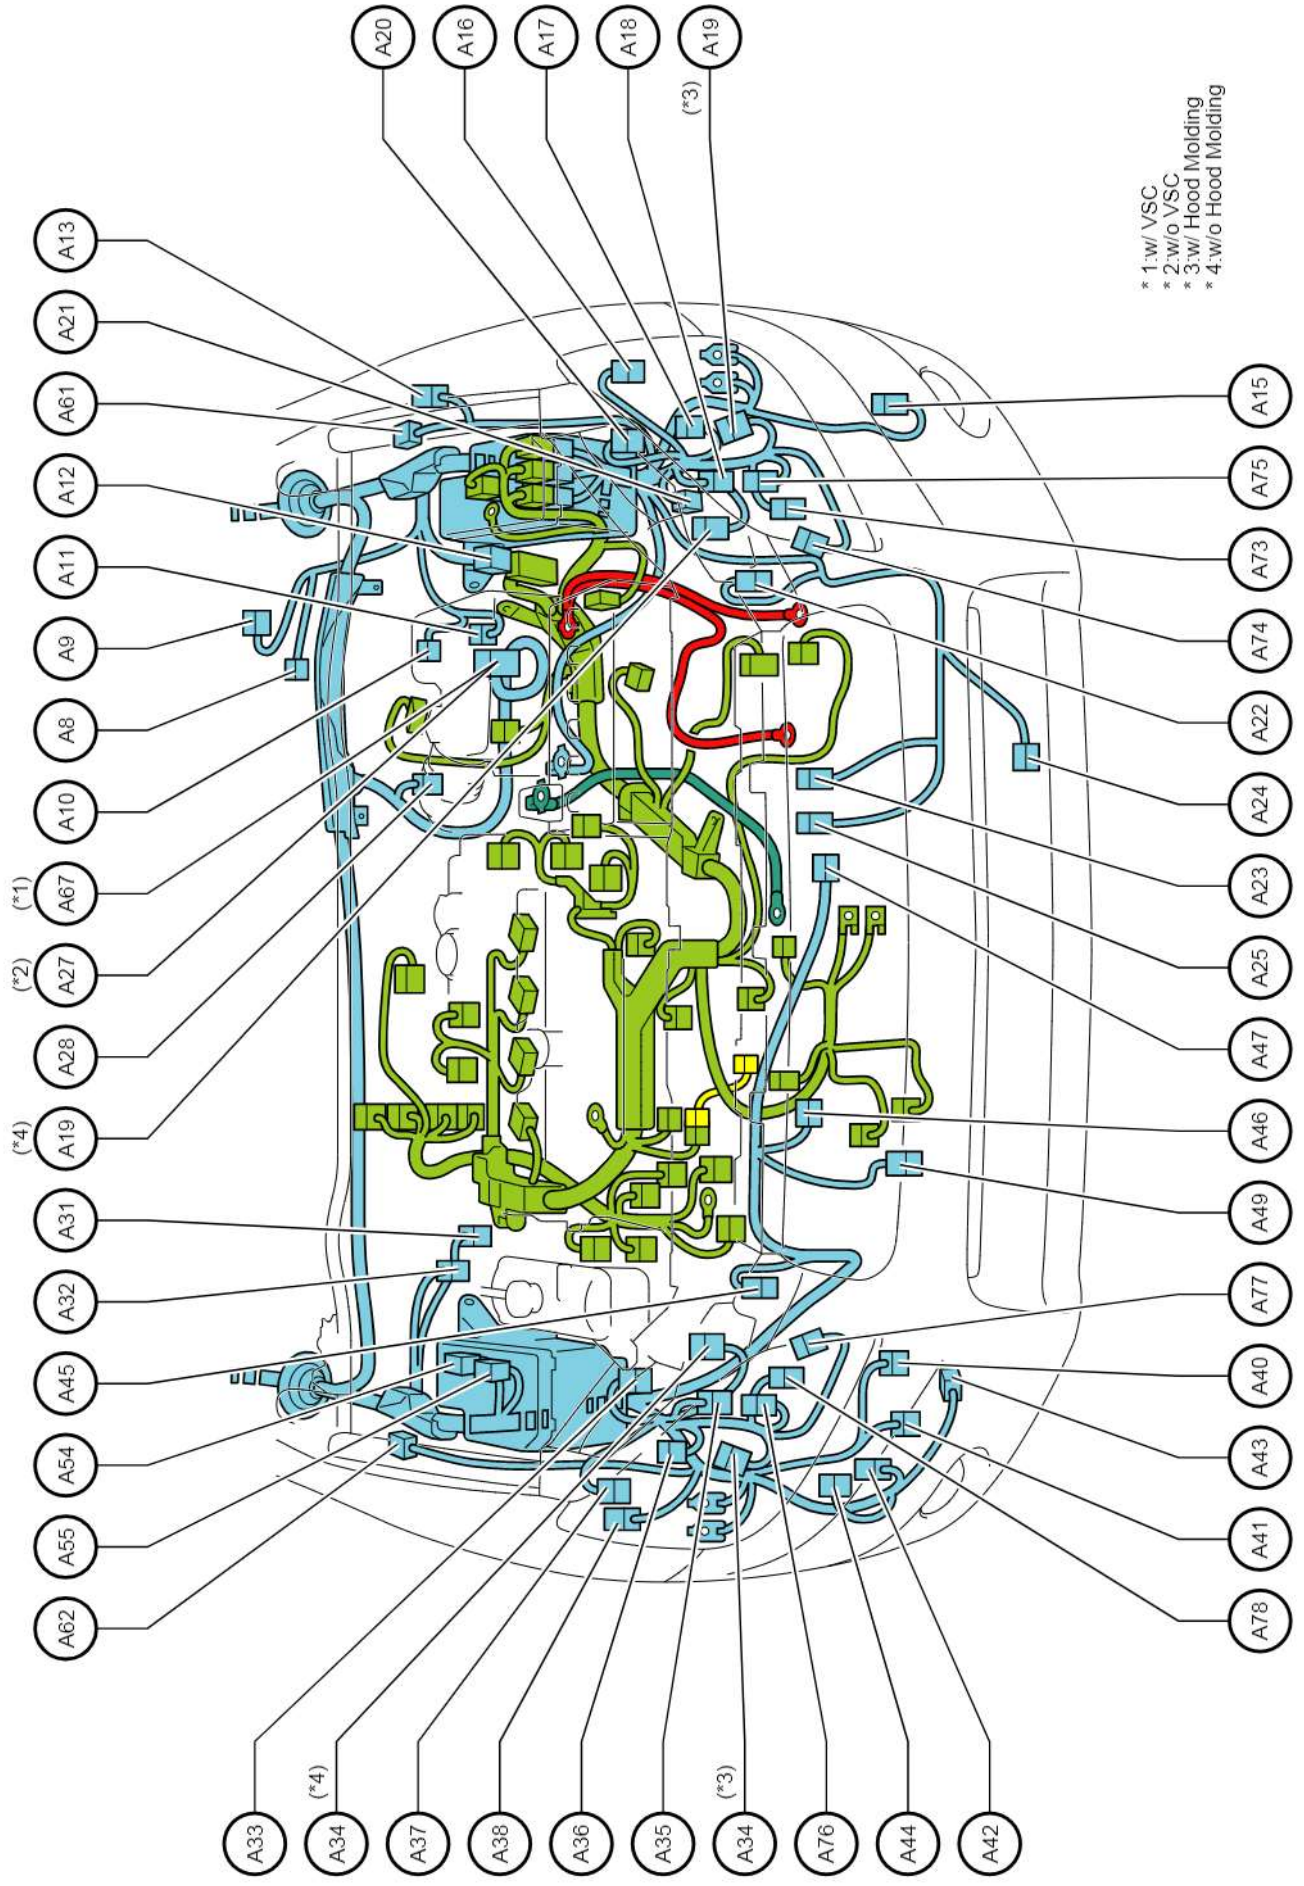


A 8	Windshield Wiper Motor
A 9	Front Wiper Deicer
A 10	Brake Fluid Level Warning SW
A 11	Fuel Filter Warning SW
A 12	Engine ECU
A 13	Wireless Door Lock Buzzer
A 15	Fog Lamp (Front LH)
A 16	Turn Signal Lamp (Front LH)
A 17	Headlamp (LH Low)
A 18	Headlamp Leveling Motor (LH)
A 19	Headlamp (LH High)
A 20	Clearance Lamp (Front LH)
A 21	Option Connector
A 22	Airbag Sensor (Front LH)
A 23	Horn (Low)
A 24	Ambient Temp. Sensor
A 25	Horn (High)
A 27	Skid Control ECU with Actuator
A 28	Fuel Pump
A 31	Power Heater Assembly
A 32	A/C Pressure Sensor
A 33	Clearance Lamp (Front RH)
A 34	Headlamp (RH High)
A 35	Headlamp Leveling Motor (RH)
A 36	Headlamp (RH Low)
A 37	Turn Signal Lamp (Front RH)
A 38	Tire Pressure Warning Antenna (Front)
A 40	Rear Washer Motor
A 41	Front Washer Motor
A 42	Fog Lamp (Front RH)
A 43	Headlamp Cleaner Motor
A 44	Headlamp Cleaner Control Relay
A 45	Airbag Sensor (Front RH)
A 46	A/C Condenser Fan Motor
A 47	Radiator Fan Motor
A 49	Inlet Air Temp. Sensor
A 54	Junction Connector
A 55	Junction Connector
A 61	Speed Sensor (Front LH)
A 62	Speed Sensor (Front RH)
A 67	Skid Control ECU with Actuator
A 73	Headlamp (LH Low)
A 74	Headlamp Leveling Motor (LH)
A 75	Clearance Lamp (Front LH)

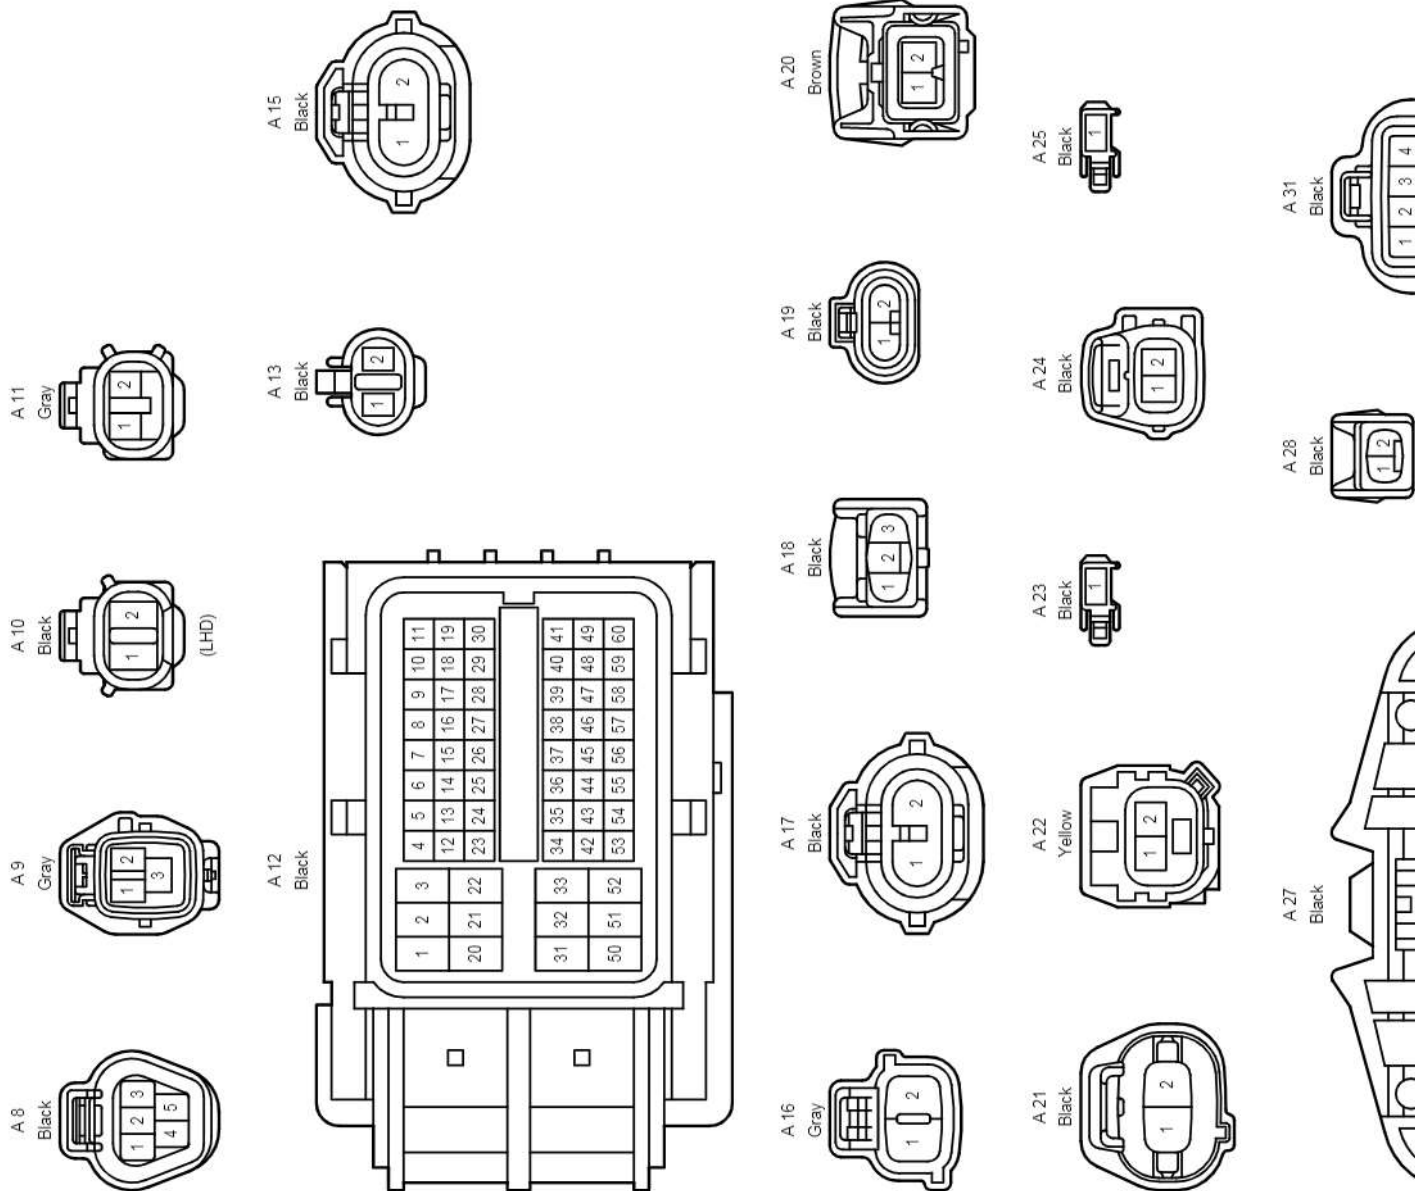


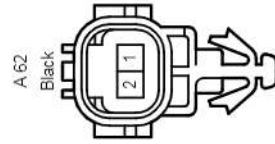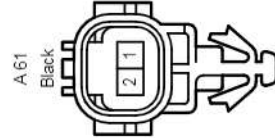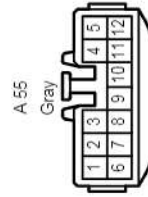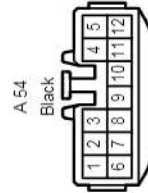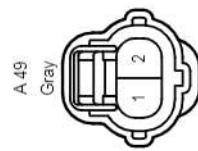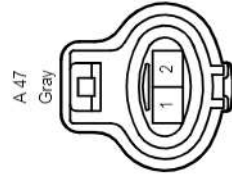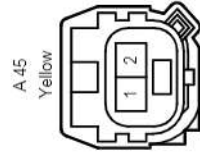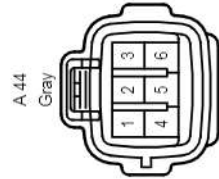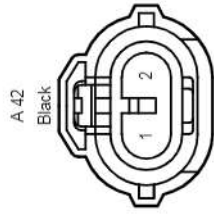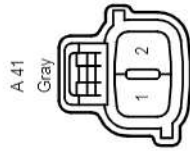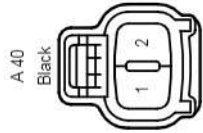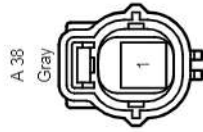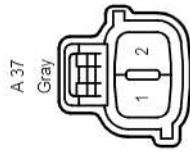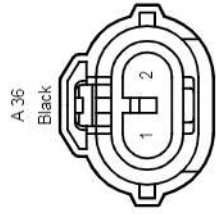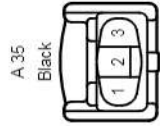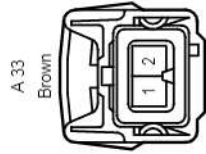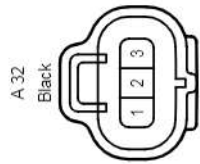


A 67
Black

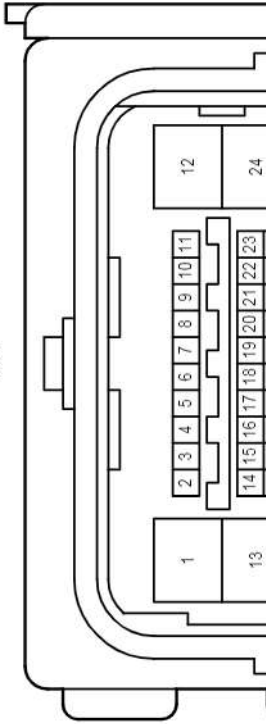


A 73
White

 

A 74
Black




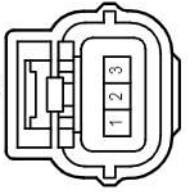















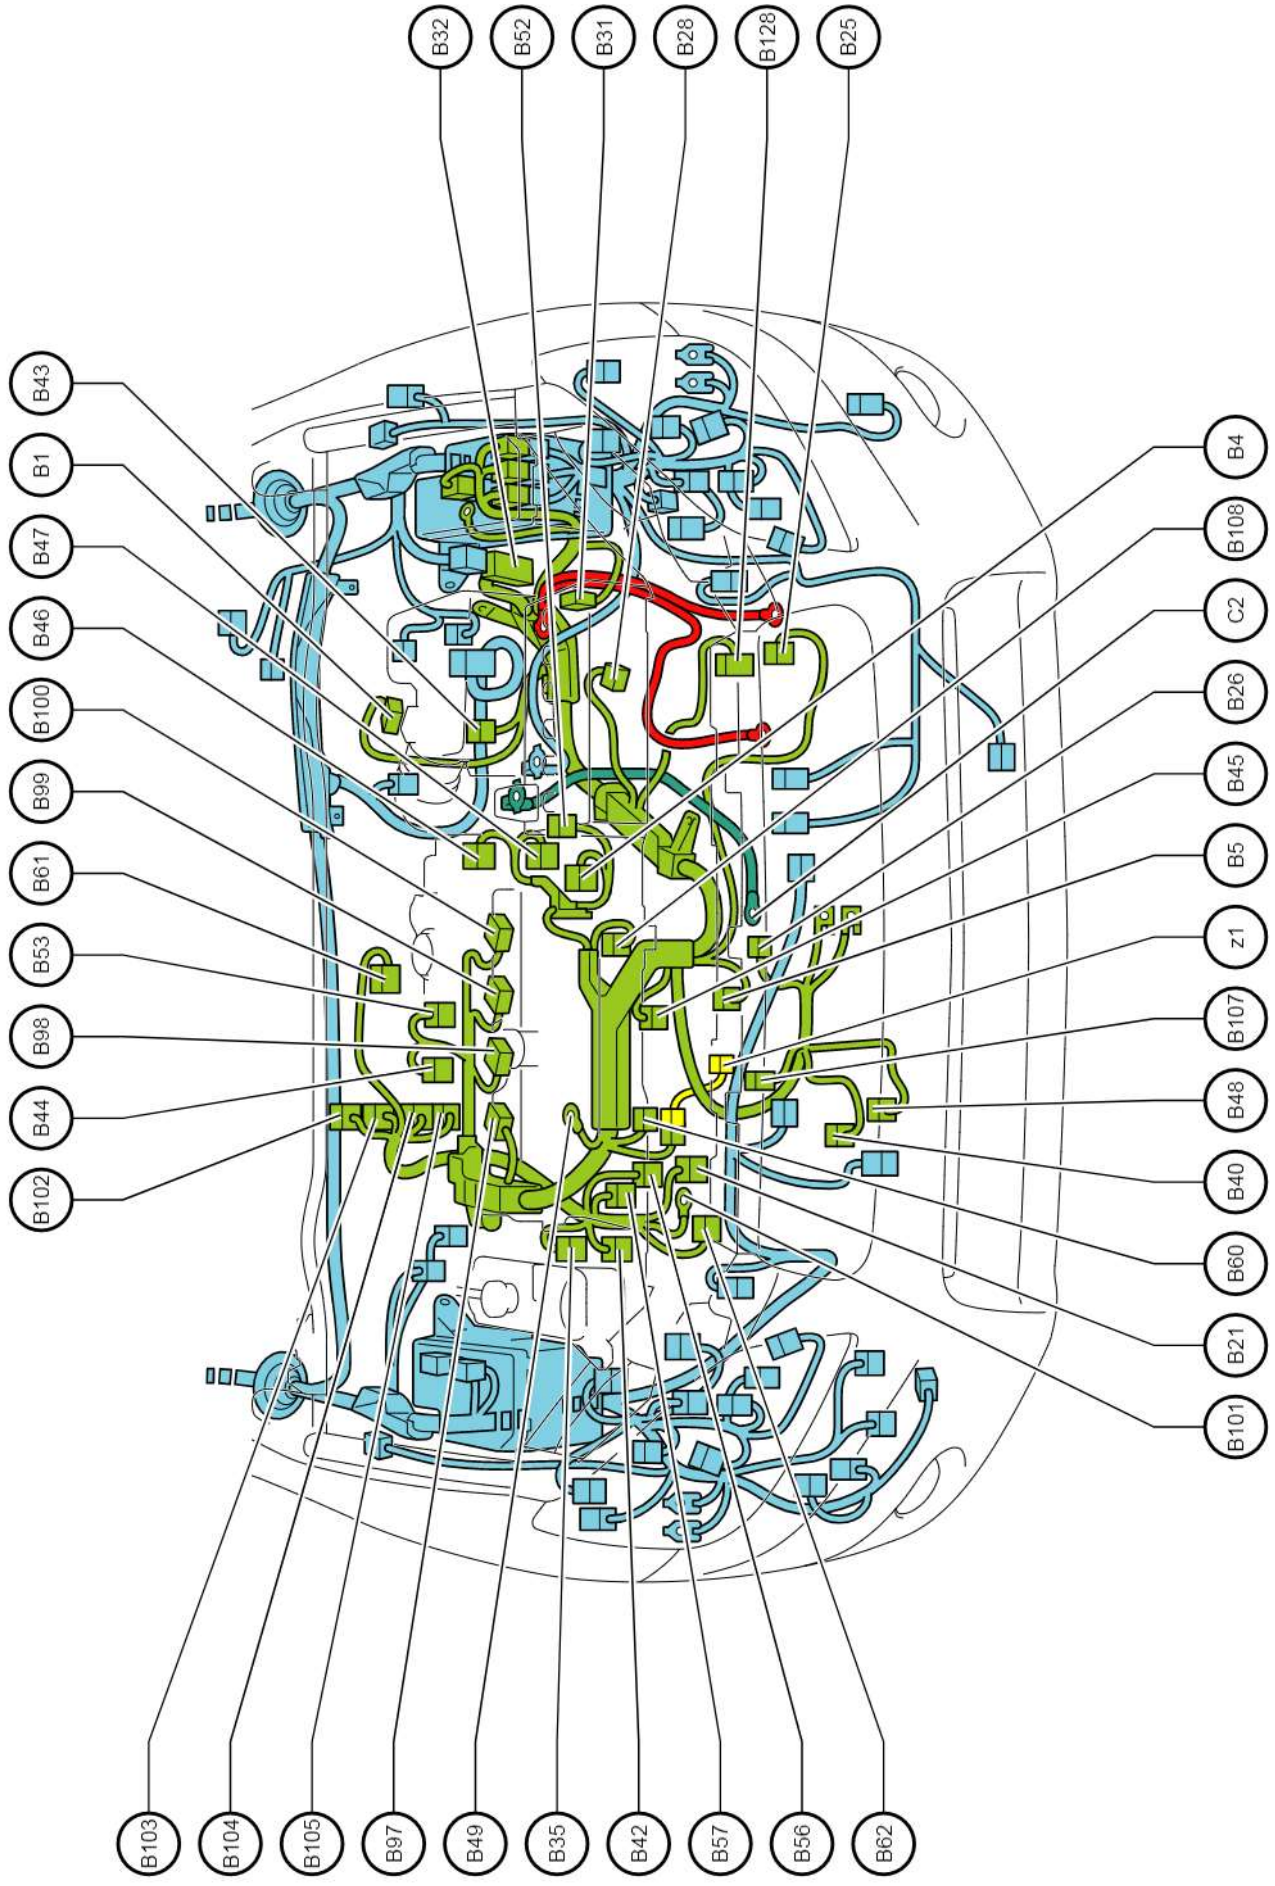



B	1	Air Flow Meter
B	4	Water Temp. Sensor
B	5	Engine Oil Pressure SW
B	21	Alternator
B	25	Back-Up Light SW
B	26	Starter
B	28	Park/Neutral Position SW
B	31	Battery Current Sensor
B	32	Engine ECU
B	35	Camshaft Position Sensor
B	40	A/C Compressor
B	42	Crankshaft Position Sensor
B	43	Glow Plug Relay
B	44	VRV (EGR)
B	45	Turbo Pressure Sensor
B	46	Suction Control Valve
B	47	Fuel Temp. Sensor
B	48	Engine Oil Level Sensor
B	49	Glow Plug
B	52	Exhaust Fuel Addition Injector Assembly
B	53	VSV (EGR)
B	56	Exhaust Gas Temperature Sensor (Front)
B	57	Exhaust Gas Temperature Sensor (Rear)
B	60	Fuel Pressure Sensor
B	61	Differential Pressure Sensor
B	62	Air Fuel Ratio Sensor (Bank 1 Sensor 1)
B	97	Fuel Injector (No.1)
B	98	Fuel Injector (No.2)
B	99	Fuel Injector (No.3)
B	100	Fuel Injector (No.4)
B	101	Alternator
B	102	Injector Driver (EDU)
B	103	Injector Driver (EDU)
B	104	Injector Driver (EDU)
B	105	Injector Driver (EDU)
B	107	Throttle Body Assembly
B	108	Pressure Discharge Valve
B	128	Transmission Control ECU Assembly


C 2 Starter

  
z 1 EGR Valve Position Sensor

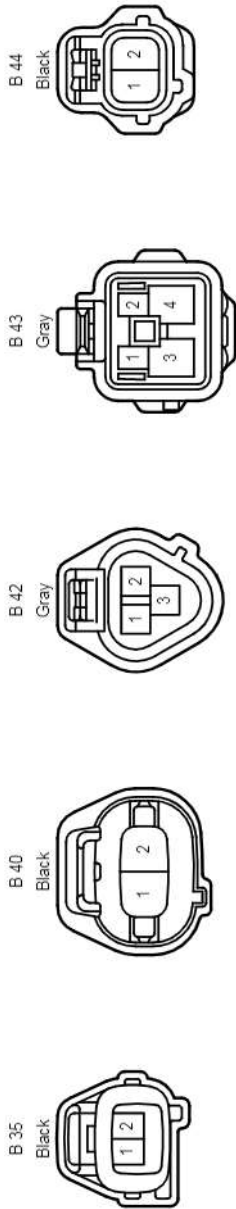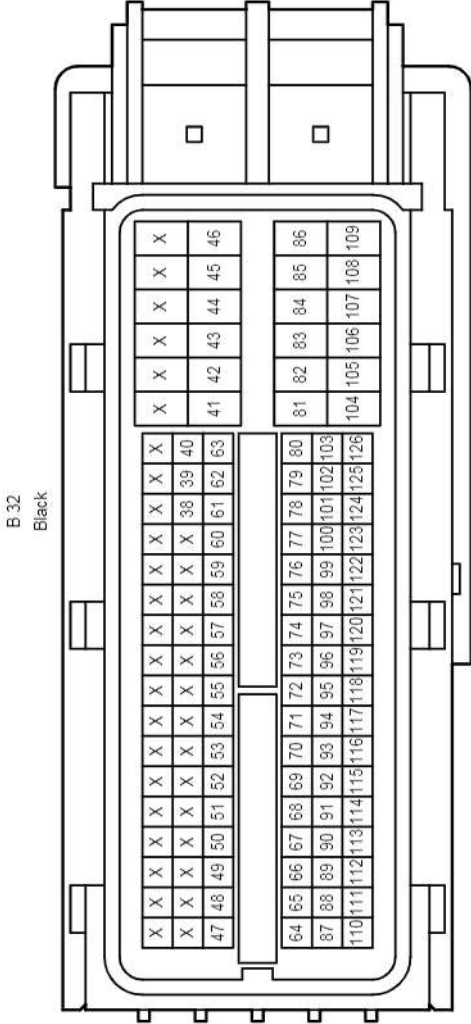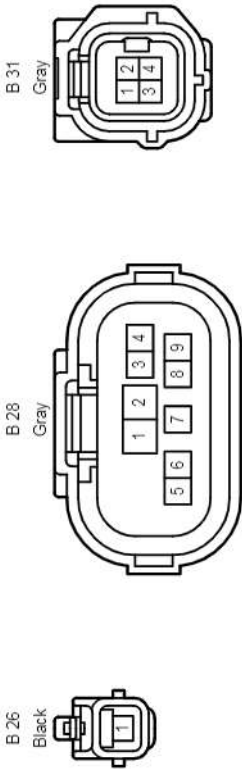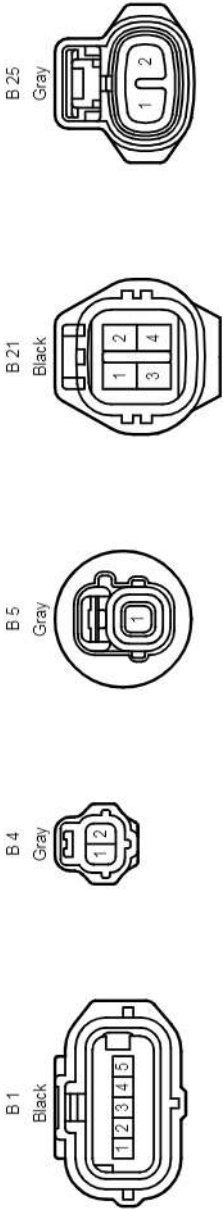

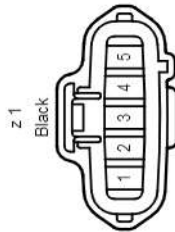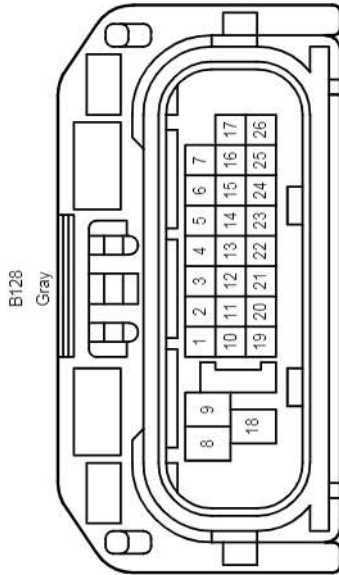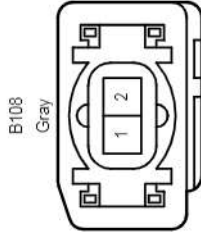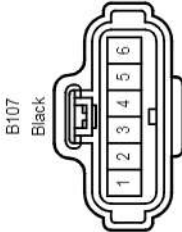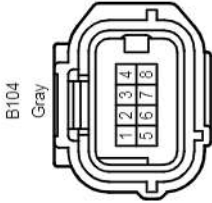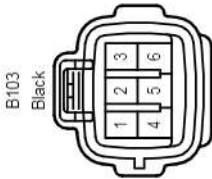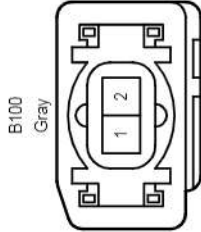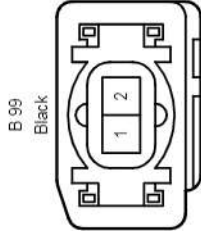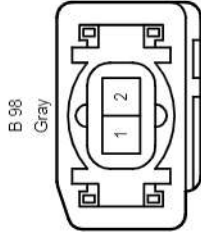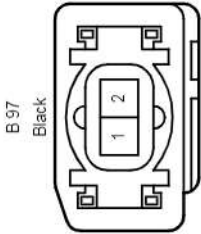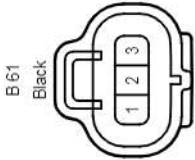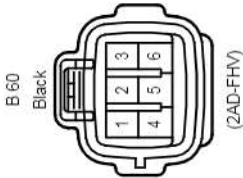

















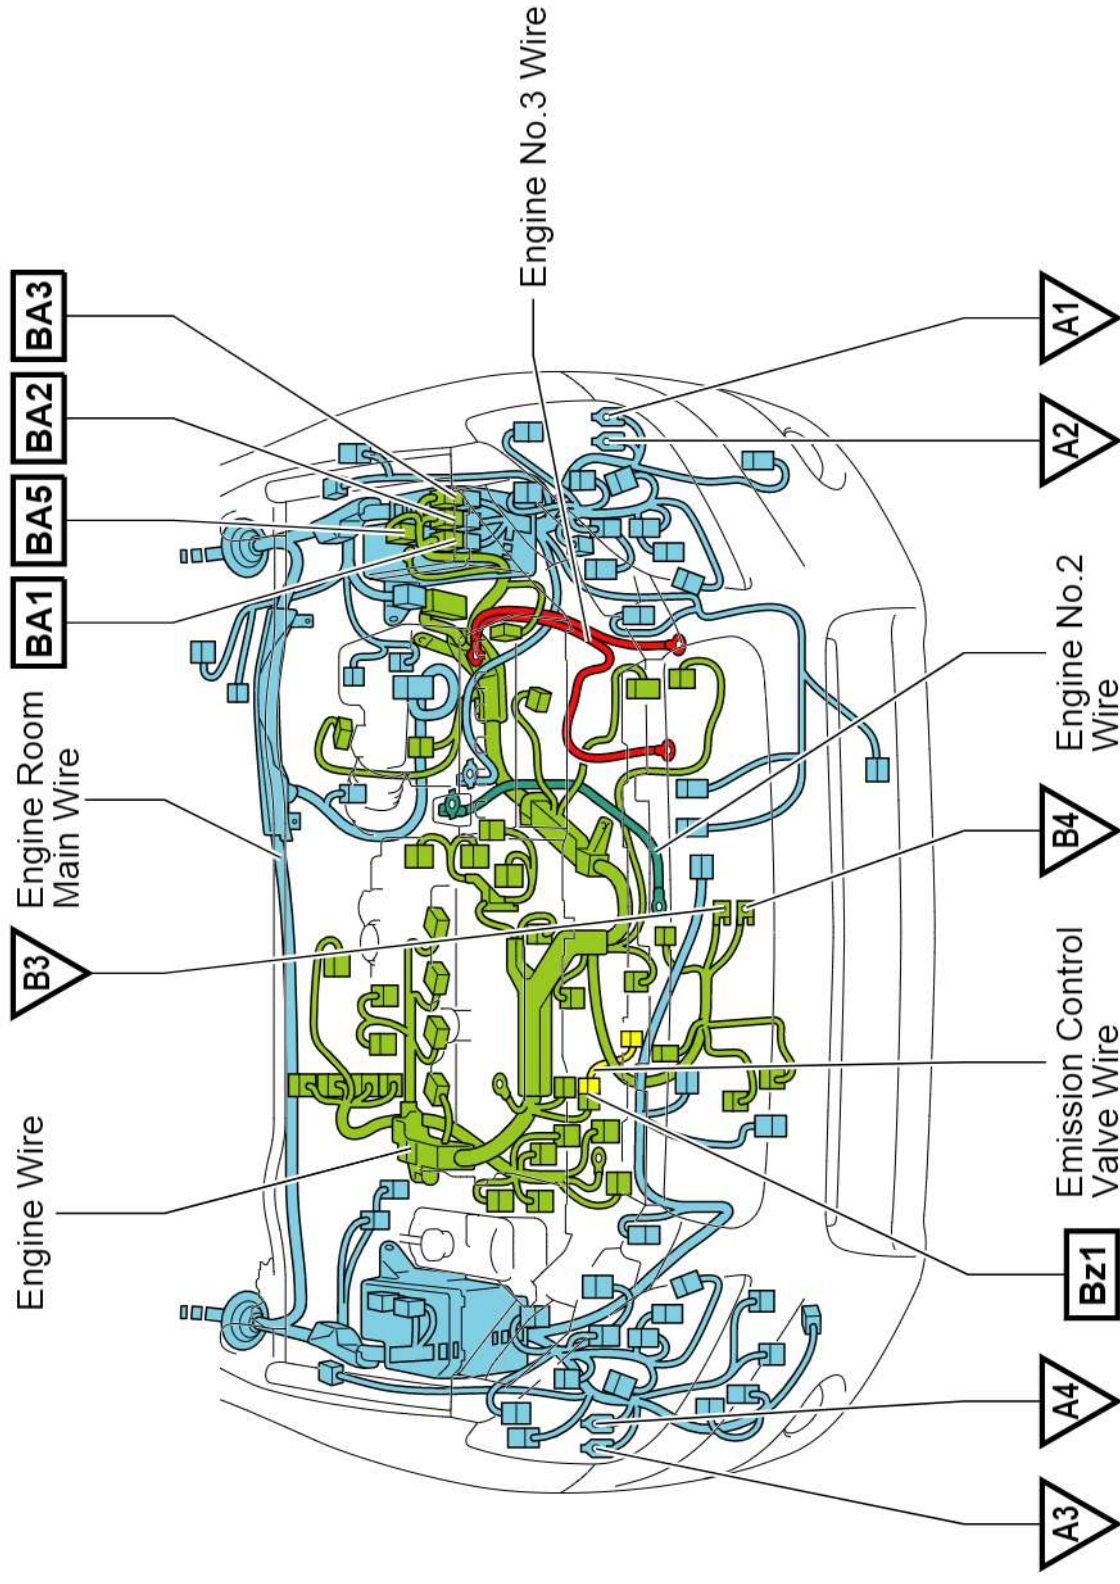


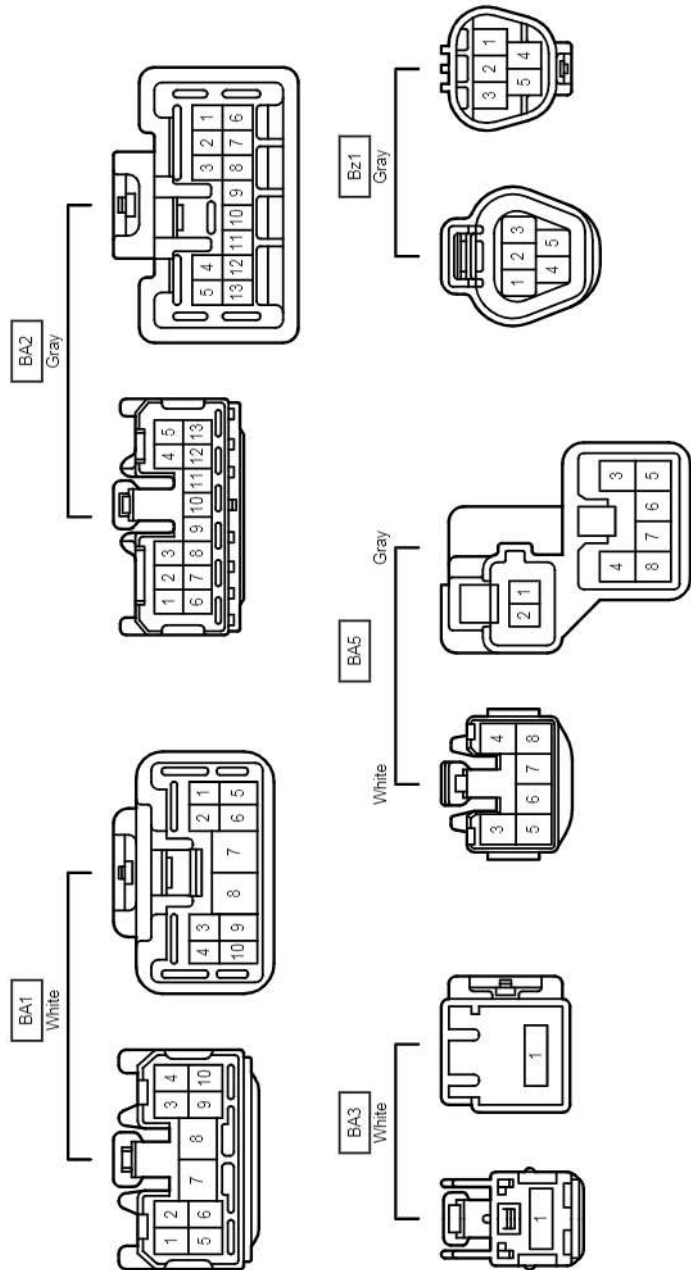


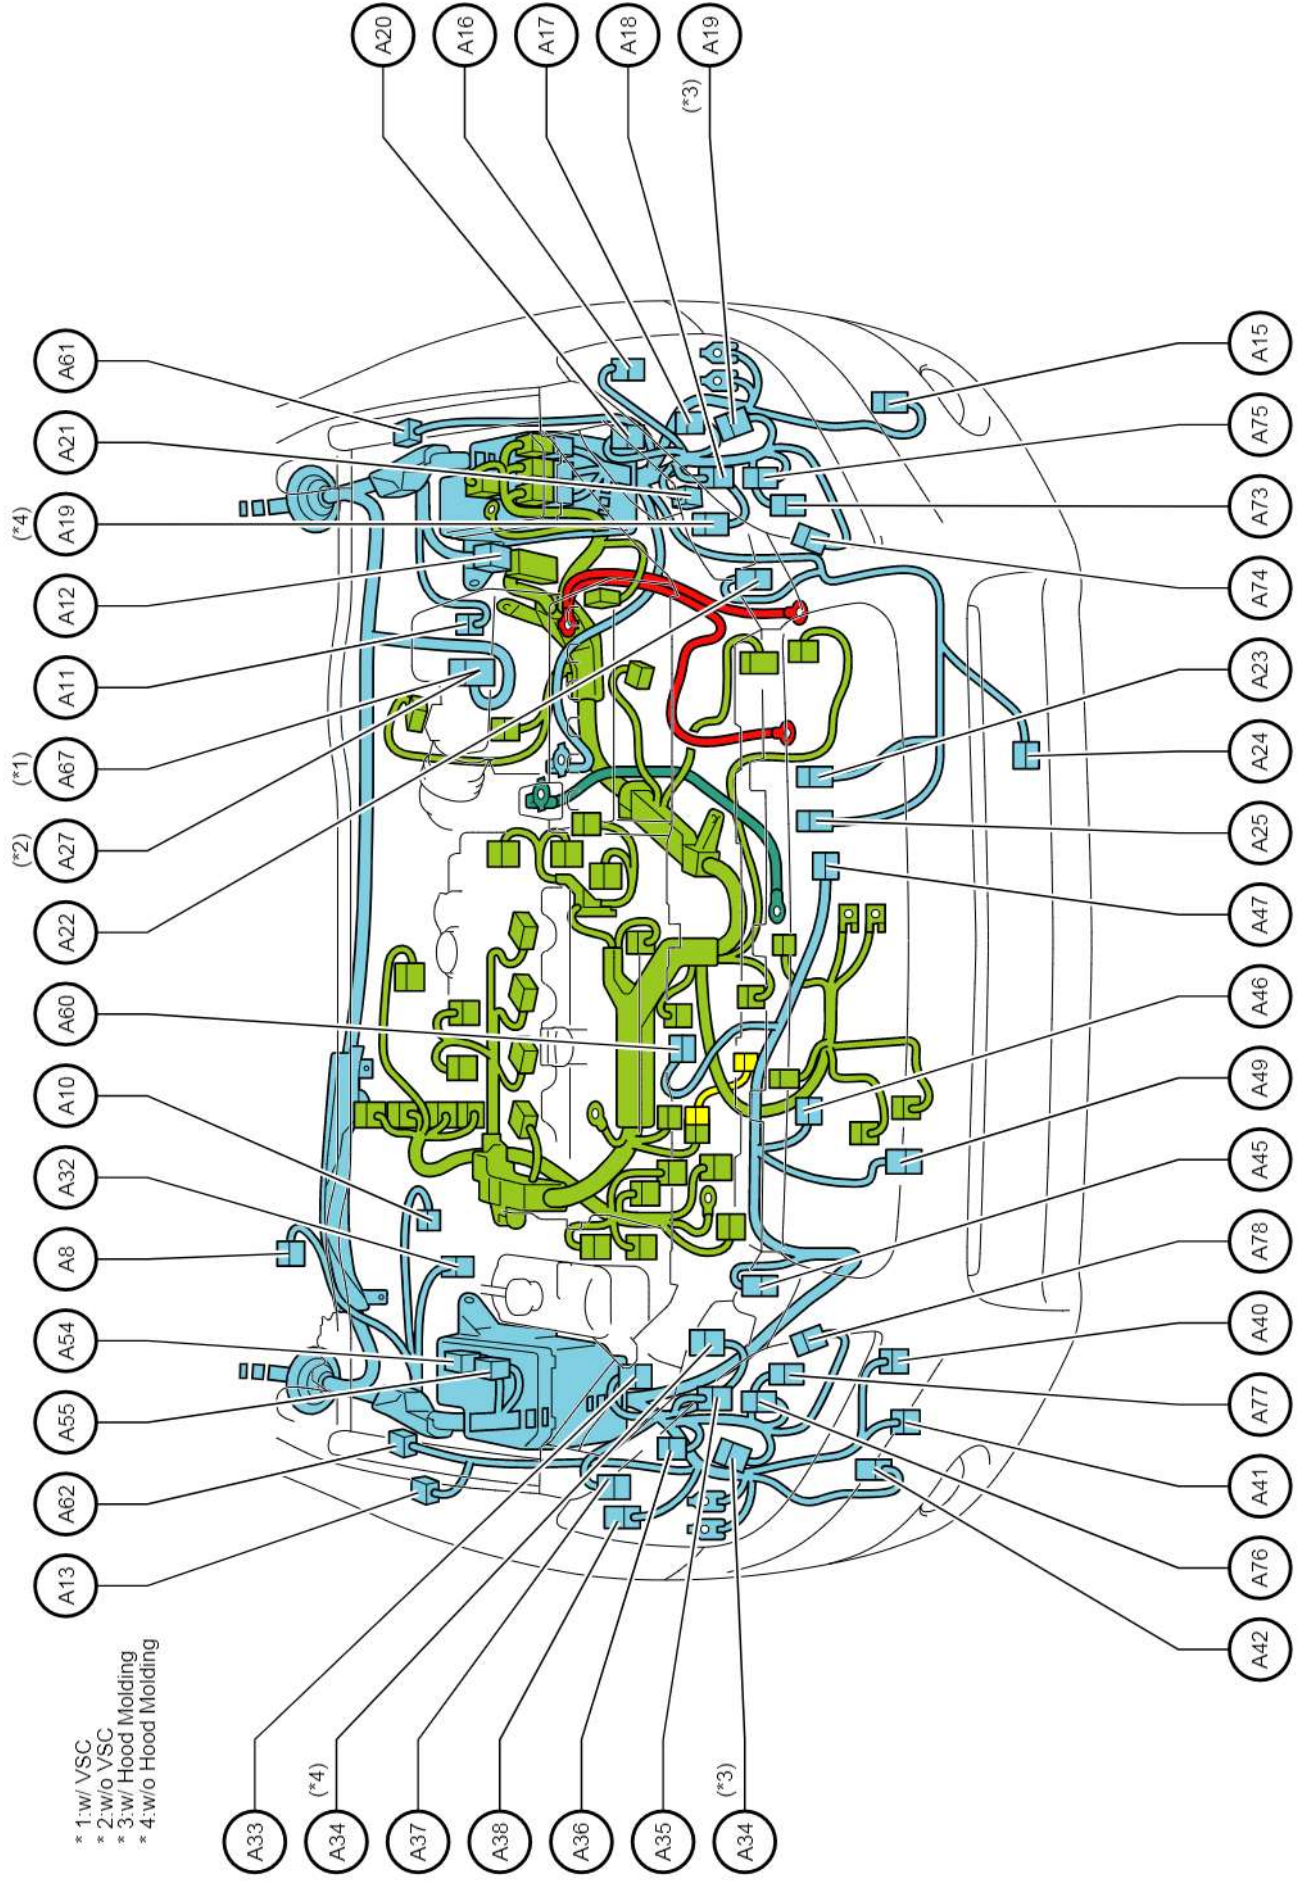





A 8	Windshield Wiper Motor
A 10	Brake Fluid Level Warning SW
A 11	Fuel Filter Warning SW
A 12	Engine ECU
A 13	Wireless Door Lock Buzzer
A 15	Fog Lamp (Front LH)
A 16	Turn Signal Lamp (Front LH)
A 17	Headlamp (LH Low)
A 18	Headlamp Leveling Motor (LH)
A 19	Headlamp (LH High)
A 20	Clearance Lamp (Front LH)
A 21	Option Connector
A 22	Airbag Sensor (Front LH)
A 23	Horn (Low)
A 24	Ambient Temp. Sensor
A 25	Horn (High)
A 27	Skid Control ECU with Actuator
A 32	A/C Pressure Sensor
A 33	Clearance Lamp (Front RH)
A 34	Headlamp (RH High)
A 35	Headlamp Leveling Motor (RH)
A 36	Headlamp (RH Low)
A 37	Turn Signal Lamp (Front RH)
A 38	Tire Pressure Warning Antenna (Front)
A 40	Rear Washer Motor
A 41	Front Washer Motor
A 42	Fog Lamp (Front RH)
A 45	Airbag Sensor (Front RH)
A 46	A/C Condenser Fan Motor
A 47	Radiator Fan Motor
A 49	Inlet Air Temp. Sensor
A 54	Junction Connector
A 55	Junction Connector
A 60	Engine Hood Courtesy SW
A 61	Speed Sensor (Front LH)
A 62	Speed Sensor (Front RH)
A 67	Skid Control ECU with Actuator
A 73	Headlamp (LH Low)
A 74	Headlamp Leveling Motor (LH)
A 75	Clearance Lamp (Front LH)
A 76	Clearance Lamp (Front RH)
A 77	Headlamp Leveling Motor (RH)
A 78	Headlamp (RH Low)

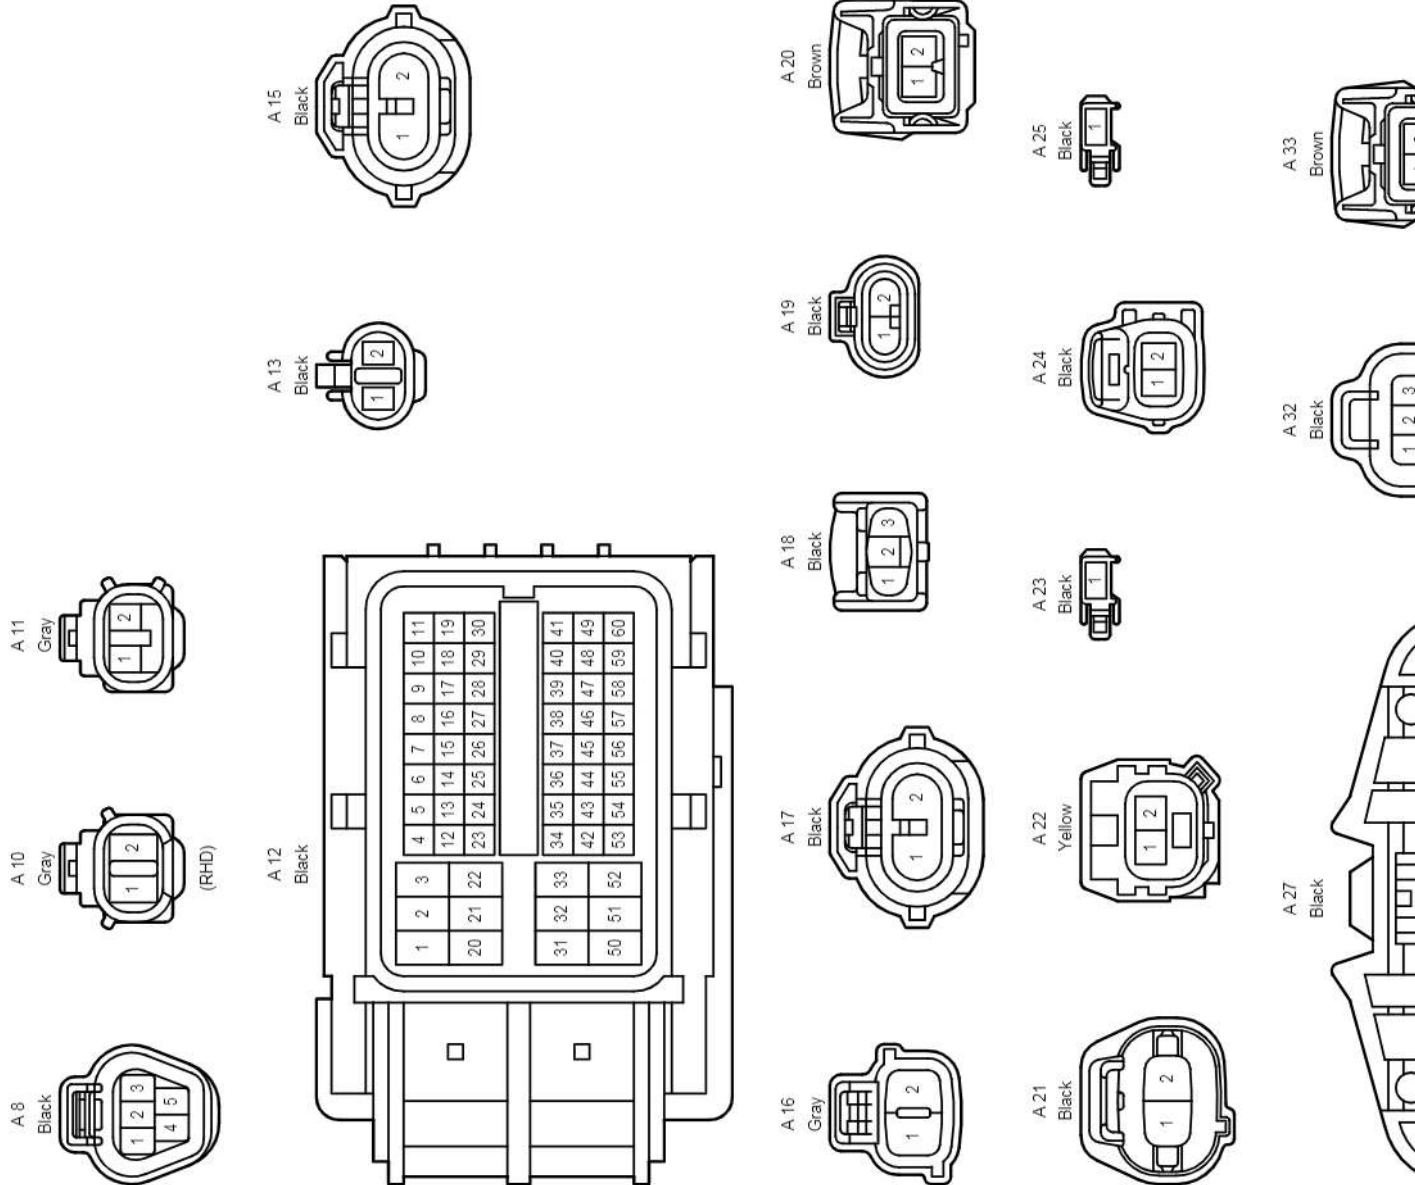


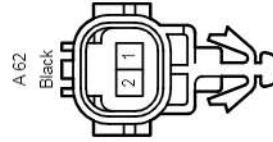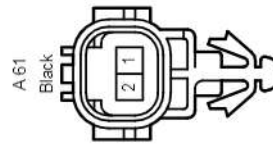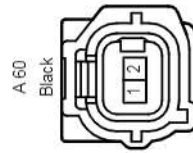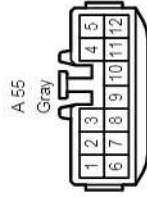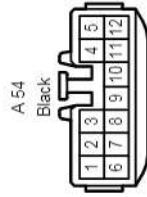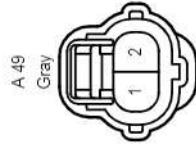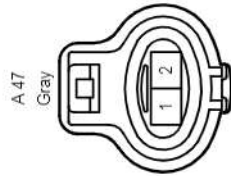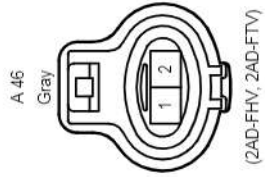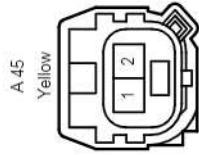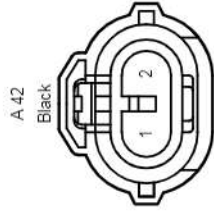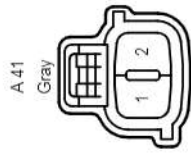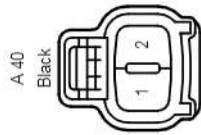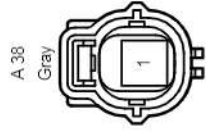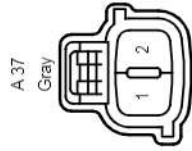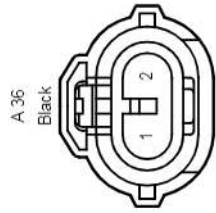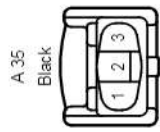

A 67
Black

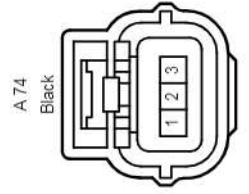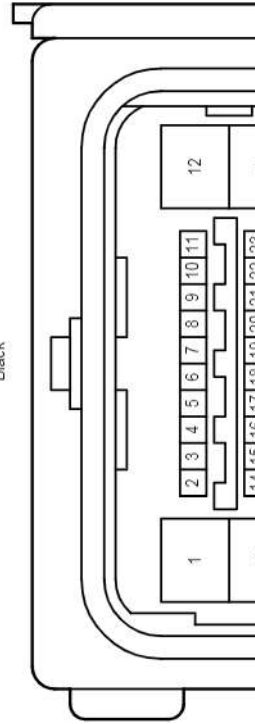


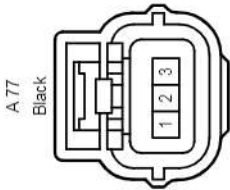
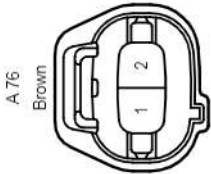
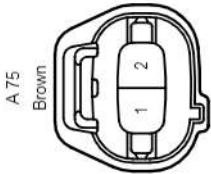















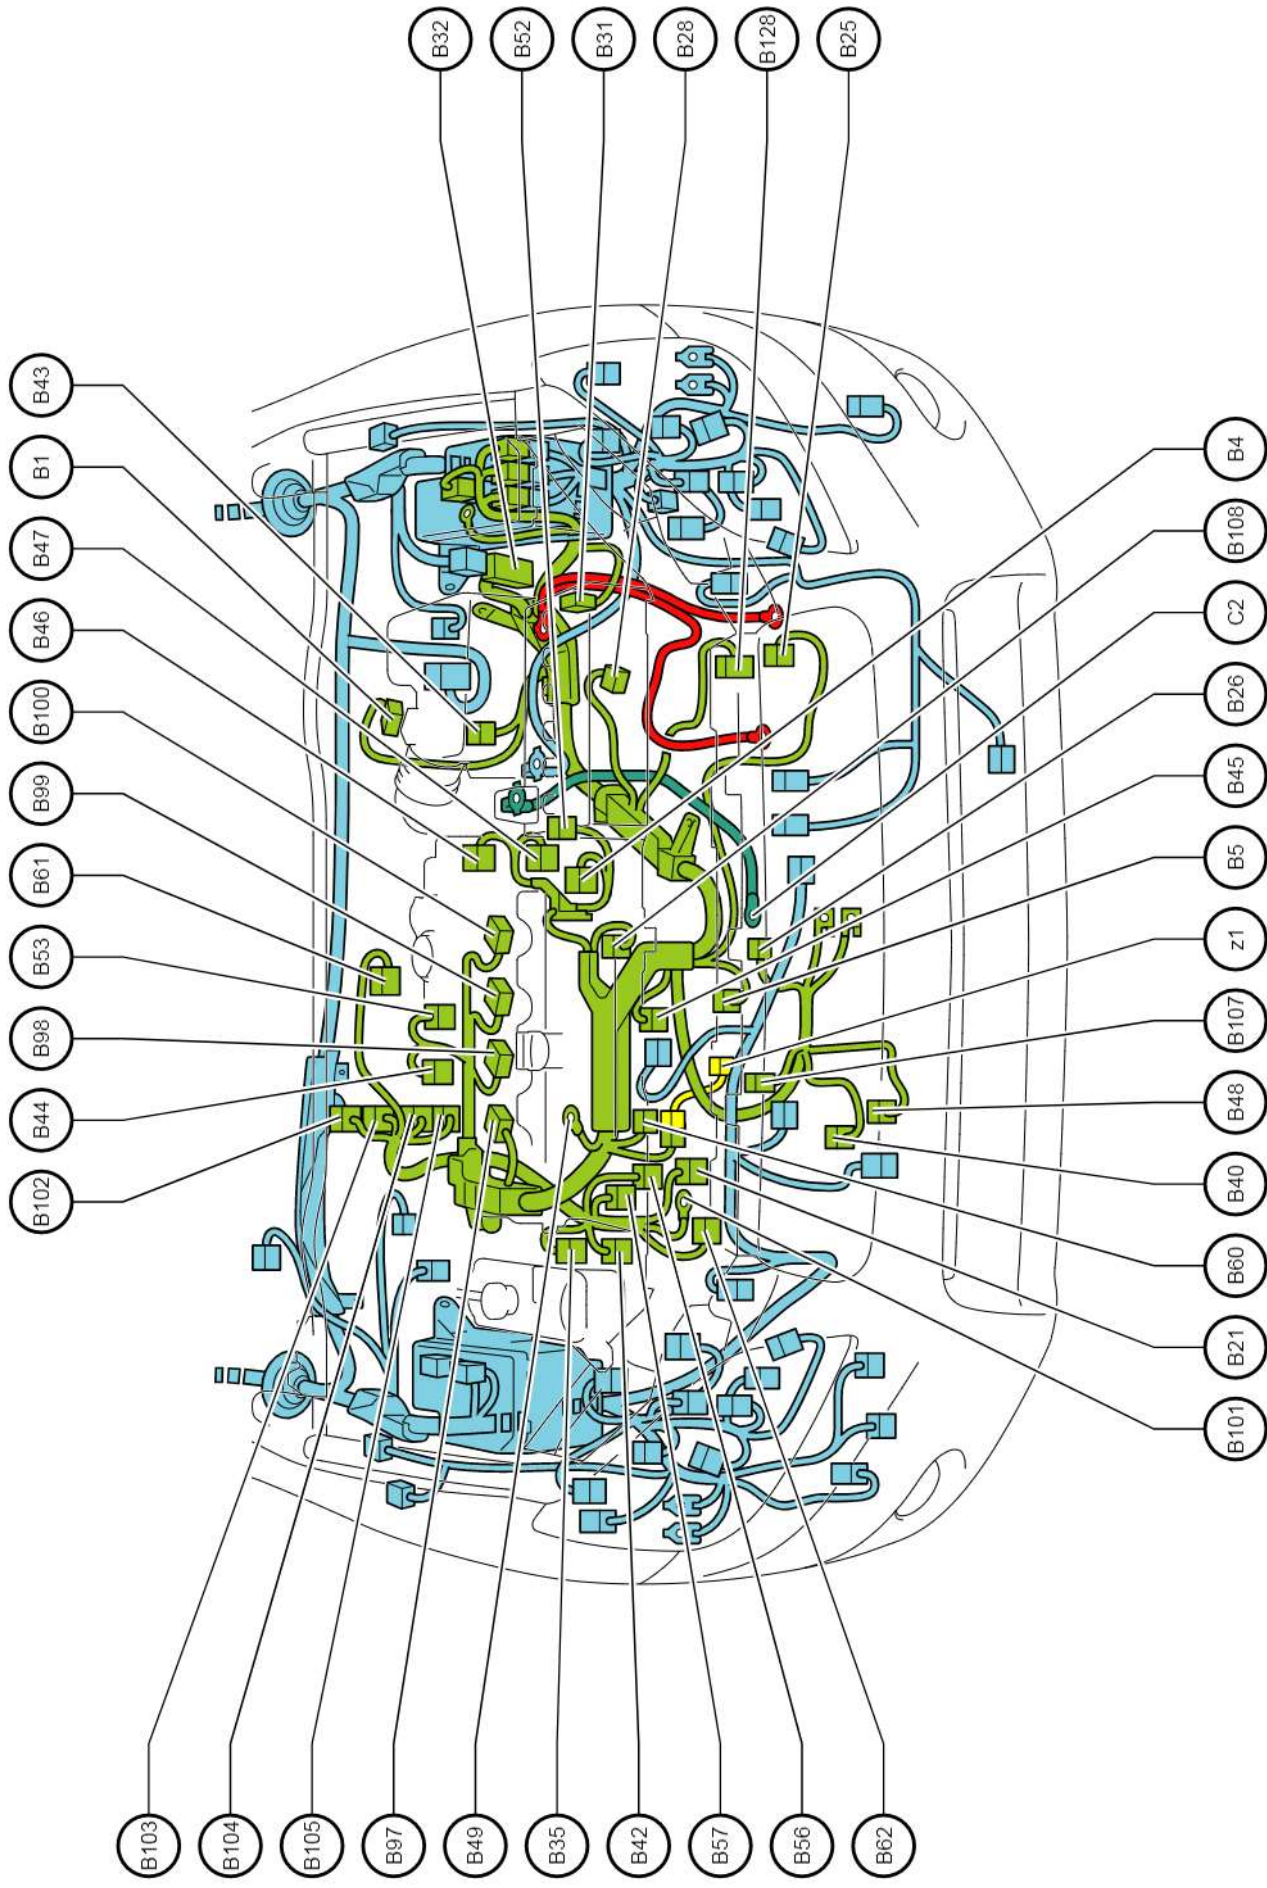



B	1	Air Flow Meter
B	4	Water Temp. Sensor
B	5	Engine Oil Pressure SW
B	21	Alternator
B	25	Back-Up Light SW
B	26	Starter
B	28	Park/Neutral Position SW
B	31	Battery Current Sensor
B	32	Engine ECU
B	35	Camshaft Position Sensor
B	40	A/C Compressor
B	42	Crankshaft Position Sensor
B	43	Glow Plug Relay
B	44	VRV (EGR)
B	45	Turbo Pressure Sensor
B	46	Suction Control Valve
B	47	Fuel Temp. Sensor
B	48	Engine Oil Level Sensor
B	49	Glow Plug
B	52	Exhaust Fuel Addition Injector Assembly
B	53	VSV (EGR)
B	56	Exhaust Gas Temperature Sensor (Front)
B	57	Exhaust Gas Temperature Sensor (Rear)
B	60	Fuel Pressure Sensor
B	61	Differential Pressure Sensor
B	62	Air Fuel Ratio Sensor (Bank 1 Sensor 1)
B	97	Fuel Injector (No.1)
B	98	Fuel Injector (No.2)
B	99	Fuel Injector (No.3)
B	100	Fuel Injector (No.4)
B	101	Alternator
B	102	Injector Driver (EDU)
B	103	Injector Driver (EDU)
B	104	Injector Driver (EDU)
B	105	Injector Driver (EDU)
B	107	Throttle Body Assembly
B	108	Pressure Discharge Valve
B	128	Transmission Control ECU Assembly


C 2 Starter

z 1 EGR Valve Position Sensor

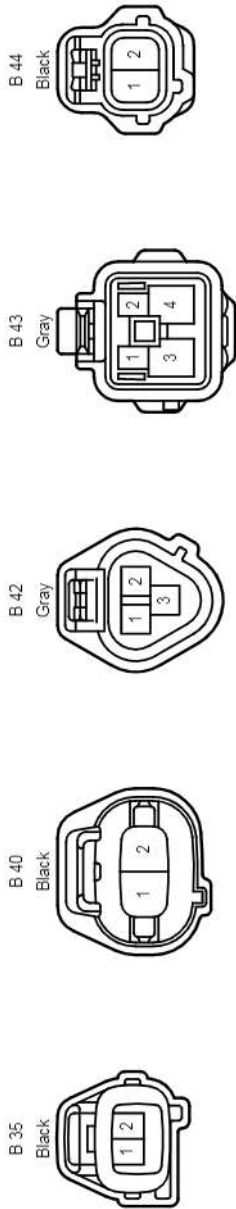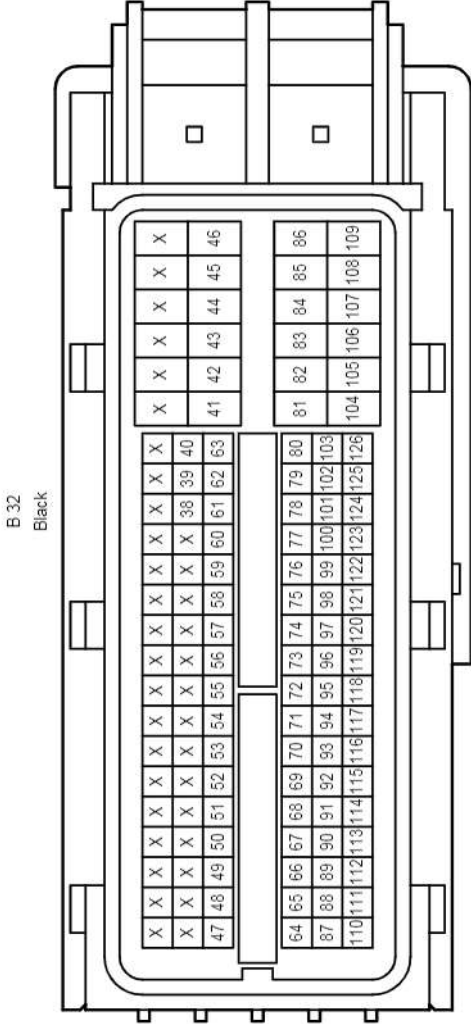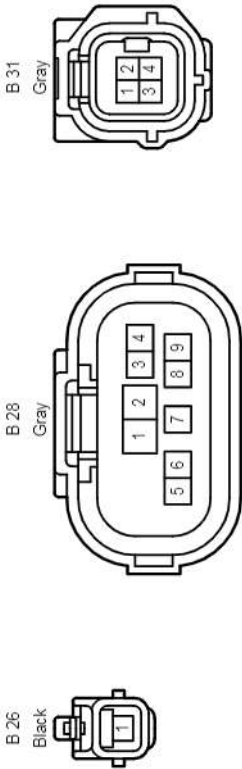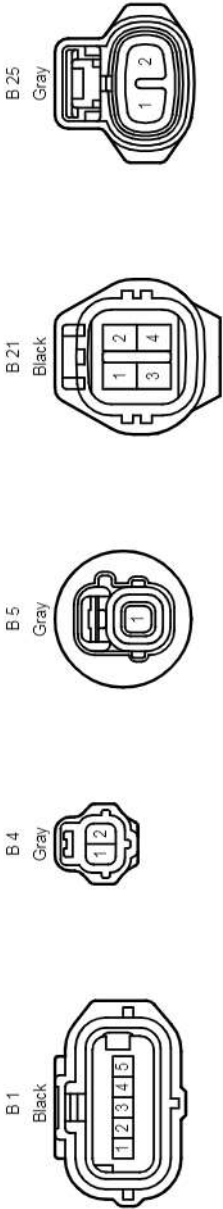


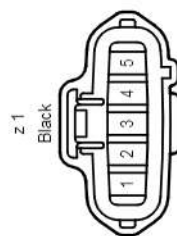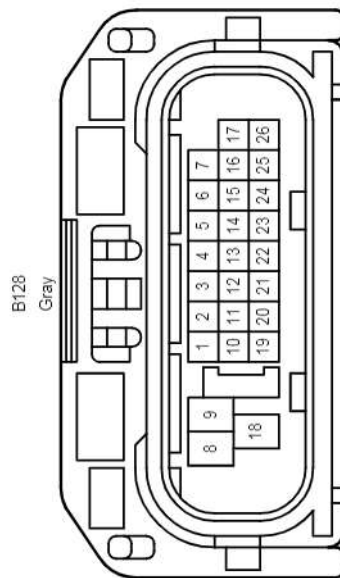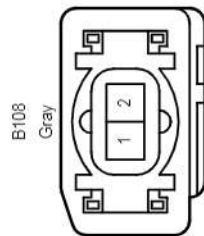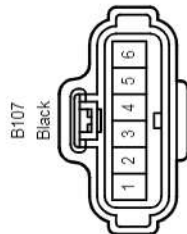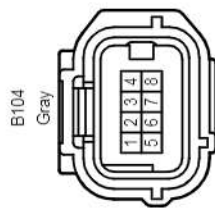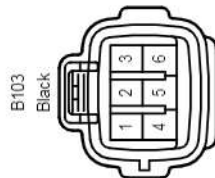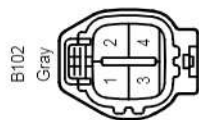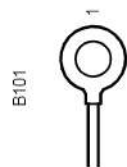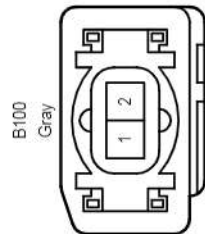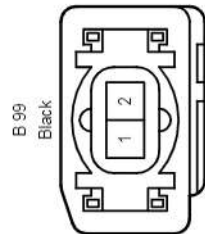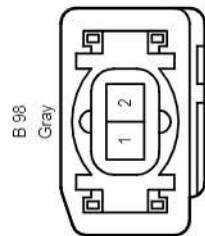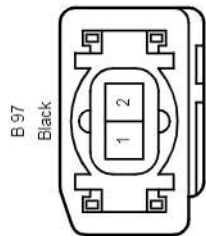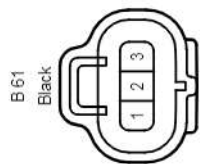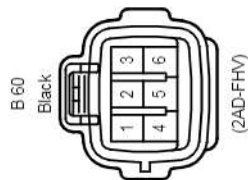

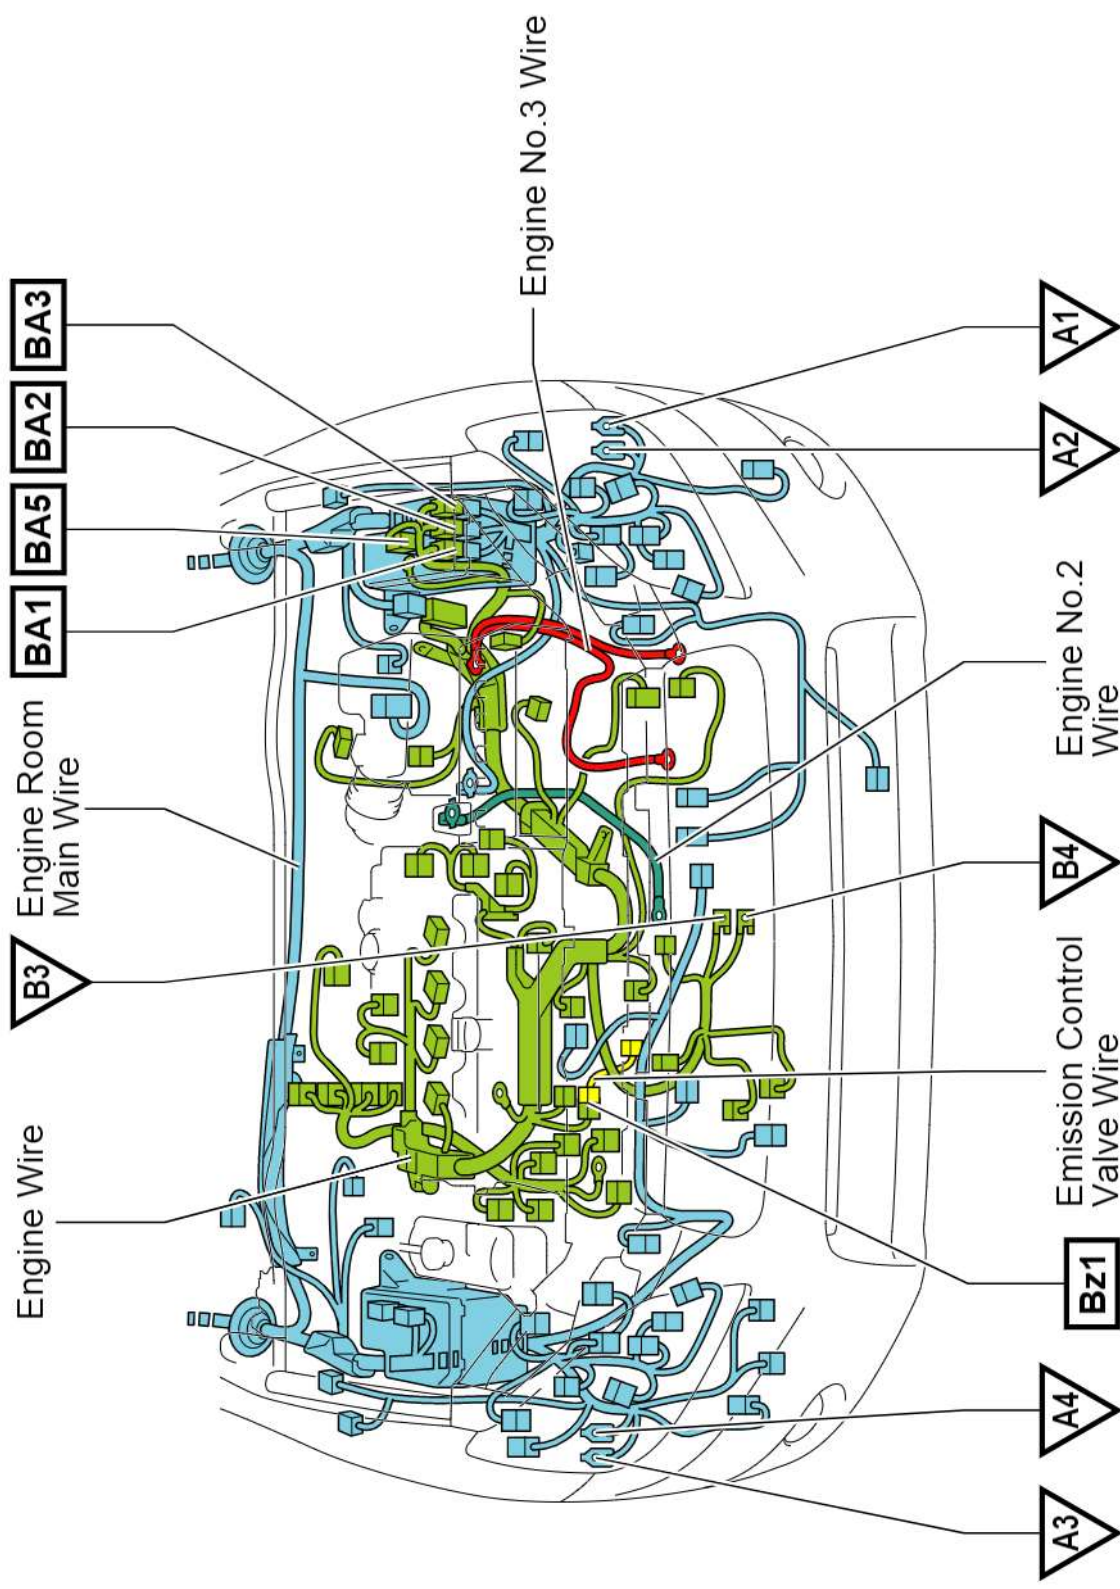

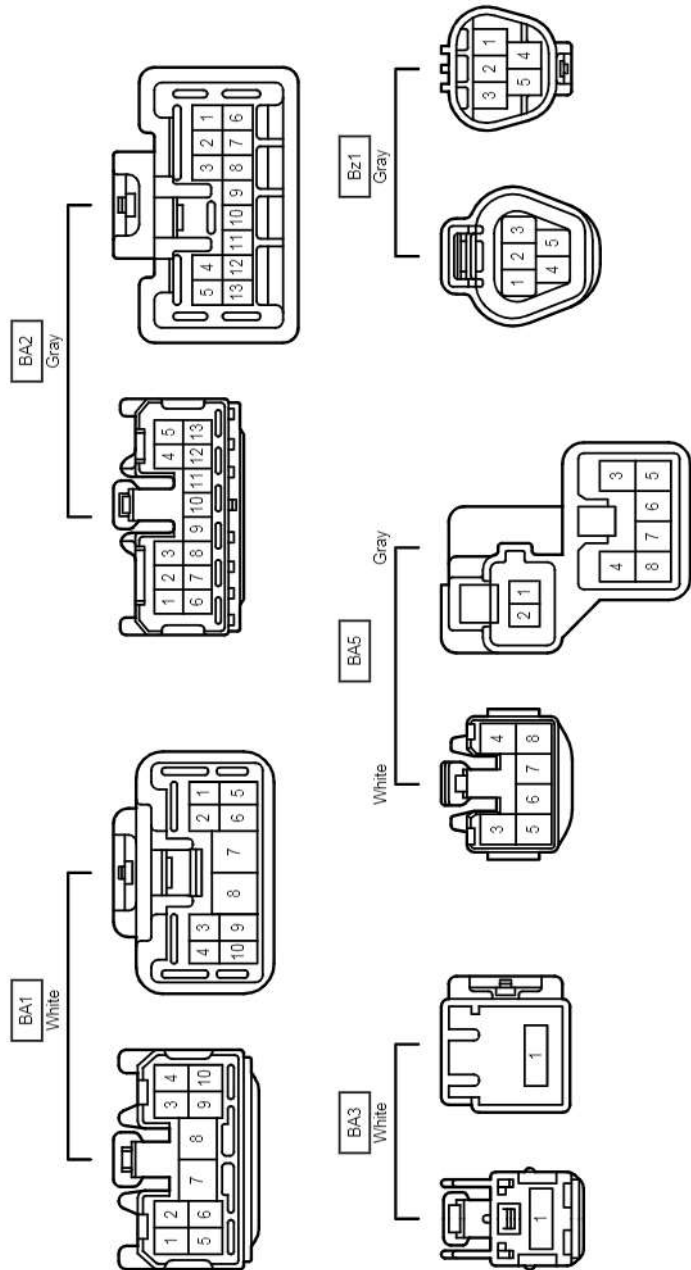



Position of Parts in Engine Compartment <RHD 2GR-FE>

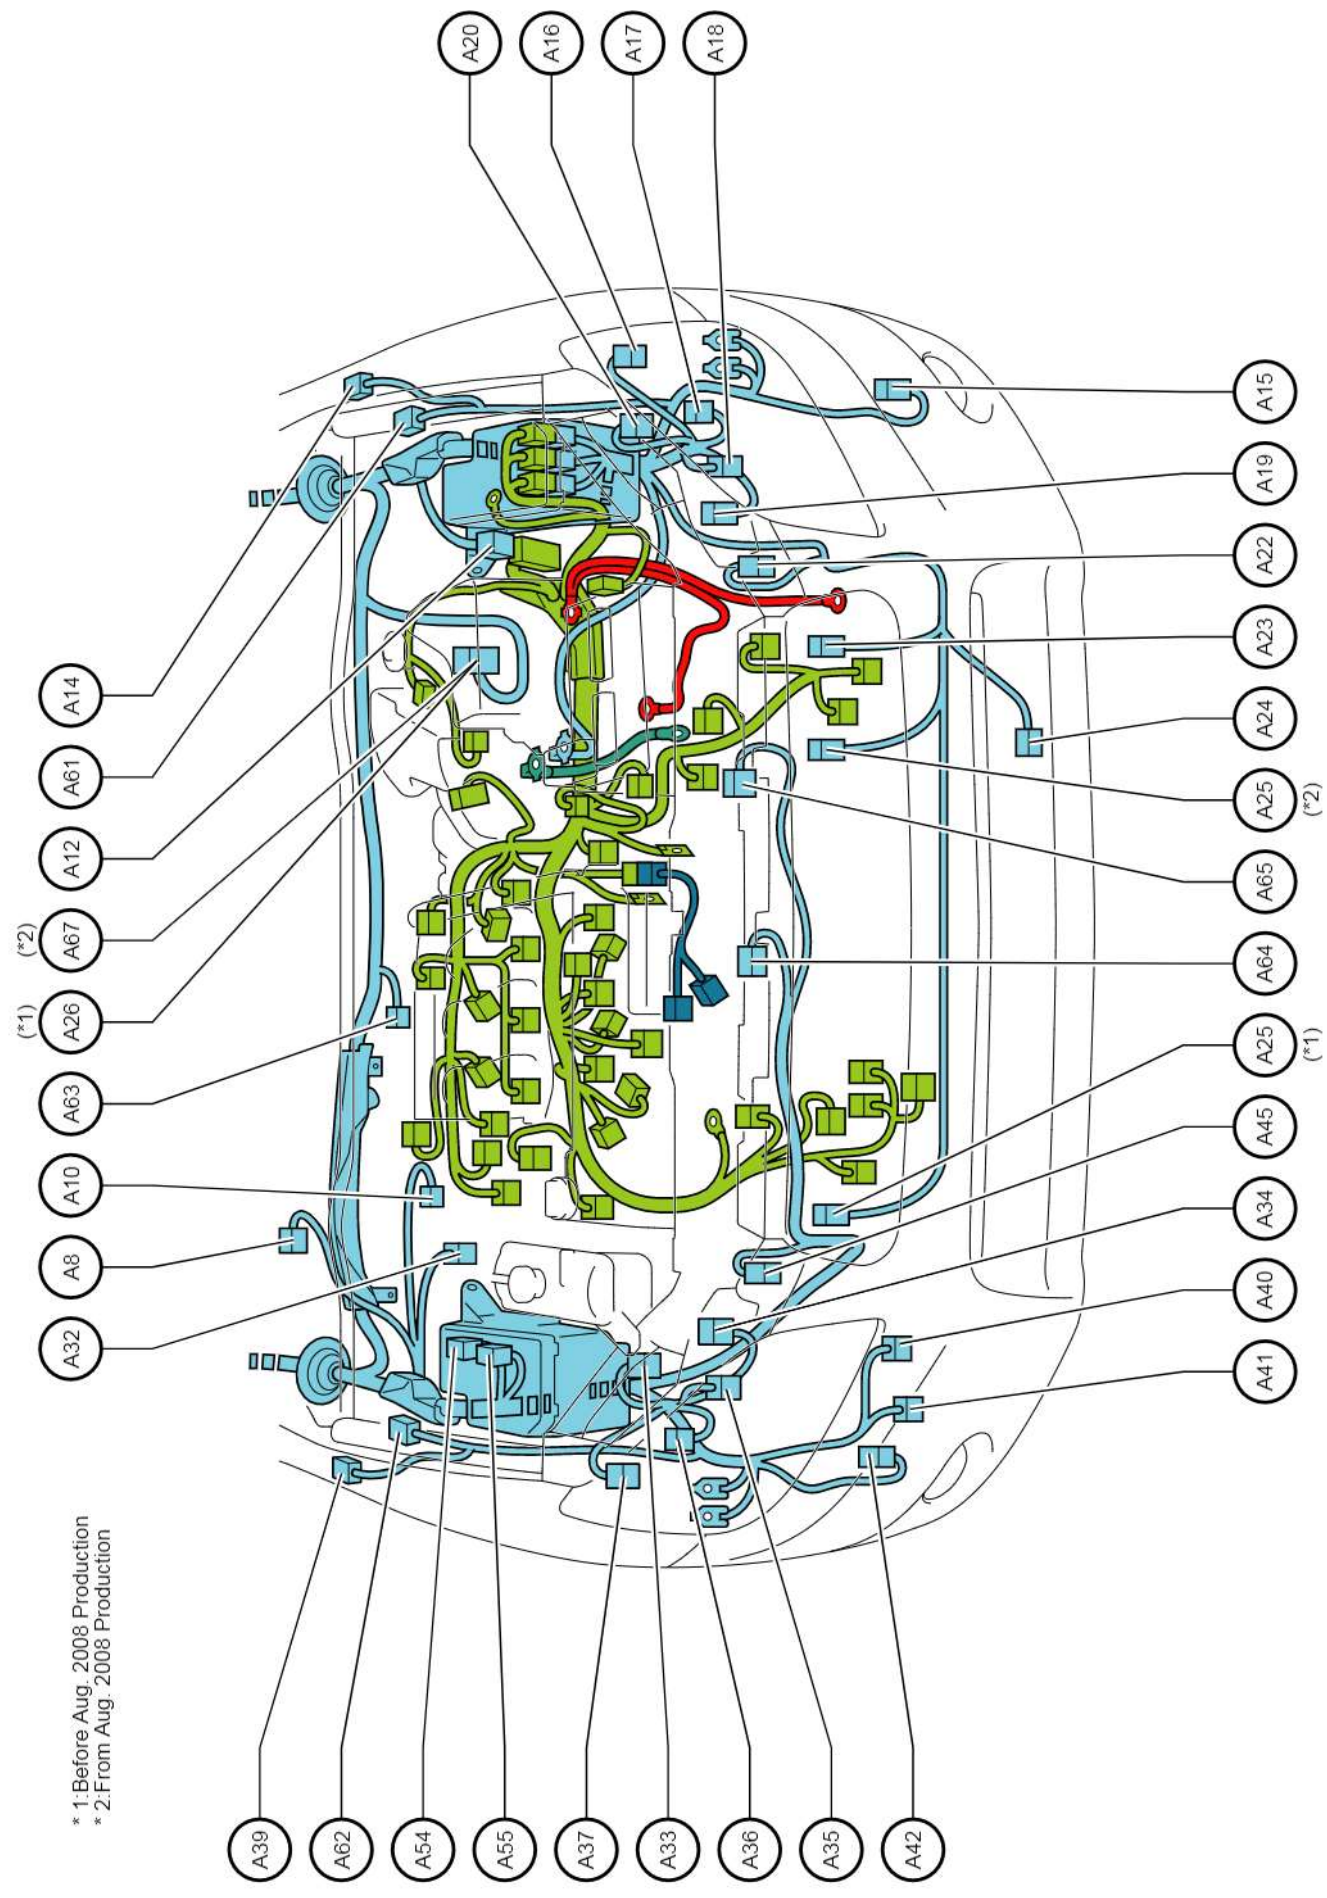









* 1: Before Aug. 2008 Production
* 2: From Aug. 2008 Production

A 8	Windshield Wiper Motor
A 10	Brake Fluid Level Warning SW
A 12	Engine ECU
A 14	Turn Signal Lamp (Front Side LH)
A 15	Fog Lamp (Front LH)
A 16	Turn Signal Lamp (Front LH)
A 17	Headlamp (LH Low)
A 18	Headlamp Leveling Motor (LH)
A 19	Headlamp (LH High)
A 20	Clearance Lamp (Front LH)
A 22	Airbag Sensor (Front LH)
A 23	Horn (Low)
A 24	Ambient Temp. Sensor
A 25	Horn (High)
A 26	Skid Control ECU with Actuator
A 32	A/C Pressure Sensor
A 33	Clearance Lamp (Front RH)
A 34	Headlamp (RH High)
A 35	Headlamp Leveling Motor (RH)
A 36	Headlamp (RH Low)
A 37	Turn Signal Lamp (Front RH)
A 39	Turn Signal Lamp (Front Side RH)
A 40	Rear Washer Motor
A 41	Front Washer Motor
A 42	Fog Lamp (Front RH)
A 45	Airbag Sensor (Front RH)
A 54	Junction Connector
A 55	Junction Connector
A 61	Speed Sensor (Front LH)
A 62	Speed Sensor (Front RH)
A 63	Fuel Pump Resistor
A 64	Cooling Fan ECU (RH)
A 65	Cooling Fan ECU (LH)
A 67	Skid Control ECU with Actuator


Position of Parts in Engine Compartment <RHD 2GR-FE>

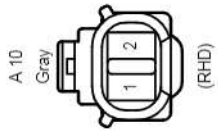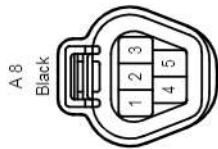

A 12
Black



 
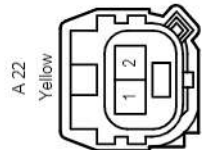
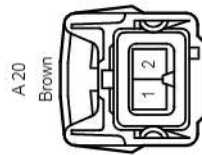
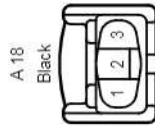
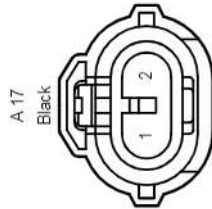
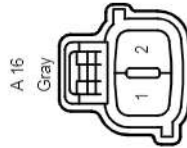
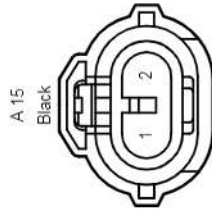
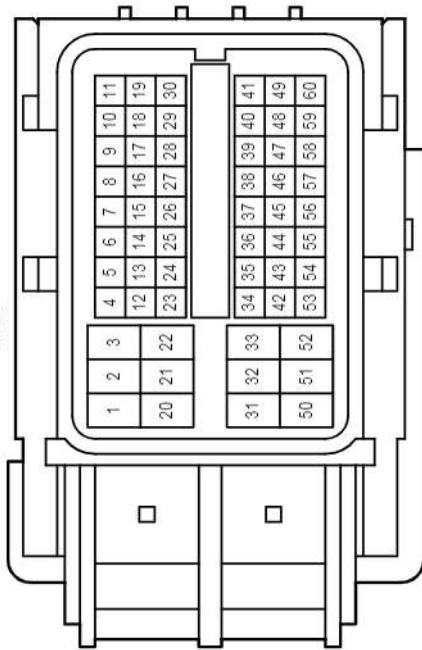


A 26
Black

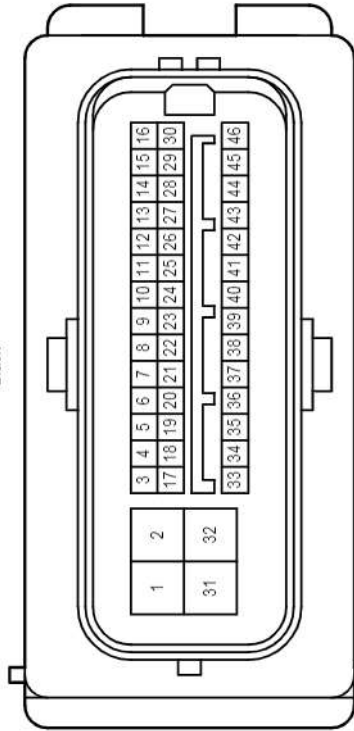


A 32
Black




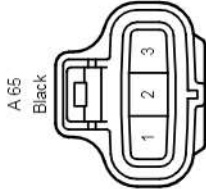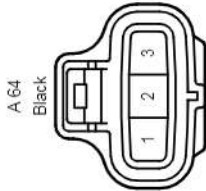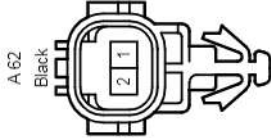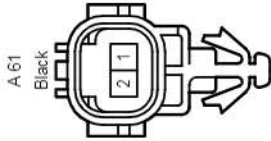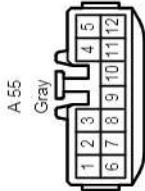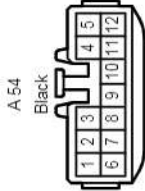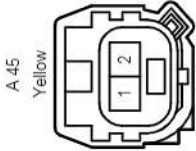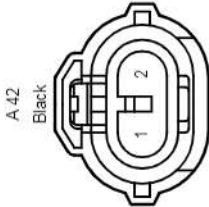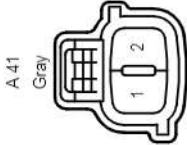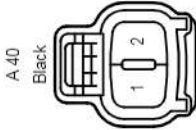

A 67
Black





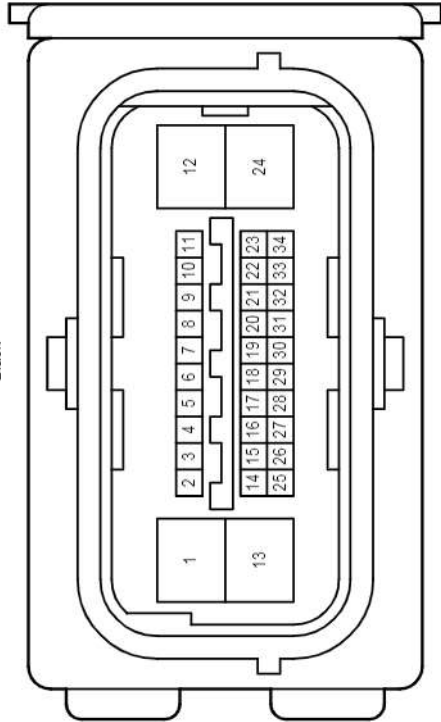


Position of Parts in Engine Compartment <RHD 2GR-FE>

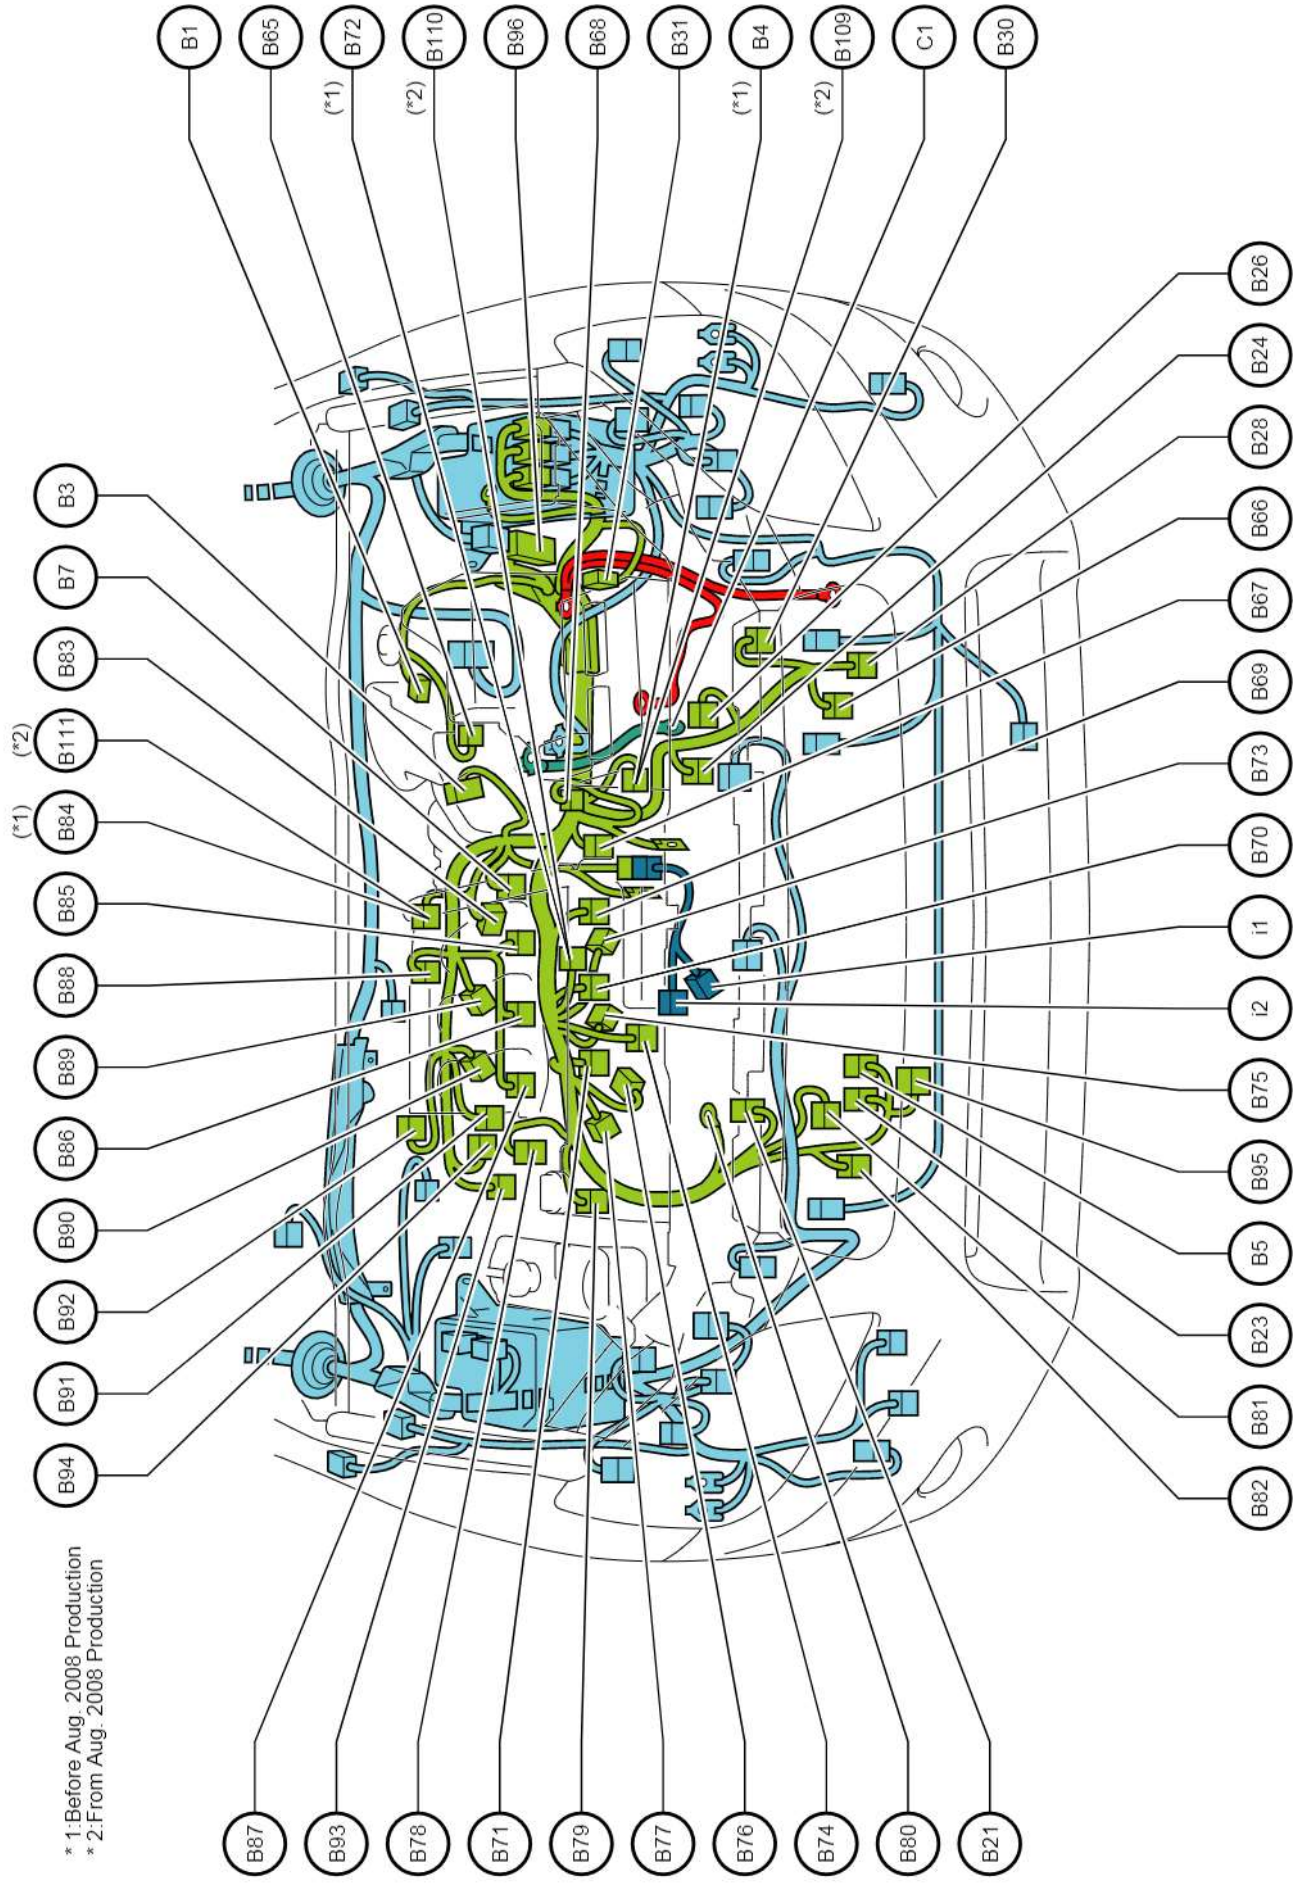



B 1	Air Flow Meter	
B 3	Throttle Body Assembly	
B 4	Water Temp. Sensor	
B 5	Engine Oil Pressure SW	
B 7	Air Fuel Ratio Sensor (Bank 1 Sensor 1)	
B 21	Alternator	
B 23	A/C Compressor	
B 24	Transmission Revolution Sensor (Counter Gear)	
B 26	Starter	
B 28	Park/Neutral Position SW	
B 30	Transmission Revolution Sensor (Turbine)	
B 31	Battery Current Sensor	
B 65	VSV (Air Intake Control)	
B 66	ECT Solenoid	
B 67	Air Fuel Ratio Sensor (Bank 2 Sensor 1)	
B 68	VSV (Purge)	
B 69	Fuel Injector (No.6)	
B 70	Fuel Injector (No.4)	
B 71	Fuel Injector (No.2)	
B 72	Noise Filter (Ignition LH)	
B 73	Ignition Coil (No.6)	
B 74	WT Sensor (Bank 2 Exhaust Side)	
B 75	Ignition Coil (No.4)	
B 76	Ignition Coil (No.2)	
B 77	Camshaft Timing Oil Control Valve (LH Exhaust Side)	
B 78	Camshaft Timing Oil Control Valve (LH Intake Side)	
B 79	WT Sensor (Bank 2 Intake Side)	
B 80	Alternator	
B 81	Crankshaft Position Sensor	
B 82	A/C Compressor	
B 83	Ignition Coil (No.5)	
B 84	Noise Filter (Ignition RH)	
B 85	Fuel Injector (No.5)	
B 86	Fuel Injector (No.3)	
B 87	Fuel Injector (No.1)	
B 88	WT Sensor (Bank 1 Exhaust Side)	
B 89	Ignition Coil (No.3)	
B 90	Ignition Coil (No.1)	
B 91	Camshaft Timing Oil Control Valve (RH Exhaust Side)	
B 92	VSV (ACIS)	
B 93	WT Sensor (Bank 1 Intake Side)	
B 94	Camshaft Timing Oil Control Valve (RH Intake Side)	
B 95	Heated Oxygen Sensor (Bank 2 Sensor 2)	
B 96	Engine ECU	


Position of Parts in Engine Compartment <RHD 2GR-FE>

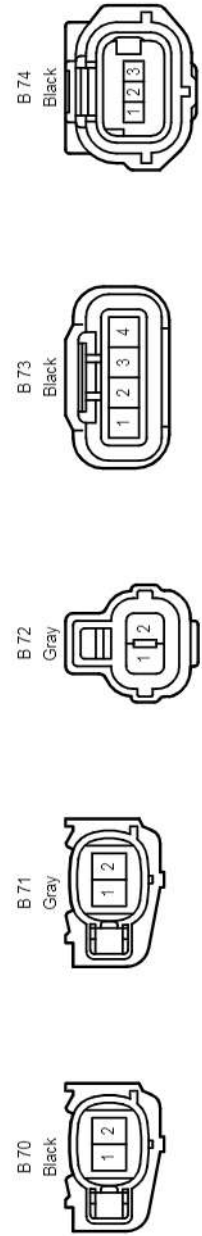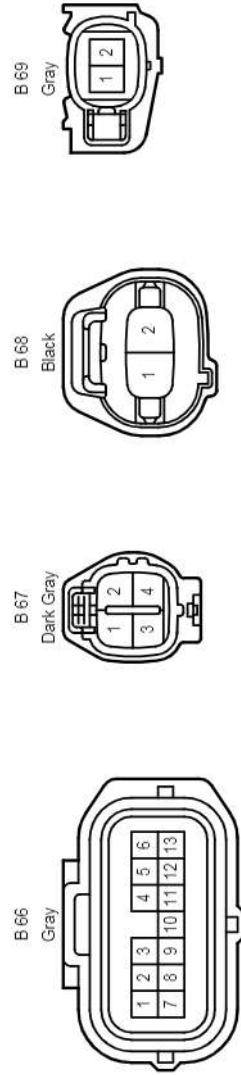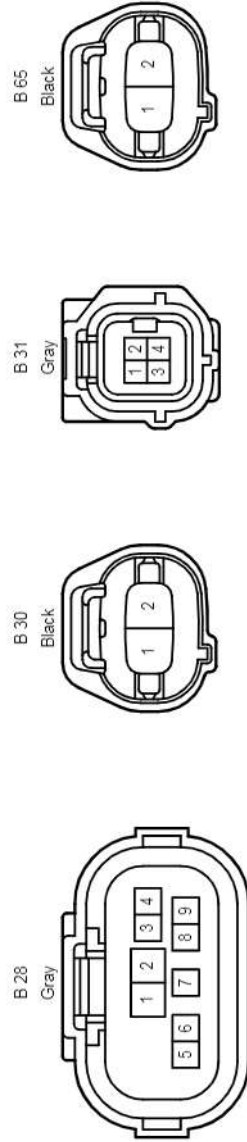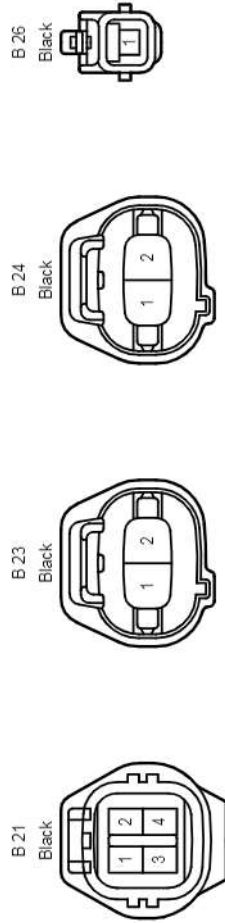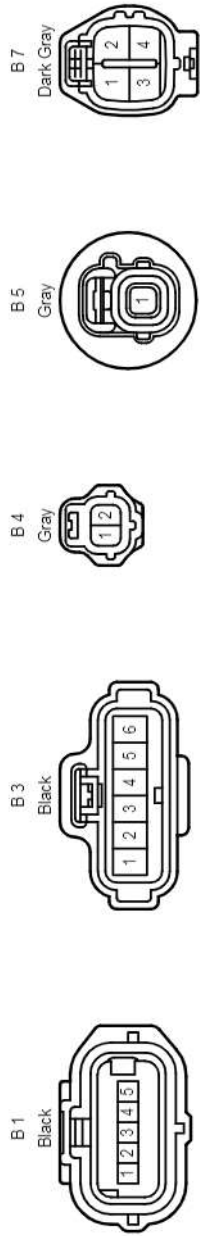

Position of Parts in Engine Compartment <RHD 2GR-FE>

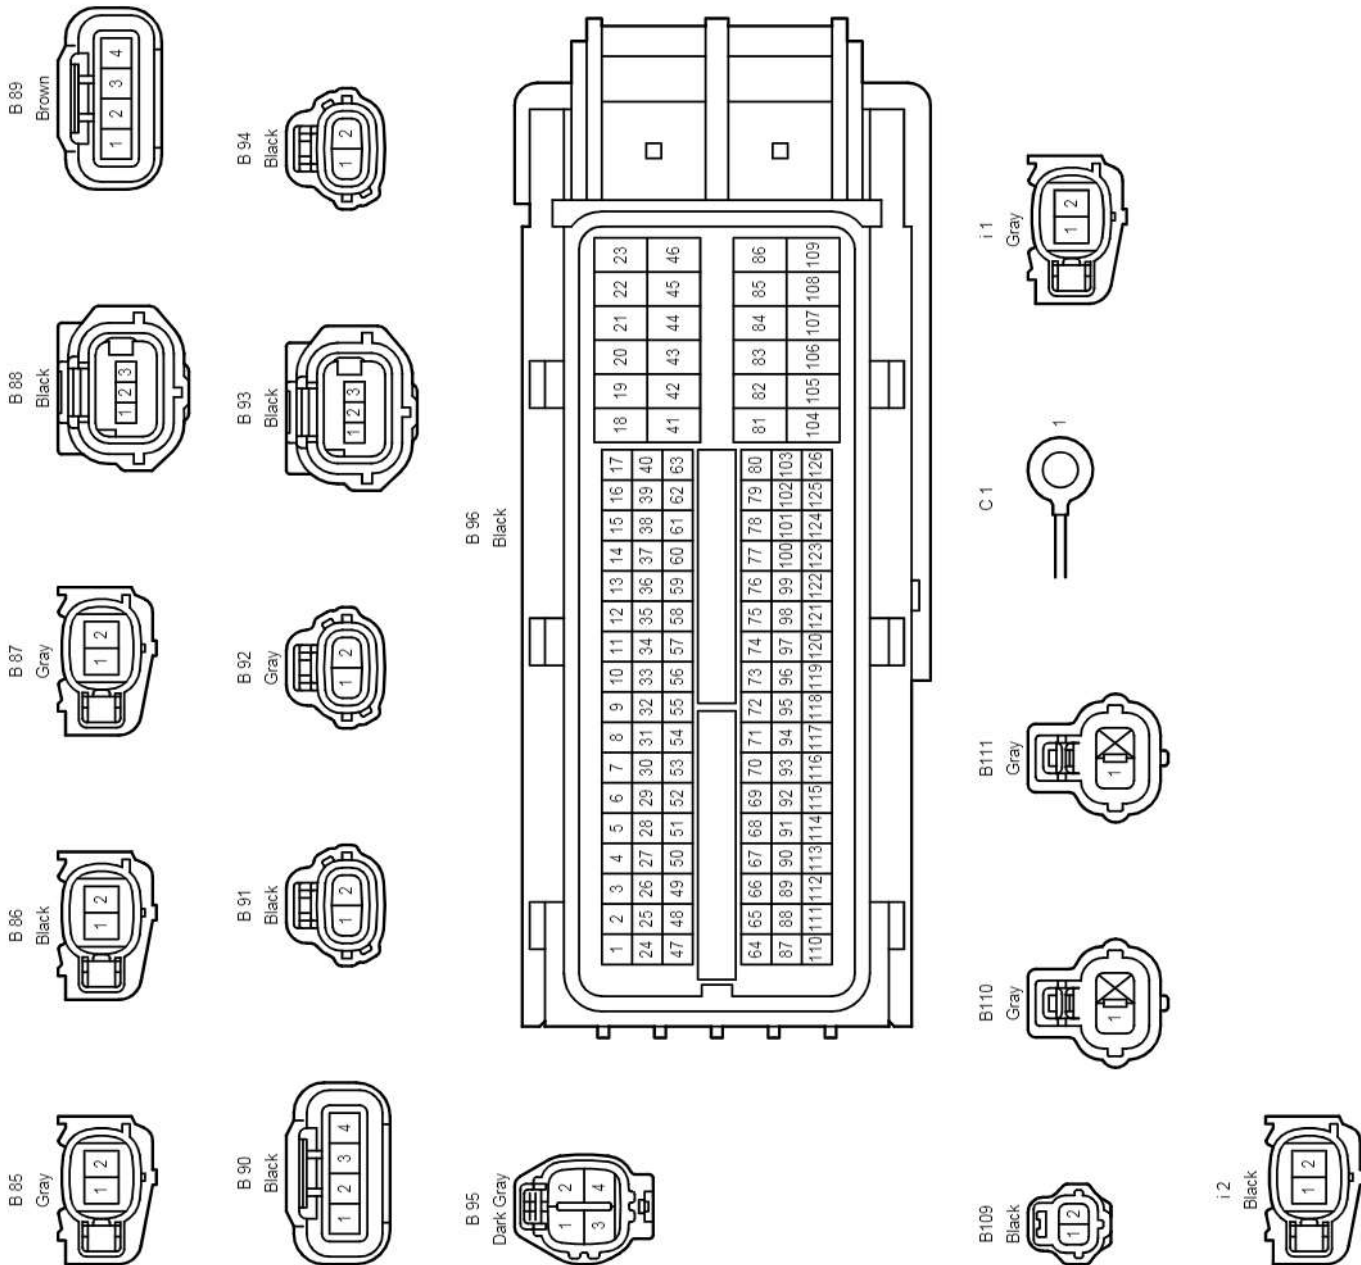


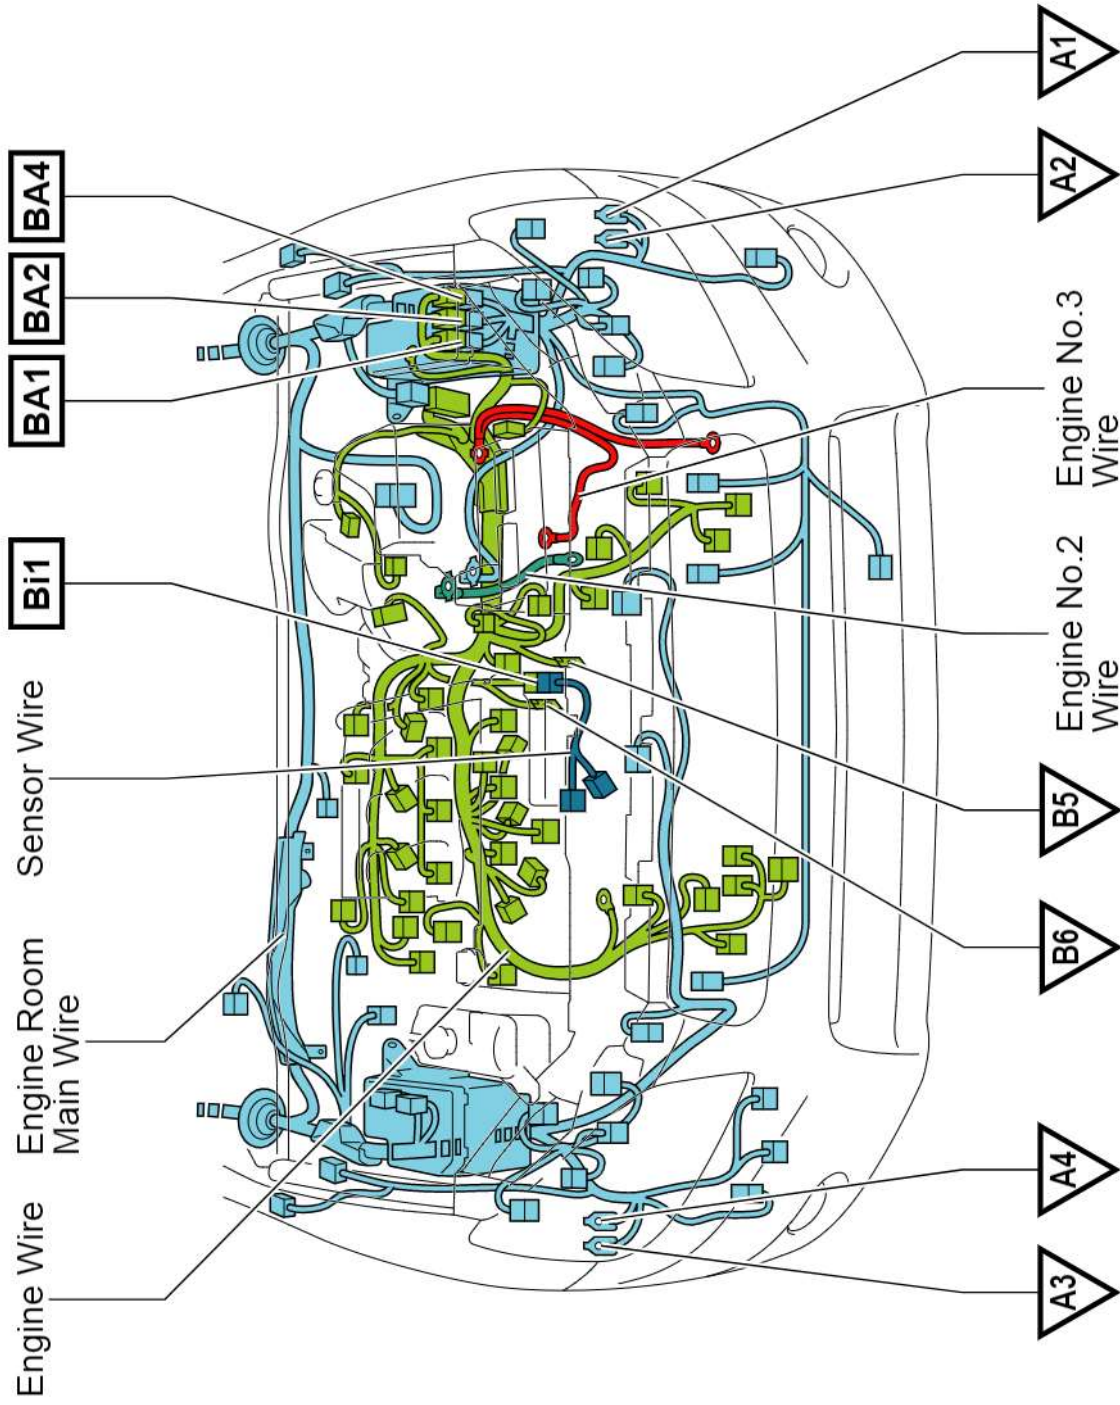


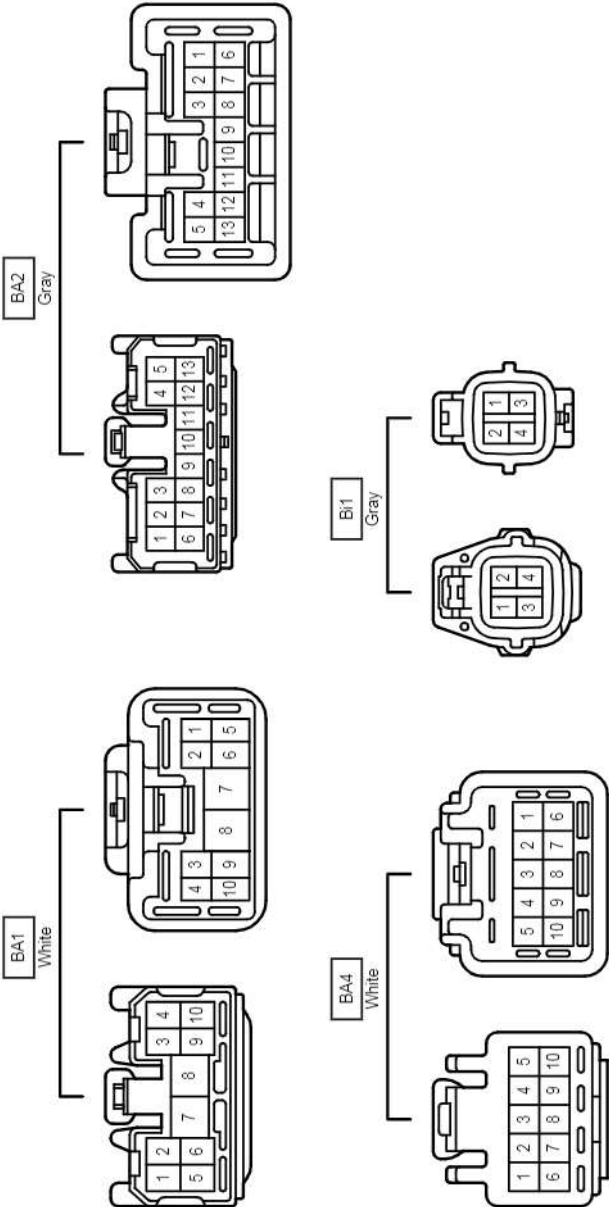




A 8	Windshield Wiper Motor
A 9	Front Wiper Deicer
A 10	Brake Fluid Level Warning SW
A 12	Engine ECU
A 13	Wireless Door Lock Buzzer
A 15	Fog Lamp (Front LH)
A 16	Turn Signal Lamp (Front LH)
A 17	Headlamp (LH Low)
A 18	Headlamp Leveling Motor (LH)
A 19	Headlamp (LH High)
A 20	Clearance Lamp (Front LH)
A 21	Option Connector
A 22	Airbag Sensor (Front LH)
A 23	Horn (Low)
A 24	Ambient Temp. Sensor
A 25	Horn (High)
A 27	Skid Control ECU with Actuator
A 32	A/C Pressure Sensor
A 33	Clearance Lamp (Front RH)
A 34	Headlamp (RH High)
A 35	Headlamp Leveling Motor (RH)
A 36	Headlamp (RH Low)
A 37	Turn Signal Lamp (Front RH)
A 40	Rear Washer Motor
A 41	Front Washer Motor
A 42	Fog Lamp (Front RH)
A 43	Headlamp Cleaner Motor
A 44	Headlamp Cleaner Control Relay
A 45	Airbag Sensor (Front RH)
A 46	A/C Condenser Fan Motor
A 47	Radiator Fan Motor
A 54	Junction Connector
A 55	Junction Connector
A 61	Speed Sensor (Front LH)
A 62	Speed Sensor (Front RH)
A 67	Skid Control ECU with Actuator
A 73	Headlamp (LH Low)
A 74	Headlamp Leveling Motor (LH)
A 75	Clearance Lamp (Front LH)
A 76	Clearance Lamp (Front RH)
A 77	Headlamp Leveling Motor (RH)
A 78	Headlamp (RH Low)

Position of Parts in Engine Compartment <LHD 3ZR-FAE>

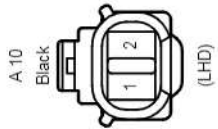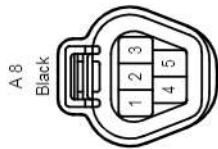


A 12
Black

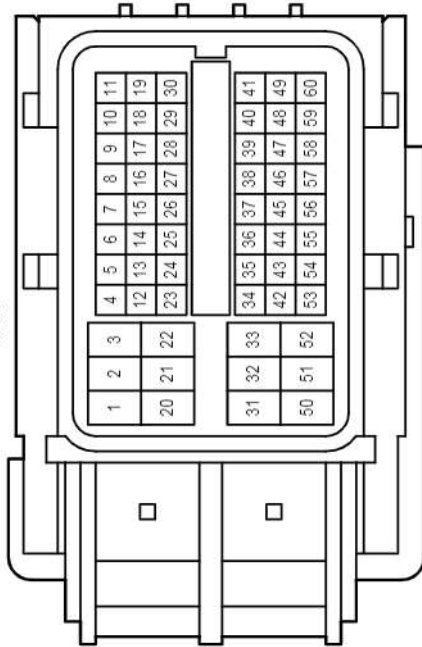


A 13
Black




A 15
Black

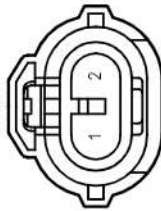


A 16
Gray

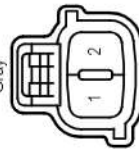

A 17
Black

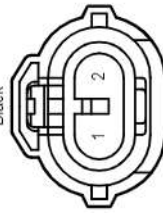


A 18
Black

 


A 19
Black




A 20
Brown

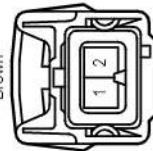

A 21
Black

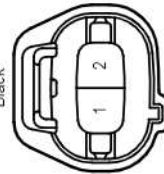

A 22
Yellow

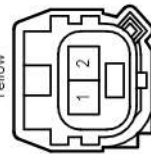

A 23
Black



 
A 24
Black



A 25
Black



A 27
Black



A 32
Black



A 33
Brown




Position of Parts in Engine Compartment <LHD 3ZR-FAE>



A 34
Black





A 35
Black

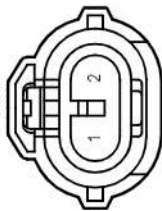


A 37
Gray



A 40
Black

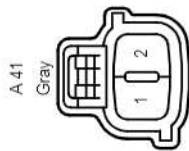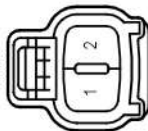


A 41
Gray

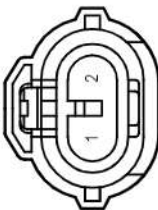



A 43
Black



A 44
Gray

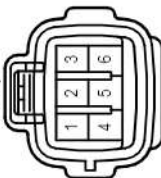


A 45
Yellow

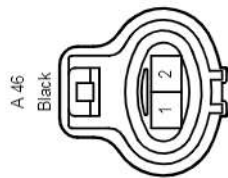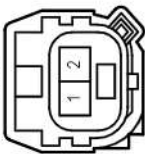


A 46
Black


A 47
Gray

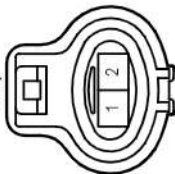


A 54
Black

 


A 55
Gray

 


A 61
Black

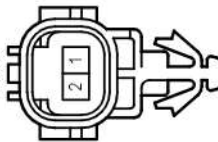

A 62
Black

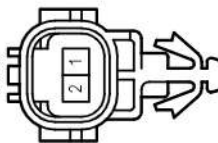


A 67
Black

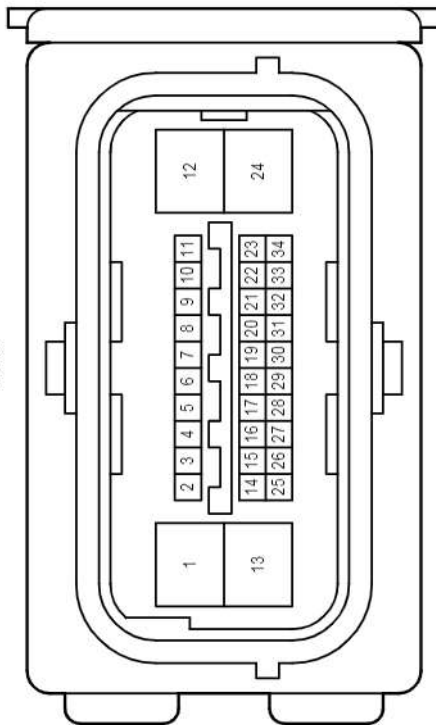

A 73
White



 A 74
Black




A 75
Brown




A 76
Brown



 A 77
Black

















Position of Parts in Engine Compartment <LHD 3ZR-FAE>

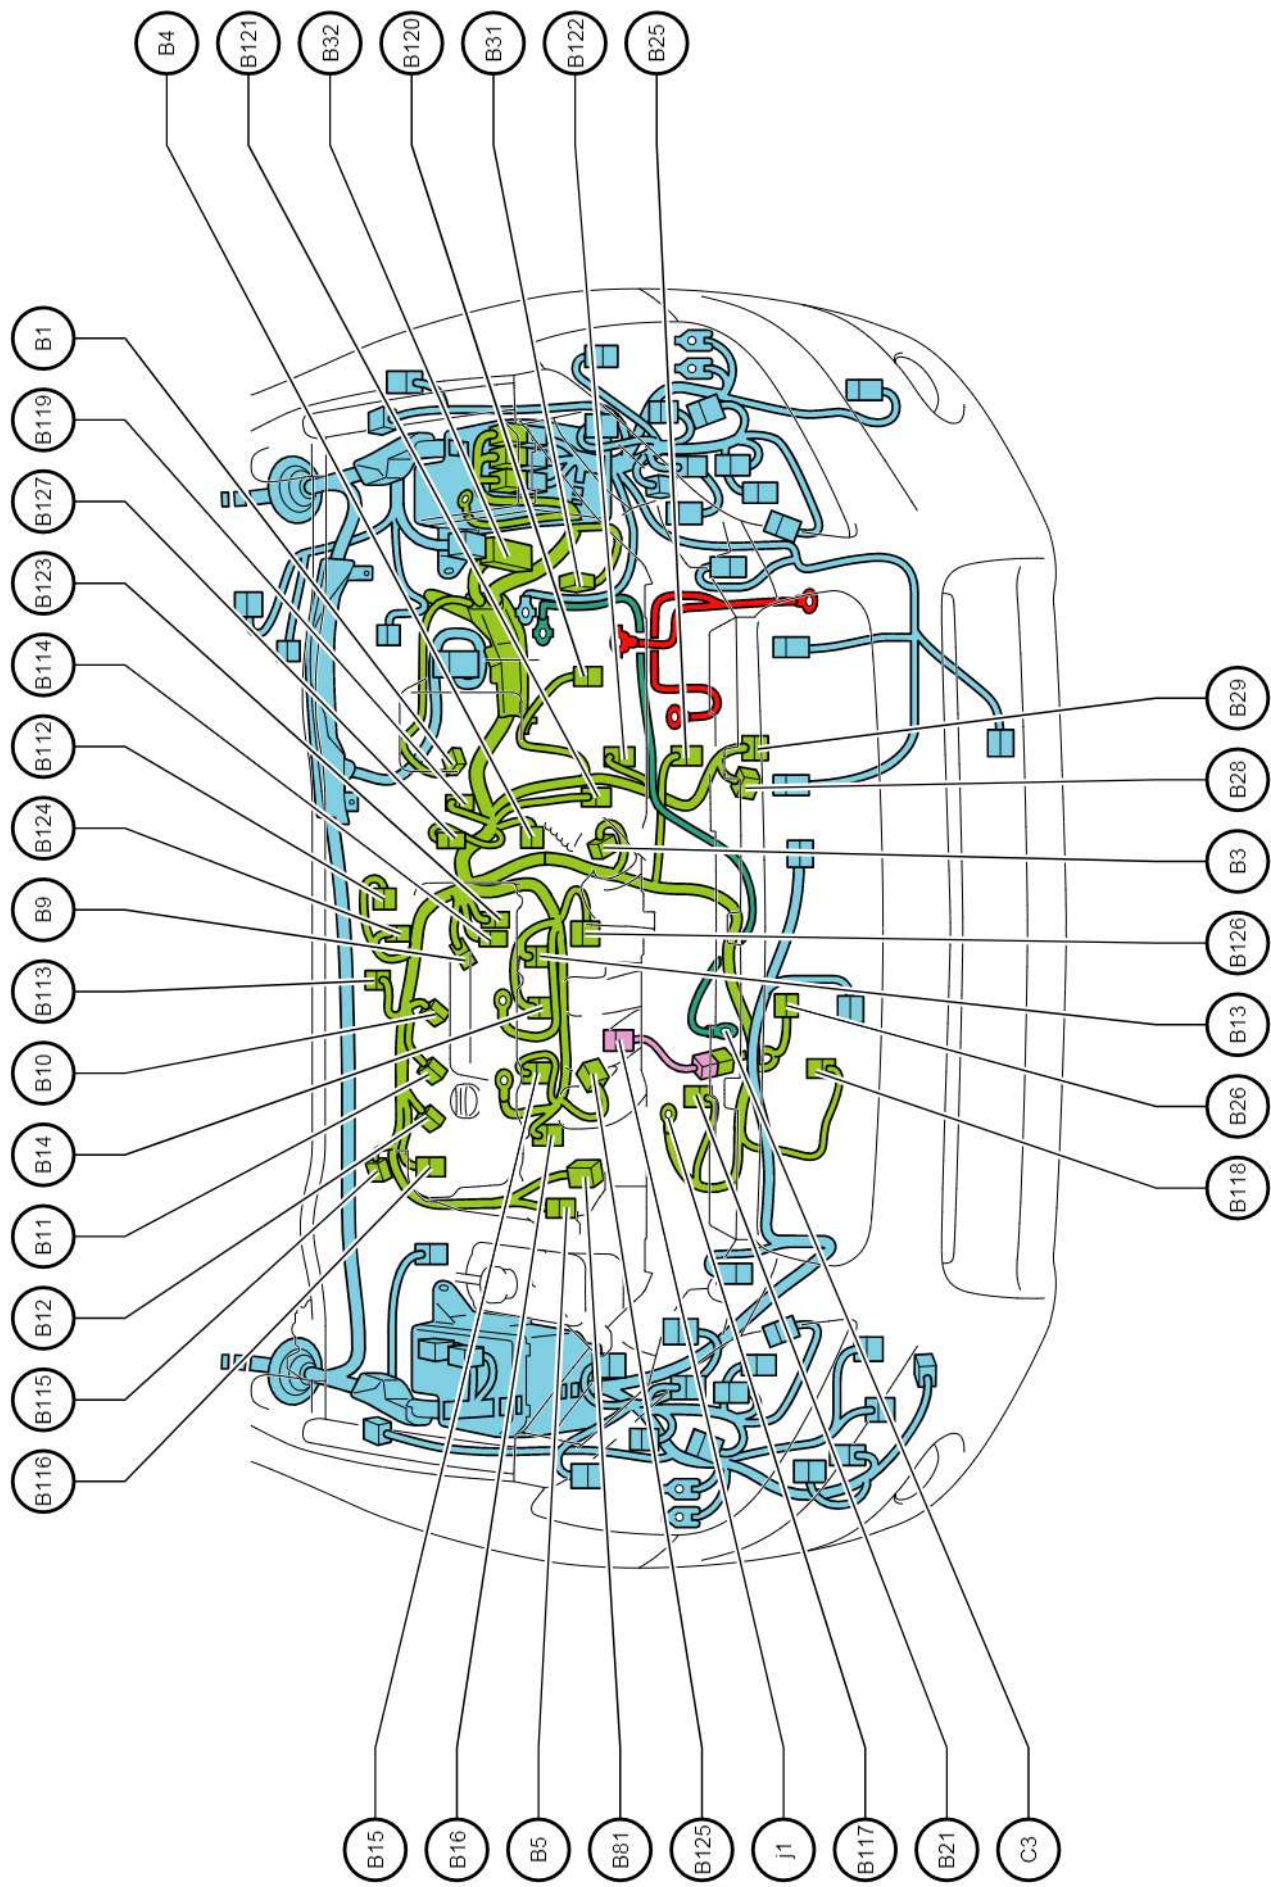


B 1	Air Flow Meter
B 3	Throttle Body Assembly
B 4	Water Temp. Sensor
B 5	Engine Oil Pressure SW
B 9	Ignition Coil (No.4)
B 10	Ignition Coil (No.3)
B 11	Ignition Coil (No.2)
B 12	Ignition Coil (No.1)
B 13	Fuel Injector (No.4)
B 14	Fuel Injector (No.3)
B 15	Fuel Injector (No.2)
B 16	Fuel Injector (No.1)
B 21	Alternator
B 25	Back-Up Light SW
B 26	Starter
B 28	Park/Neutral Position SW
B 29	ECT Solenoid
B 31	Battery Current Sensor
B 32	Engine ECU
B 81	Crankshaft Position Sensor
B 112	VSV (Purge)
B 113	Air Fuel Ratio Sensor (Bank 1 Sensor 1)
B 114	Noise Filter (Ignition)
B 115	Camshaft Timing Oil Control Valve (Exhaust Side)
B 116	Camshaft Timing Oil Control Valve (Intake Side)
B 117	Alternator
B 118	A/C Compressor
B 119	Transmission Revolution Sensor (Secondary)
B 120	Oil Pressure Sensor
B 121	Transmission Revolution Sensor (Turbine)
B 122	Transmission Revolution Sensor (Primary)
B 123	WT Sensor (Intake Side)
B 124	WT Sensor (Exhaust Side)
B 125	VSV (ACIS)
B 126	E.F.I. Vacuum Sensor Assembly
B 127	Valve Lift Control Driver


















C 3 Starter


j 1 Knock Control Sensor (Bank 1)

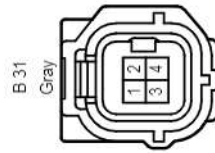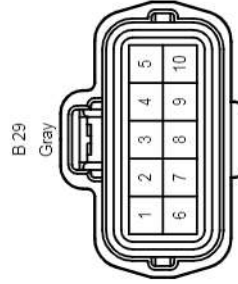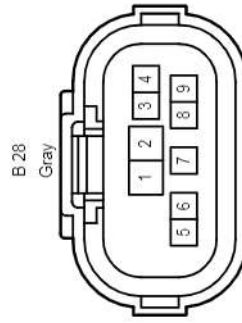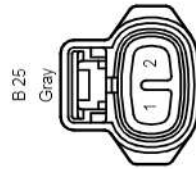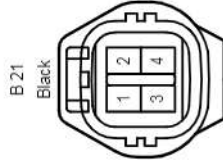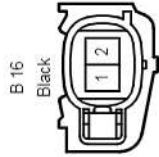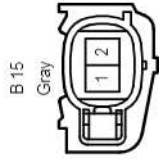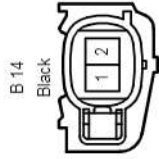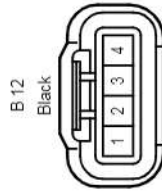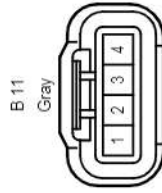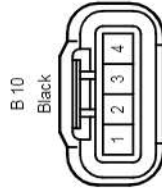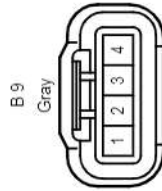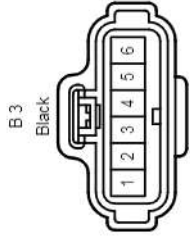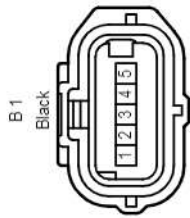


B 32
Black

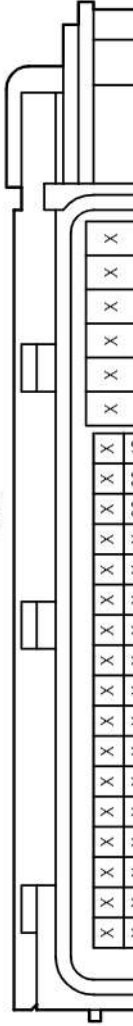


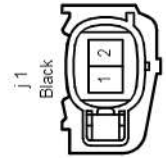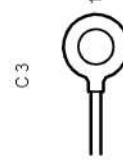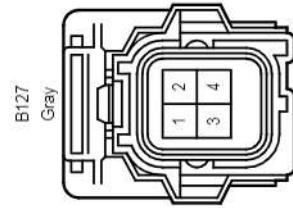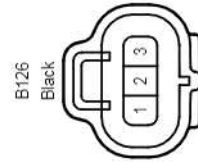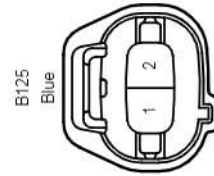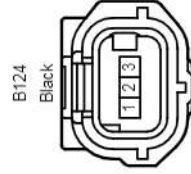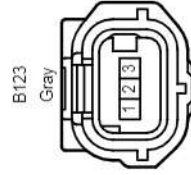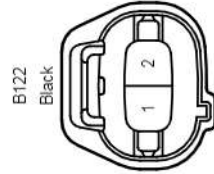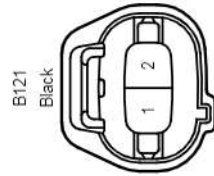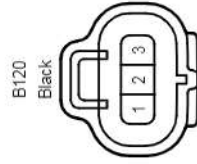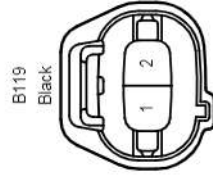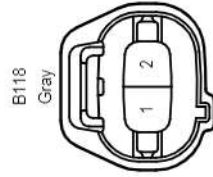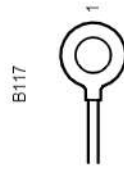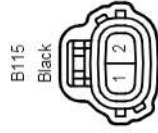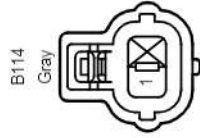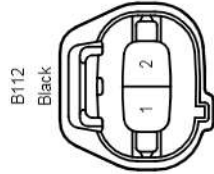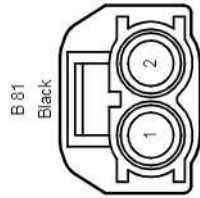

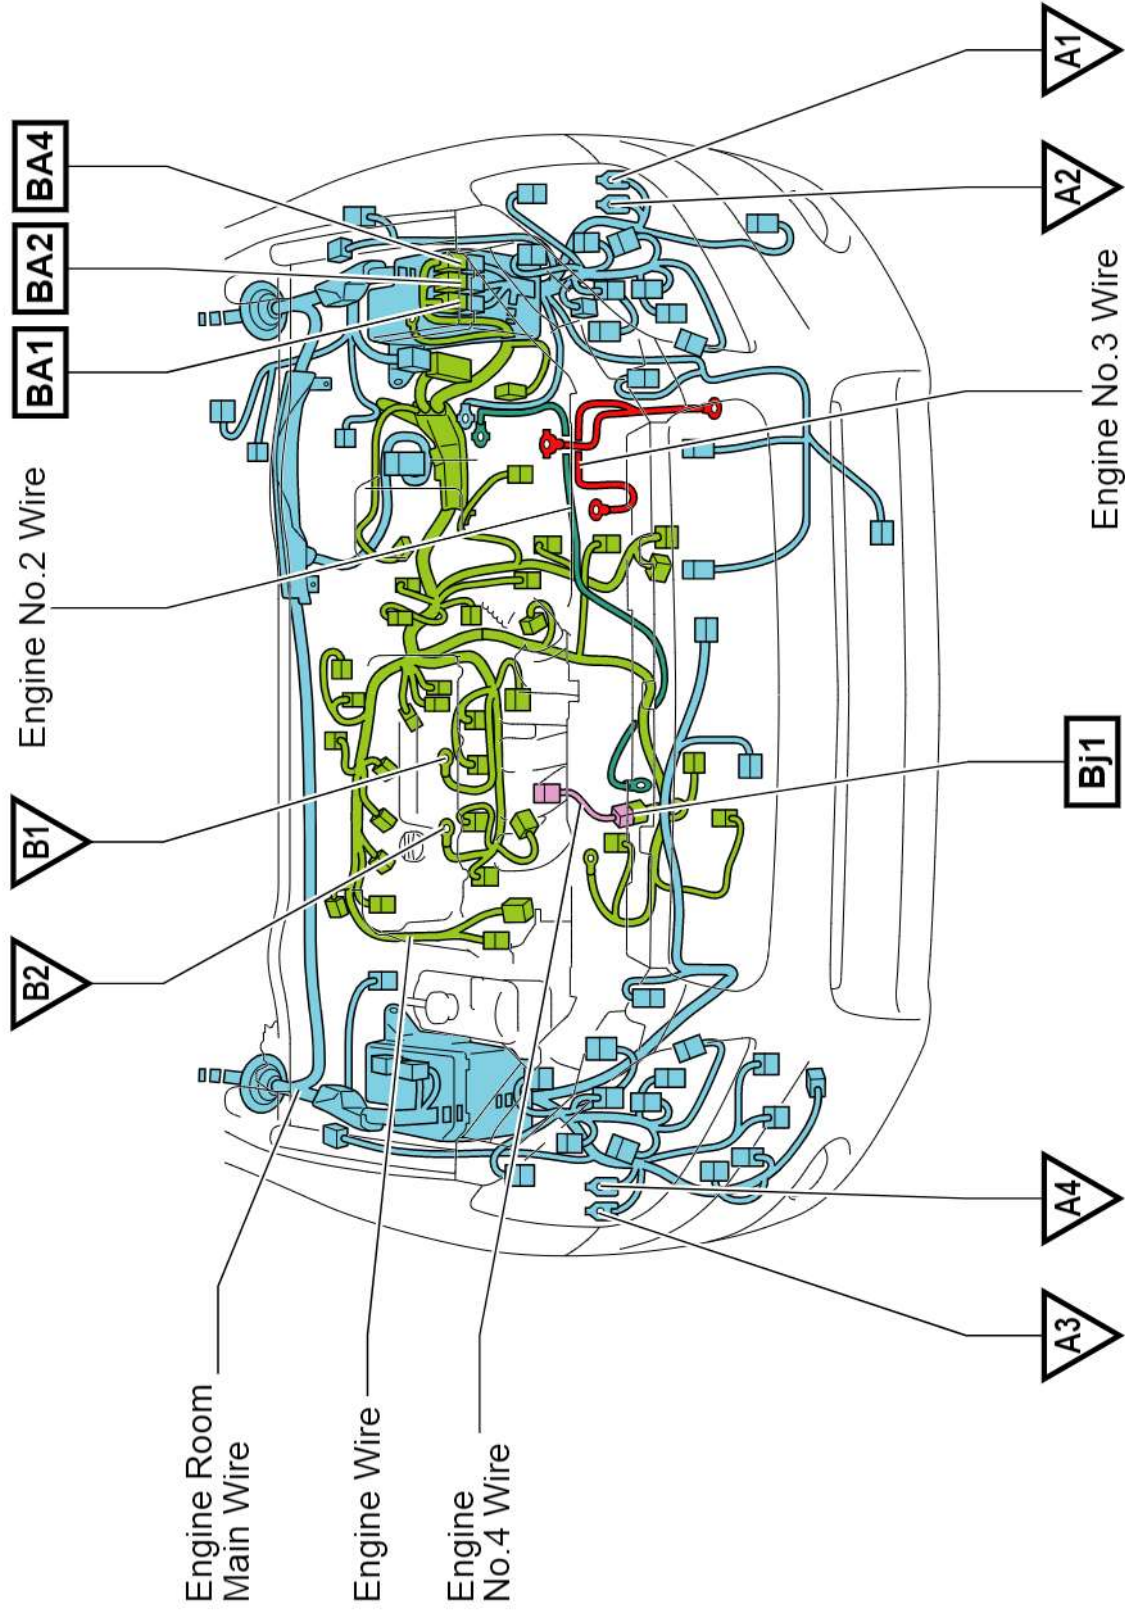

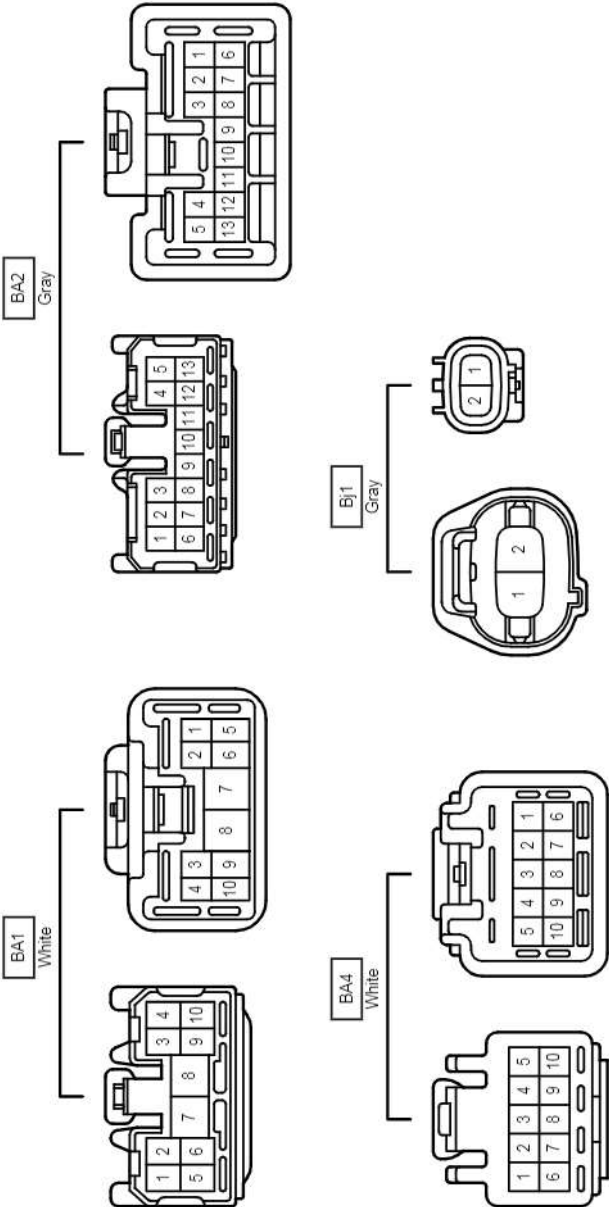



Position of Parts in Engine Compartment <RHD 3ZR-FAE>

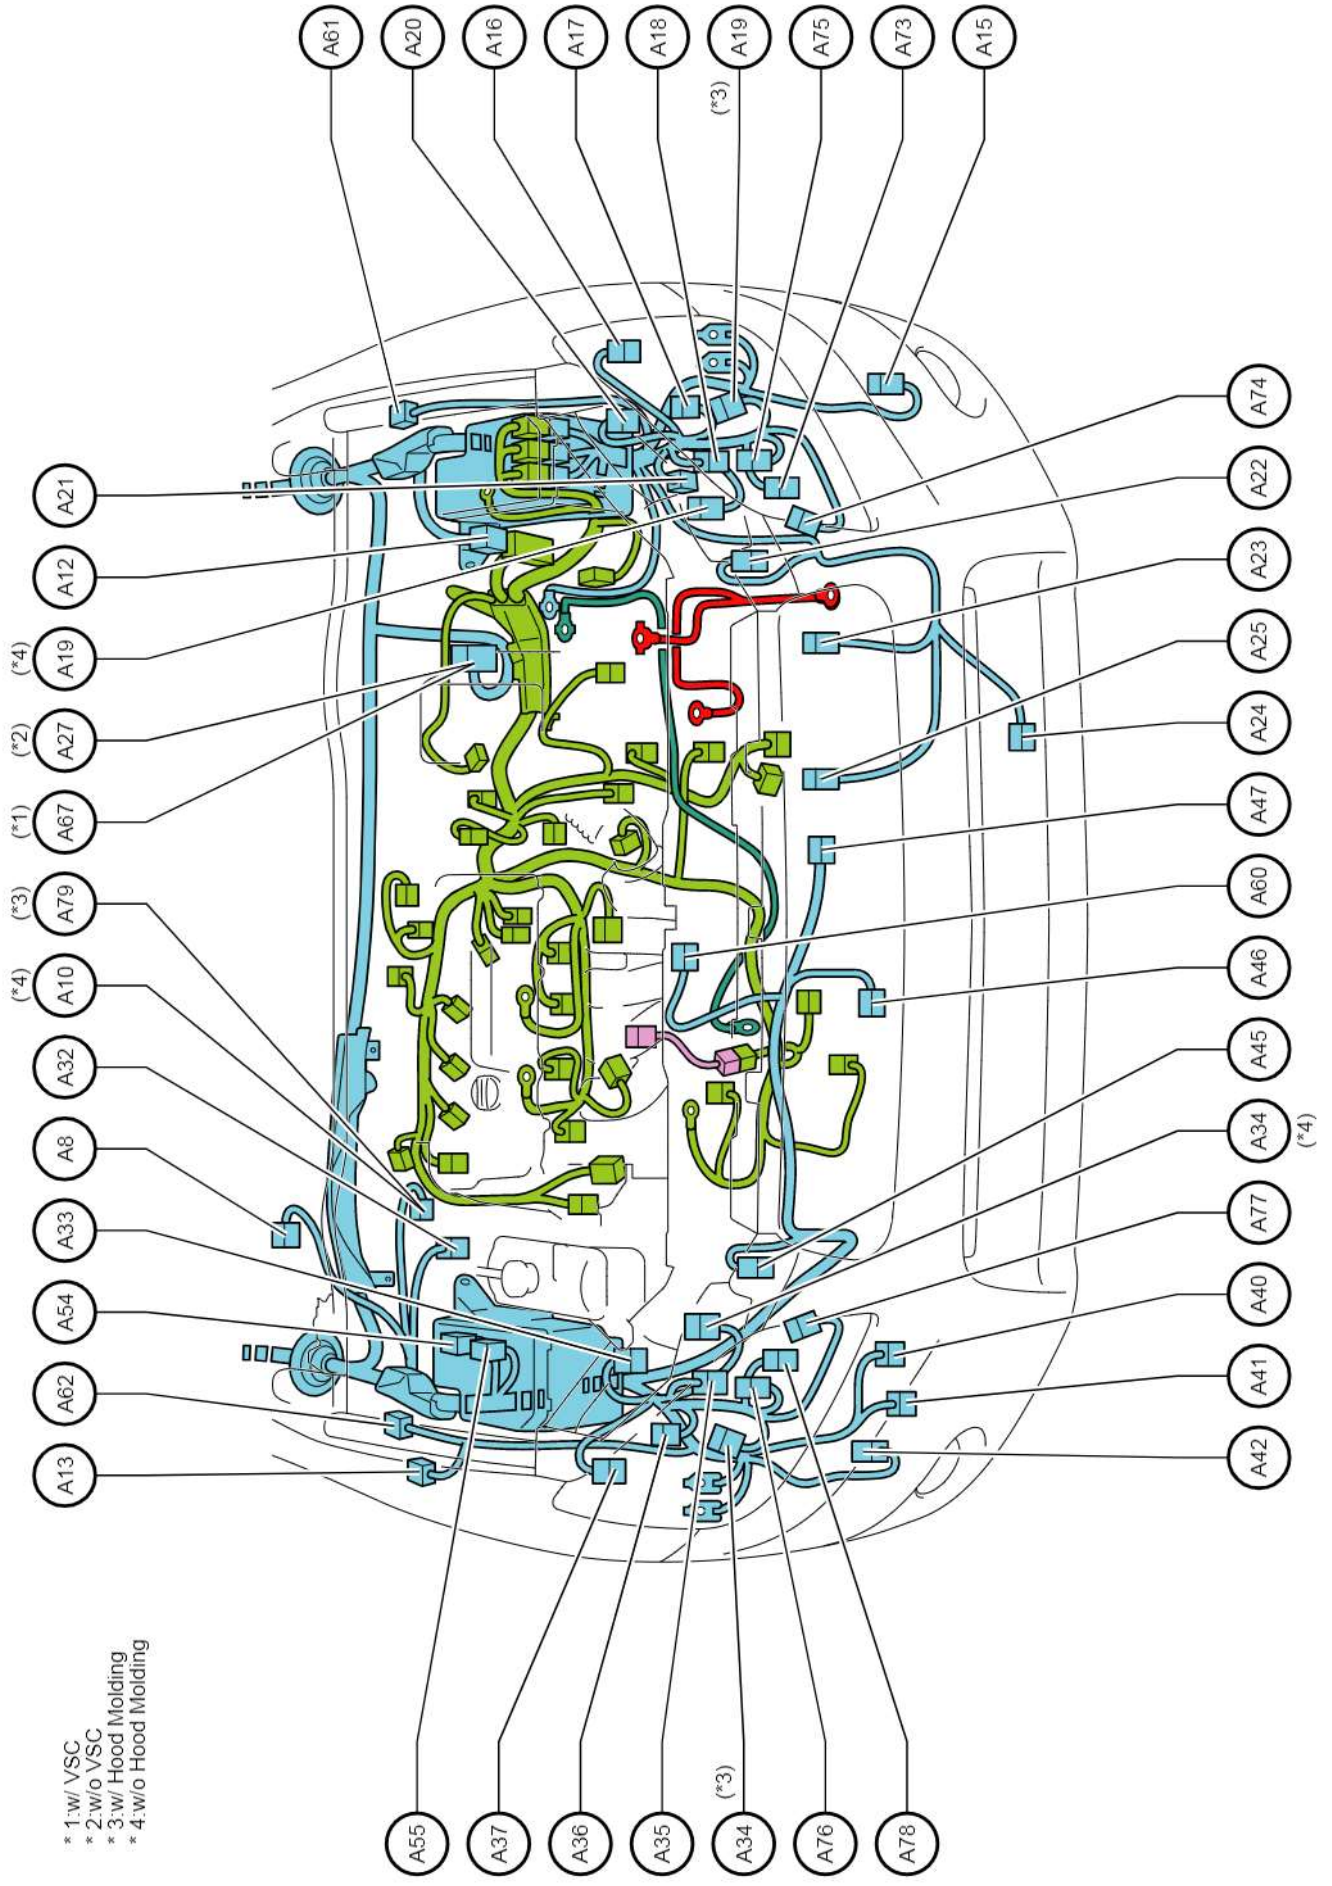









- * 1: w/ VSC
- * 2: w/o VSC
- * 3: w/ Hood Molding
- * 4: w/o Hood Molding

A 8	Windshield Wiper Motor
A 10	Brake Fluid Level Warning SW
A 12	Engine ECU
A 13	Wireless Door Lock Buzzer
A 15	Fog Lamp (Front LH)
A 16	Turn Signal Lamp (Front LH)
A 17	Headlamp (LH Low)
A 18	Headlamp Leveling Motor (LH)
A 19	Headlamp (LH High)
A 20	Clearance Lamp (Front LH)
A 21	Option Connector
A 22	Airbag Sensor (Front LH)
A 23	Horn (Low)
A 24	Ambient Temp. Sensor
A 25	Horn (High)
A 27	Skid Control ECU with Actuator
A 32	A/C Pressure Sensor
A 33	Clearance Lamp (Front RH)
A 34	Headlamp (RH High)
A 35	Headlamp Leveling Motor (RH)
A 36	Headlamp (RH Low)
A 37	Turn Signal Lamp (Front RH)
A 40	Rear Washer Motor
A 41	Front Washer Motor
A 42	Fog Lamp (Front RH)
A 45	Airbag Sensor (Front RH)
A 46	A/C Condenser Fan Motor
A 47	Radiator Fan Motor
A 54	Junction Connector
A 55	Junction Connector
A 60	Engine Hood Courtesy SW
A 61	Speed Sensor (Front LH)
A 62	Speed Sensor (Front RH)
A 67	Skid Control ECU with Actuator
A 73	Headlamp (LH Low)
A 74	Headlamp Leveling Motor (LH)
A 75	Clearance Lamp (Front LH)
A 76	Clearance Lamp (Front RH)
A 77	Headlamp Leveling Motor (RH)
A 78	Headlamp (RH Low)
A 79	Brake Fluid Level Warning SW


Position of Parts in Engine Compartment <RHD 3ZR-FAE>



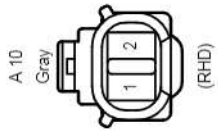
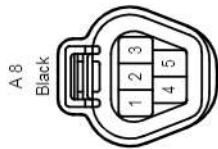


A 12
Black

 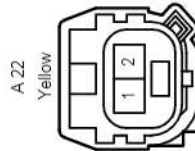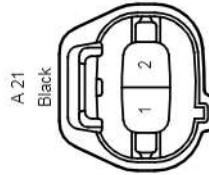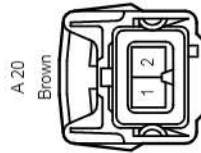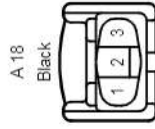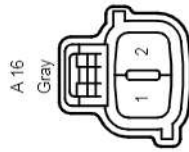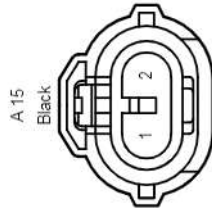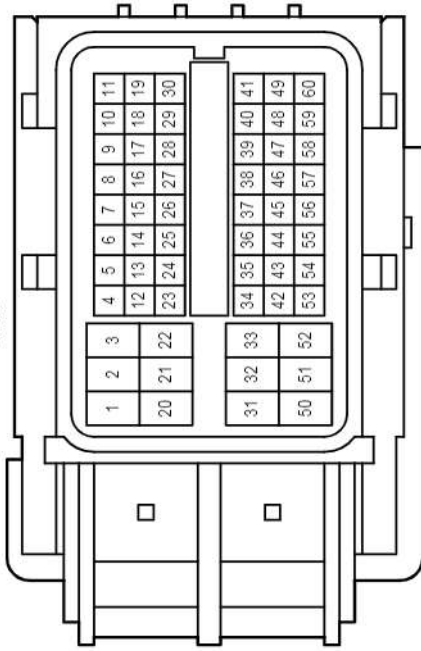


A 27
Black

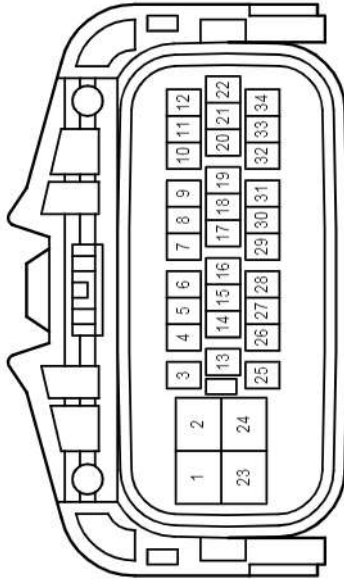

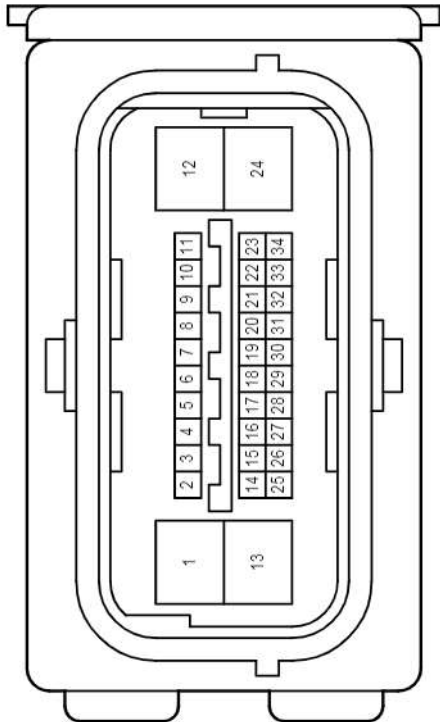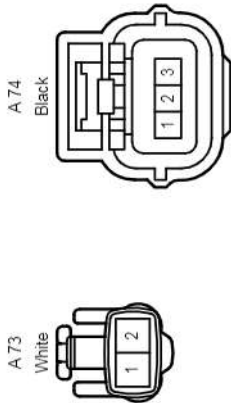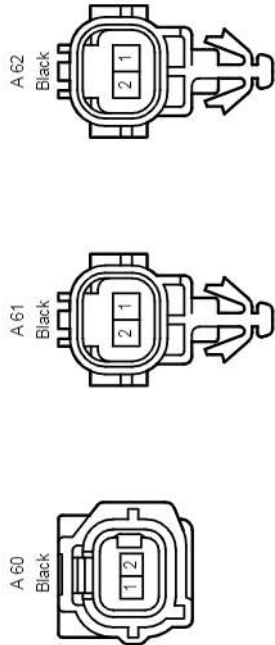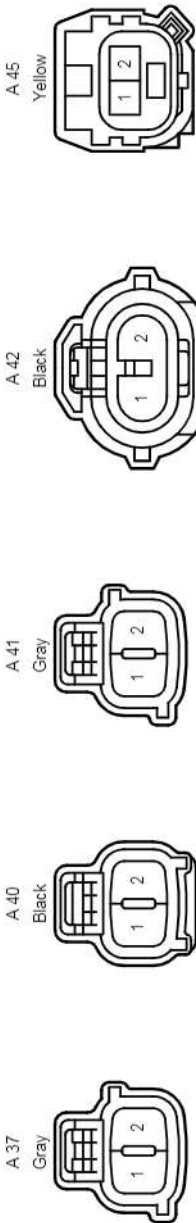

Position of Parts in Engine Compartment <RHD 3ZR-FAE>

















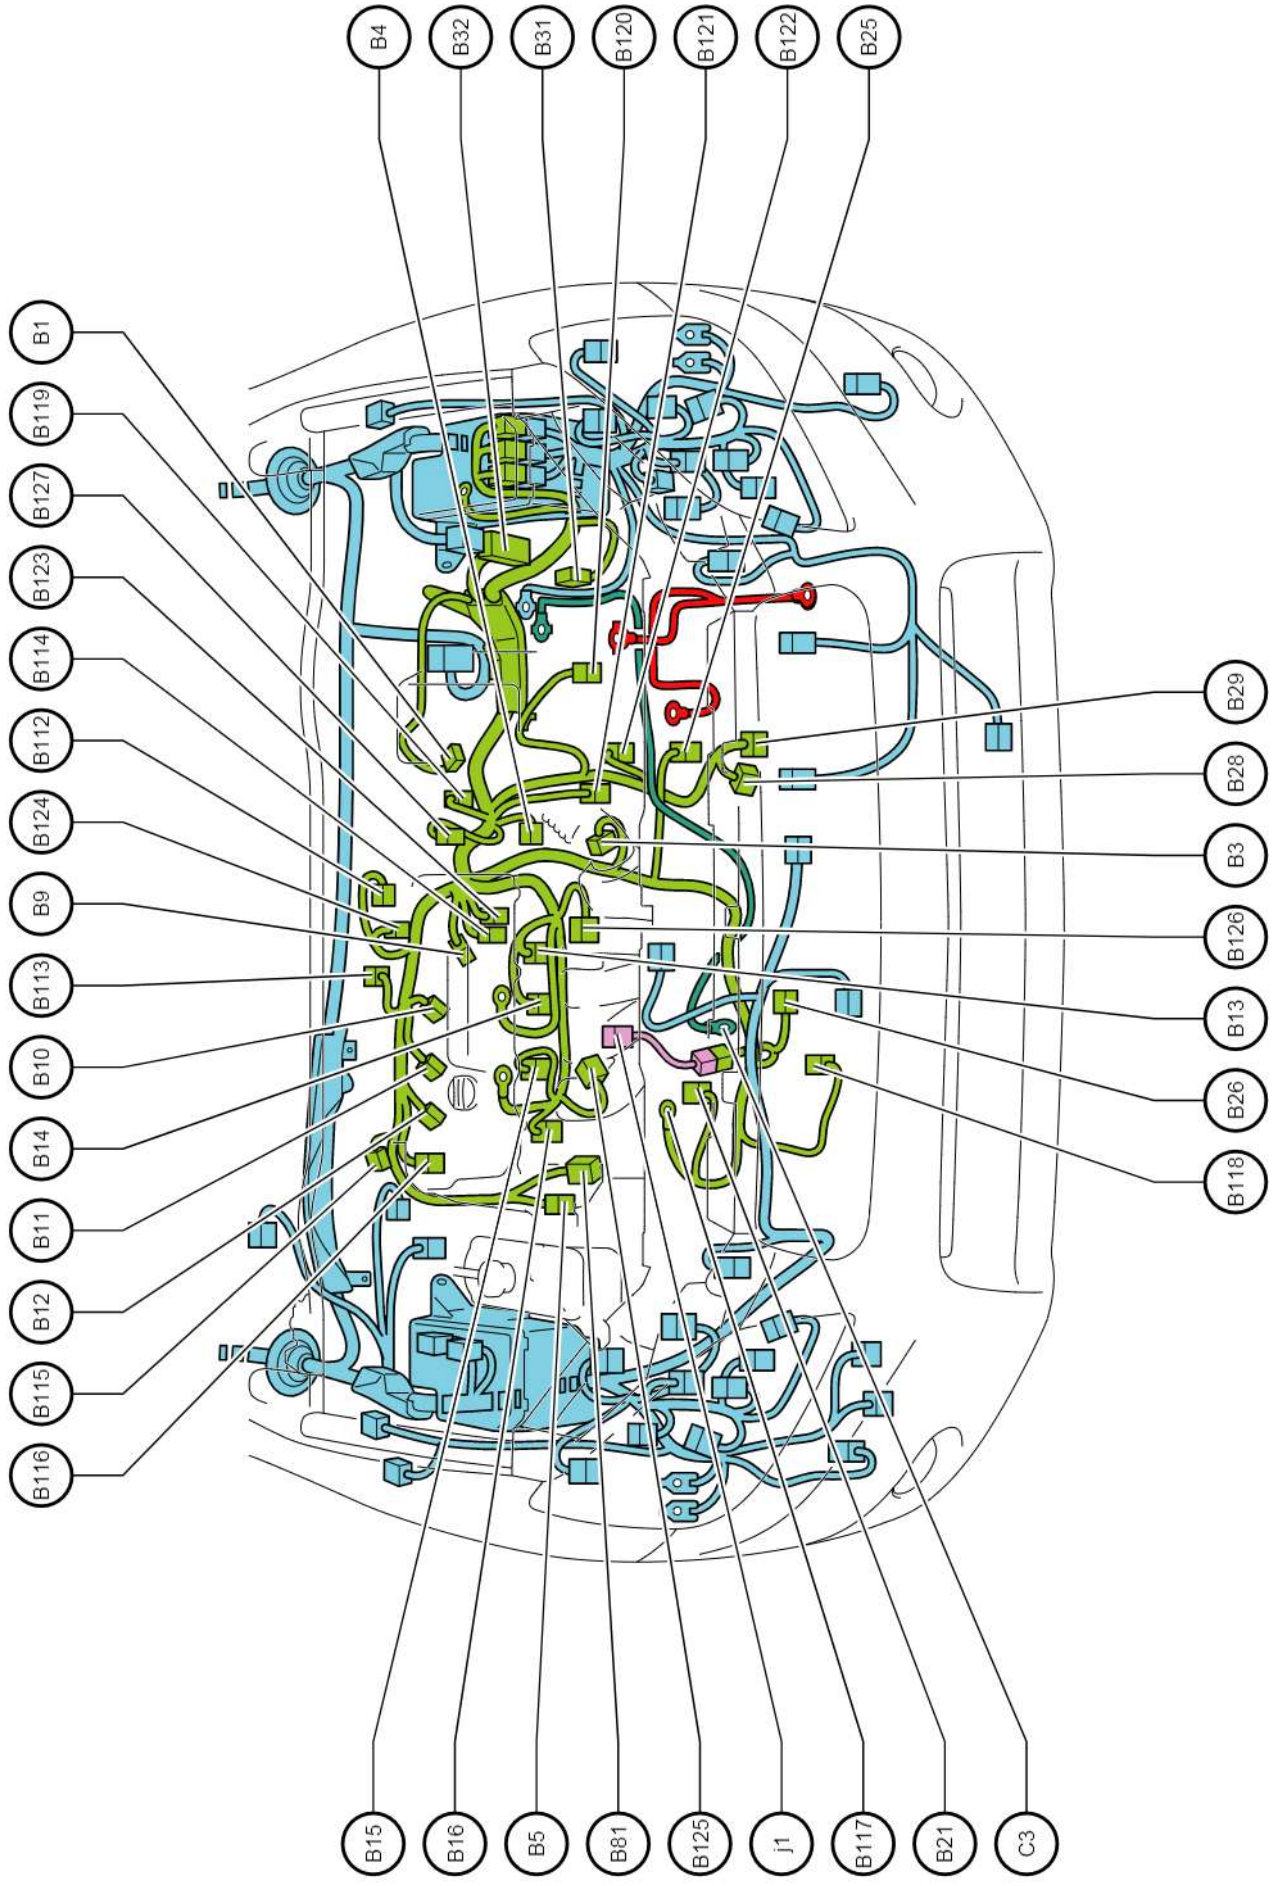


B	1	Air Flow Meter
B	3	Throttle Body Assembly
B	4	Water Temp. Sensor
B	5	Engine Oil Pressure SW
B	9	Ignition Coil (No.4)
B	10	Ignition Coil (No.3)
B	11	Ignition Coil (No.2)
B	12	Ignition Coil (No.1)
B	13	Fuel Injector (No.4)
B	14	Fuel Injector (No.3)
B	15	Fuel Injector (No.2)
B	16	Fuel Injector (No.1)
B	21	Alternator
B	25	Back-Up Light SW
B	26	Starter
B	28	Park/Neutral Position SW
B	29	ECT Solenoid
B	31	Battery Current Sensor
B	32	Engine ECU
B	81	Crankshaft Position Sensor
B	112	VSV (Purge)
B	113	Air Fuel Ratio Sensor (Bank 1 Sensor 1)
B	114	Noise Filter (Ignition)
B	115	Camshaft Timing Oil Control Valve (Exhaust Side)
B	116	Camshaft Timing Oil Control Valve (Intake Side)
B	117	Alternator
B	118	A/C Compressor
B	119	Transmission Revolution Sensor (Secondary)
B	120	Oil Pressure Sensor
B	121	Transmission Revolution Sensor (Turbine)
B	122	Transmission Revolution Sensor (Primary)
B	123	WT Sensor (Intake Side)
B	124	WT Sensor (Exhaust Side)
B	125	VSV (ACIS)
B	126	E.F.I. Vacuum Sensor Assembly
B	127	Valve Lift Control Driver

















C 3 Starter


j 1 Knock Control Sensor (Bank 1)


Position of Parts in Engine Compartment <RHD 3ZR-FAE>

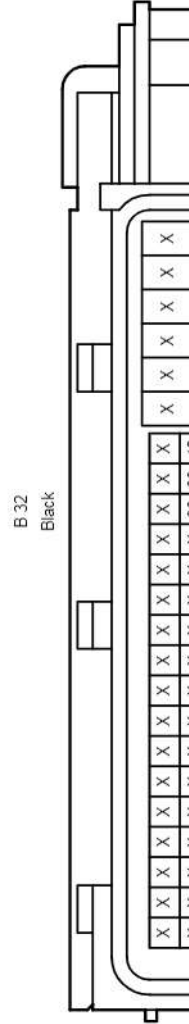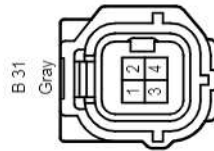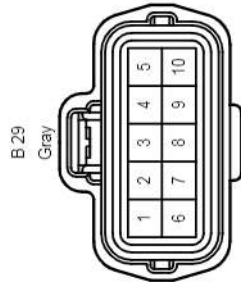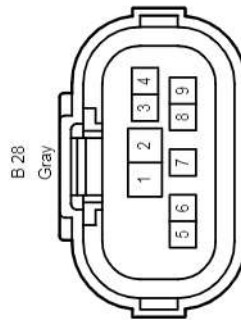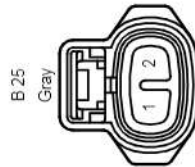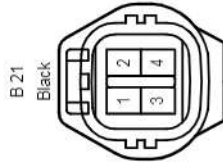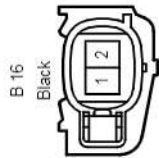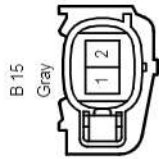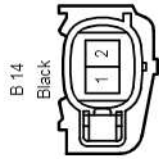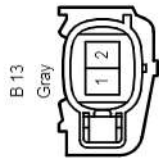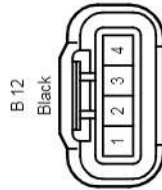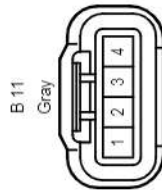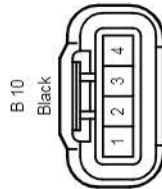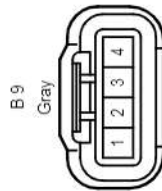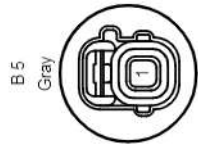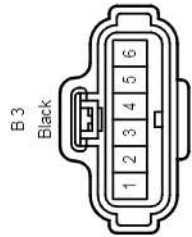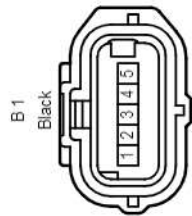


cardiagn.com

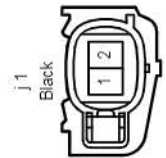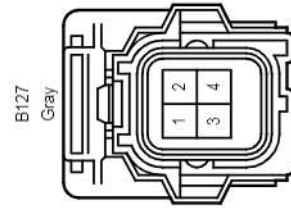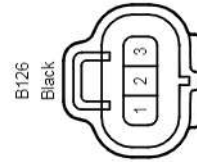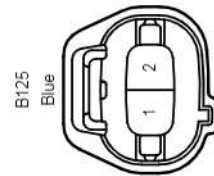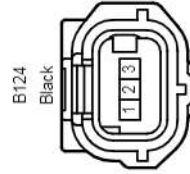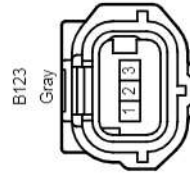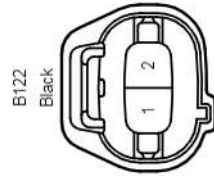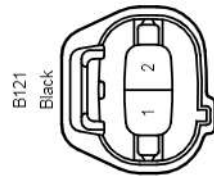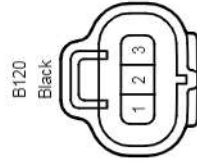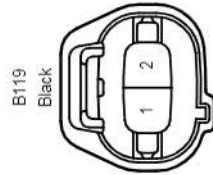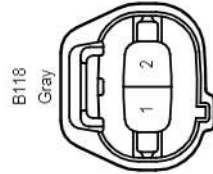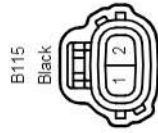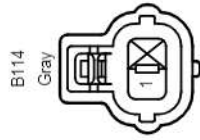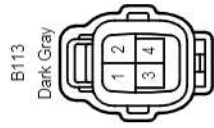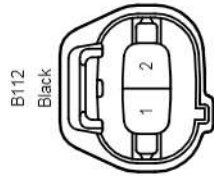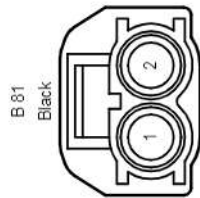

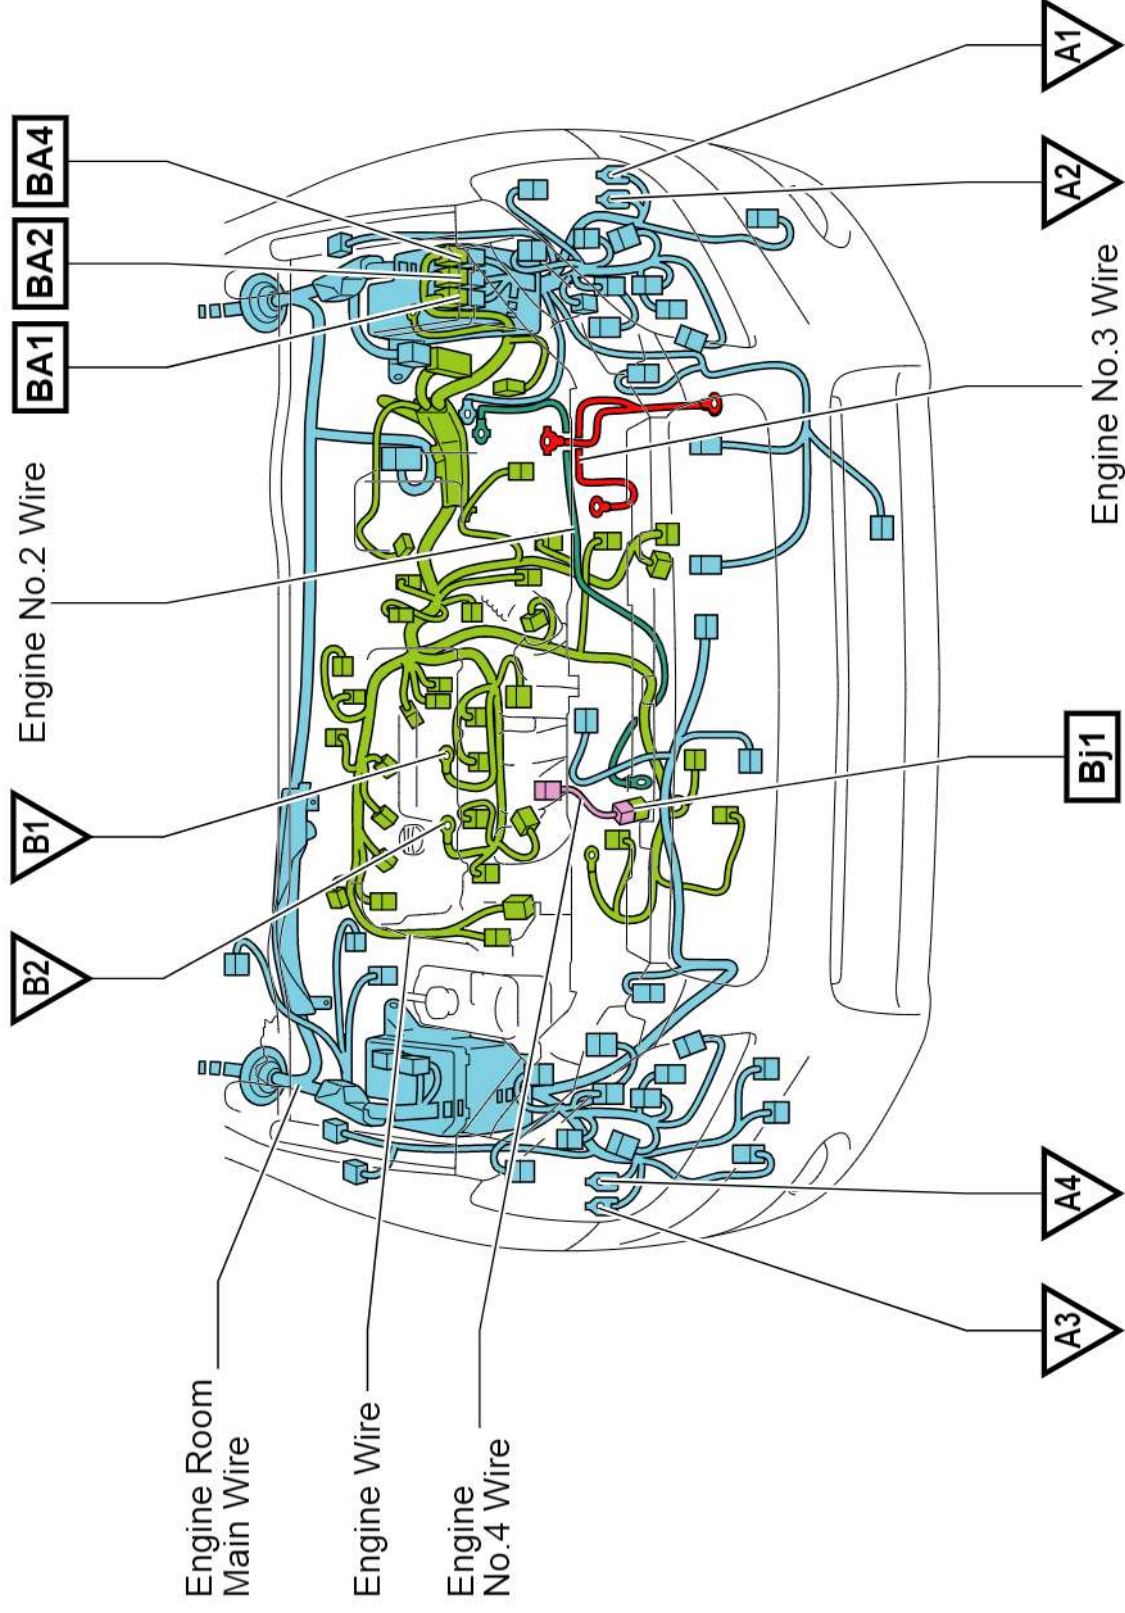











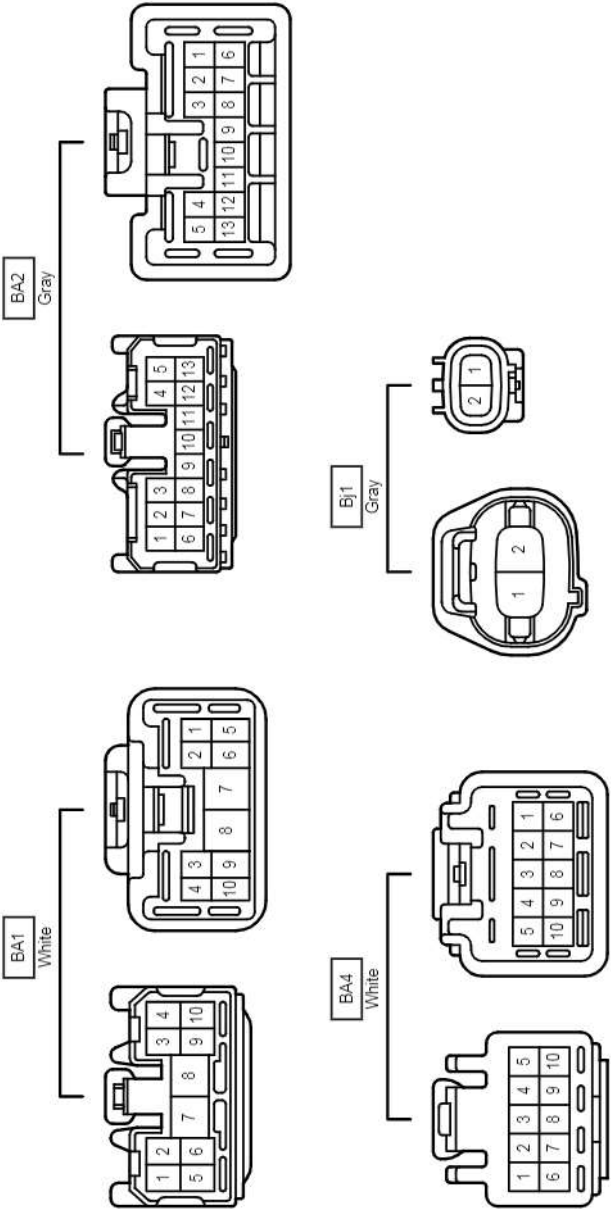


Position of Parts in Engine Compartment <LHD 2AZ-FE, 1AZ-FE>

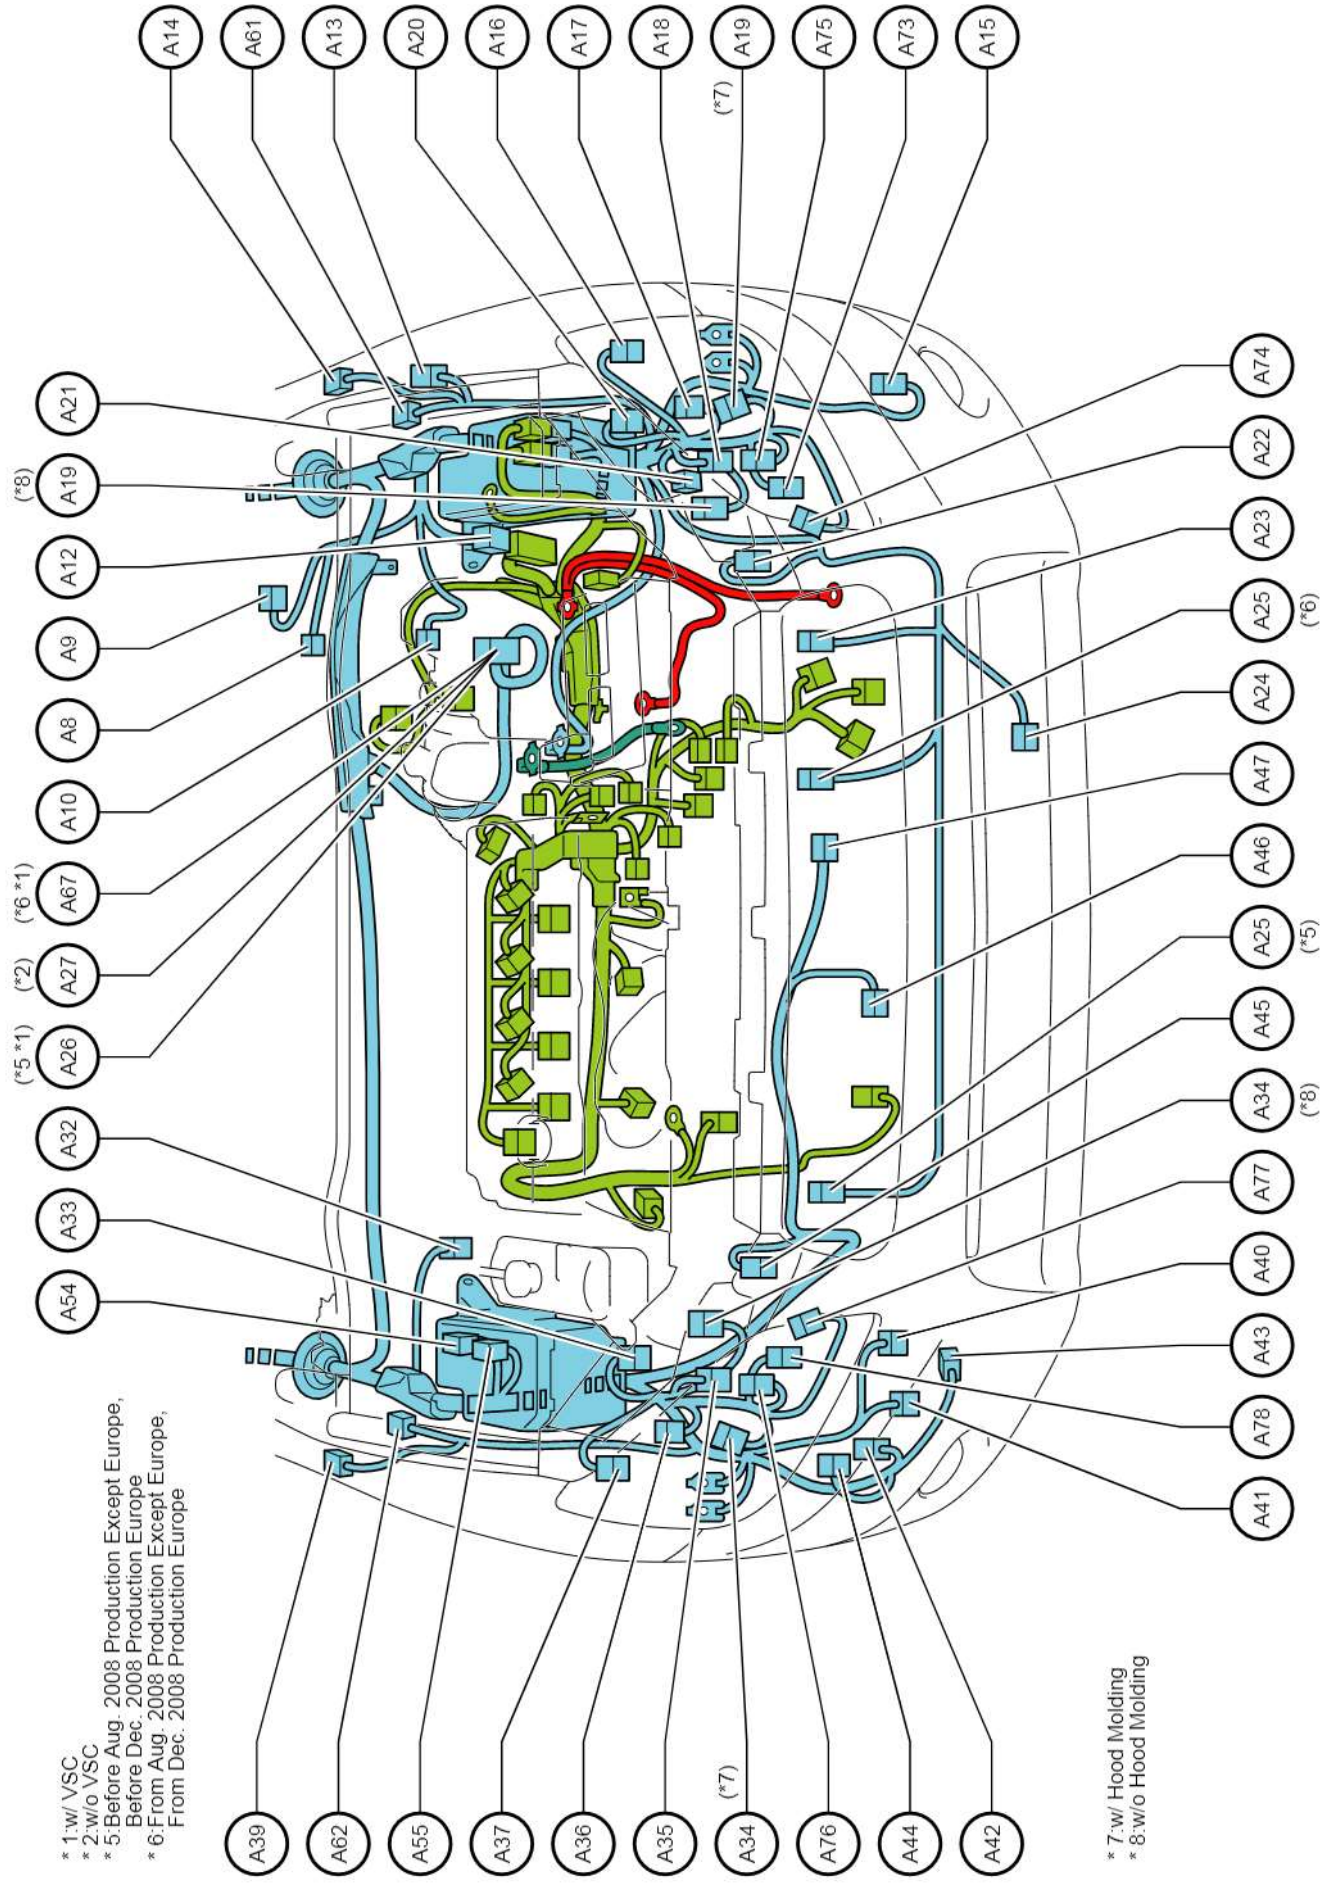


A 8	Windshield Wiper Motor
A 9	Front Wiper Deicer
A 10	Brake Fluid Level Warning SW
A 12	Engine ECU
A 13	Wireless Door Lock Buzzer
A 14	Turn Signal Lamp (Front Side LH)
A 15	Fog Lamp (Front LH)
A 16	Turn Signal Lamp (Front LH)
A 17	Headlamp (LH Low)
A 18	Headlamp Leveling Motor (LH)
A 19	Headlamp (LH High)
A 20	Clearance Lamp (Front LH)
A 21	Option Connector
A 22	Airbag Sensor (Front LH)
A 23	Horn (Low)
A 24	Ambient Temp. Sensor
A 25	Horn (High)
A 26	Skid Control ECU with Actuator
A 27	Skid Control ECU with Actuator
A 32	A/C Pressure Sensor
A 33	Clearance Lamp (Front RH)
A 34	Headlamp (RH High)
A 35	Headlamp Leveling Motor (RH)
A 36	Headlamp (RH Low)
A 37	Turn Signal Lamp (Front RH)
A 39	Turn Signal Lamp (Front Side RH)
A 40	Rear Washer Motor
A 41	Front Washer Motor
A 42	Fog Lamp (Front RH)
A 43	Headlamp Cleaner Motor
A 44	Headlamp Cleaner Control Relay
A 45	Airbag Sensor (Front RH)
A 46	A/C Condenser Fan Motor
A 47	Radiator Fan Motor
A 54	Junction Connector
A 55	Junction Connector
A 61	Speed Sensor (Front LH)
A 62	Speed Sensor (Front RH)
A 67	Skid Control ECU with Actuator
A 73	Headlamp (LH Low)
A 74	Headlamp Leveling Motor (LH)
A 75	Clearance Lamp (Front LH)
A 76	Clearance Lamp (Front RH)
A 77	Headlamp Leveling Motor (RH)

Position of Parts in Engine Compartment <LHD 2AZ-FE, 1AZ-FE>

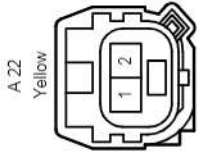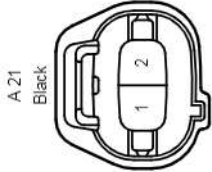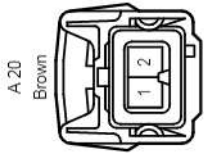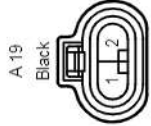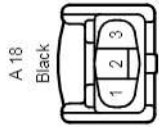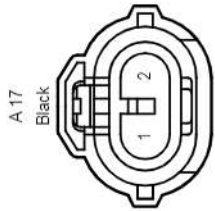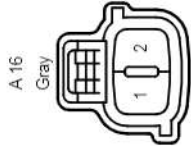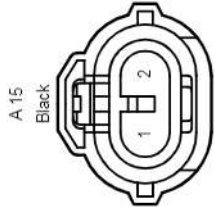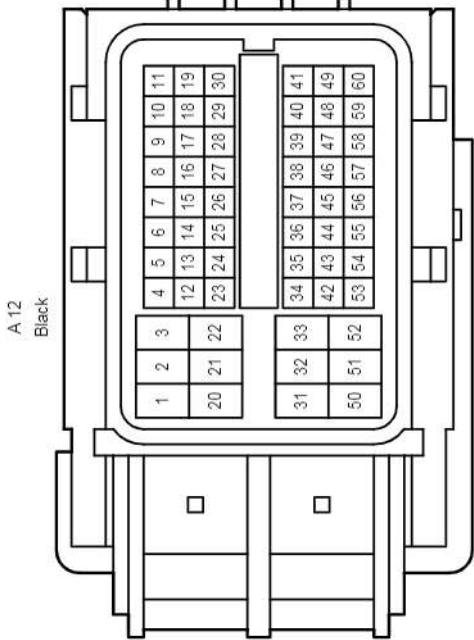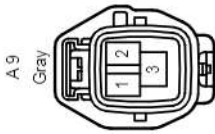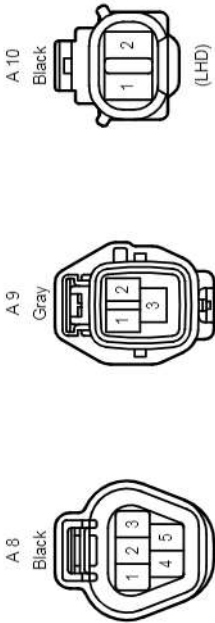


Position of Parts in Engine Compartment <LHD 2AZ-FE, 1AZ-FE>

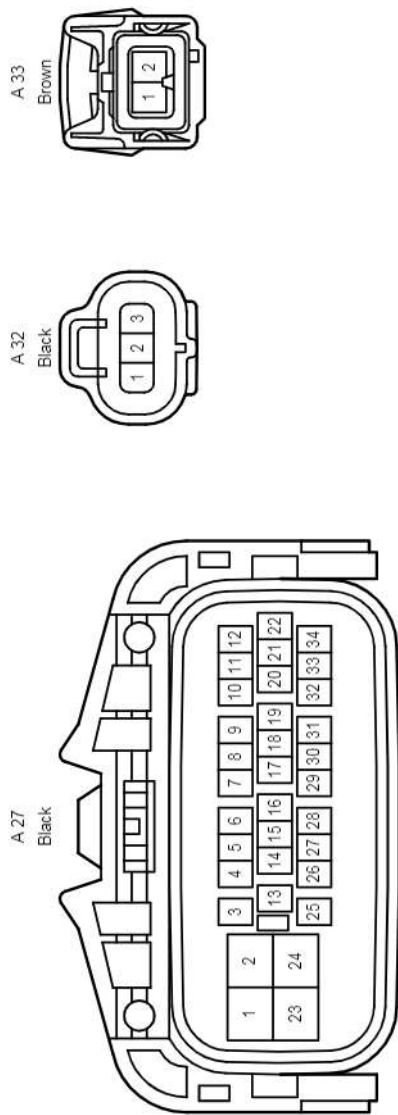


cardiagn.com


A 67
Black

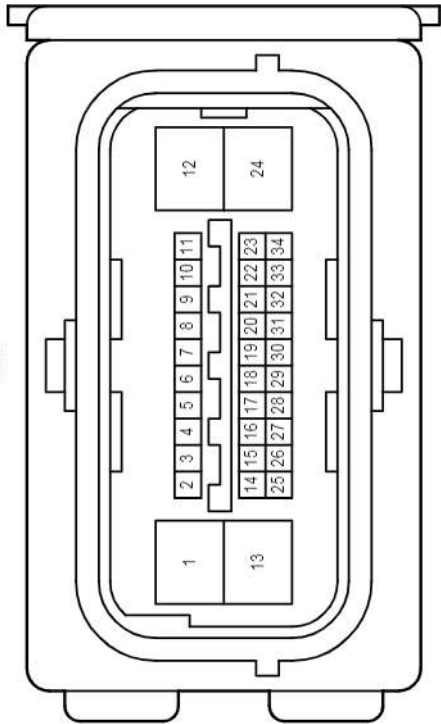

A 73
White

 

A 74
Black

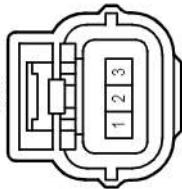


A 75
Brown




A 76
Brown




A 77
Black

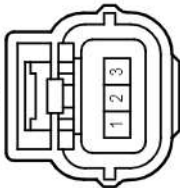

A 78
White

 


Position of Parts in Engine Compartment <LHD 2AZ-FE, 1AZ-FE>

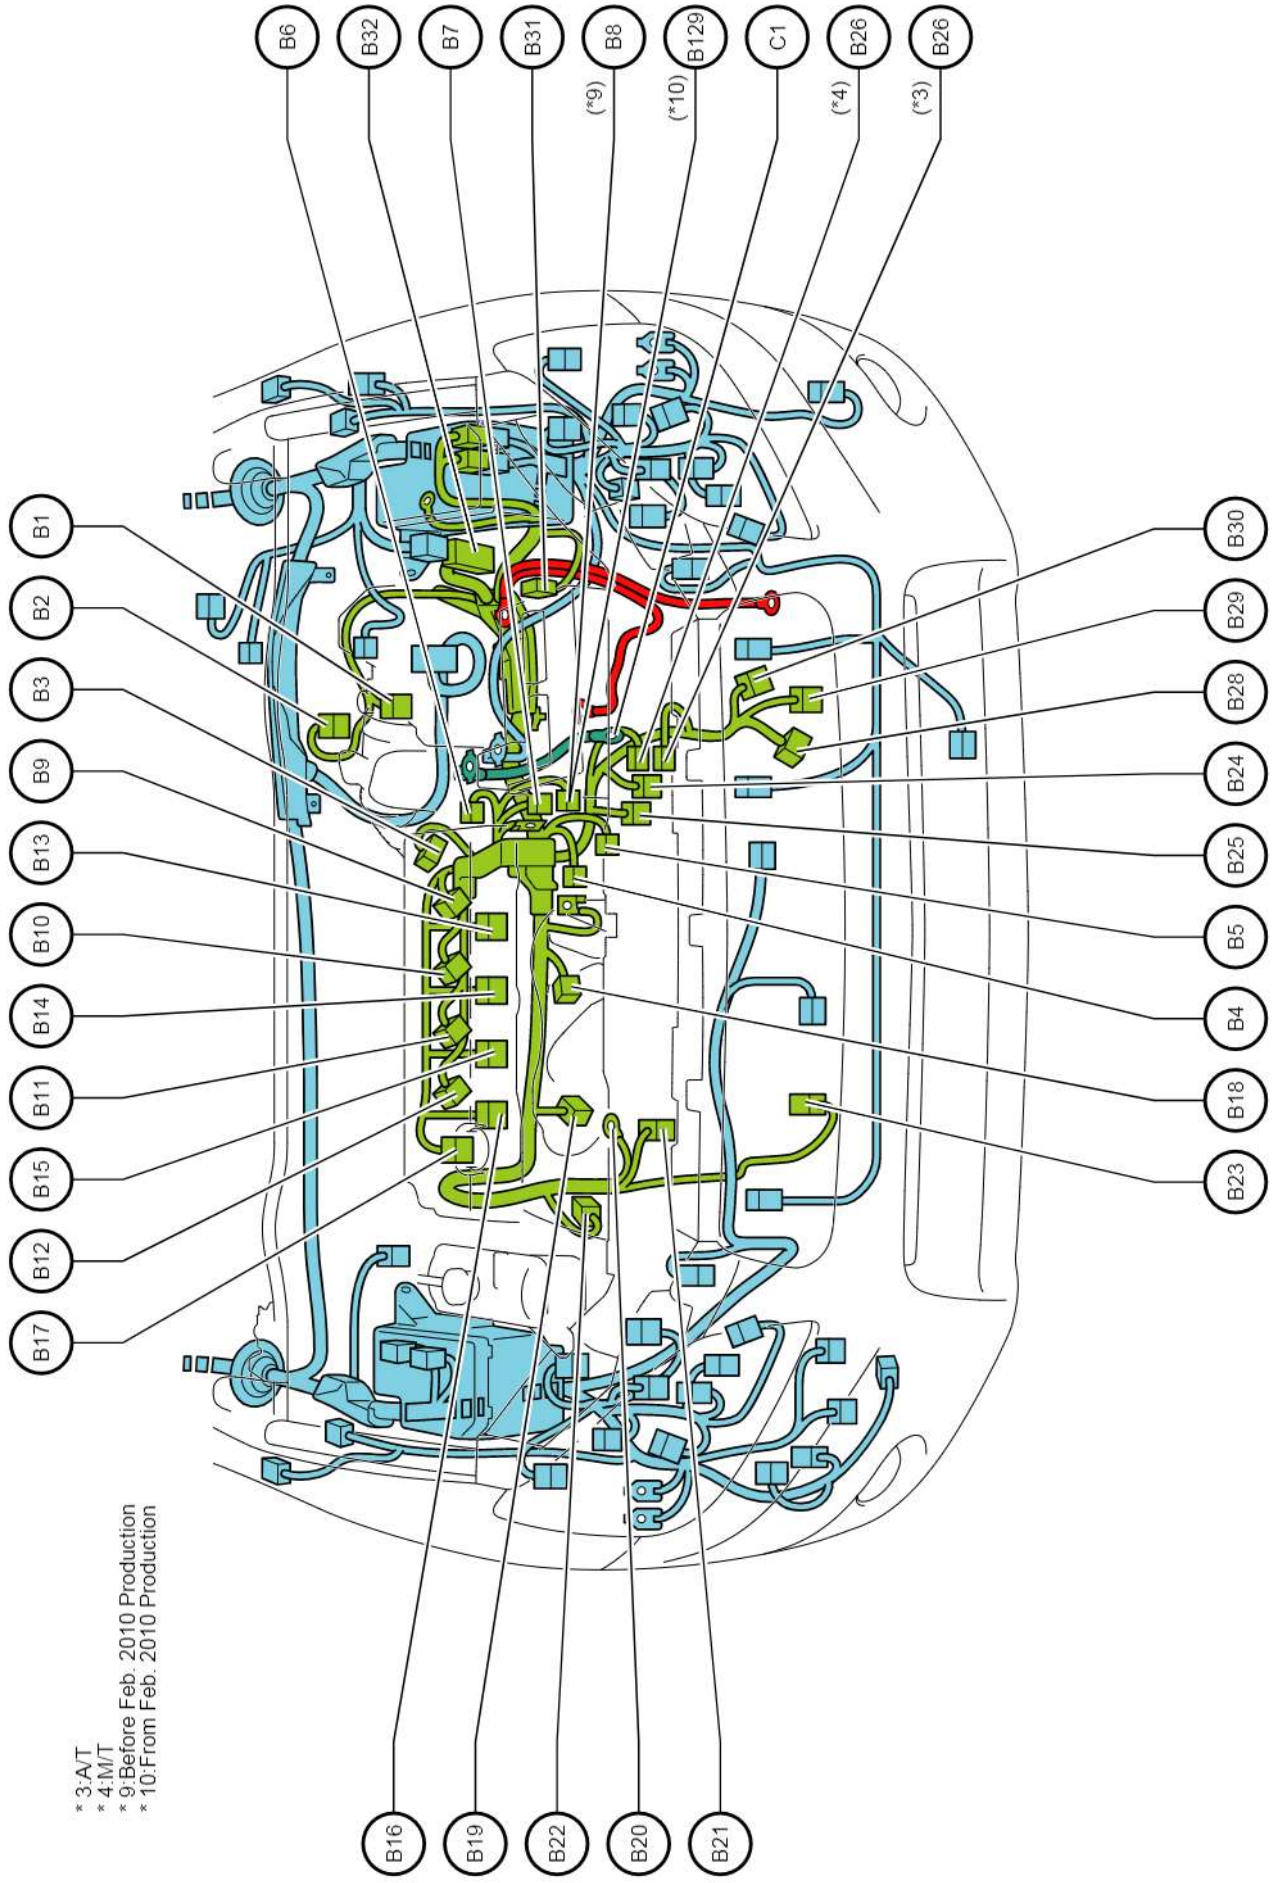


* 3:A/T
* 4:M/T
* 9:Before Feb. 2010 Production
* 10:From Feb. 2010 Production

B	1	Air Flow Meter
B	2	VSV (Purge)
B	3	Throttle Body Assembly
B	4	Water Temp. Sensor
B	5	Engine Oil Pressure SW
B	6	Camshaft Position Sensor
B	7	Air Fuel Ratio Sensor (Bank 1 Sensor 1)
B	8	Noise Filter (Ignition)
B	9	Ignition Coil (No.4)
B	10	Ignition Coil (No.3)
B	11	Ignition Coil (No.2)
B	12	Ignition Coil (No.1)
B	13	Fuel Injector (No.4)
B	14	Fuel Injector (No.3)
B	15	Fuel Injector (No.2)
B	16	Fuel Injector (No.1)
B	17	Camshaft Timing Oil Control Valve
B	18	Knock Control Sensor (Bank 1)
B	19	Heated Oxygen Sensor (Bank 1 Sensor 2)
B	20	Alternator
B	21	Alternator
B	22	Crankshaft Position Sensor
B	23	A/C Compressor
B	24	Transmission Revolution Sensor (Counter Gear)
B	25	Back-Up Light SW
B	26	Starter
B	28	Park/Neutral Position SW
B	29	ECT Solenoid
B	30	Transmission Revolution Sensor (Turbine)
B	31	Battery Current Sensor
B	32	Engine ECU
B	129	Noise Filter (Ignition)
C	1	Starter


Position of Parts in Engine Compartment <LHD 2AZ-FE, 1AZ-FE>

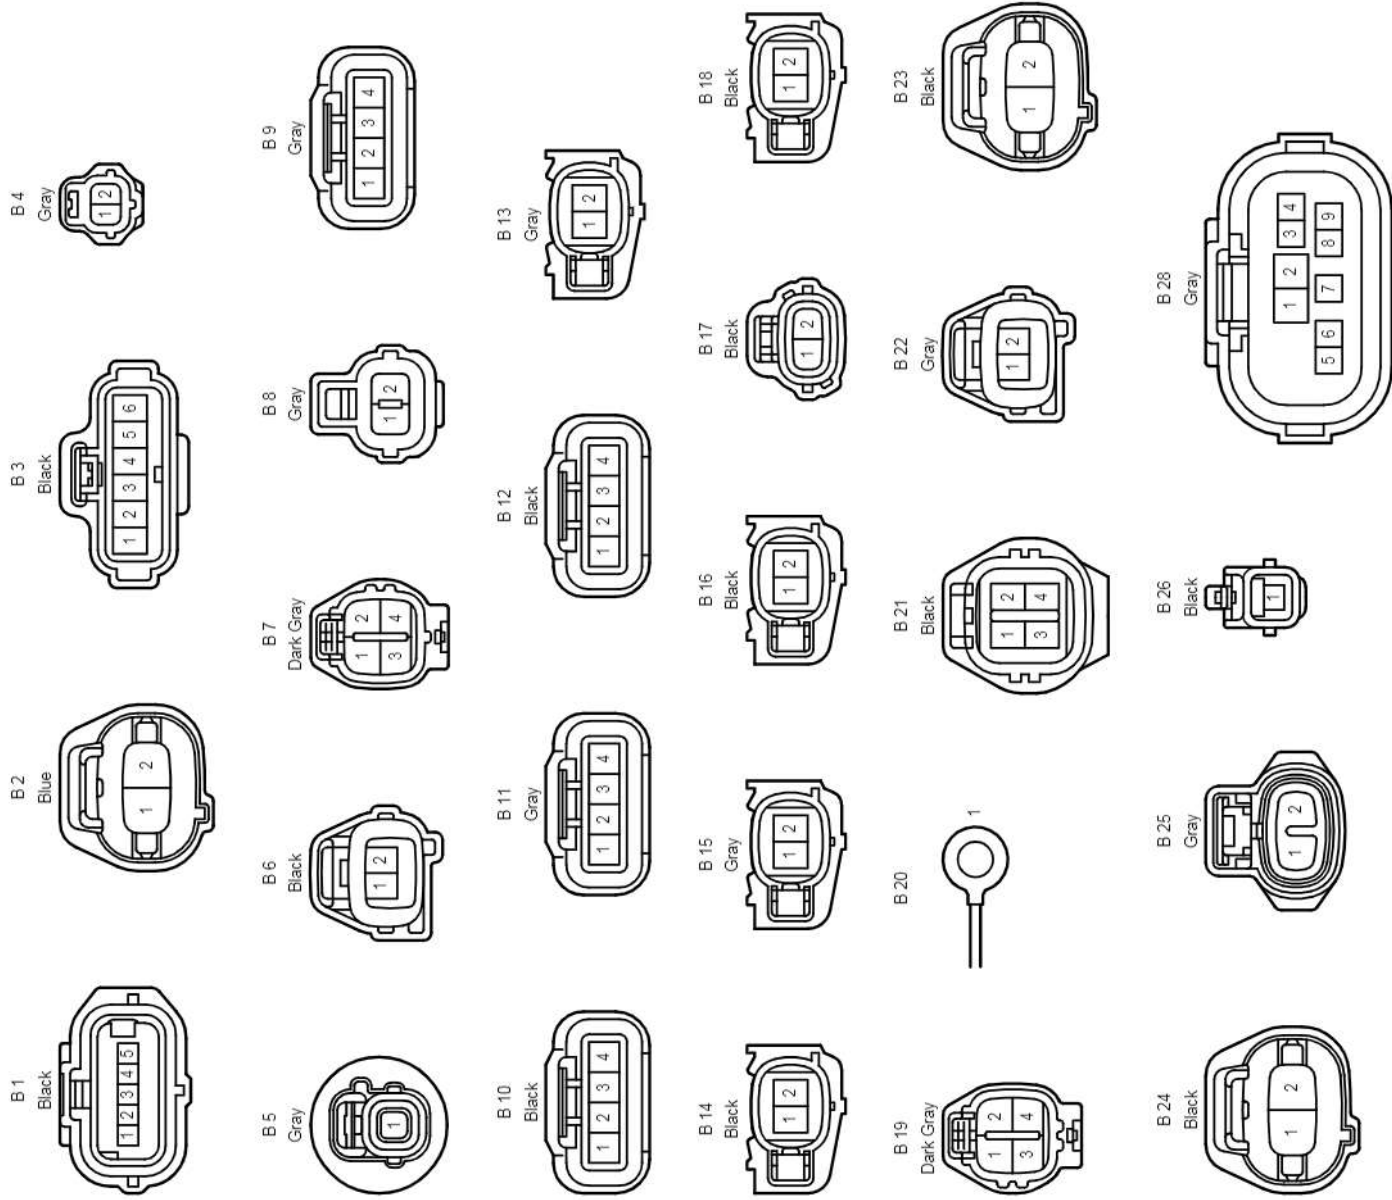

B 32
Black

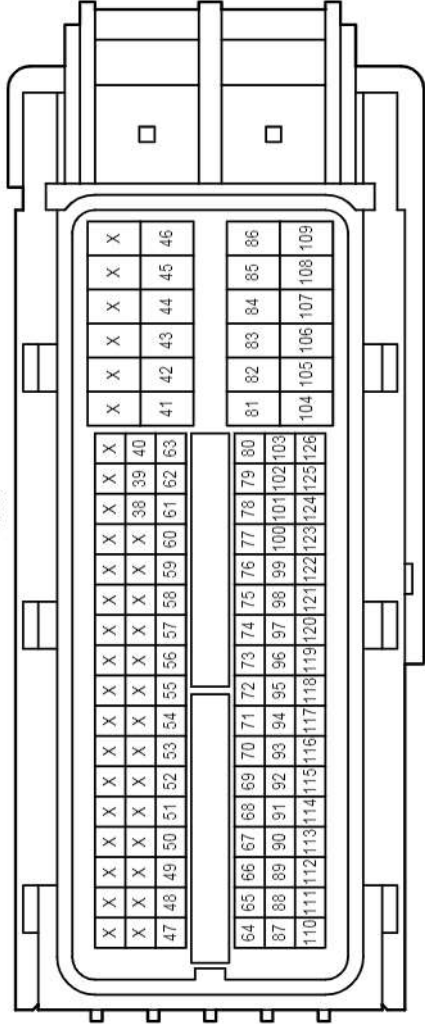



B129
Gray

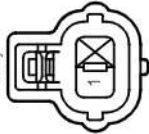


C 1





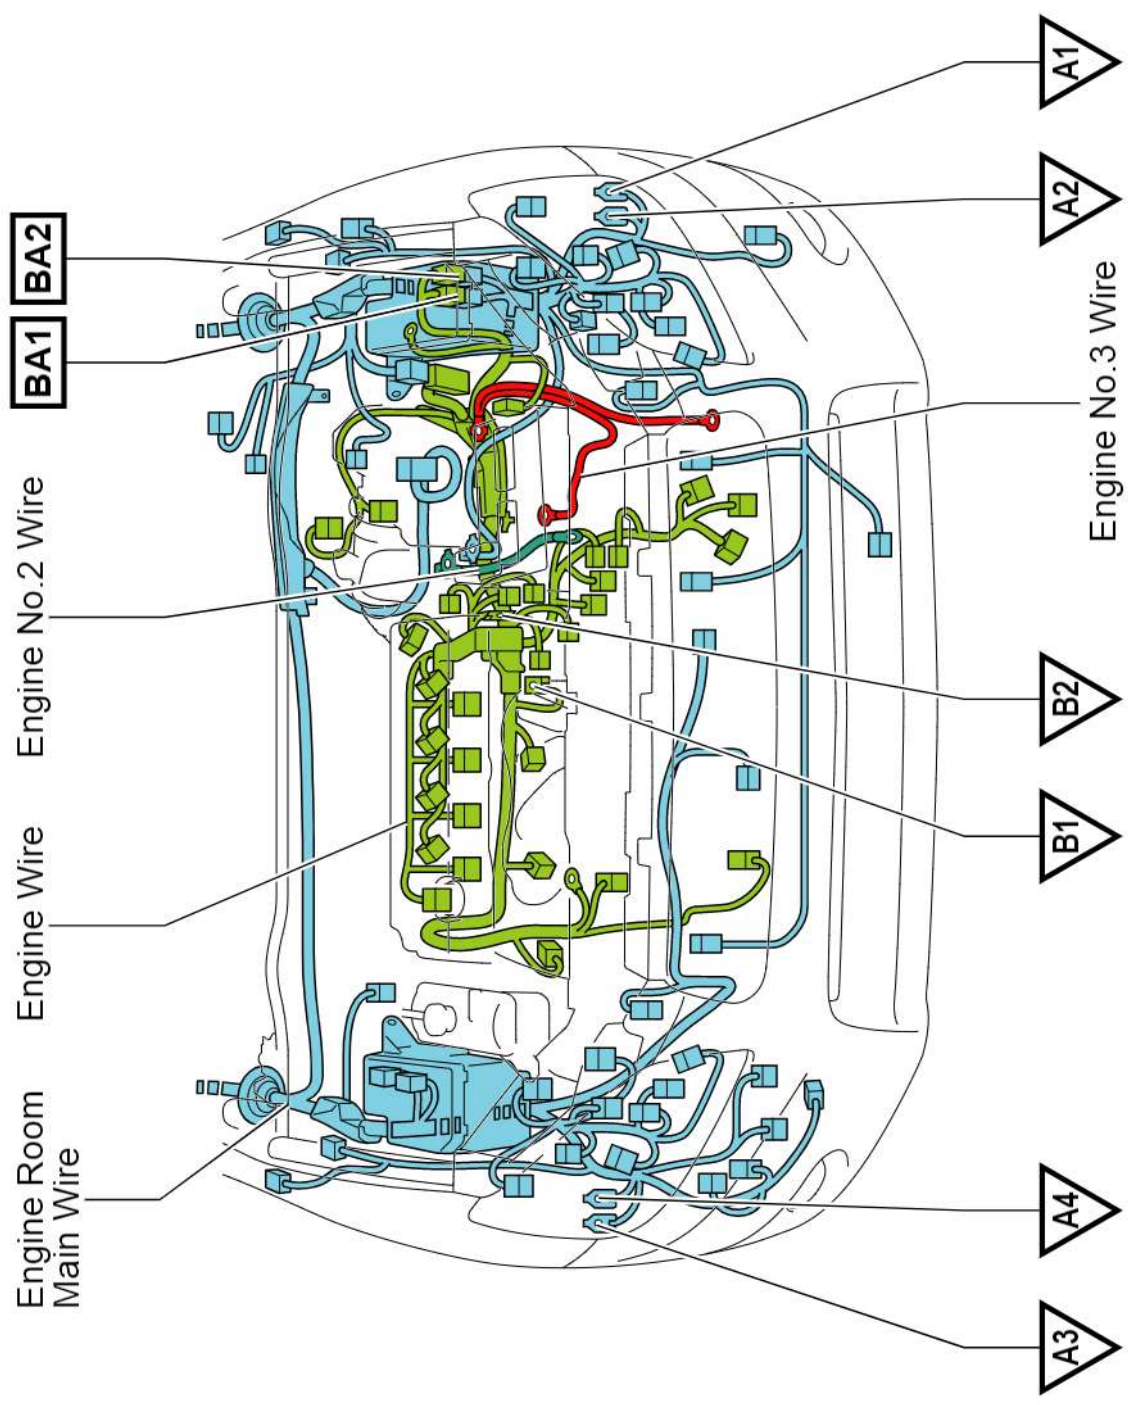

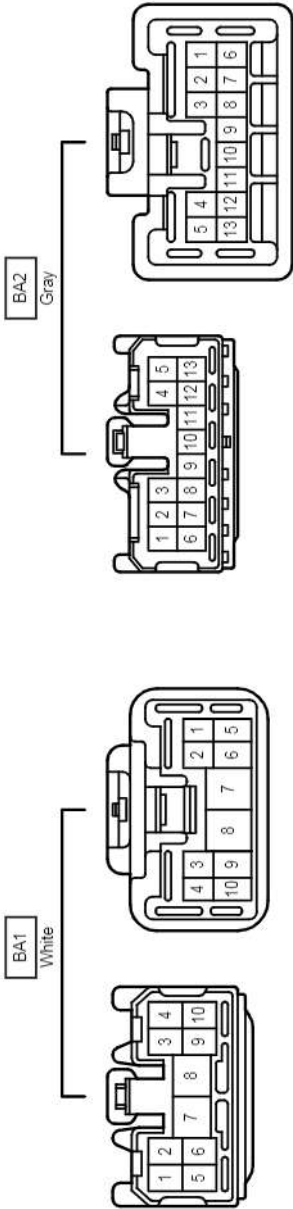


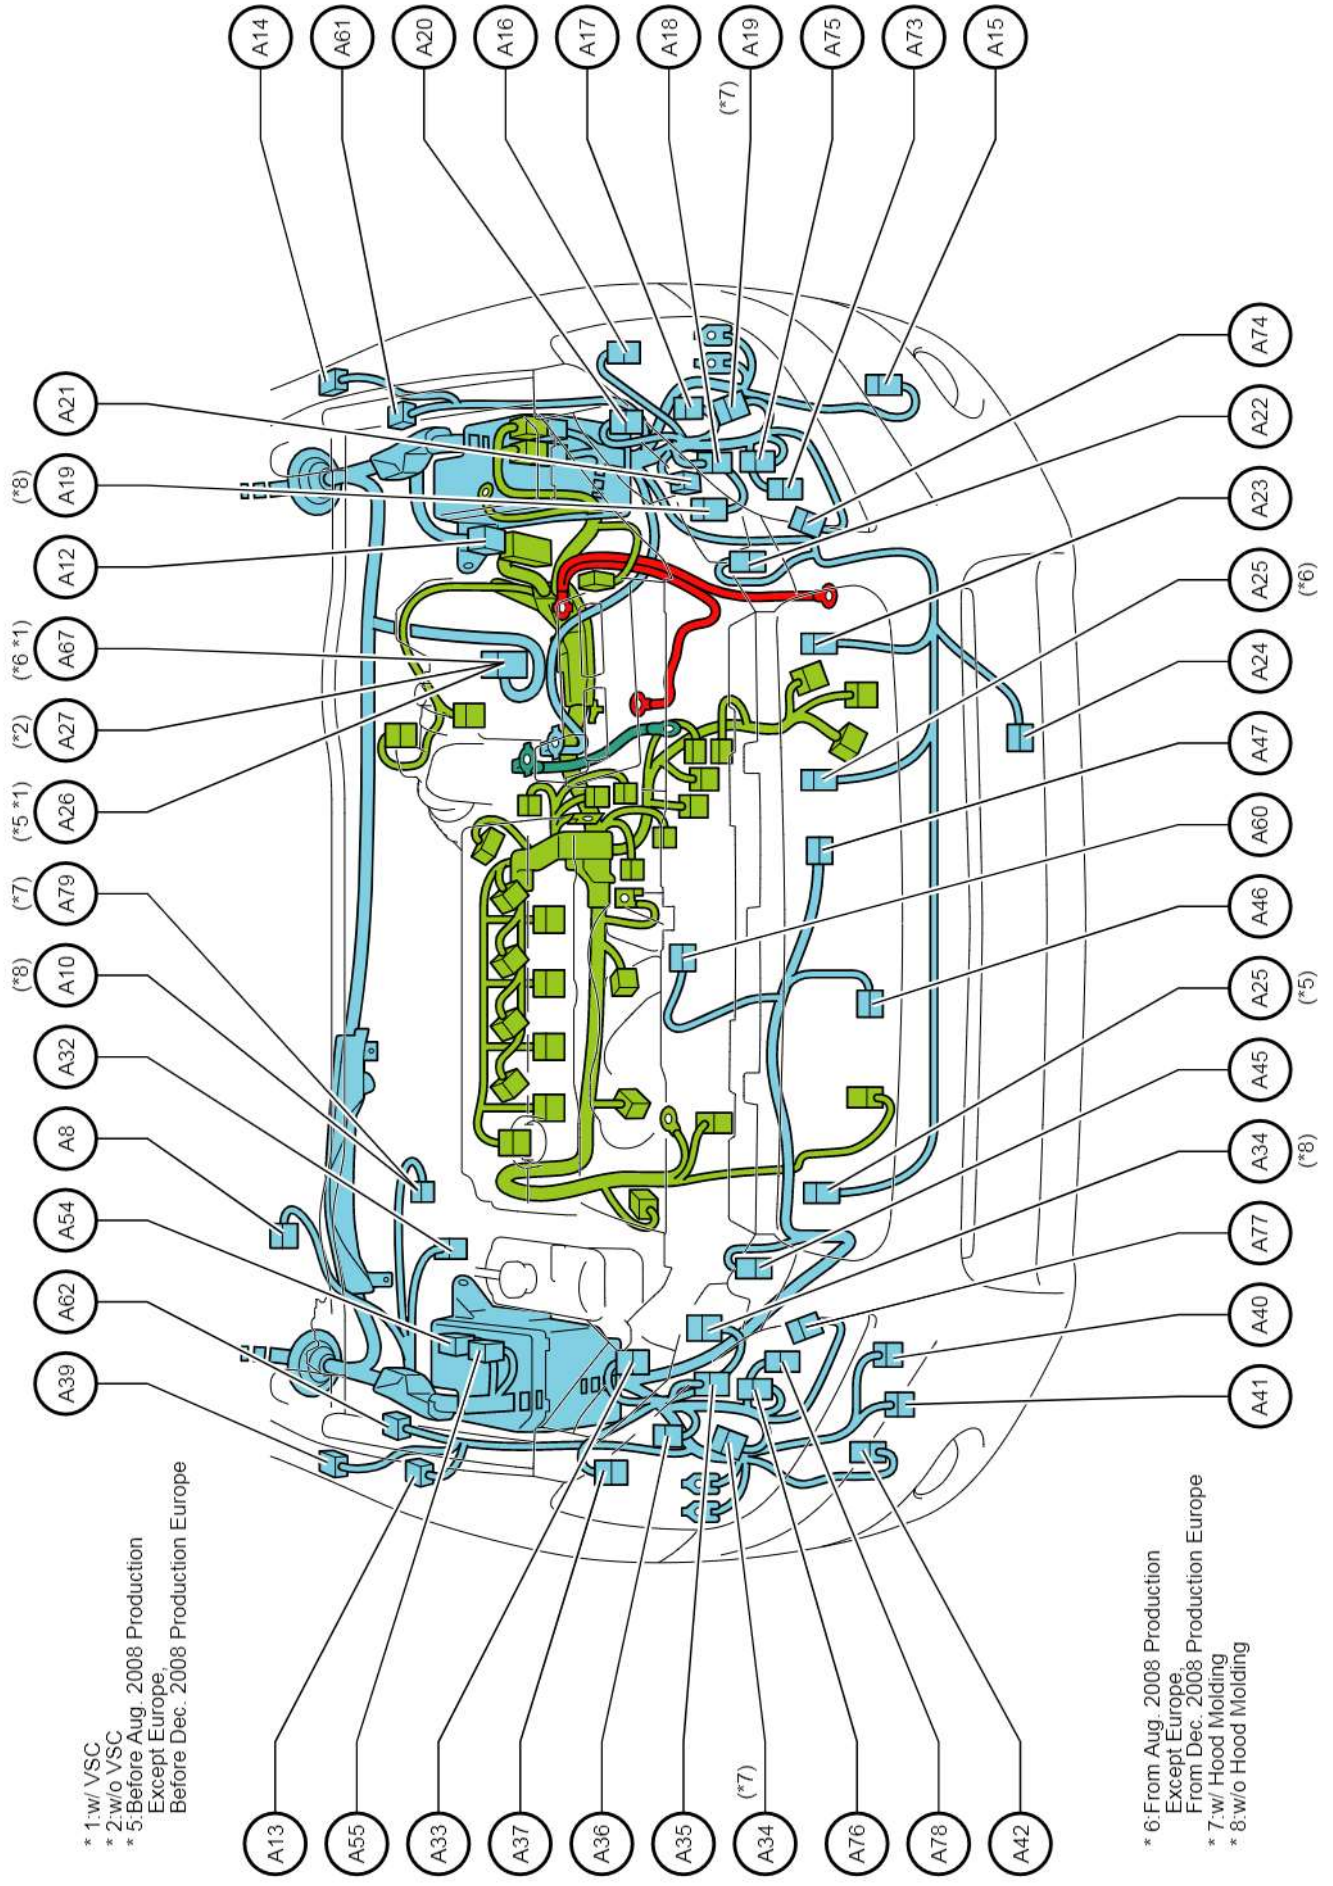




A 8	Windshield Wiper Motor
A 10	Brake Fluid Level Warning SW
A 12	Engine ECU
A 13	Wireless Door Lock Buzzer
A 14	Turn Signal Lamp (Front Side LH)
A 15	Fog Lamp (Front LH)
A 16	Turn Signal Lamp (Front LH)
A 17	Headlamp (LH Low)
A 18	Headlamp Leveling Motor (LH)
A 19	Headlamp (LH High)
A 20	Clearance Lamp (Front LH)
A 21	Option Connector
A 22	Airbag Sensor (Front LH)
A 23	Horn (Low)
A 24	Ambient Temp. Sensor
A 25	Horn (High)
A 26	Skid Control ECU with Actuator
A 27	Skid Control ECU with Actuator
A 32	A/C Pressure Sensor
A 33	Clearance Lamp (Front RH)
A 34	Headlamp (RH High)
A 35	Headlamp Leveling Motor (RH)
A 36	Headlamp (RH Low)
A 37	Turn Signal Lamp (Front RH)
A 39	Turn Signal Lamp (Front Side RH)
A 40	Rear Washer Motor
A 41	Front Washer Motor
A 42	Fog Lamp (Front RH)
A 45	Airbag Sensor (Front RH)
A 46	A/C Condenser Fan Motor
A 47	Radiator Fan Motor
A 54	Junction Connector
A 55	Junction Connector
A 60	Engine Hood Courtesy SW
A 61	Speed Sensor (Front LH)
A 62	Speed Sensor (Front RH)
A 67	Skid Control ECU with Actuator
A 73	Headlamp (LH Low)
A 74	Headlamp Leveling Motor (LH)
A 75	Clearance Lamp (Front LH)
A 76	Clearance Lamp (Front RH)
A 77	Headlamp Leveling Motor (RH)
A 78	Headlamp (RH Low)
A 79	Brake Fluid Level Warning SW

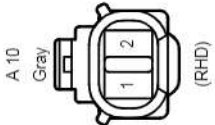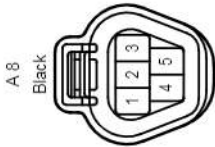

A 10
Gray

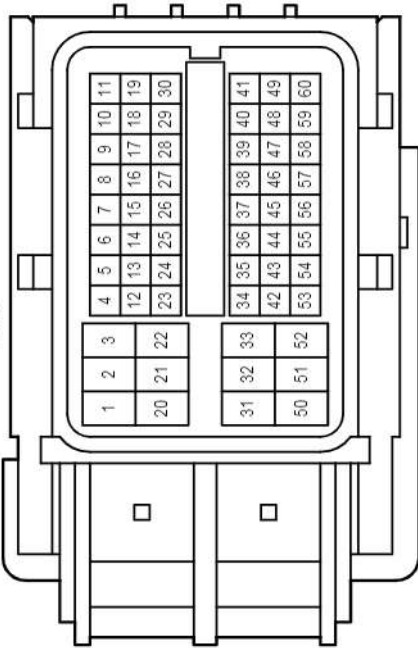

A 12
Black

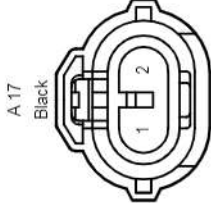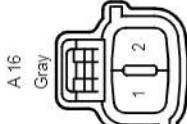 





A 13
Black

A 14
Gray

A 15
Black

A 16
Gray

A 17
Black

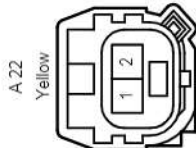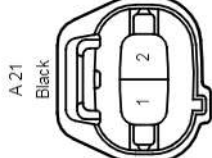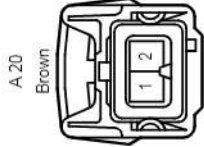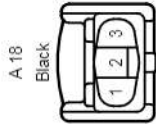

A 18
Black

A 19
Black

A 20
Brown

A 21
Black


A 22
Yellow



A 23
Black














A 24
Black

A 25
Black



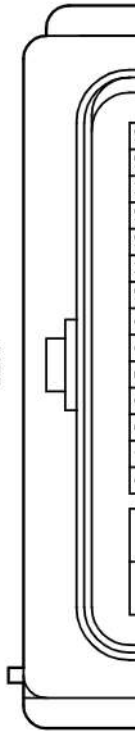


A 26
Black


Position of Parts in Engine Compartment <RHD 2AZ-FE, 1AZ-FE>

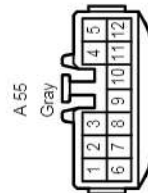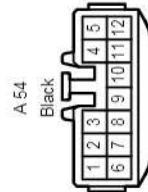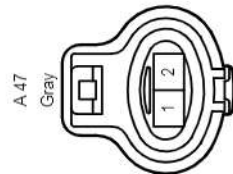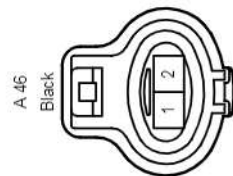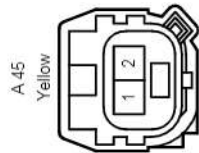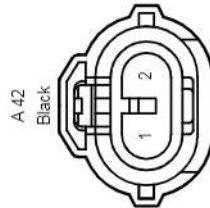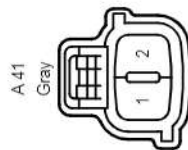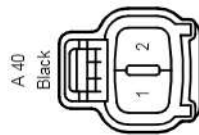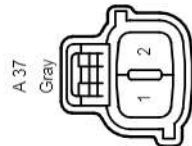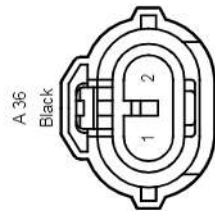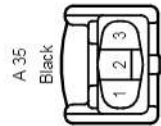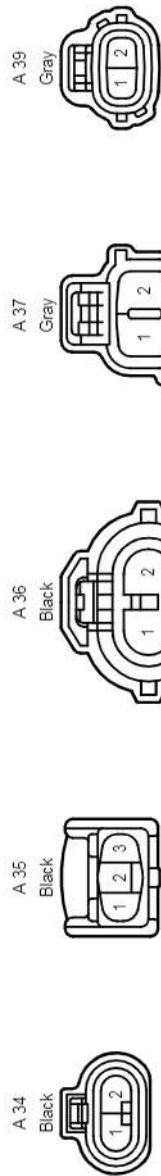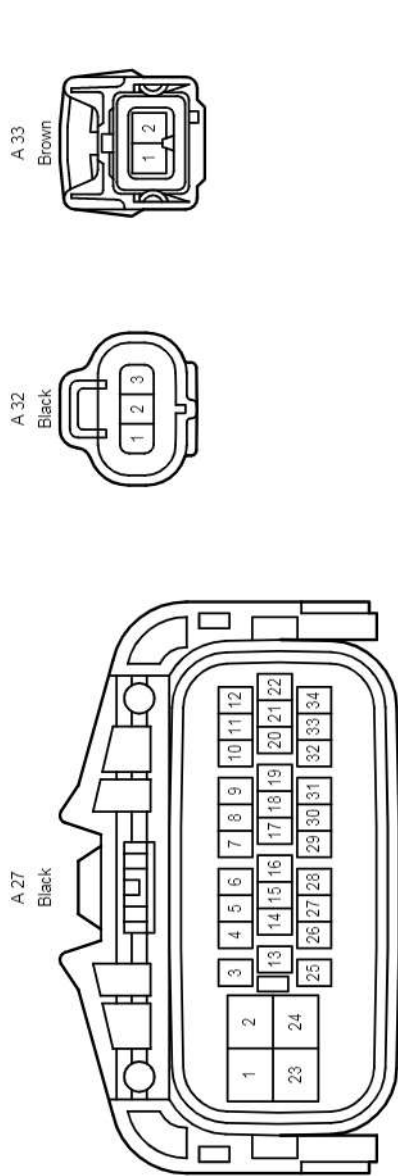


(2AZ-FE, 1AZ-FE, 3ZR-FAE)

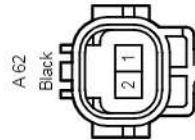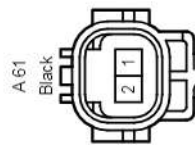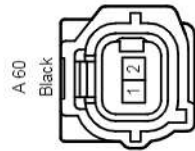


A 67
Black

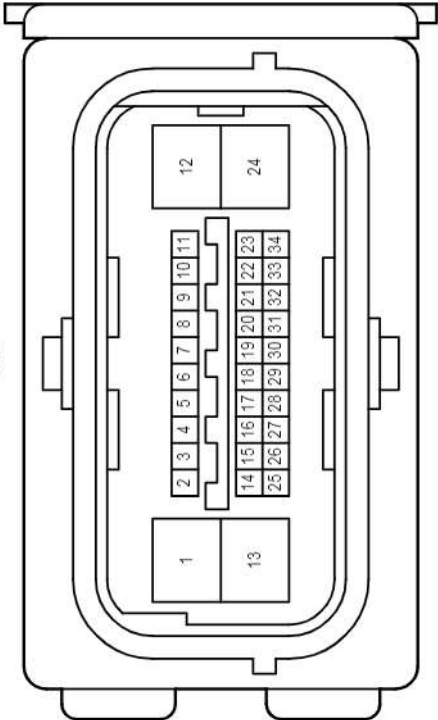

A 73
White

 

A 74
Black

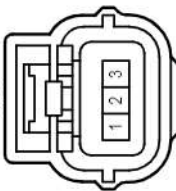


A 75
Brown




A 76
Brown



A 77
Black

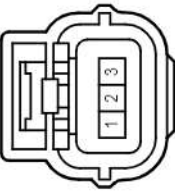


A 78
White

 

A 79
Gray




Position of Parts in Engine Compartment <RHD 2AZ-FE, 1AZ-FE>

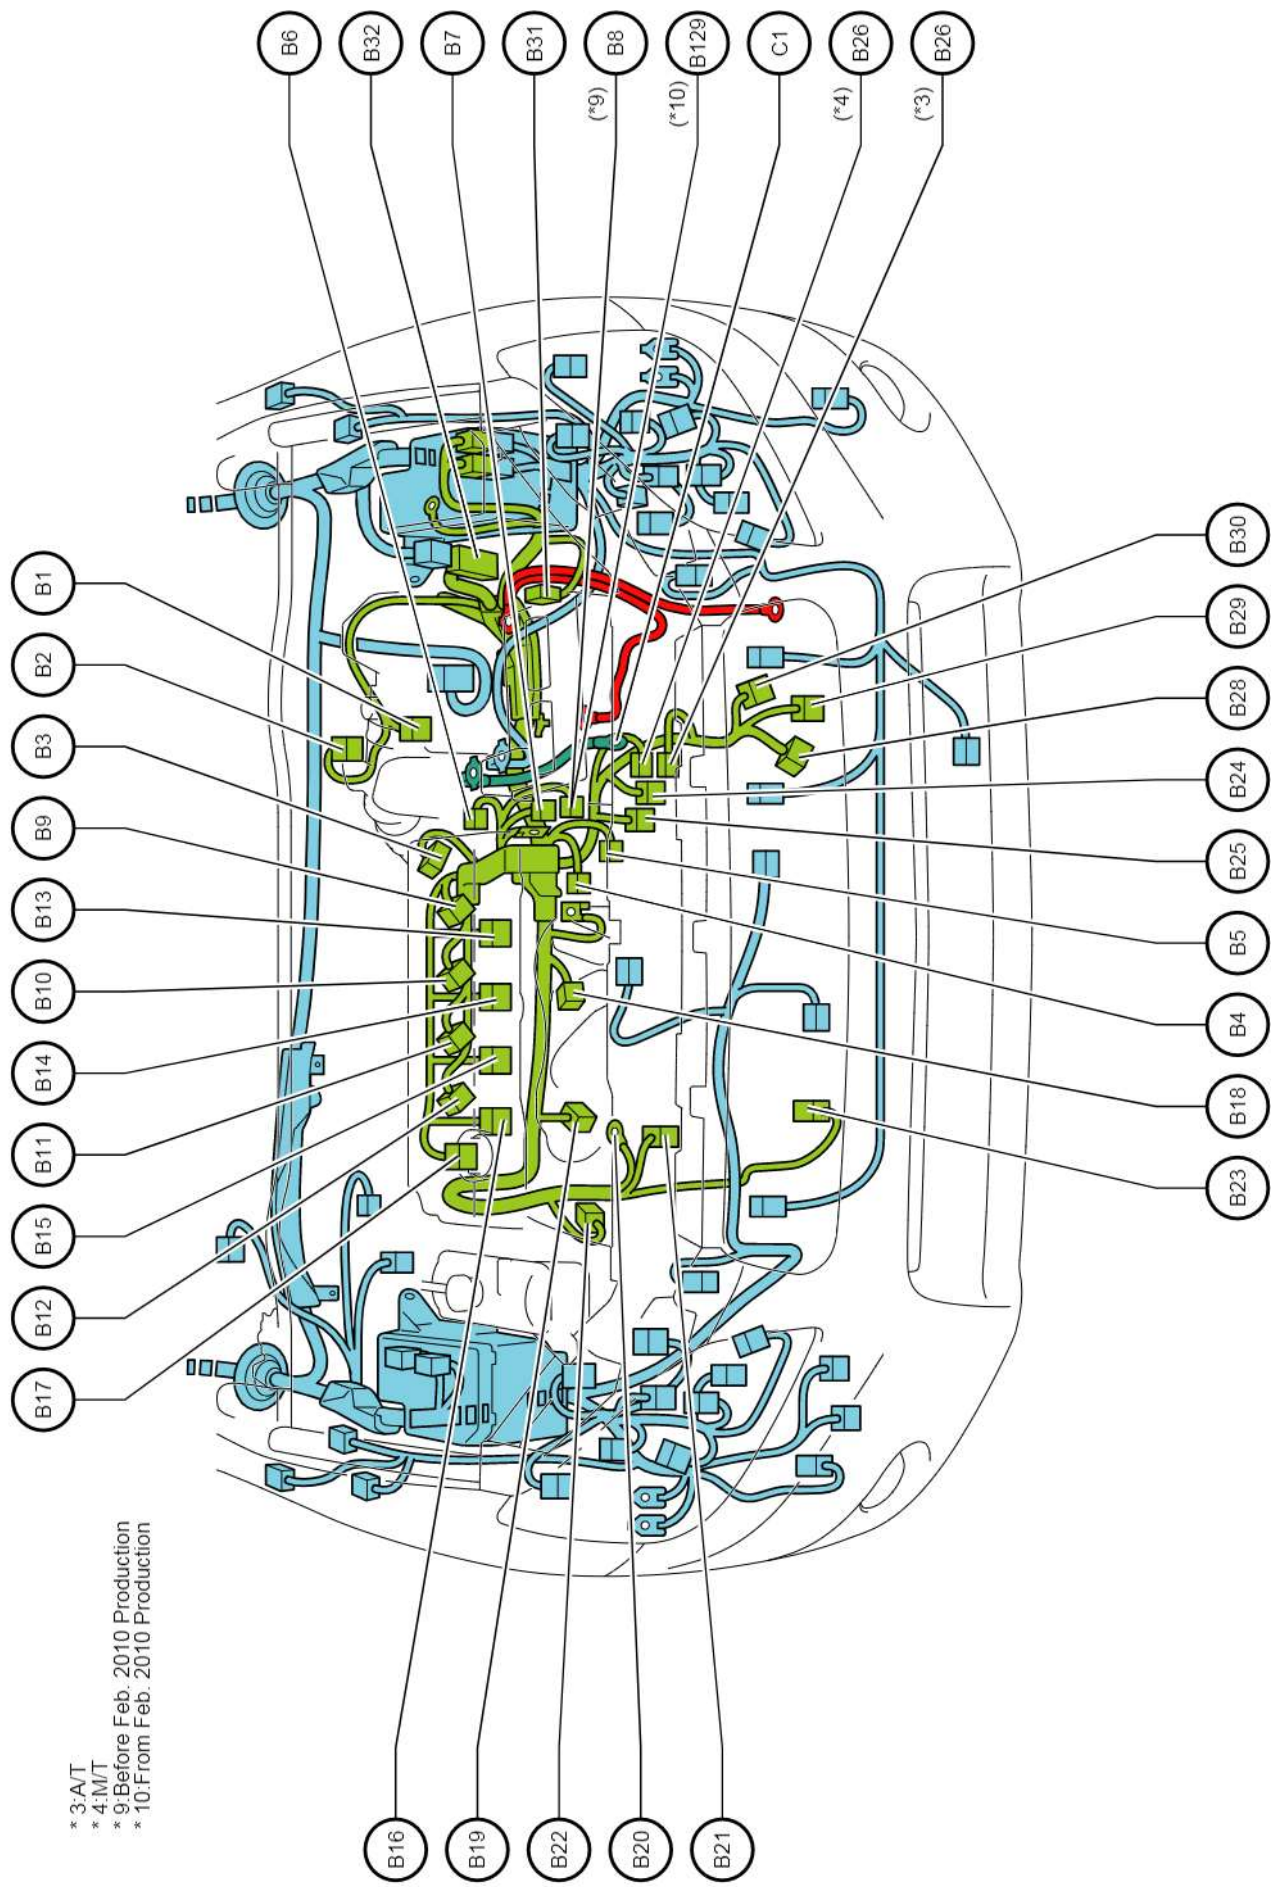


B	1	Air Flow Meter
B	2	VSV (Purge)
B	3	Throttle Body Assembly
B	4	Water Temp. Sensor
B	5	Engine Oil Pressure SW
B	6	Camshaft Position Sensor
B	7	Air Fuel Ratio Sensor (Bank 1 Sensor 1)
B	8	Noise Filter (Ignition)
B	9	Ignition Coil (No.4)
B	10	Ignition Coil (No.3)
B	11	Ignition Coil (No.2)
B	12	Ignition Coil (No.1)
B	13	Fuel Injector (No.4)
B	14	Fuel Injector (No.3)
B	15	Fuel Injector (No.2)
B	16	Fuel Injector (No.1)
B	17	Camshaft Timing Oil Control Valve
B	18	Knock Control Sensor (Bank 1)
B	19	Heated Oxygen Sensor (Bank 1 Sensor 2)
B	20	Alternator
B	21	Alternator
B	22	Crankshaft Position Sensor
B	23	A/C Compressor
B	24	Transmission Revolution Sensor (Counter Gear)
B	25	Back-Up Light SW
B	26	Starter
B	28	Park/Neutral Position SW
B	29	ECT Solenoid
B	30	Transmission Revolution Sensor (Turbine)
B	31	Battery Current Sensor
B	32	Engine ECU
B	129	Noise Filter (Ignition)
C	1	Starter

Position of Parts in Engine Compartment <RHD 2AZ-FE, 1AZ-FE>

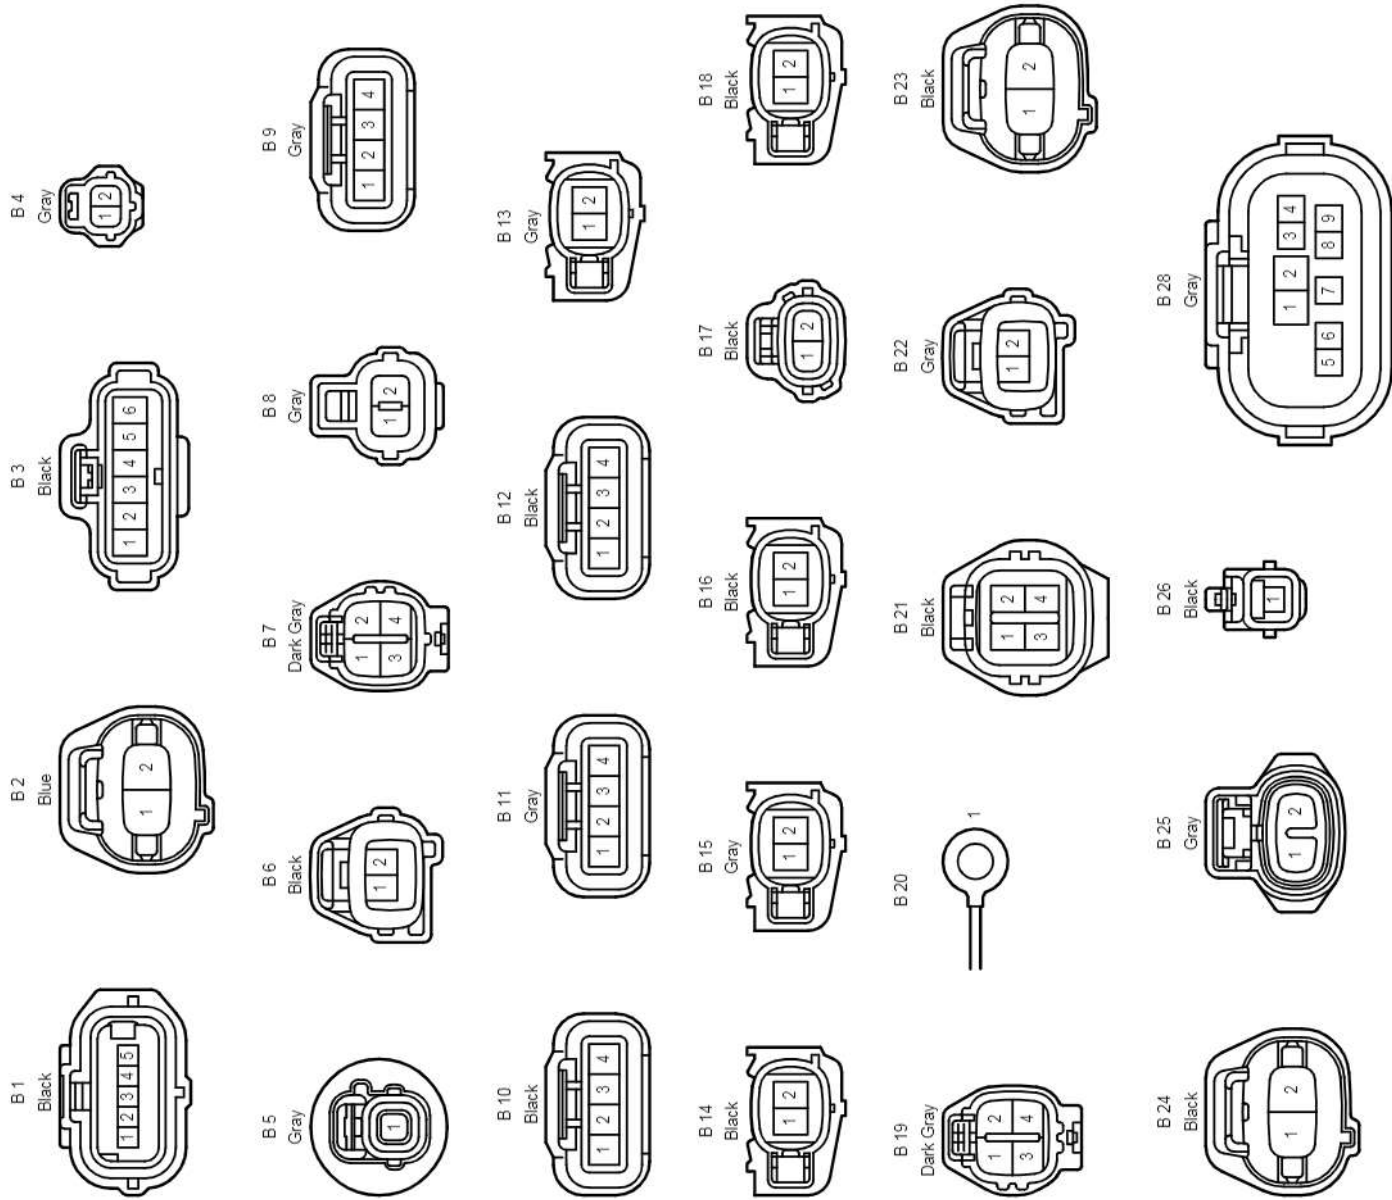

B 32
Black

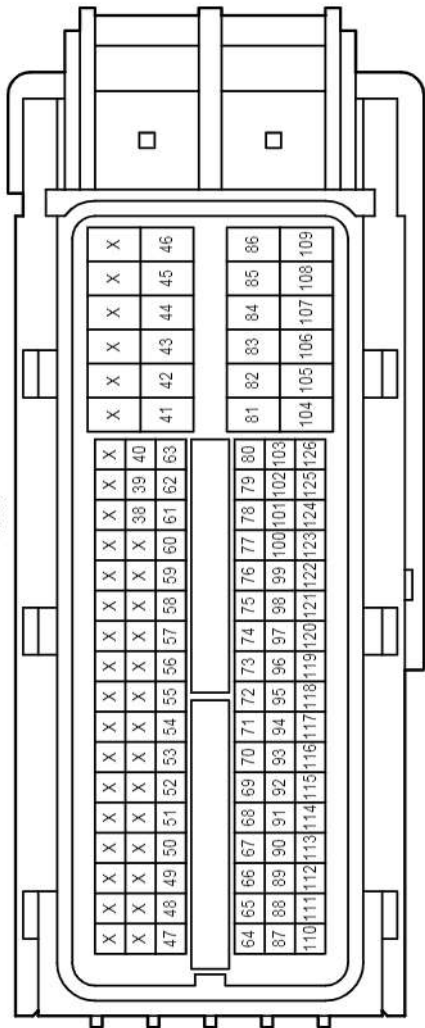



B129
Gray




C 1



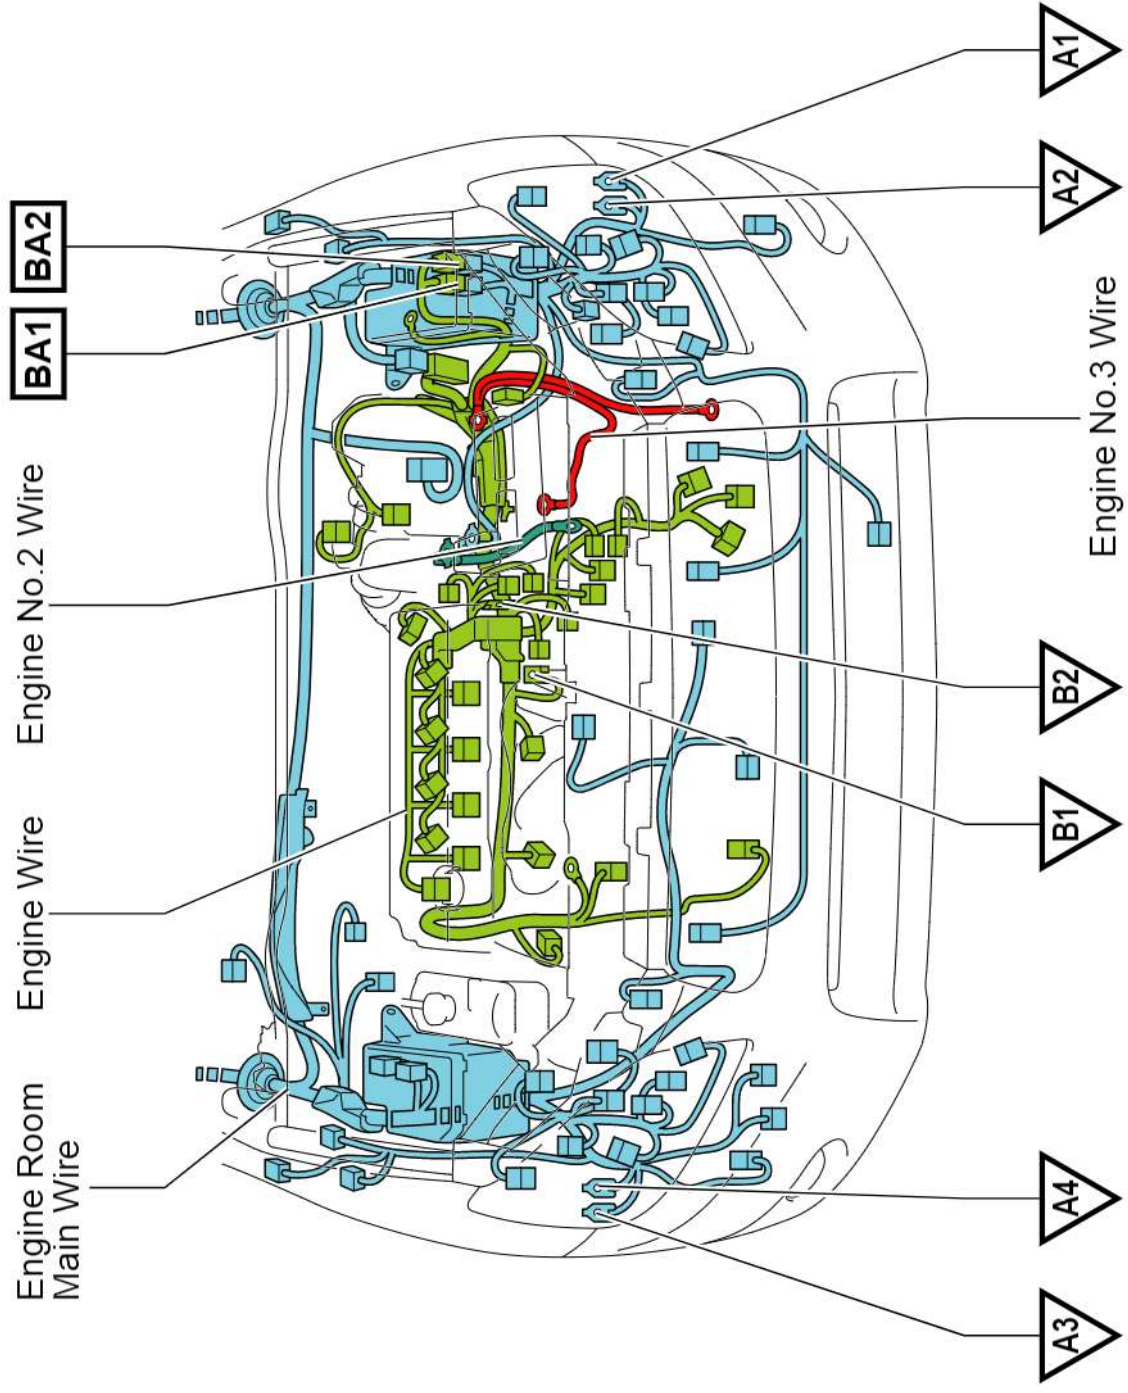



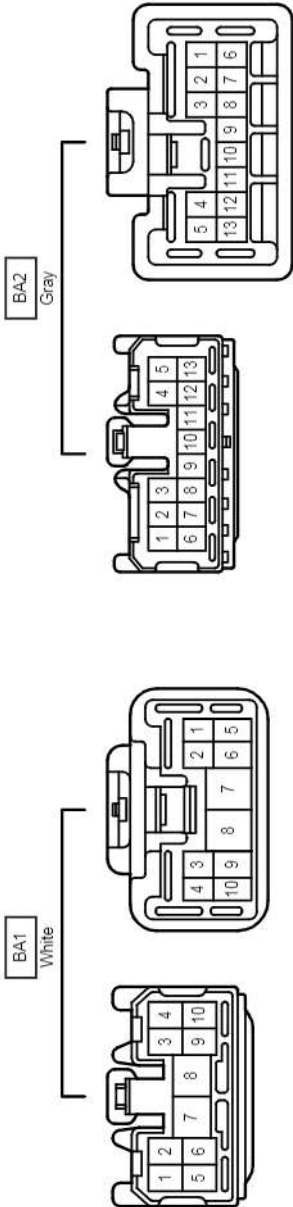


Position of Parts in Body <LHD Long Body>

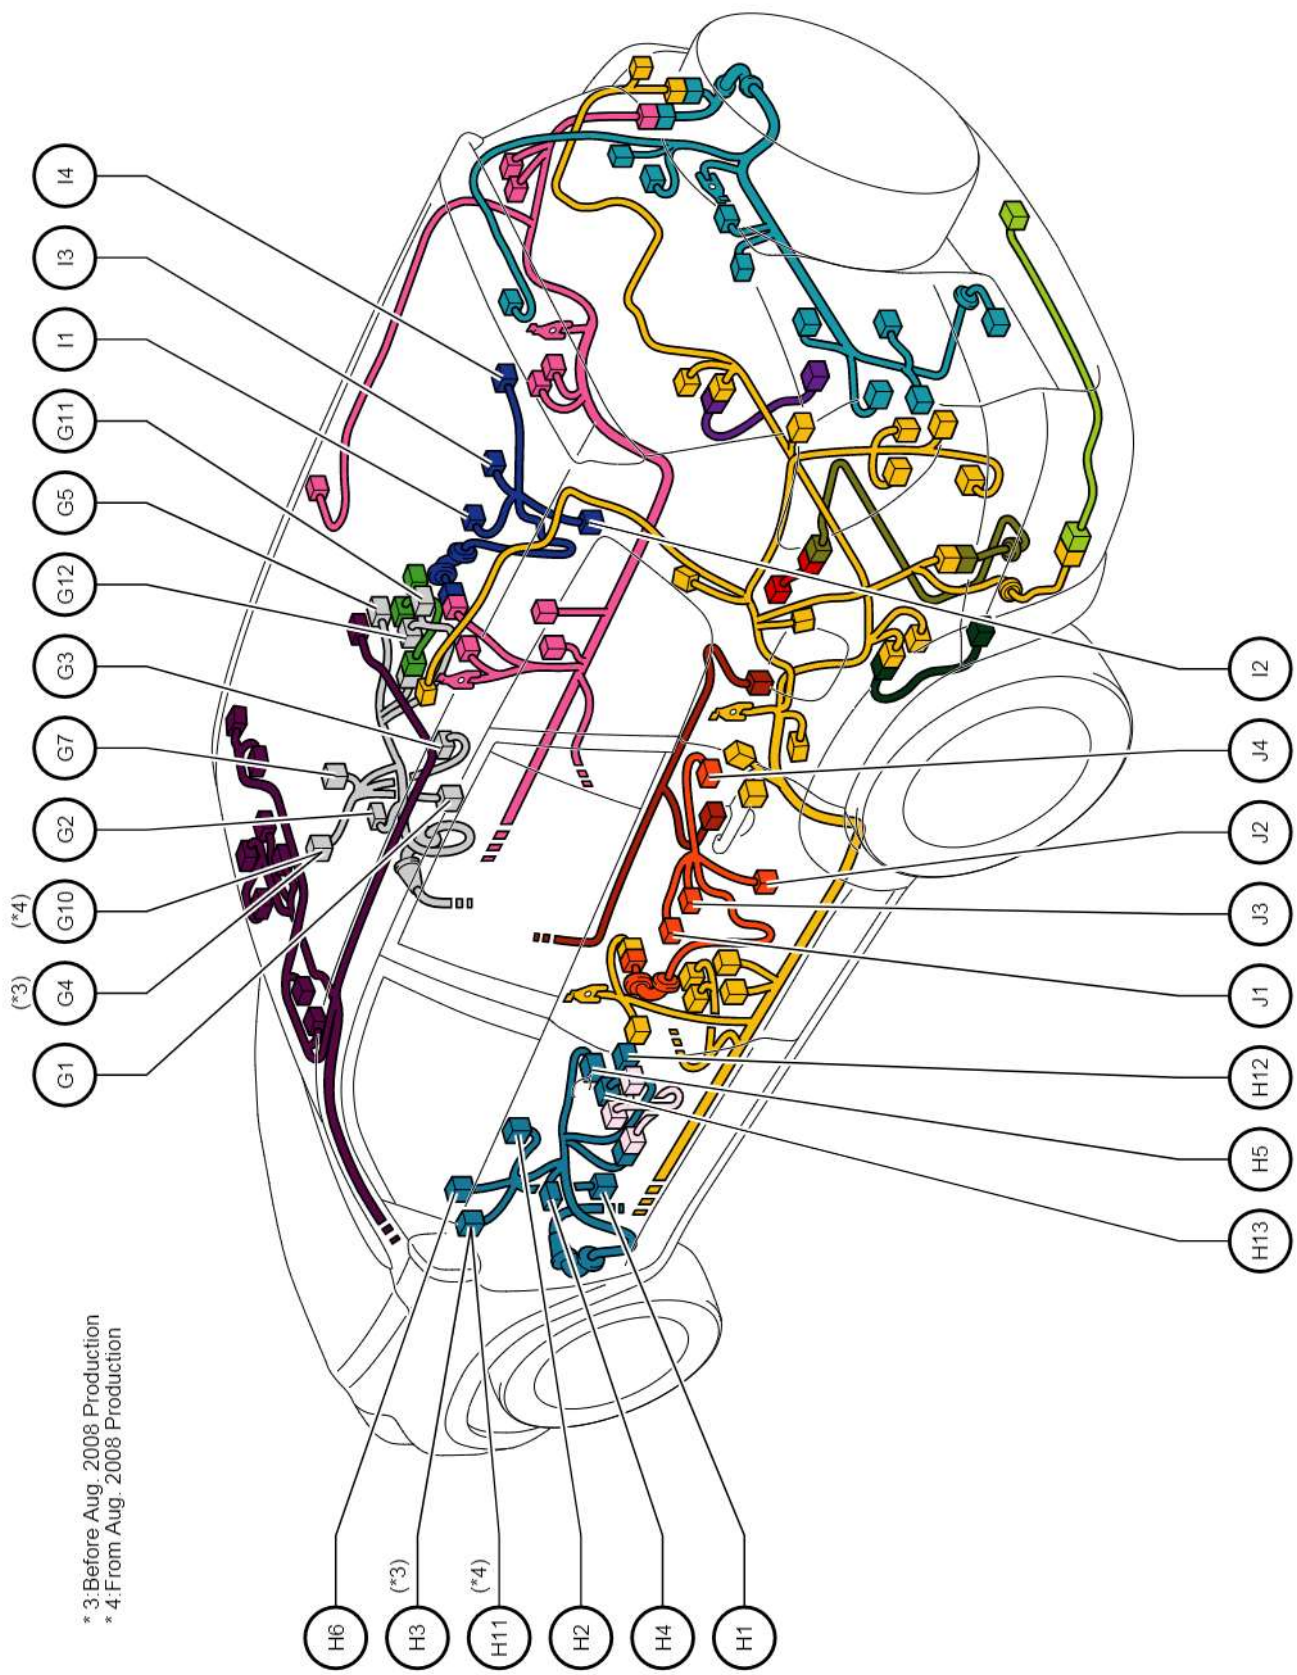
















G	1	Speaker (Front Door RH)
G	2	Power Window Regulator Motor (Front RH)
G	3	Power Window SW (Front Passenger's Side)
G	3	Power Window SW (Front Passenger's Side)
G	4	Outer Rear View Mirror (RH)
G	5	Door Lock Assembly (Front RH)
G	7	Tweeter (Front RH)
G	10	Outer Rear View Mirror (RH)
G	11	Electrical Key Oscillator (Front Door RH)
G	12	Door Outside Handle (Front RH)
H	1	Speaker (Front Door LH)
H	2	Power Window SW (Driver's Side)
H	3	Outer Rear View Mirror (LH)
H	4	Power Window Regulator Motor (Front LH)
H	5	Door Lock Assembly (Front LH)
H	6	Tweeter (Front LH)
H	11	Outer Rear View Mirror (LH)
H	12	Electrical Key Oscillator (Front Door LH)
H	13	Door Outside Handle (Front LH)
I	1	Power Window SW (Rear RH)
I	2	Speaker (Rear RH)
I	3	Power Window Regulator Motor (Rear RH)
I	4	Door Lock Assembly (Rear RH)
J	1	Power Window SW (Rear LH)
J	2	Speaker (Rear LH)
J	3	Power Window Regulator Motor (Rear LH)
J	4	Door Lock Assembly (Rear LH)

Position of Parts in Body <LHD Long Body>

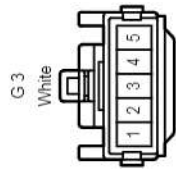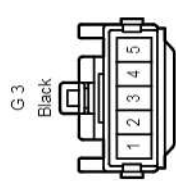
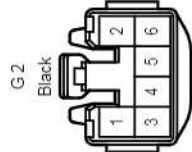



(From Aug. 2007 Production)

(Before Aug. 2007 Production)

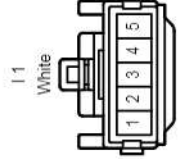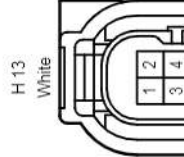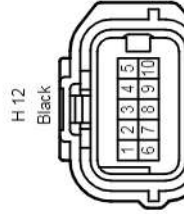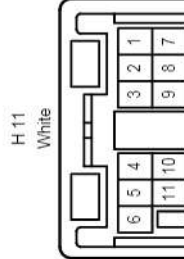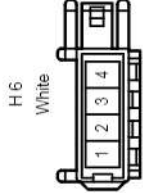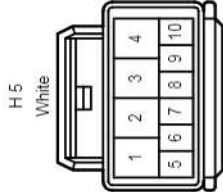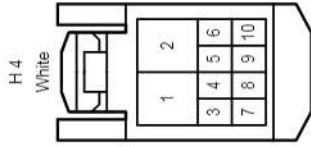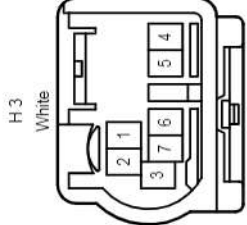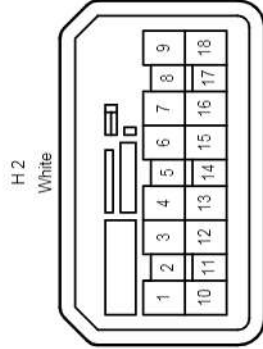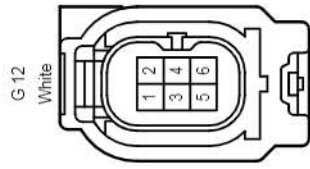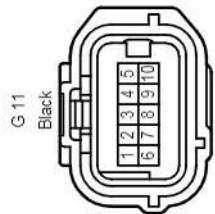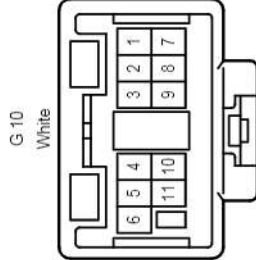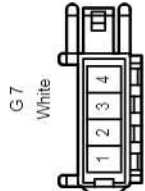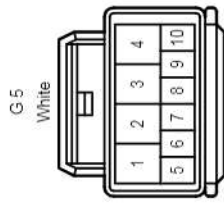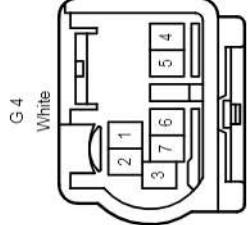






cardiagn.com

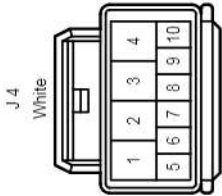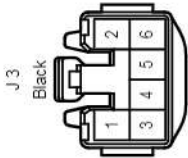

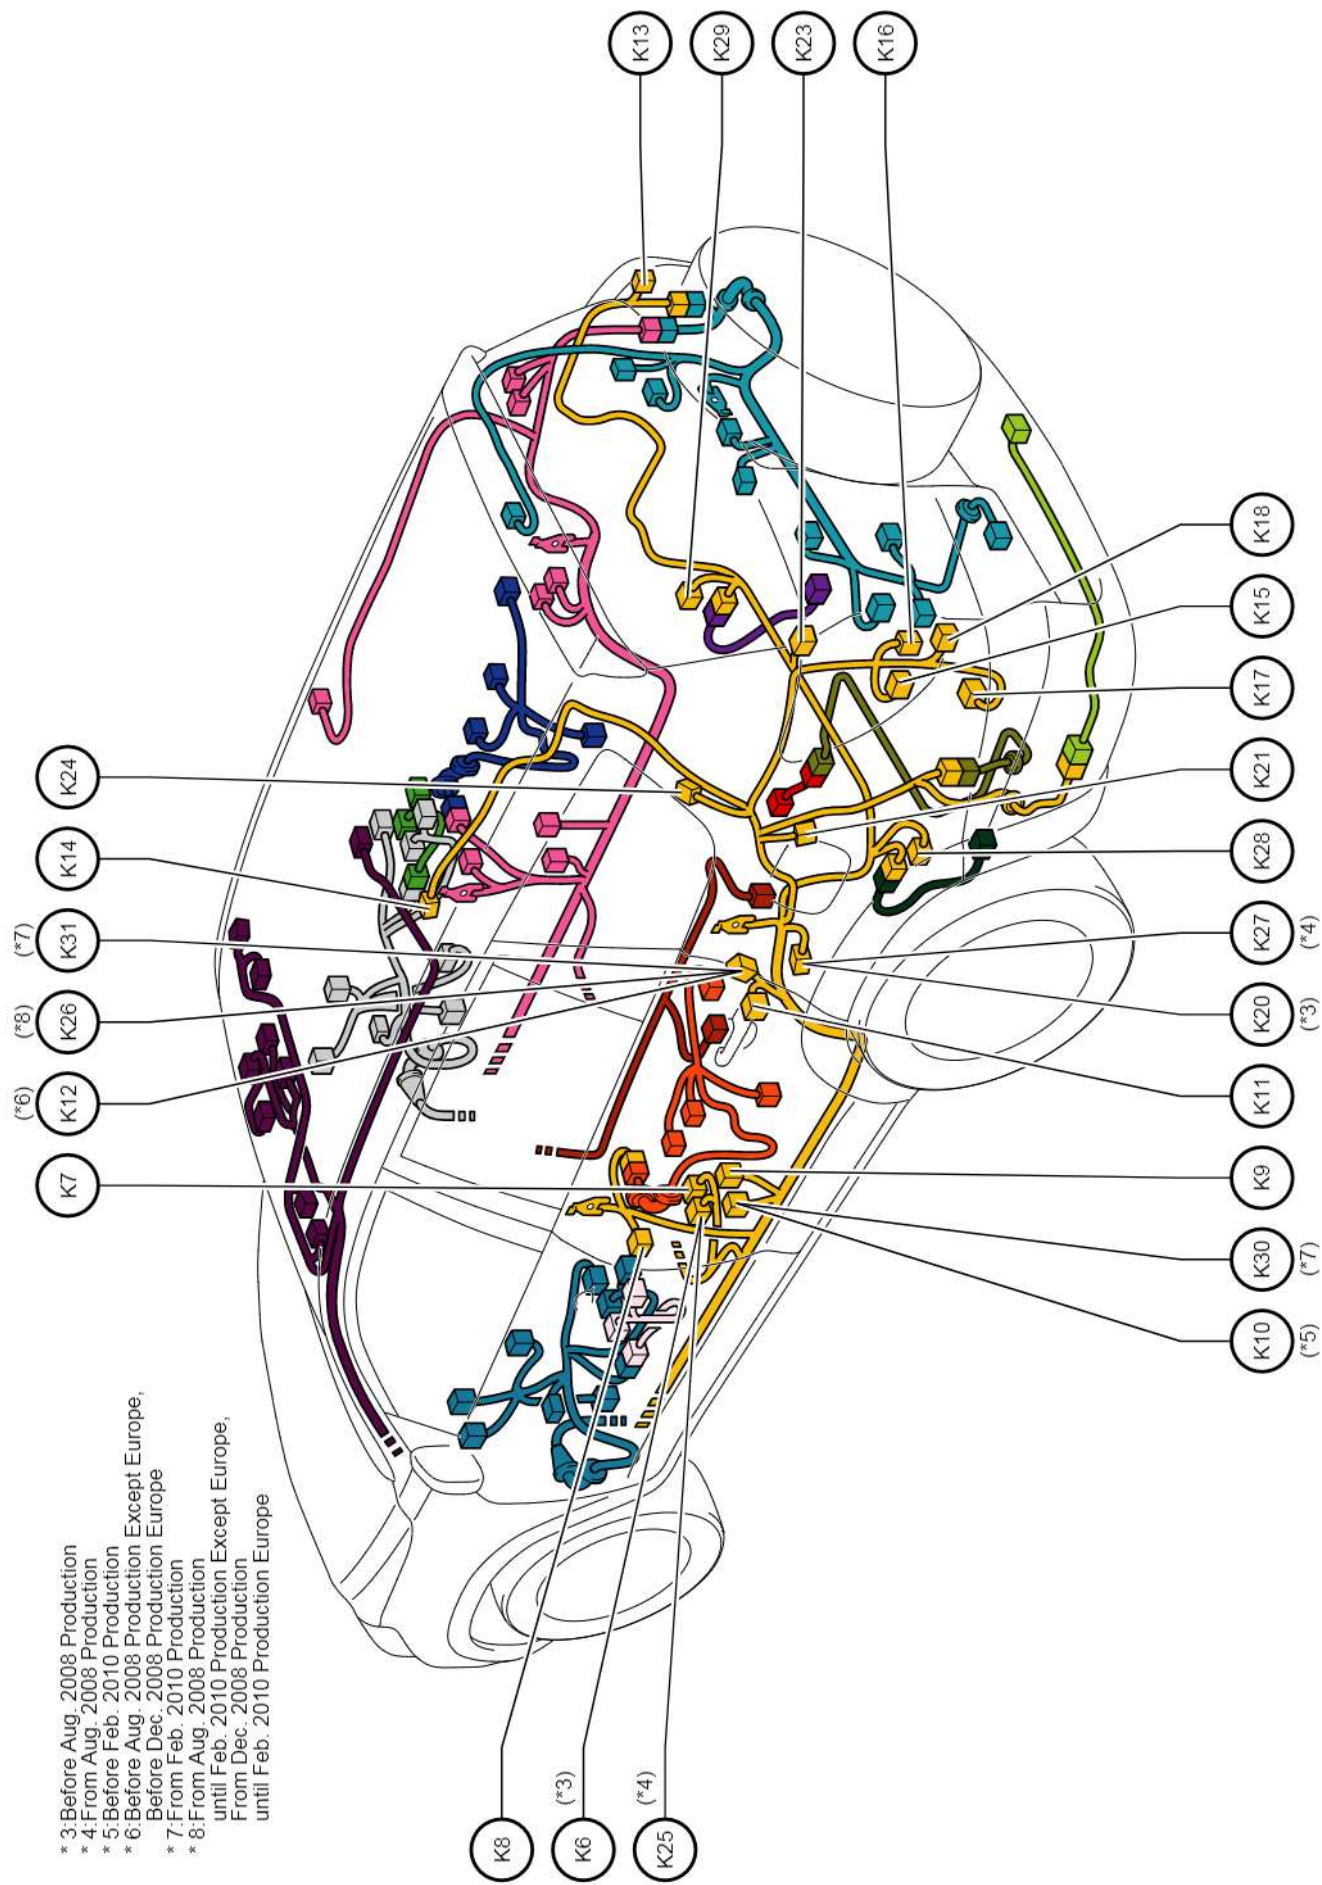


K	6	Yaw Rate Sensor
K	7	Deceleration Sensor
K	8	Door Courtesy SW (Front LH)
K	9	Pretensioner (LH)
K	10	Side Airbag Sensor (Front LH)
K	11	Door Courtesy SW (Rear LH)
K	12	Side Airbag Sensor (Rear LH)
K	13	Rear Combination Lamp (RH)
K	14	Curtain Shield Airbag Squib (LH)
K	15	Rear Combination Lamp (LH)
K	16	Diode (Room Lamp)
K	17	Power Outlet Socket (Rear)
K	18	Door Courtesy SW (Back Door)
K	20	Junction Connector
K	21	Junction Connector
K	23	Electrical Key Oscillator (Inside Luggage Room)
K	23	Electrical Key Oscillator (Inside Luggage Room)
K	24	Tire Pressure Warning Antenna (Rear)
K	25	Yaw Rate Sensor
K	26	Side Airbag Sensor (Rear LH)
K	27	Junction Connector
K	28	Speed Sensor (Rear LH)
K	29	Speed Sensor (Rear RH)
K	30	Side Airbag Sensor (Front LH)
K	31	Side Airbag Sensor (Rear LH)

Position of Parts in Body <LHD Long Body>

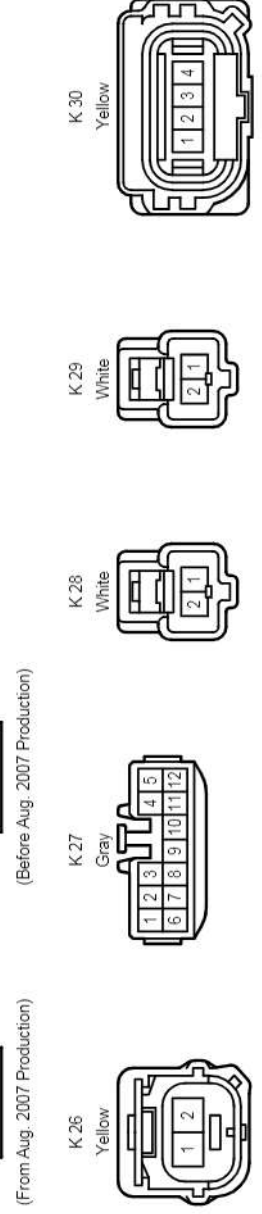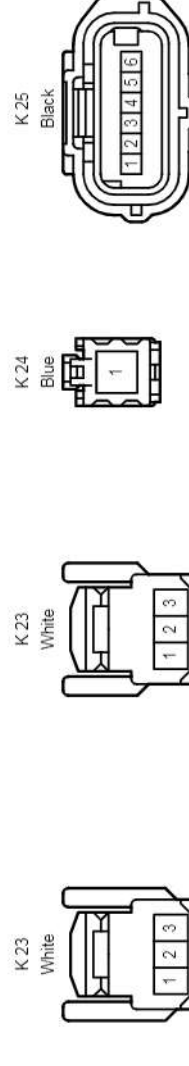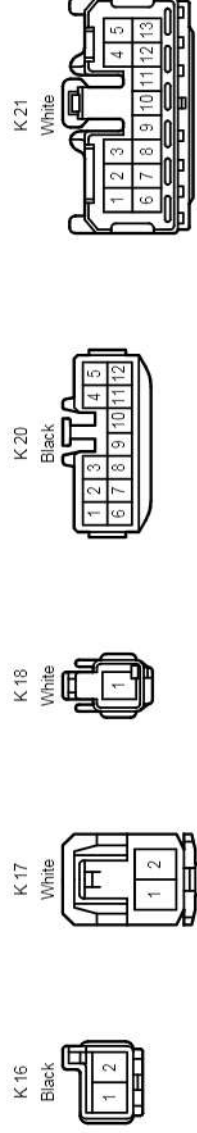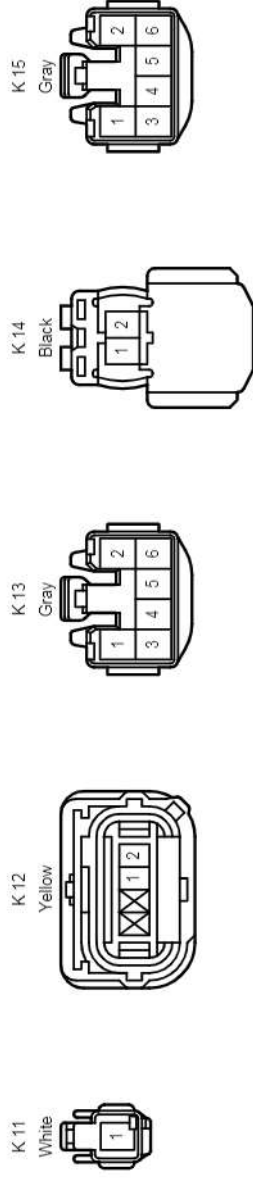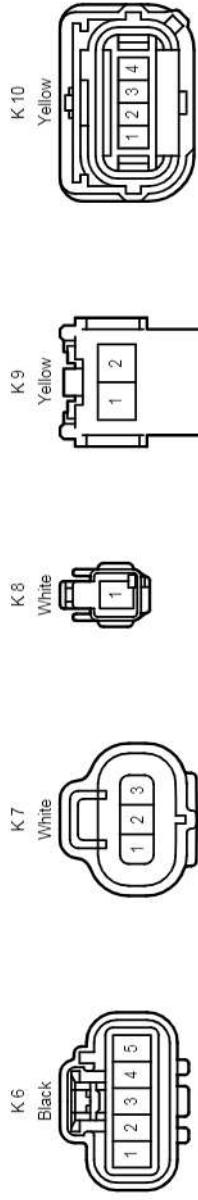


K 31 Yellow

Position of Parts in Body <LHD Long Body>

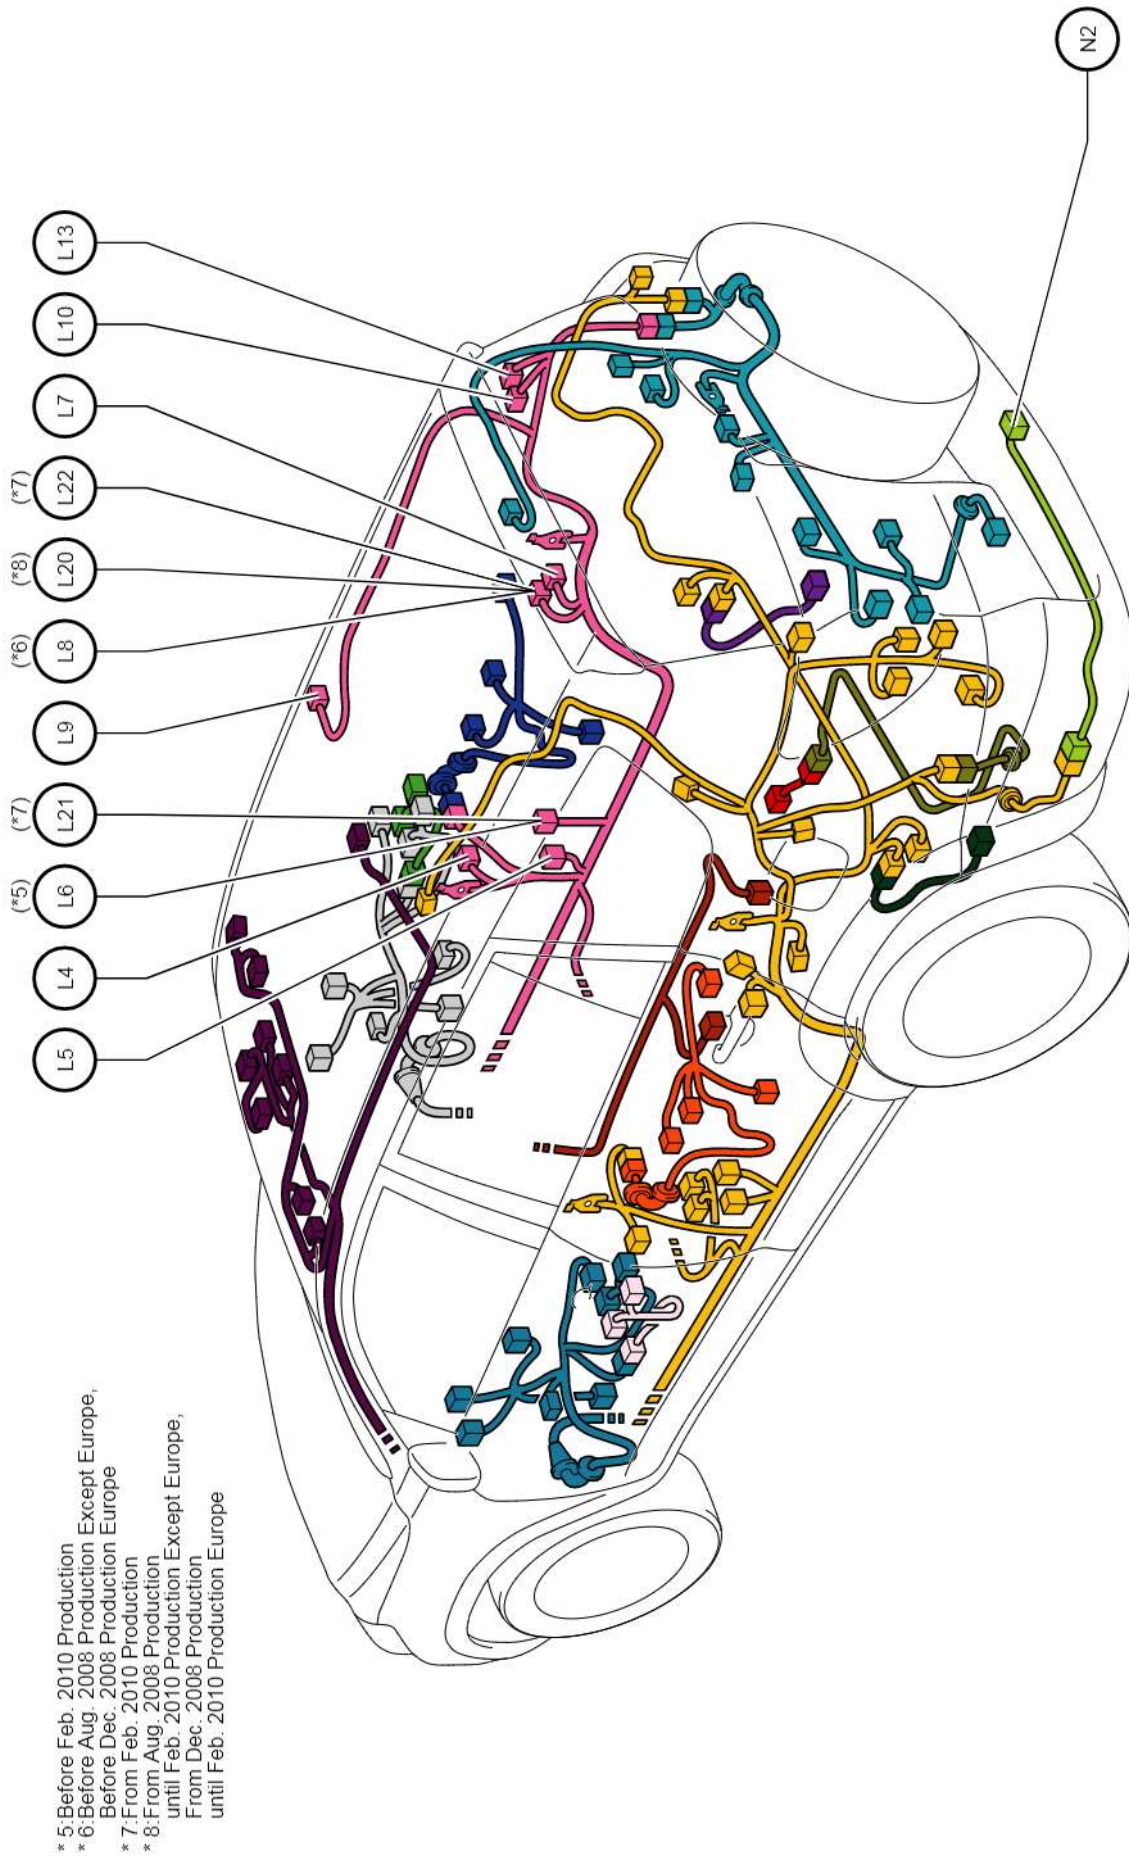


- L 4 Door Courtesy SW (Front RH)
- L 5 Pretensioner (RH)
- L 6 Side Airbag Sensor (Front RH)
- L 7 Door Courtesy SW (Rear RH)
- L 8 Side Airbag Sensor (Rear RH)
- L 9 Curtain Shield Airbag Squib (RH)
- L 10 Door Control Receiver
- L 13 Door Control Receiver
- L 20 Side Airbag Sensor (Rear RH)
- L 21 Side Airbag Sensor (Front RH)
- L 22 Side Airbag Sensor (Rear RH)
- N 2 License Plate Lamp (LH)

Position of Parts in Body <LHD Long Body>

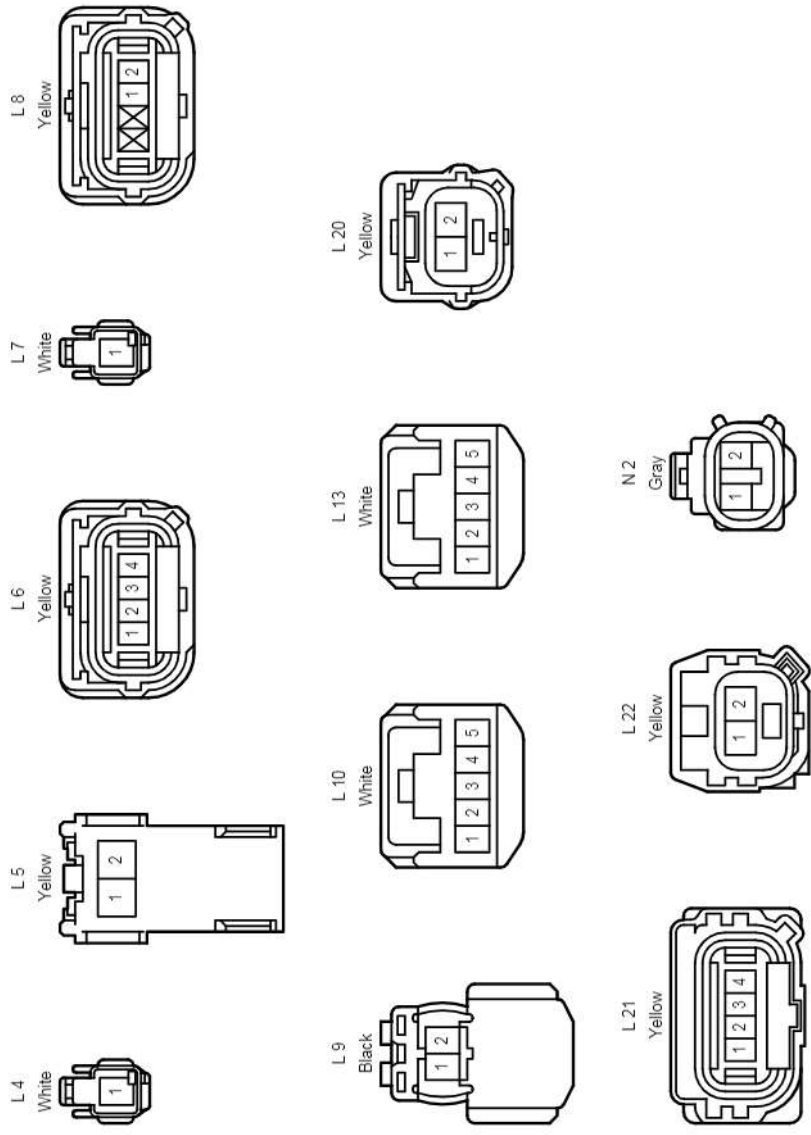




Position of Parts in Body <LHD Long Body>

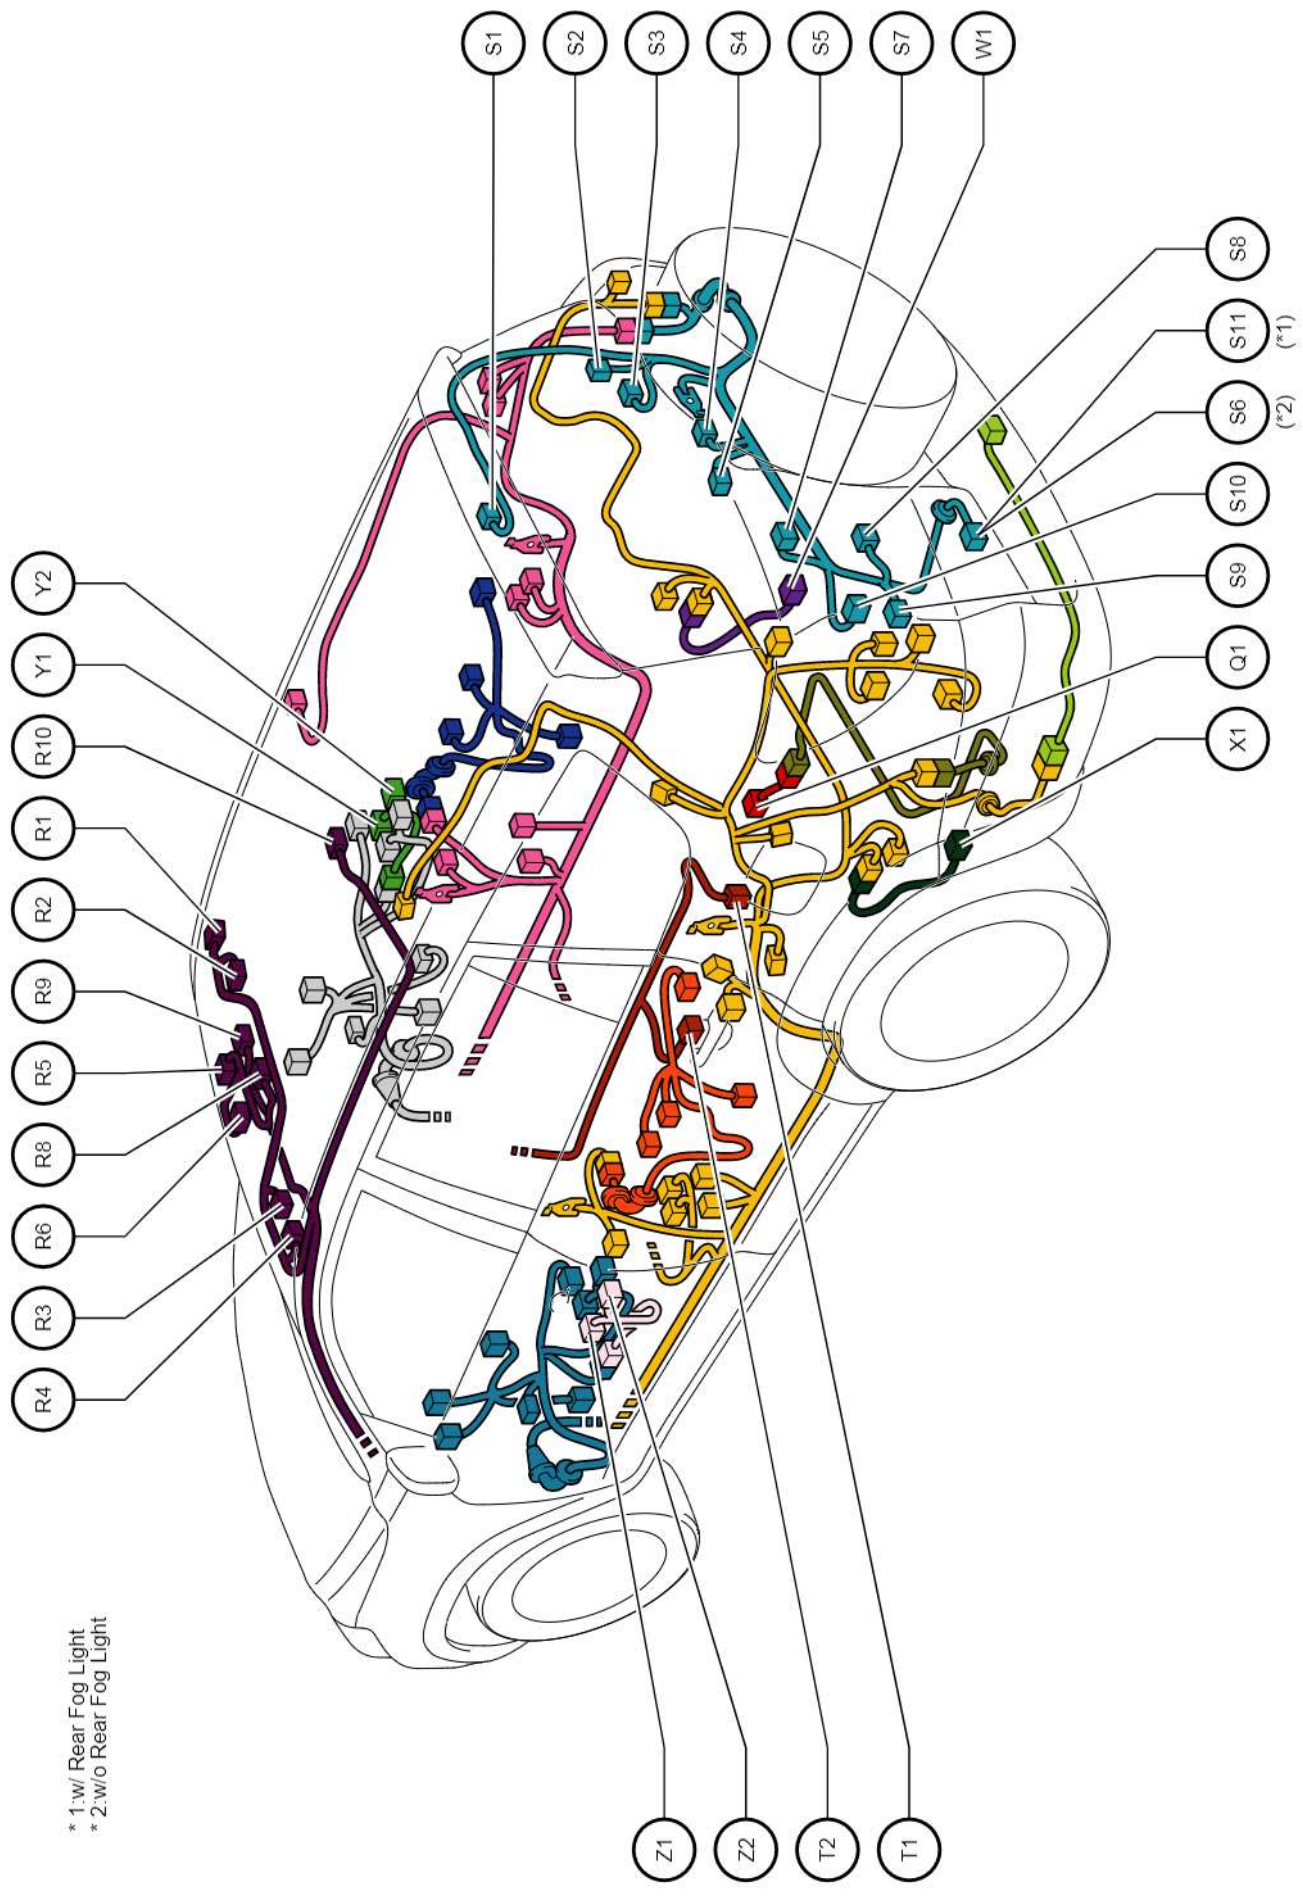






* 1.w/ Rear Fog Light
* 2.w/o Rear Fog Light


Q	1	4WD Linear Solenoid
R	1	Vanity Lamp SW (RH)
R	2	Vanity Lamp (RH)
R	3	Vanity Lamp (LH)
R	4	Vanity Lamp SW (LH)
R	5	Rain Sensor
R	6	Inner Rear View Mirror
R	8	Overhead J/B
R	9	Sliding Roof Control ECU
R	10	Room Lamp (Front)
S	1	Center Stop Lamp
S	2	Rear Window Defogger
S	3	Room Lamp (Rear)
S	4	Noise Filter (Stop and Rear Window Defogger)
S	5	Rear Wiper Motor
S	6	License Plate Lamp (RH)
S	6	License Plate Lamp (RH)
S	7	Television Camera (Rear)
S	8	Electrical Key Oscillator (Back Door)
S	9	Door Outside Handle (Back Door)
S	10	Back Door Lock Assembly
S	11	Rear Fog Light (Center)
T	1	Fuel Suction Pump
T	2	Fuel Sender Gage
W	1	Speed Sensor (Rear RH)
X	1	Speed Sensor (Rear LH)
Y	1	Door Outside Handle (Front RH)
Y	2	Electrical Key Oscillator (Front Door RH)
Z	1	Door Outside Handle (Front LH)
Z	2	Electrical Key Oscillator (Front Door LH)

Position of Parts in Body <LHD Long Body>

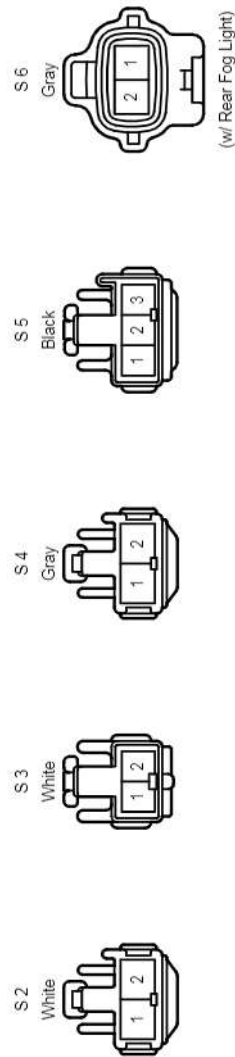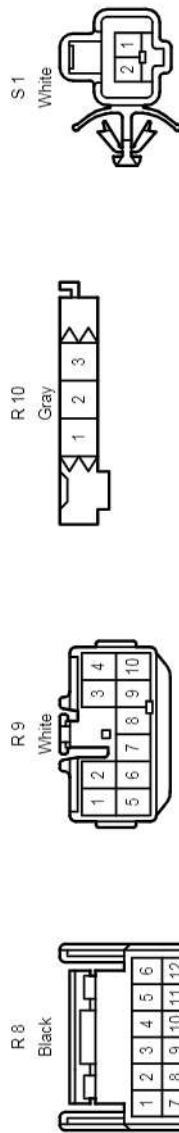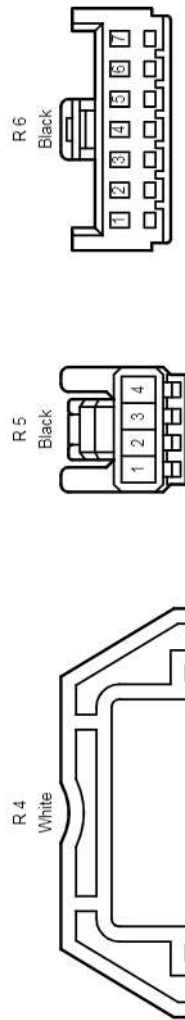





Position of Parts in Body <LHD Long Body>

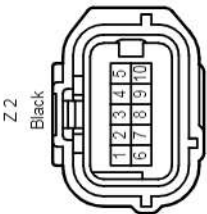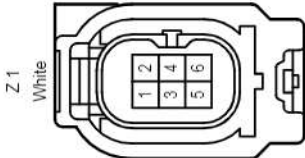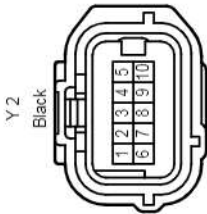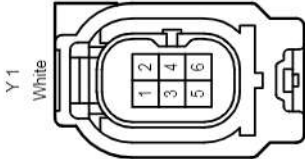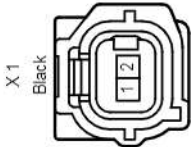


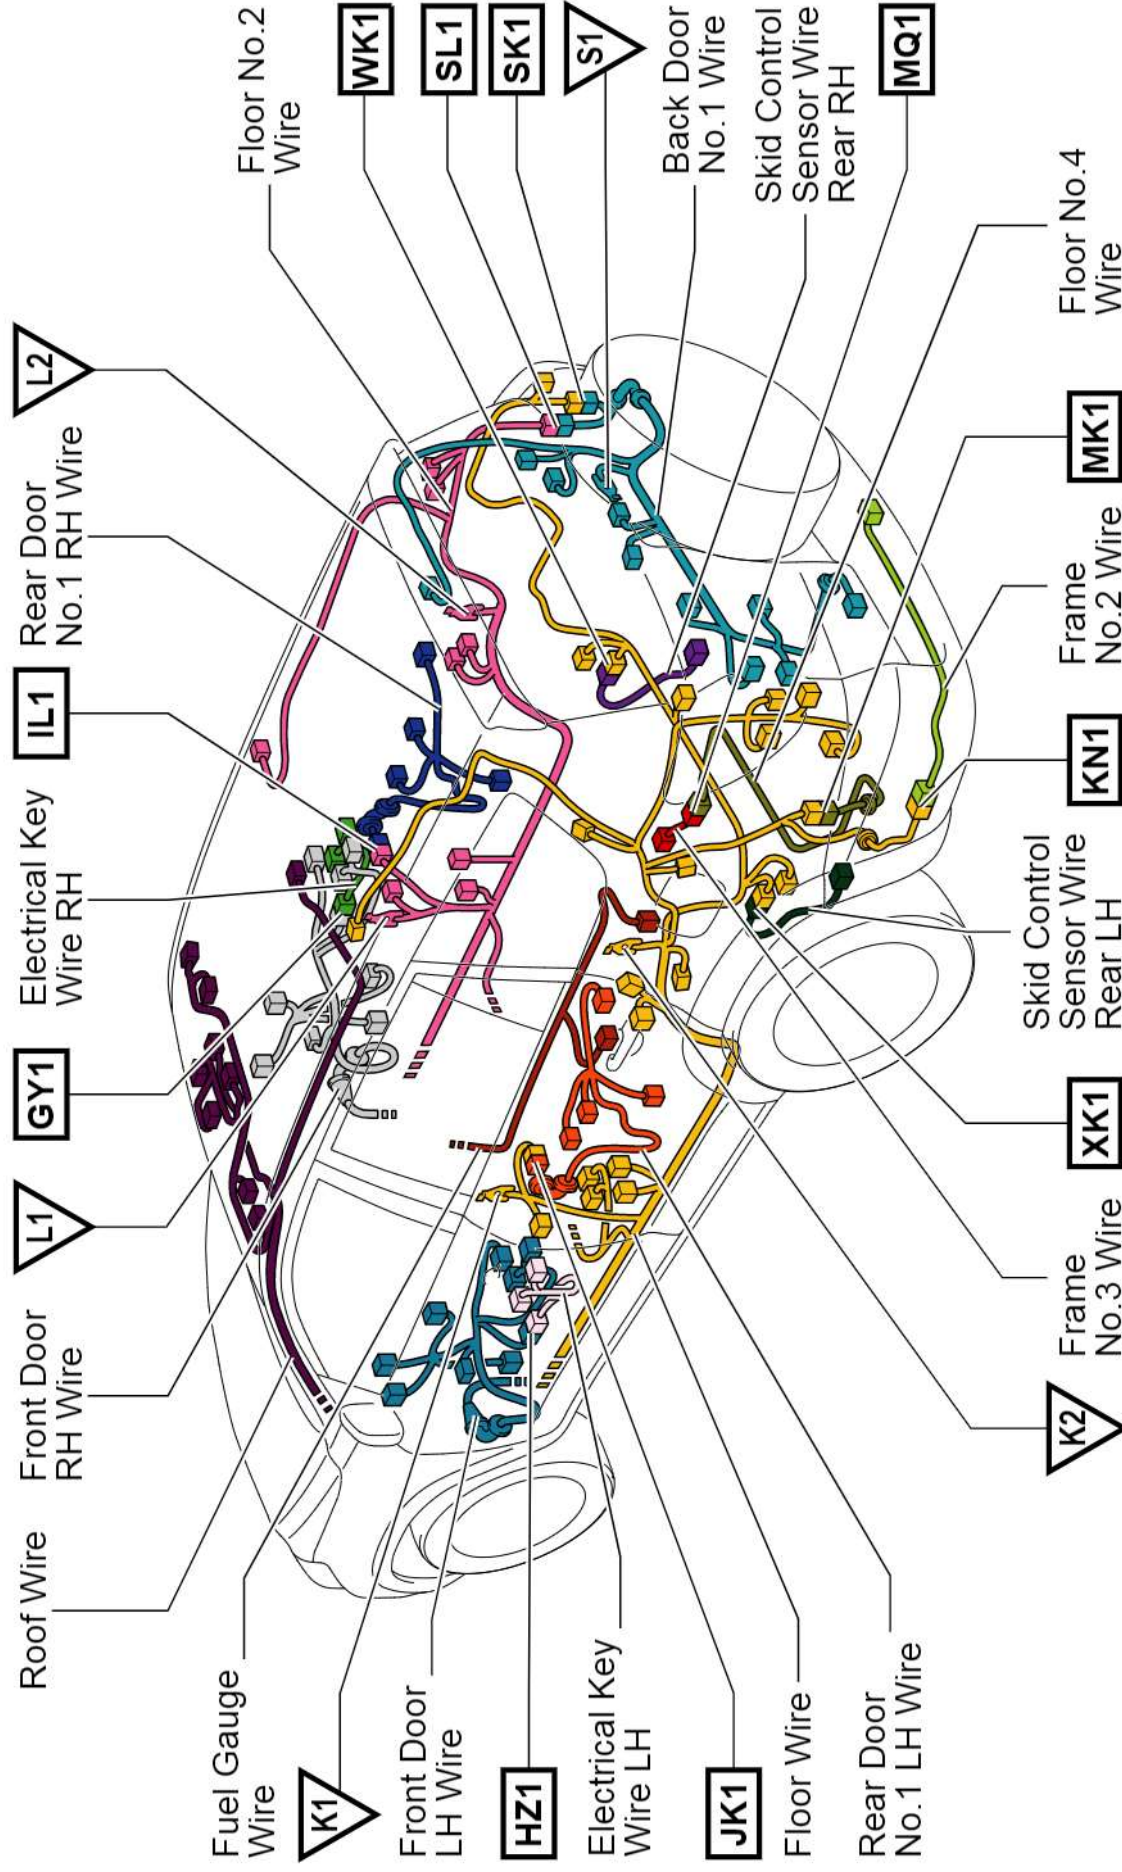


GY1
Gray



HZ1
Gray

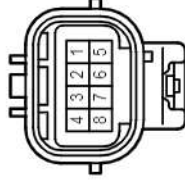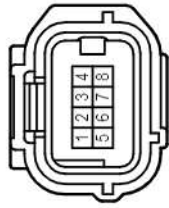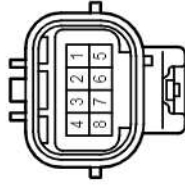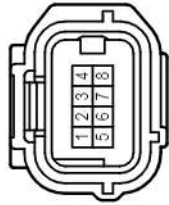

IL1
White

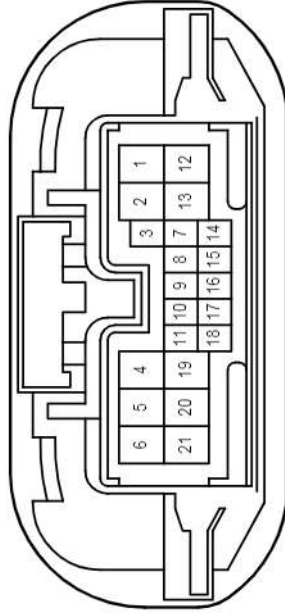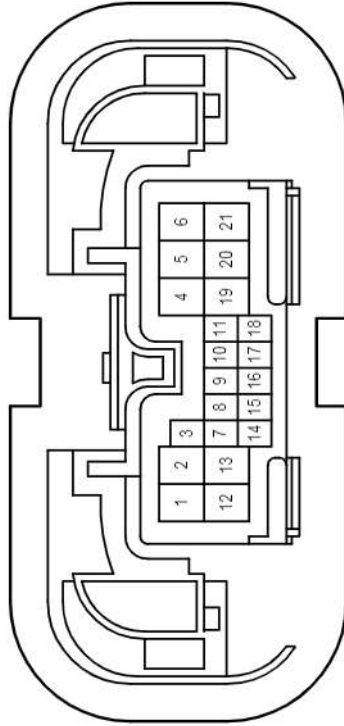

JK1
White

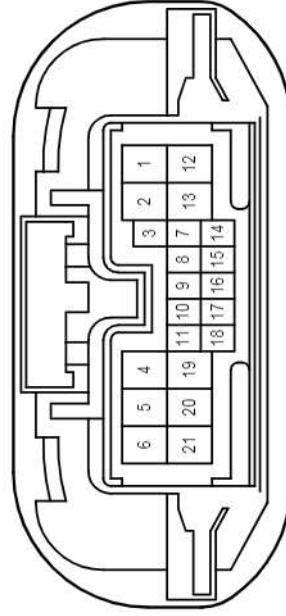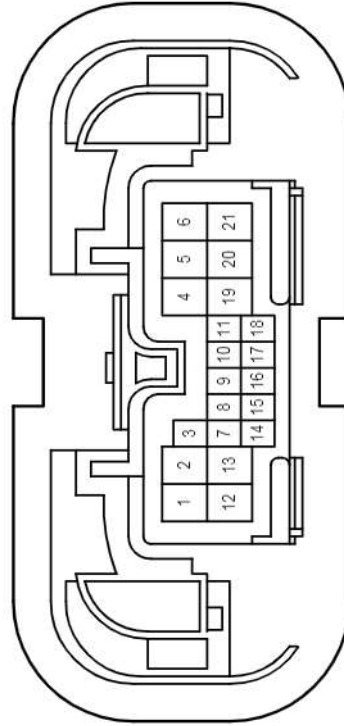


KN1
White


MK1
White

MQ1
Black



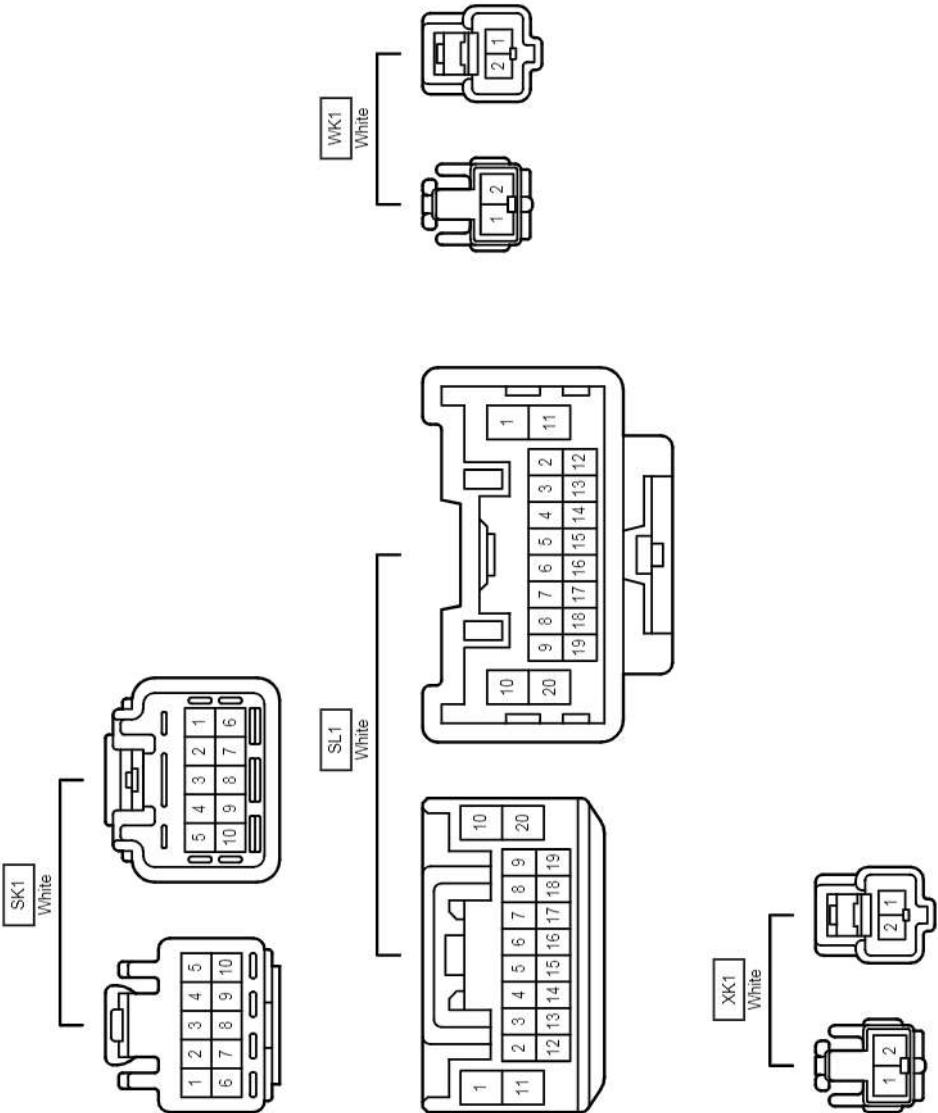
















Position of Parts in Body <RHD Long Body>

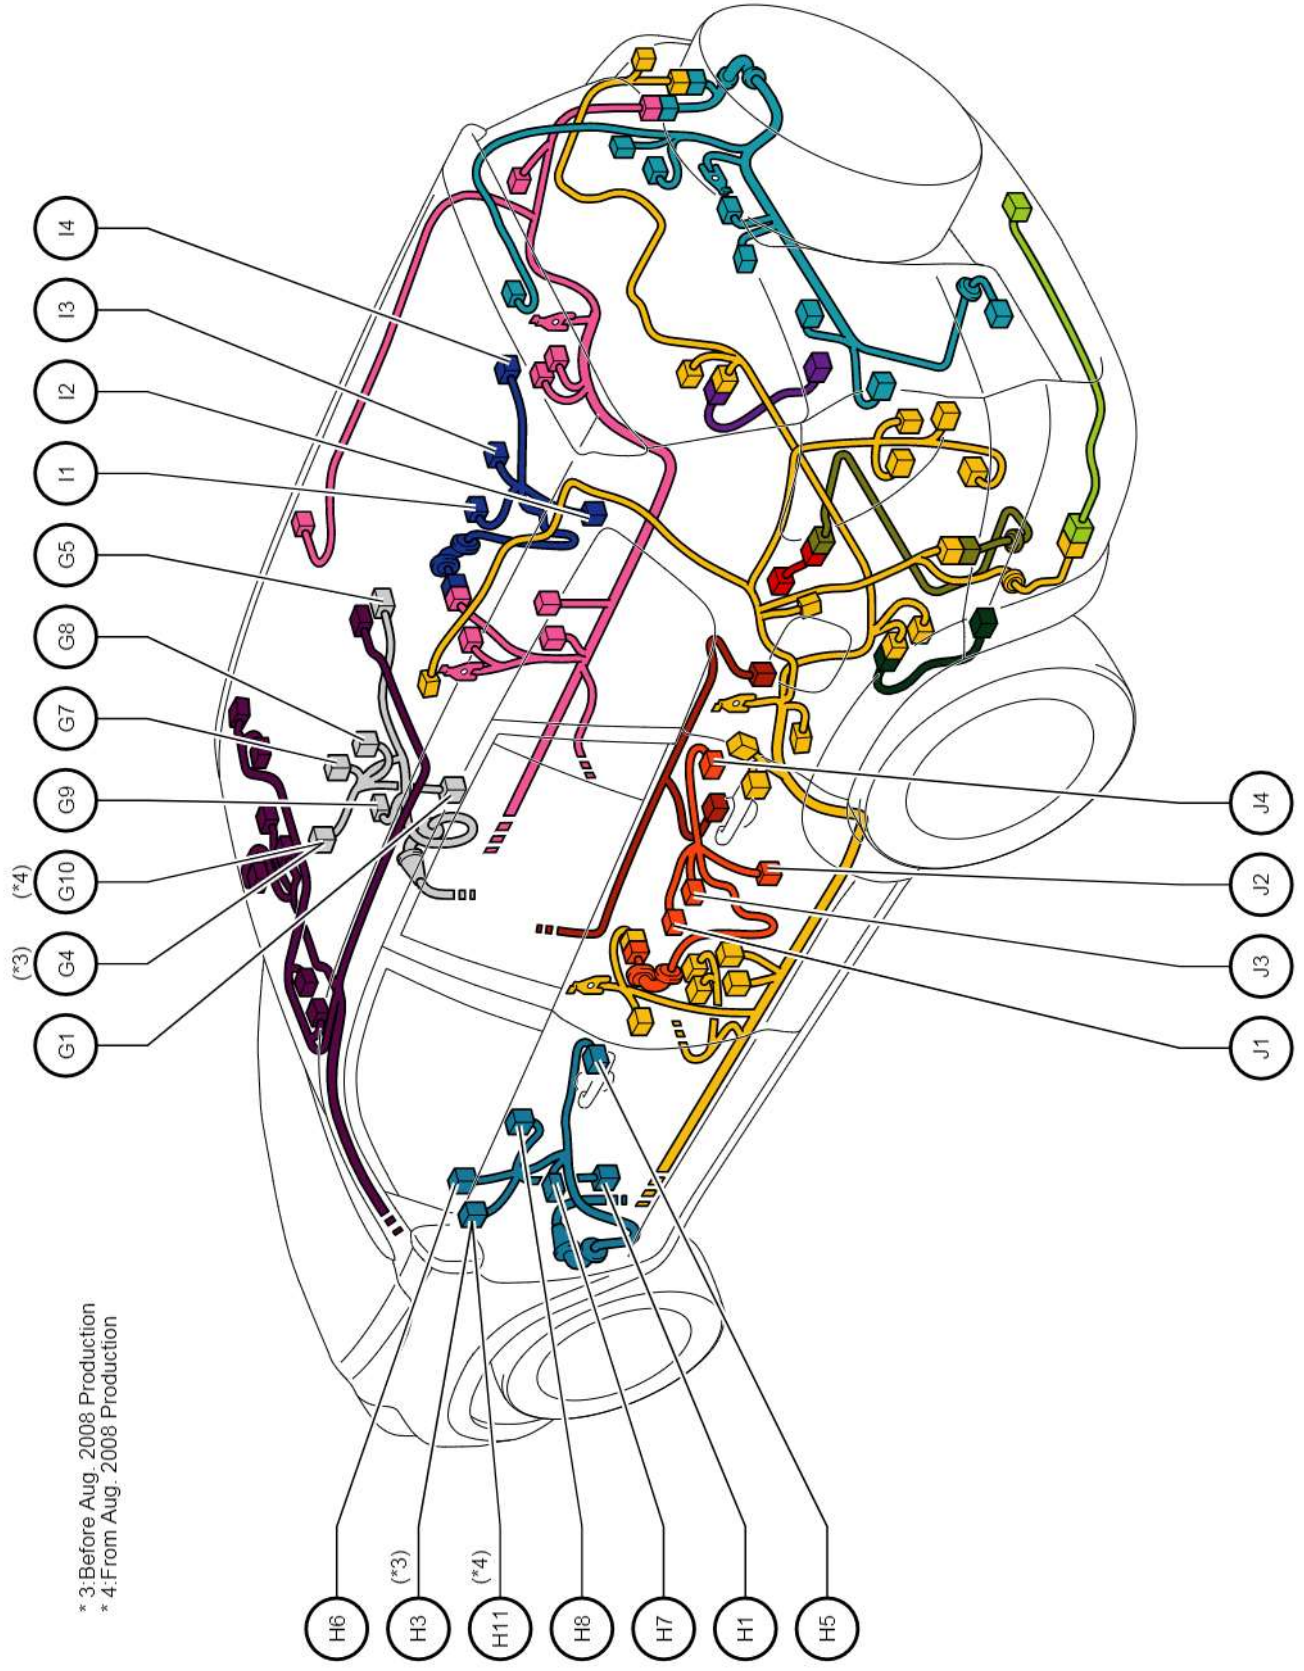

* 3: Before Aug. 2008 Production
 * 4: From Aug. 2008 Production




G	1	Speaker (Front Door RH)
G	4	Outer Rear View Mirror (RH)
G	5	Door Lock Assembly (Front RH)
G	7	Tweeter (Front RH)
G	8	Power Window SW (Driver's Side)
G	9	Power Window Regulator Motor (Front RH)
G	10	Outer Rear View Mirror (RH)
H	1	Speaker (Front Door LH)
H	3	Outer Rear View Mirror (LH)
H	5	Door Lock Assembly (Front LH)
H	6	Tweeter (Front LH)
H	7	Power Window Regulator Motor (Front LH)
H	8	Power Window SW (Front Passenger's Side)
H	8	Power Window SW (Front Passenger's Side)
H	11	Outer Rear View Mirror (LH)
I	1	Power Window SW (Rear RH)
I	2	Speaker (Rear RH)
I	3	Power Window Regulator Motor (Rear RH)
I	4	Door Lock Assembly (Rear RH)
J	1	Power Window SW (Rear LH)
J	2	Speaker (Rear LH)
J	3	Power Window Regulator Motor (Rear LH)
J	4	Door Lock Assembly (Rear LH)

 Position of Parts in Body <RHD Long Body>

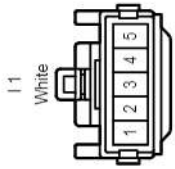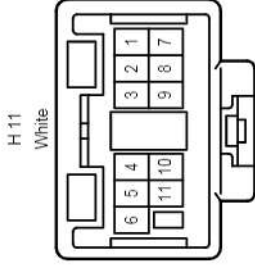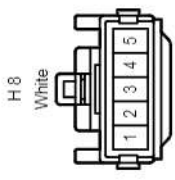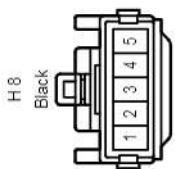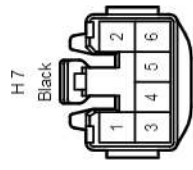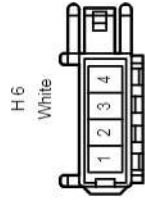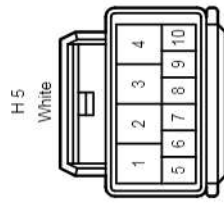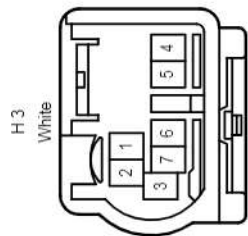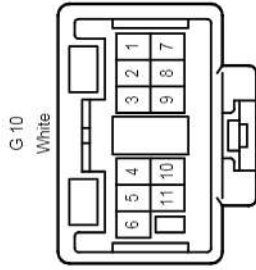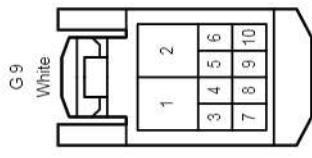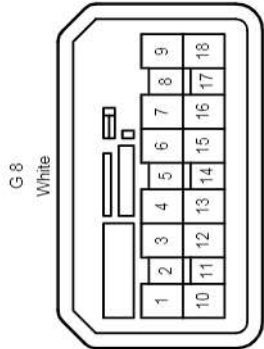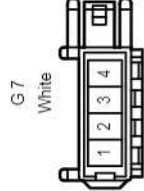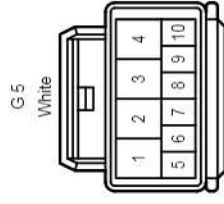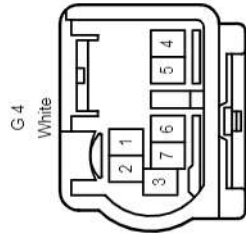






(From Aug. 2007 Production)

(Before Aug. 2007 Production)

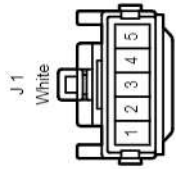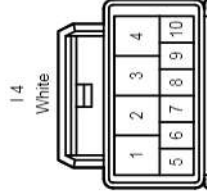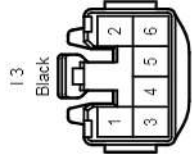


K	6	Yaw Rate Sensor
K	7	Deceleration Sensor
K	8	Door Courtesy SW (Front LH)
K	9	Pretensioner (LH)
K	10	Side Airbag Sensor (Front LH)
K	11	Door Courtesy SW (Rear LH)
K	12	Side Airbag Sensor (Rear LH)
K	13	Rear Combination Lamp (RH)
K	14	Curtain Shield Airbag Squib (LH)
K	15	Rear Combination Lamp (LH)
K	16	Diode (Room Lamp)
K	17	Power Outlet Socket (Rear)
K	18	Door Courtesy SW (Back Door)
K	20	Junction Connector
K	21	Junction Connector
K	25	Yaw Rate Sensor
K	26	Side Airbag Sensor (Rear LH)
K	27	Junction Connector
K	28	Speed Sensor (Rear LH)
K	29	Speed Sensor (Rear RH)
K	30	Side Airbag Sensor (Front LH)
K	31	Side Airbag Sensor (Rear LH)

Position of Parts in Body <RHD Long Body>




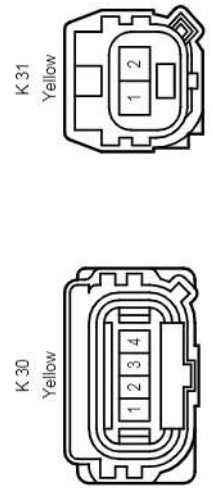
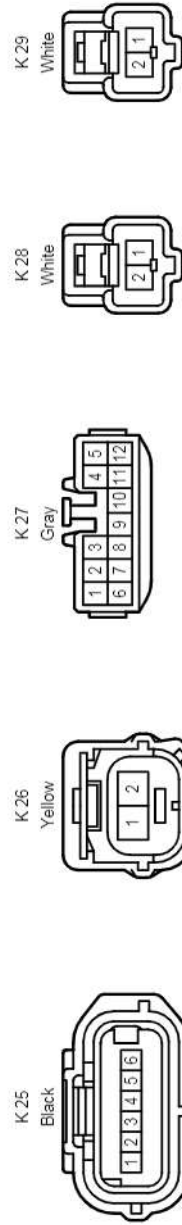
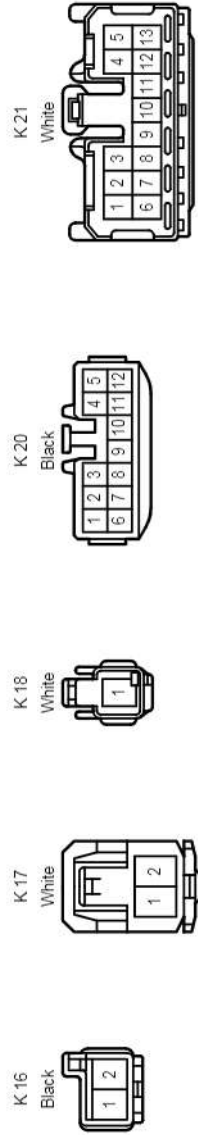
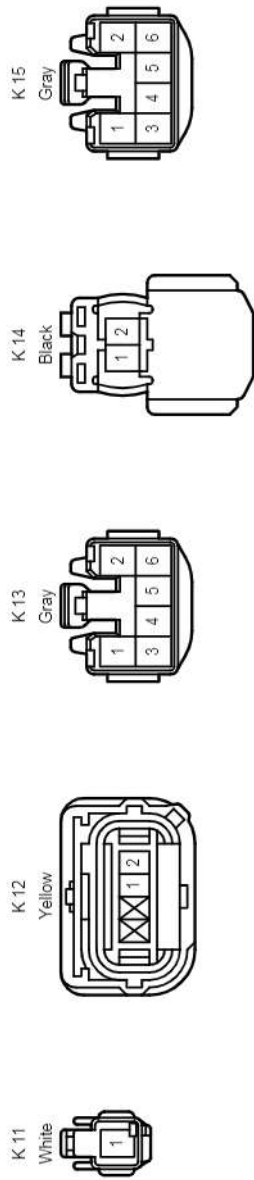
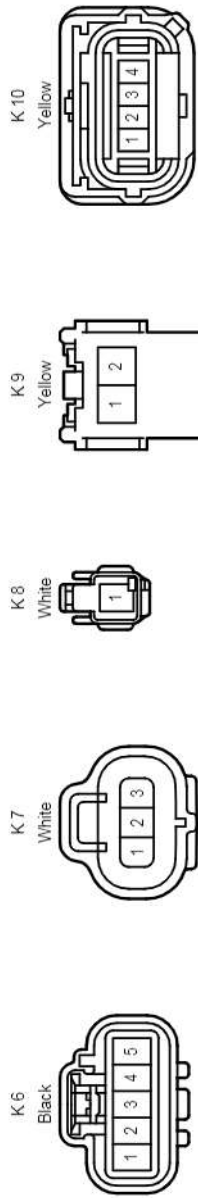


Position of Parts in Body <RHD Long Body>

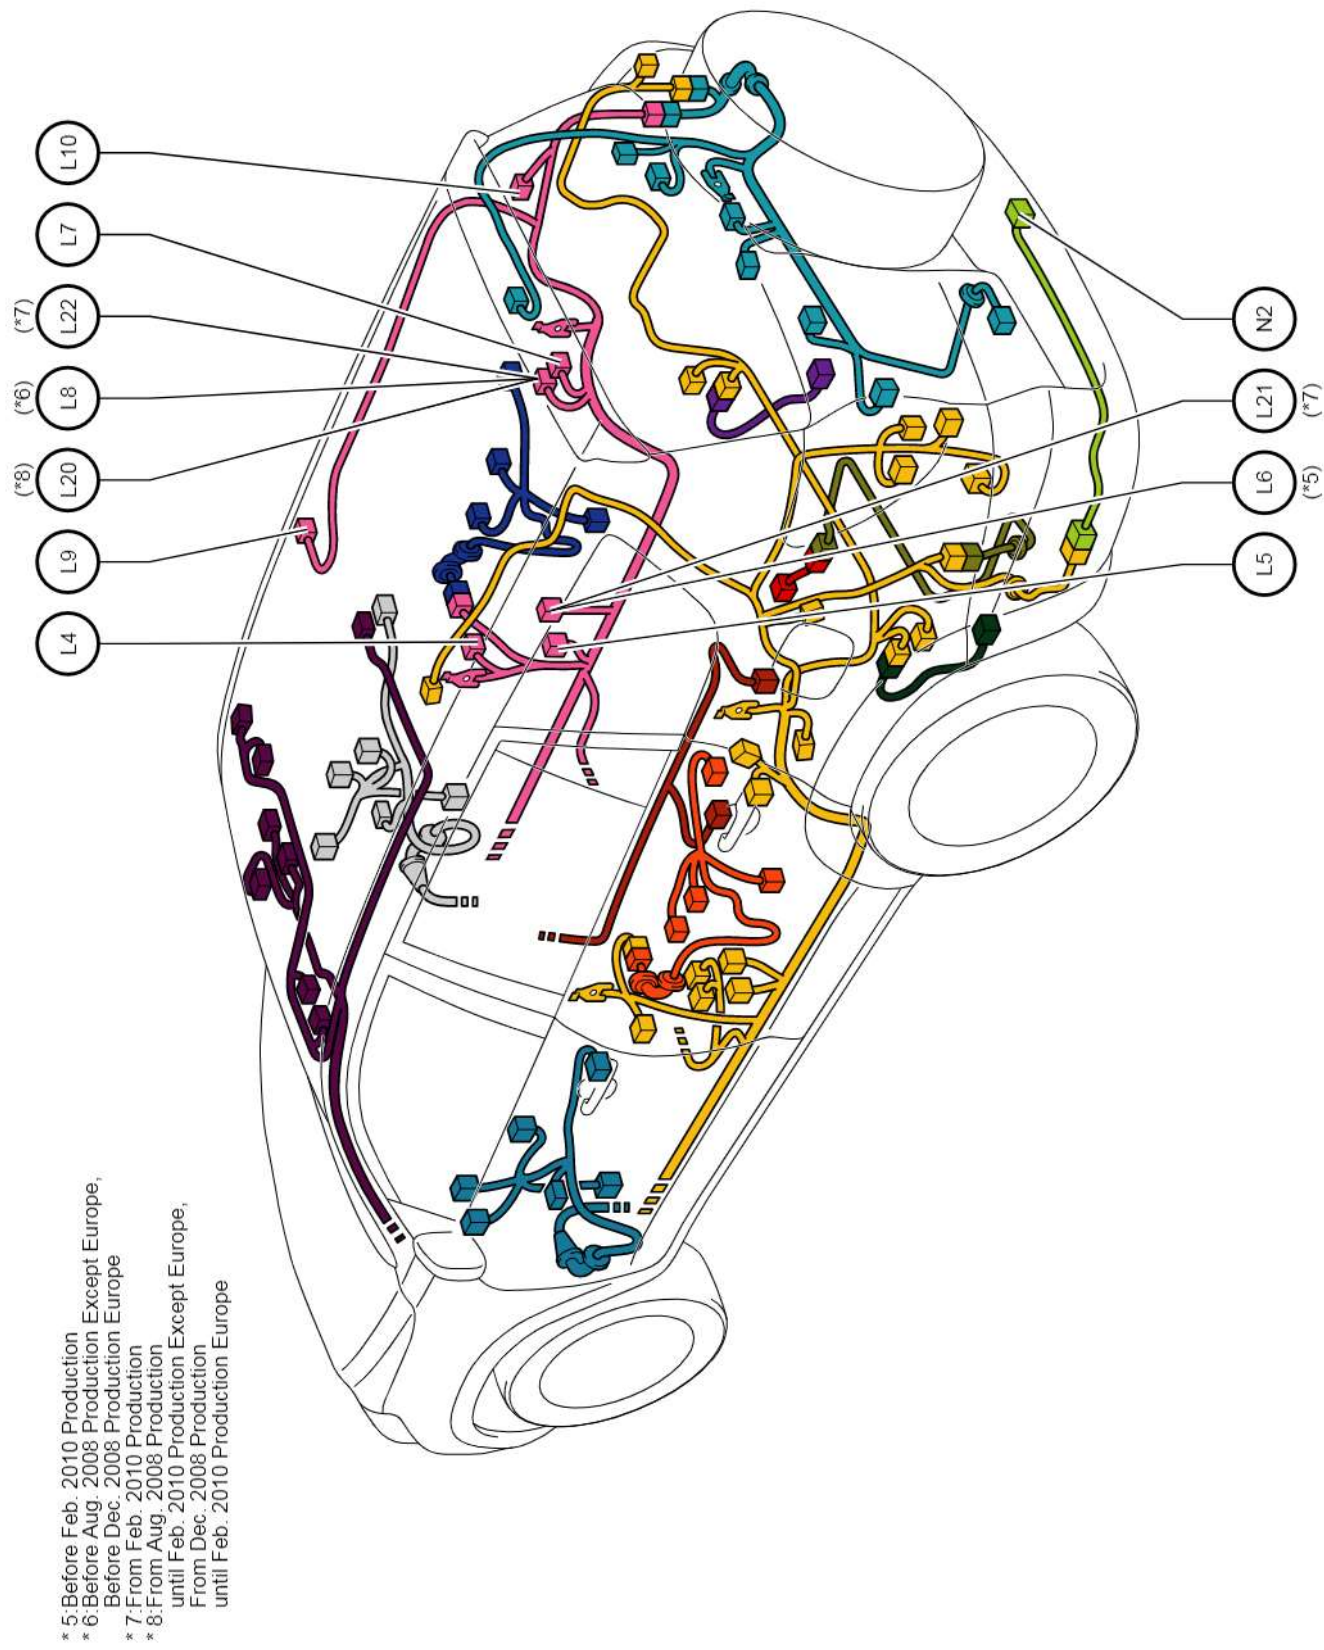


- L 4 Door Courtesy SW (Front RH)
- L 5 Pretensioner (RH)
- L 6 Side Airbag Sensor (Front RH)
- L 7 Door Courtesy SW (Rear RH)
- L 8 Side Airbag Sensor (Rear RH)
- L 9 Curtain Shield Airbag Squib (RH)
- L 10 Door Control Receiver
- L 20 Side Airbag Sensor (Rear RH)
- L 21 Side Airbag Sensor (Front RH)
- L 22 Side Airbag Sensor (Rear RH)
- N 2 License Plate Lamp (LH)

Position of Parts in Body <RHD Long Body>

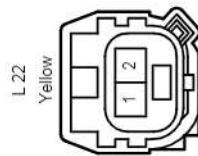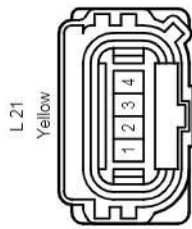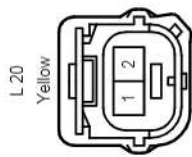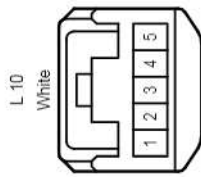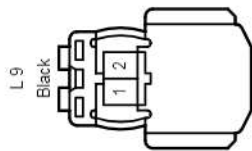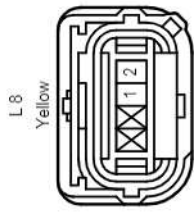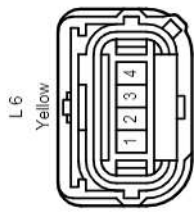
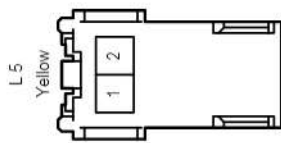



Position of Parts in Body <RHD Long Body>

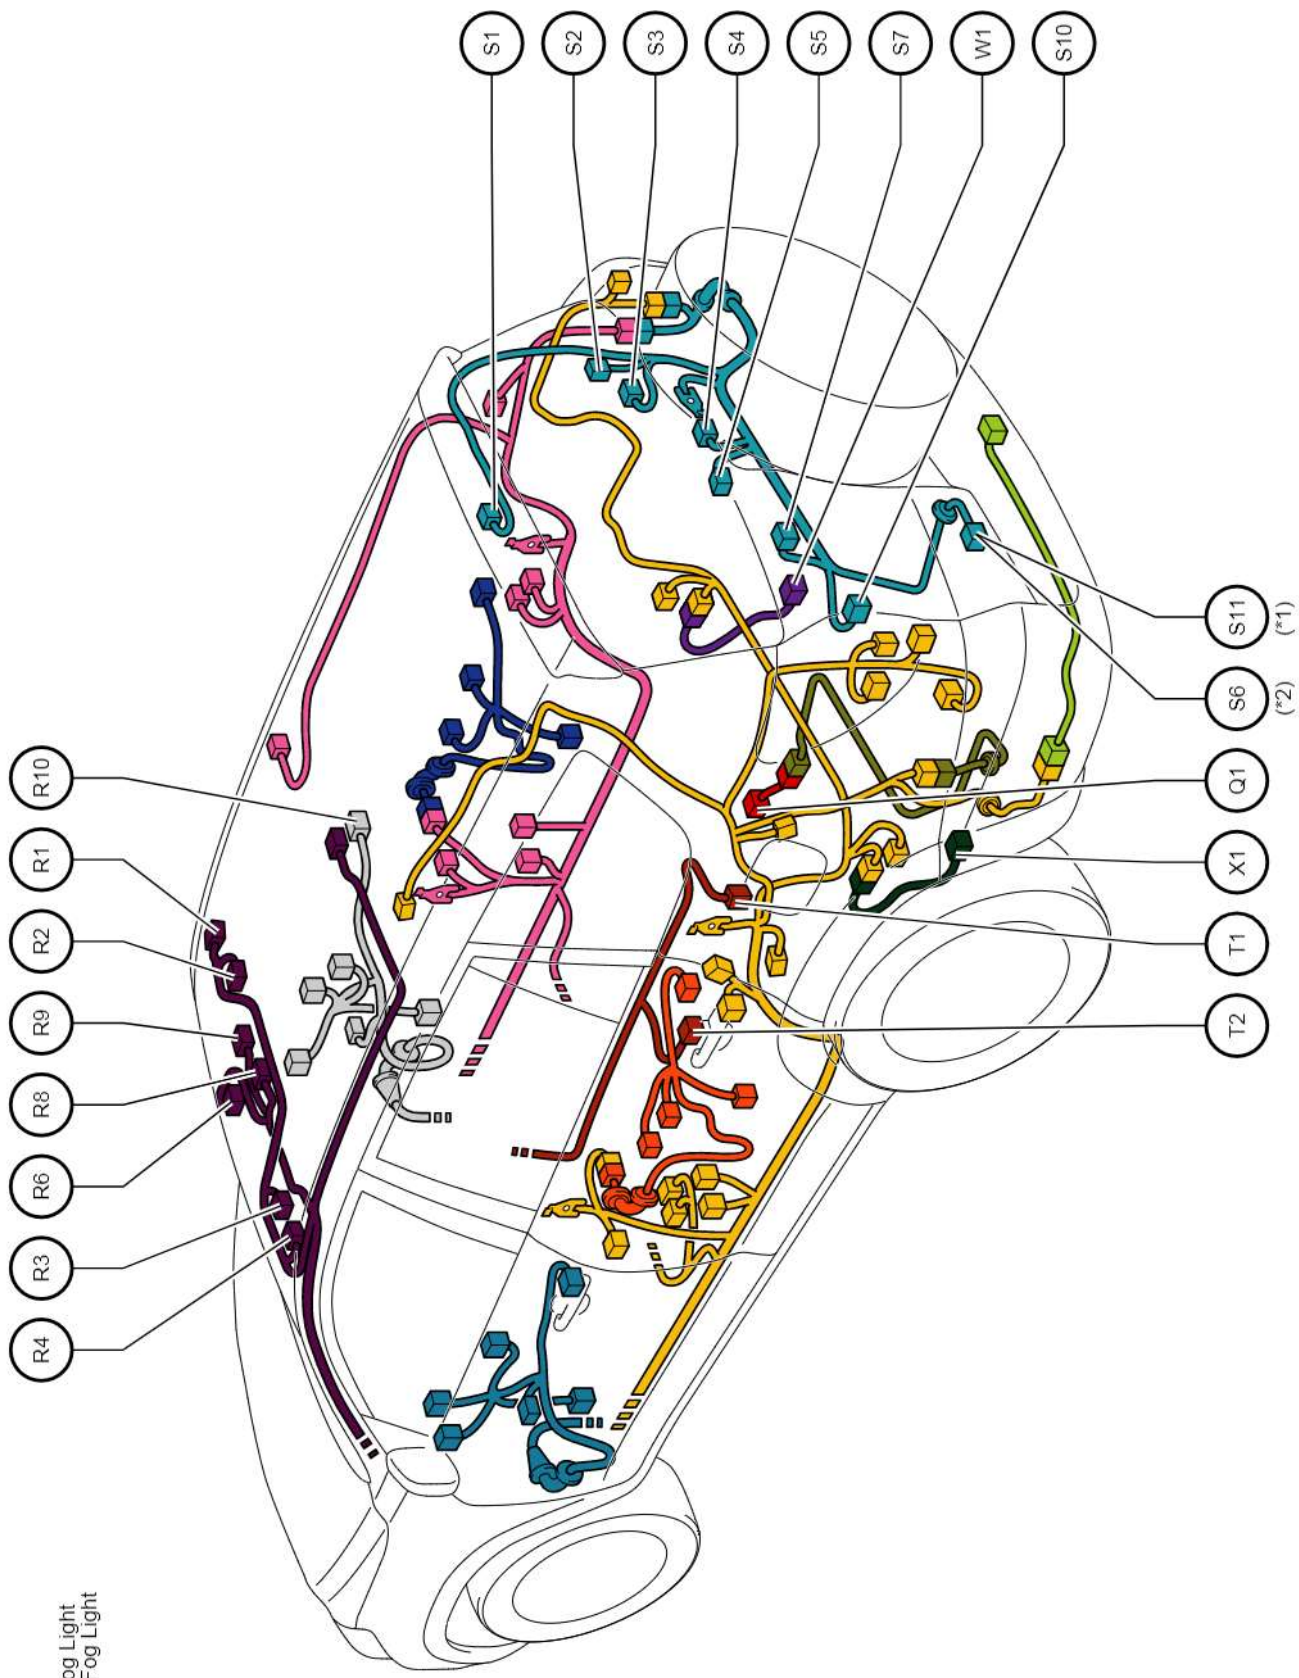


Q	1	4WD Linear Solenoid
R	1	Vanity Lamp SW (RH)
R	2	Vanity Lamp (RH)
R	3	Vanity Lamp (LH)
R	4	Vanity Lamp SW (LH)
R	6	Inner Rear View Mirror
R	8	Overhead J/B
R	9	Sliding Roof Control ECU
R	10	Room Lamp (Front)
S	1	Center Stop Lamp
S	2	Rear Window Defogger
S	3	Room Lamp (Rear)
S	4	Noise Filter (Stop and Rear Window Defogger)
S	5	Rear Wiper Motor
S	6	License Plate Lamp (RH)
S	6	License Plate Lamp (RH)
S	7	Television Camera (Rear)
S	10	Back Door Lock Assembly
S	11	Rear Fog Light (Center)
T	1	Fuel Suction Pump
T	2	Fuel Sender Gage
W	1	Speed Sensor (Rear RH)
X	1	Speed Sensor (Rear LH)

Position of Parts in Body <RHD Long Body>

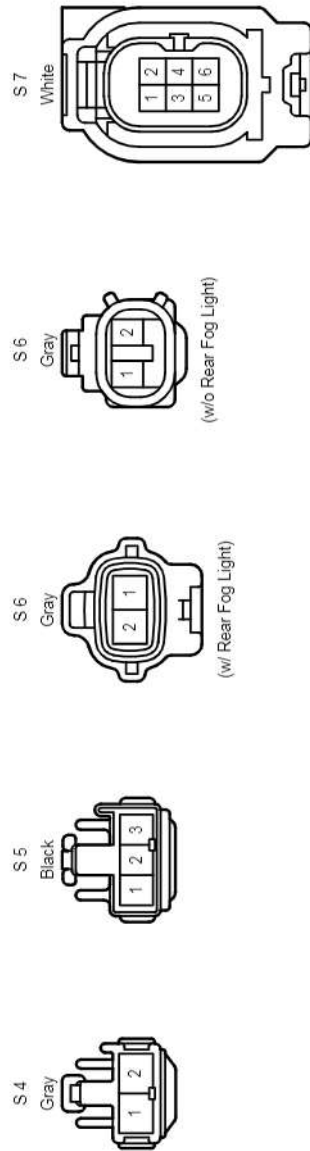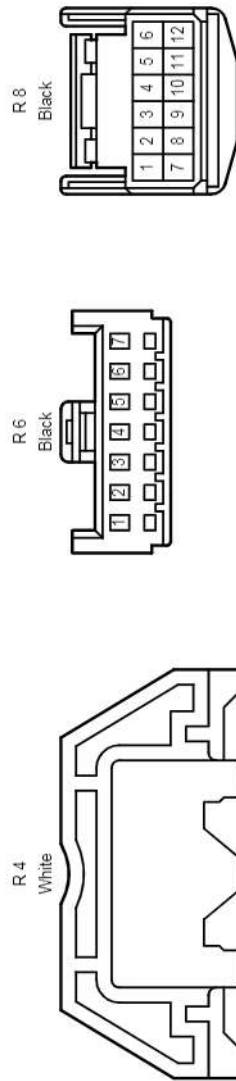


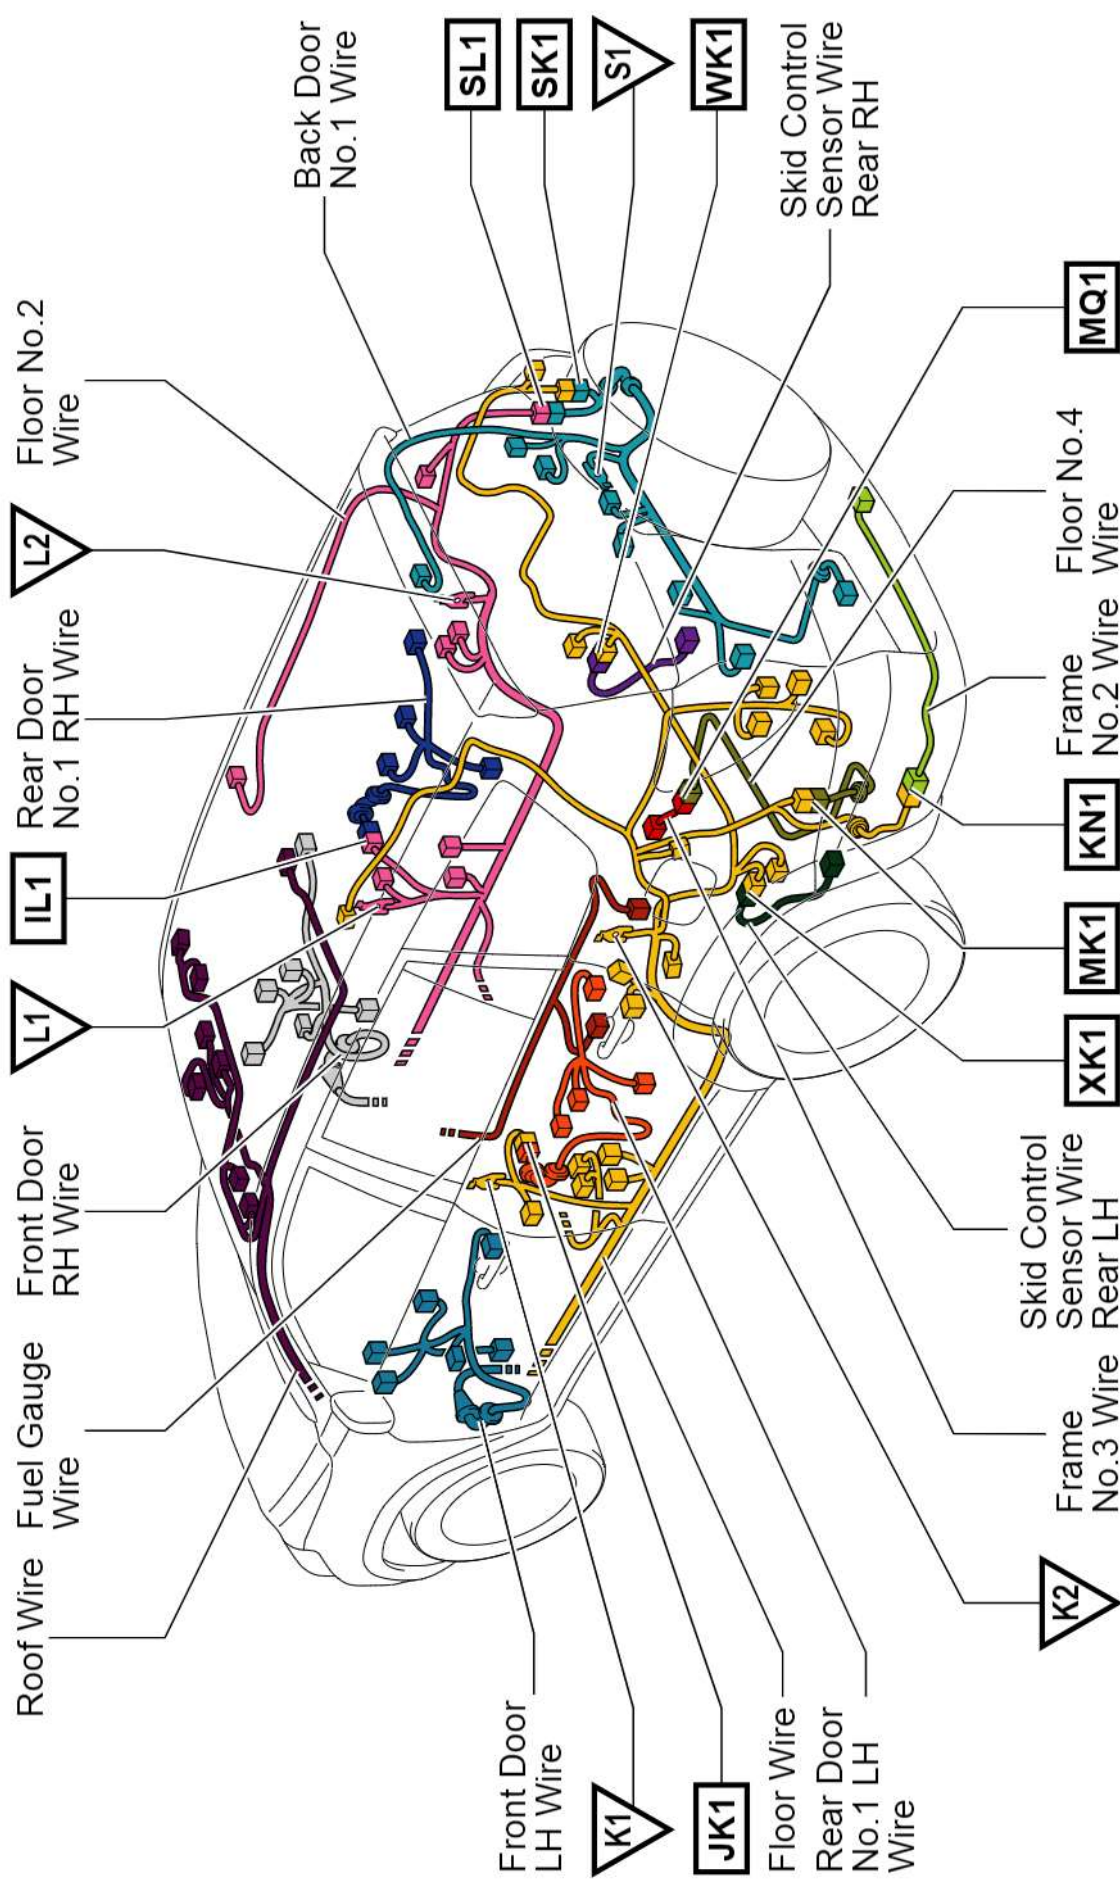


IL1
White

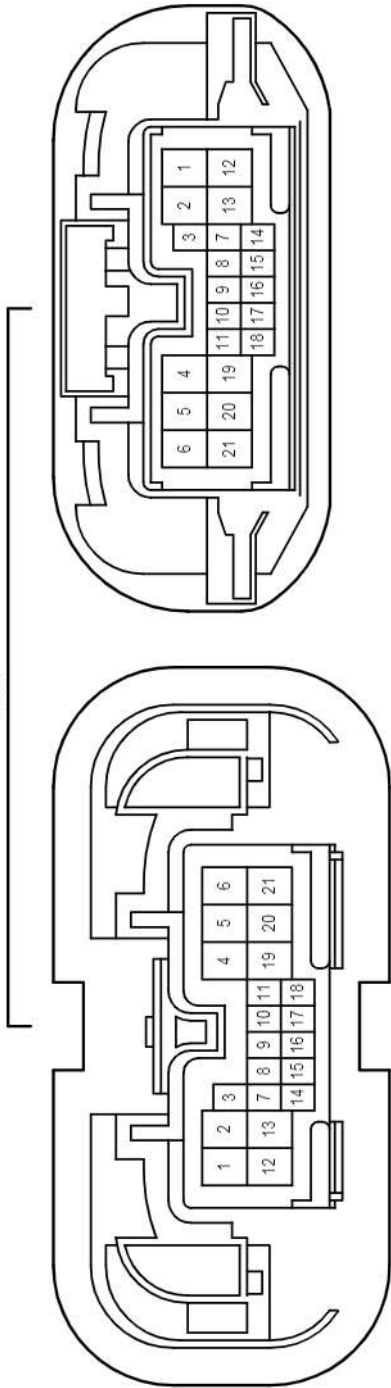


JK1
White

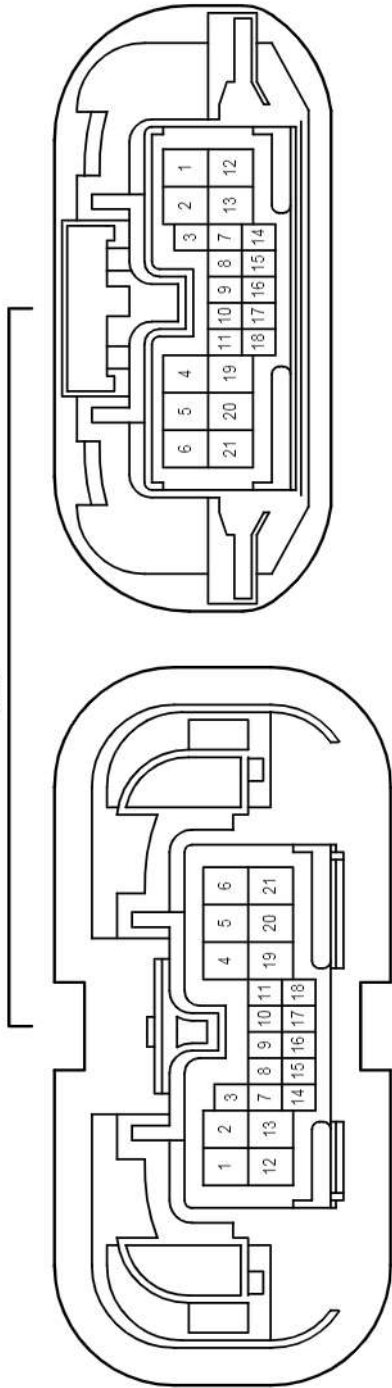


KN1
White

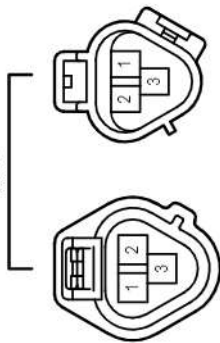

MK1
White


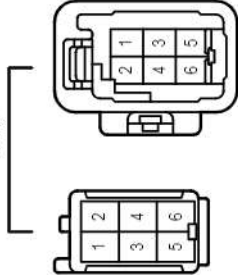


MQ1
Black

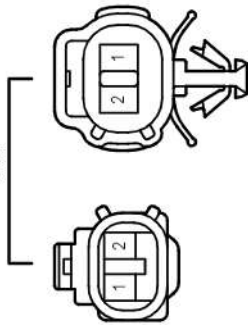


SK1
White



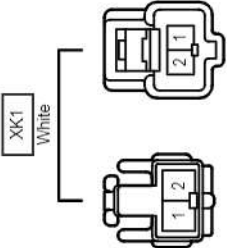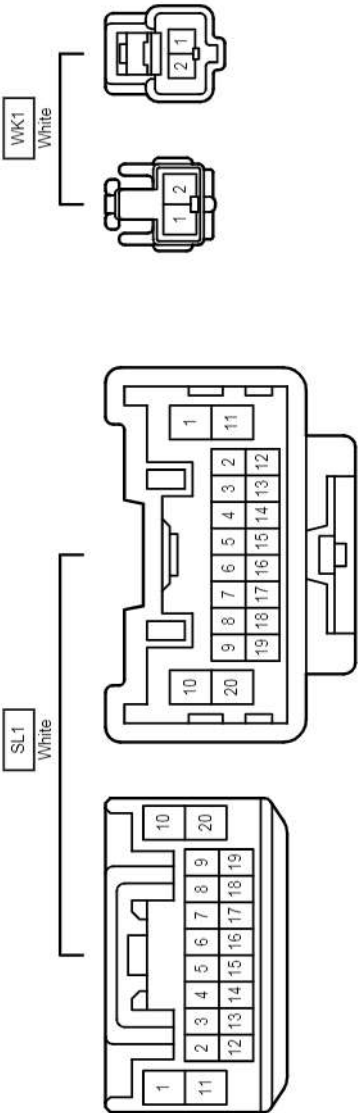




Position of Parts in Body <LHD Short Body>

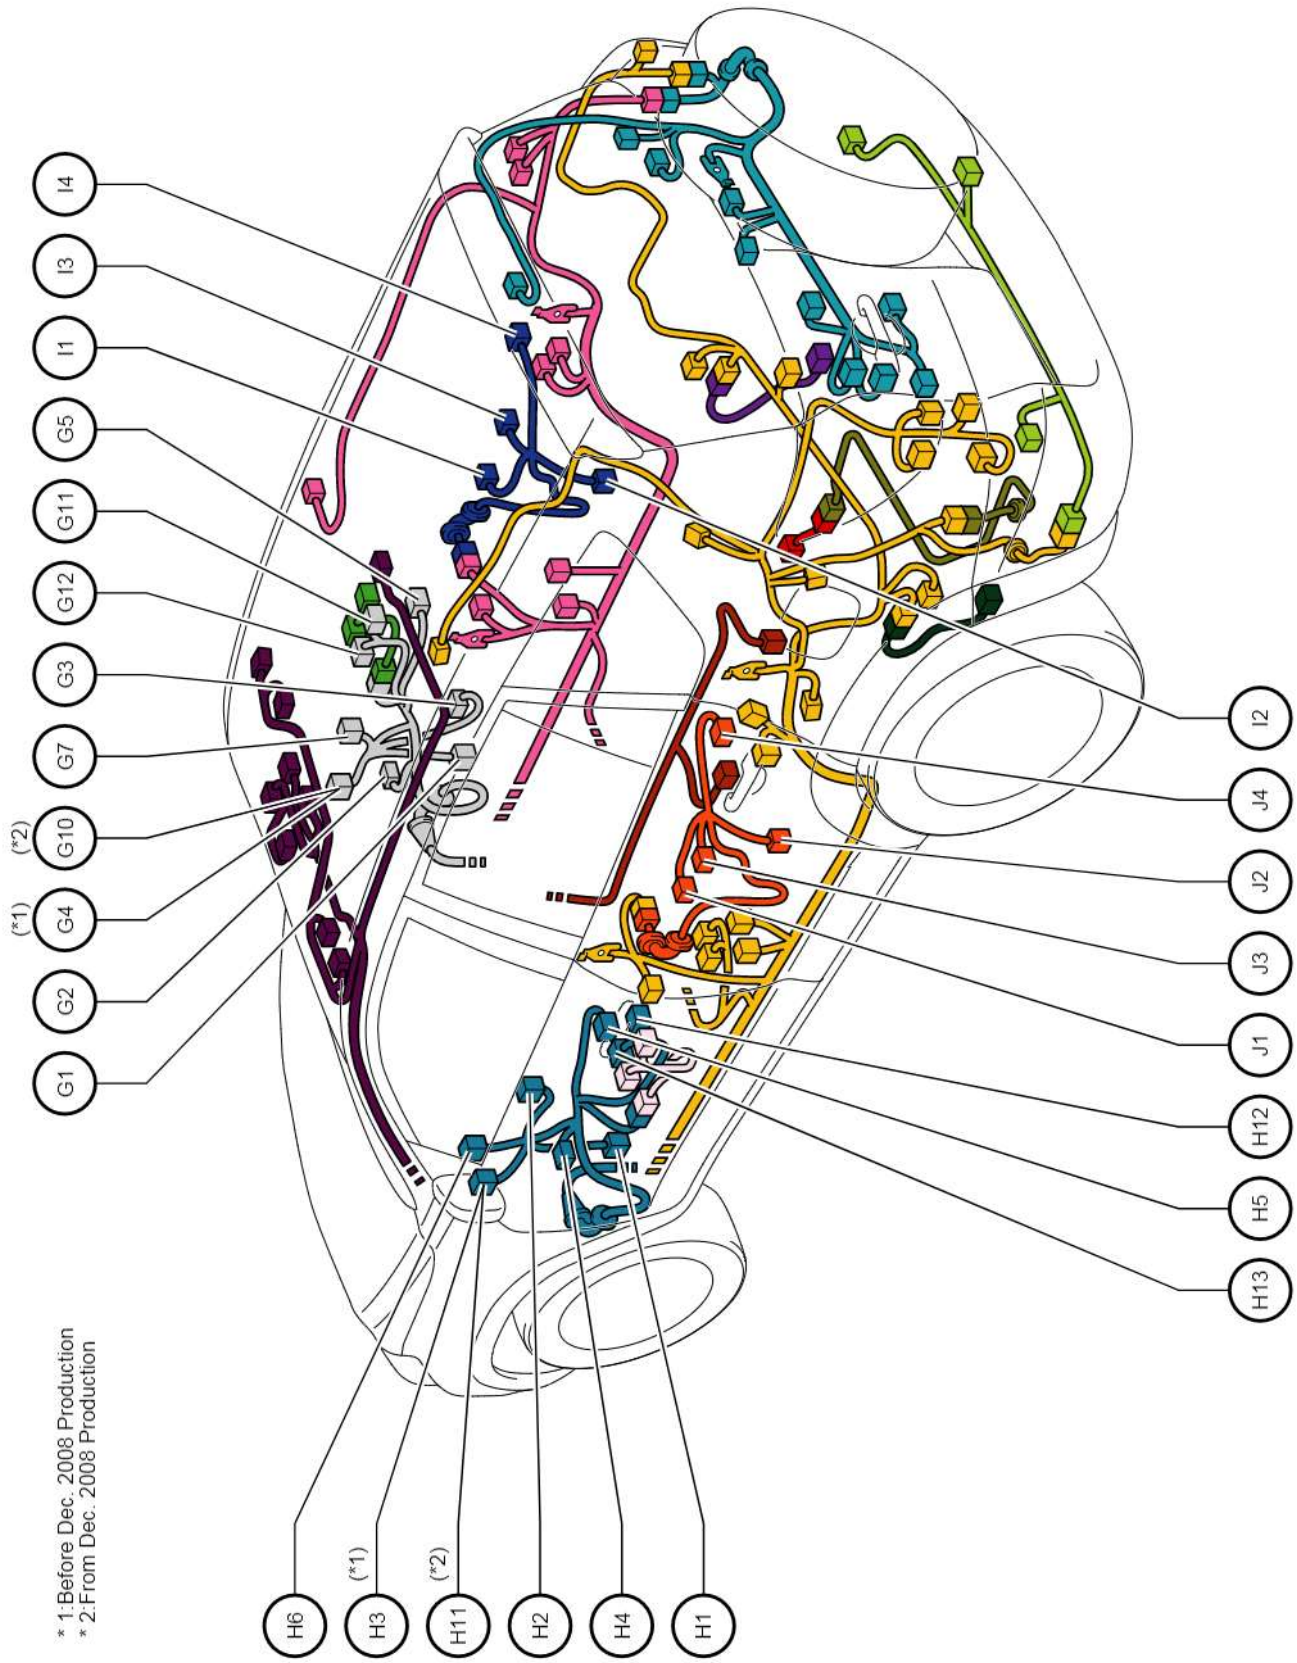

* 1: Before Dec. 2008 Production
* 2: From Dec. 2008 Production

















G	1	Speaker (Front Door RH)
G	2	Power Window Regulator Motor (Front RH)
G	3	Power Window SW (Front Passenger's Side)
G	3	Power Window SW (Front Passenger's Side)
G	4	Outer Rear View Mirror (RH)
G	5	Door Lock Assembly (Front RH)
G	7	Tweeter (Front RH)
G	10	Outer Rear View Mirror (RH)
G	11	Electrical Key Oscillator (Front Door RH)
G	12	Door Outside Handle (Front RH)
H	1	Speaker (Front Door LH)
H	2	Power Window SW (Driver's Side)
H	3	Outer Rear View Mirror (LH)
H	4	Power Window Regulator Motor (Front LH)
H	5	Door Lock Assembly (Front LH)
H	6	Tweeter (Front LH)
H	11	Outer Rear View Mirror (LH)
H	12	Electrical Key Oscillator (Front Door LH)
H	13	Door Outside Handle (Front LH)
I	1	Power Window SW (Rear RH)
I	2	Speaker (Rear RH)
I	3	Power Window Regulator Motor (Rear RH)
I	4	Door Lock Assembly (Rear RH)
J	1	Power Window SW (Rear LH)
J	2	Speaker (Rear LH)
J	3	Power Window Regulator Motor (Rear LH)
J	4	Door Lock Assembly (Rear LH)

Position of Parts in Body <LHD Short Body>

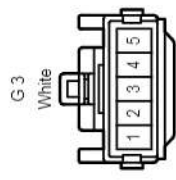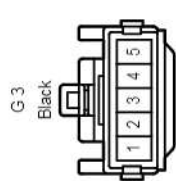
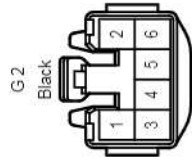


(From Aug. 2007 Production)

 
(Before Aug. 2007 Production)

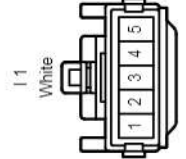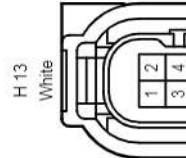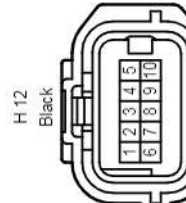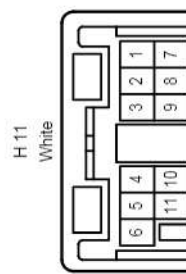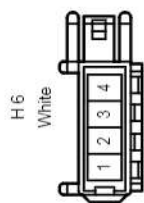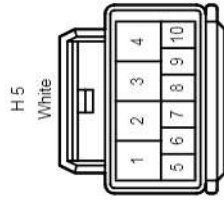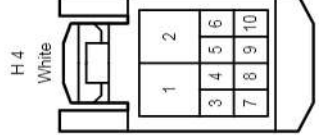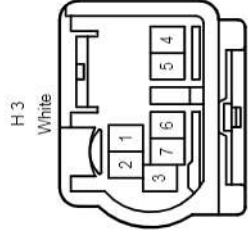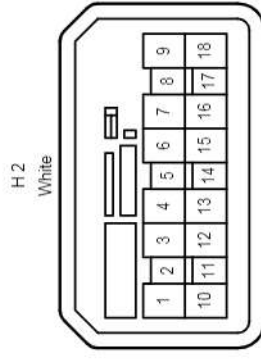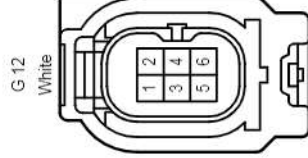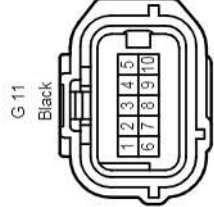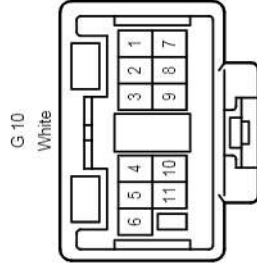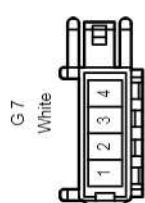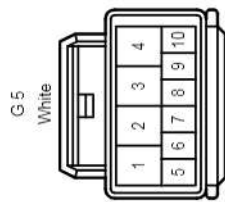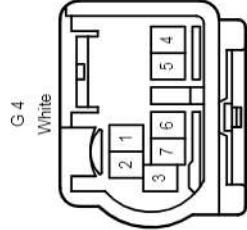

cardiagn.com



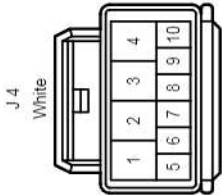
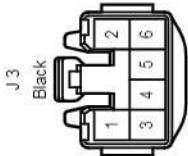


Position of Parts in Body <LHD Short Body>

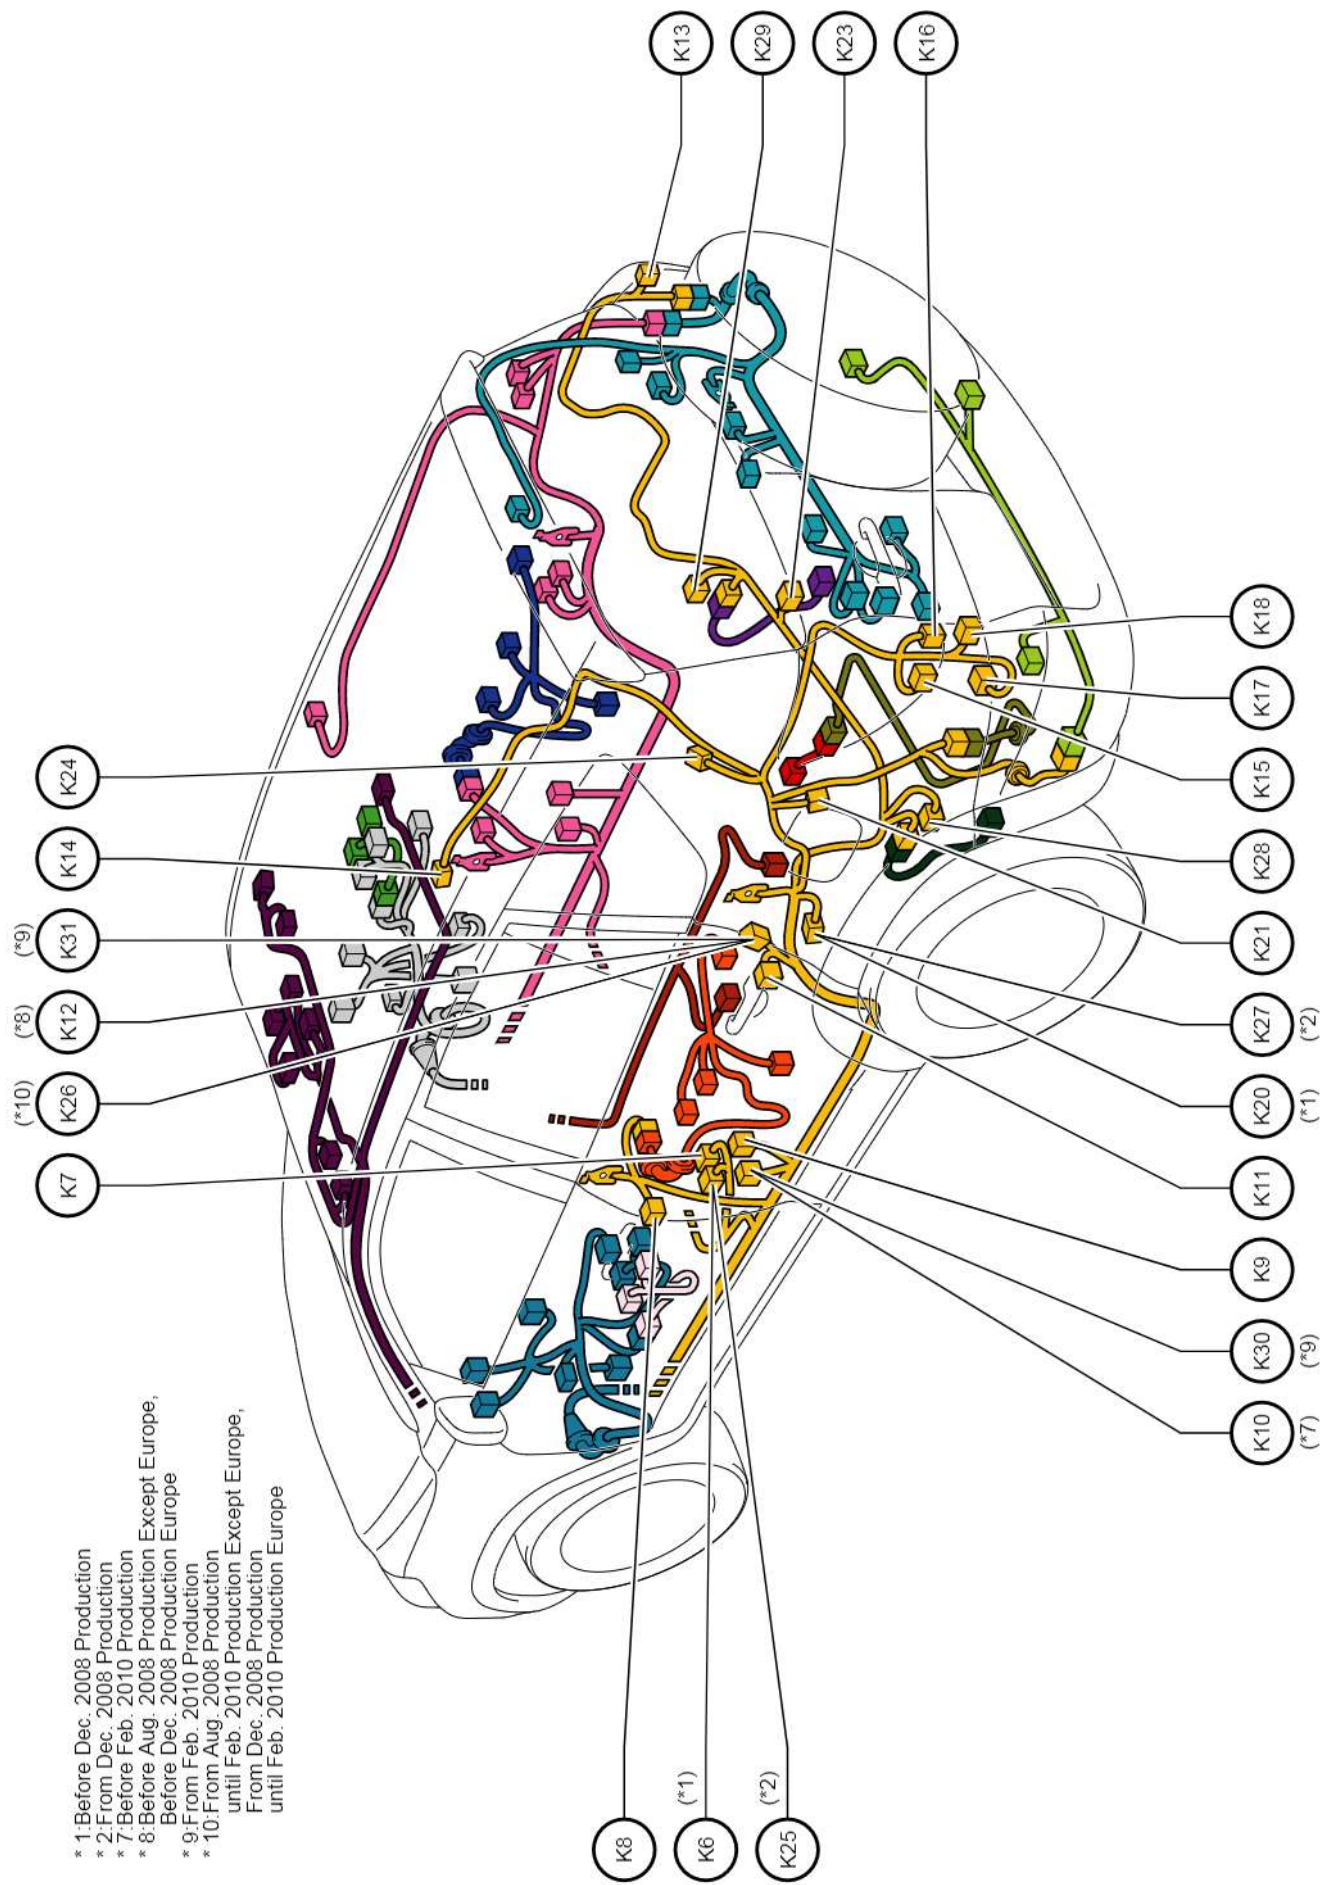

K	6	Yaw Rate Sensor
K	7	Deceleration Sensor
K	8	Door Courtesy SW (Front LH)
K	9	Pretensioner (LH)
K	10	Side Airbag Sensor (Front LH)
K	11	Door Courtesy SW (Rear LH)
K	12	Side Airbag Sensor (Rear LH)
K	13	Rear Combination Lamp (RH)
K	14	Curtain Shield Airbag Squib (LH)
K	15	Rear Combination Lamp (LH)
K	16	Diode (Room Lamp)
K	17	Power Outlet Socket (Rear)
K	18	Door Courtesy SW (Back Door)
K	20	Junction Connector
K	21	Junction Connector
K	23	Electrical Key Oscillator (Inside Luggage Room)
K	23	Electrical Key Oscillator (Inside Luggage Room)
K	24	Tire Pressure Warning Antenna (Rear)
K	25	Yaw Rate Sensor
K	26	Side Airbag Sensor (Rear LH)
K	27	Junction Connector
K	28	Speed Sensor (Rear LH)
K	29	Speed Sensor (Rear RH)
K	30	Side Airbag Sensor (Front LH)
K	31	Side Airbag Sensor (Rear LH)

Position of Parts in Body <LHD Short Body>

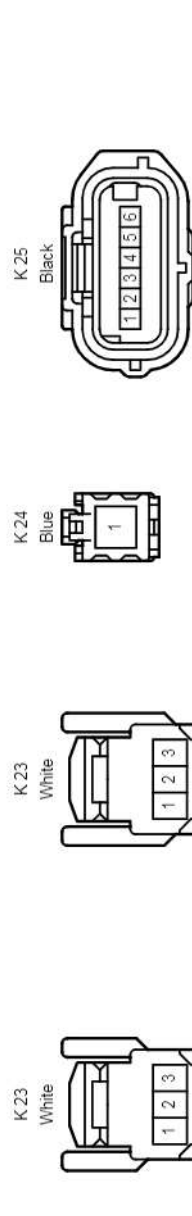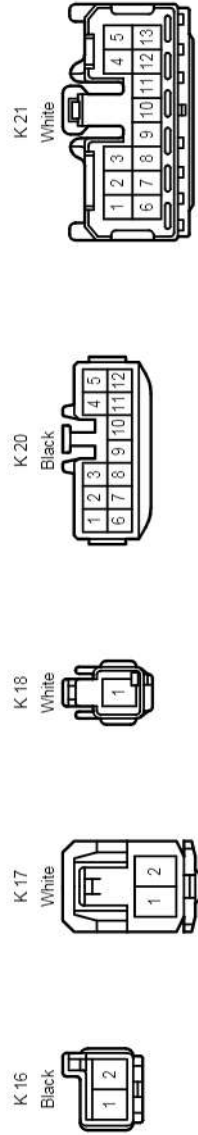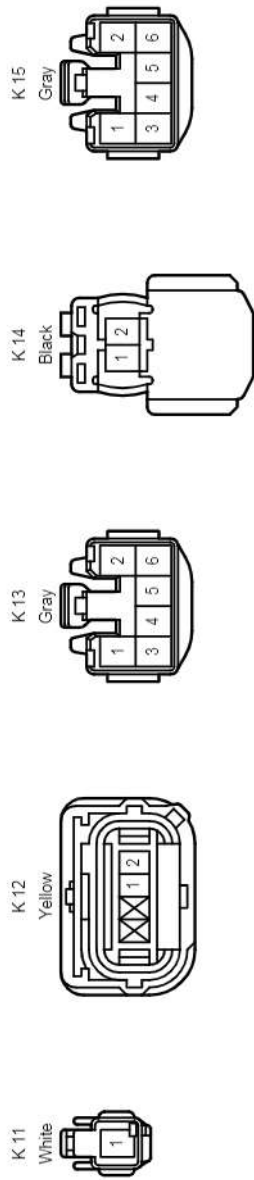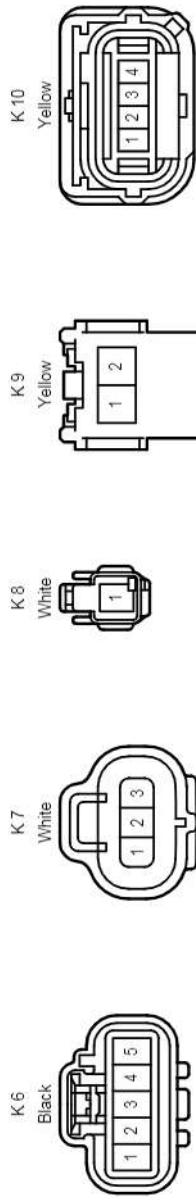


(From Aug. 2007 Production)

(Before Aug. 2007 Production)












Position of Parts in Body <LHD Short Body>

- * 3:w/ Rear Fog Light
- * 4:w/o Rear Fog Light
- * 7:Before Feb. 2010 Production
- * 8:Before Aug. 2008 Production Except Europe,
Before Dec. 2008 Production Europe
- * 9:From Feb. 2010 Production
- * 10:From Aug. 2008 Production
until Feb. 2010 Production Except Europe,
From Dec. 2008 Production
until Feb. 2010 Production Europe

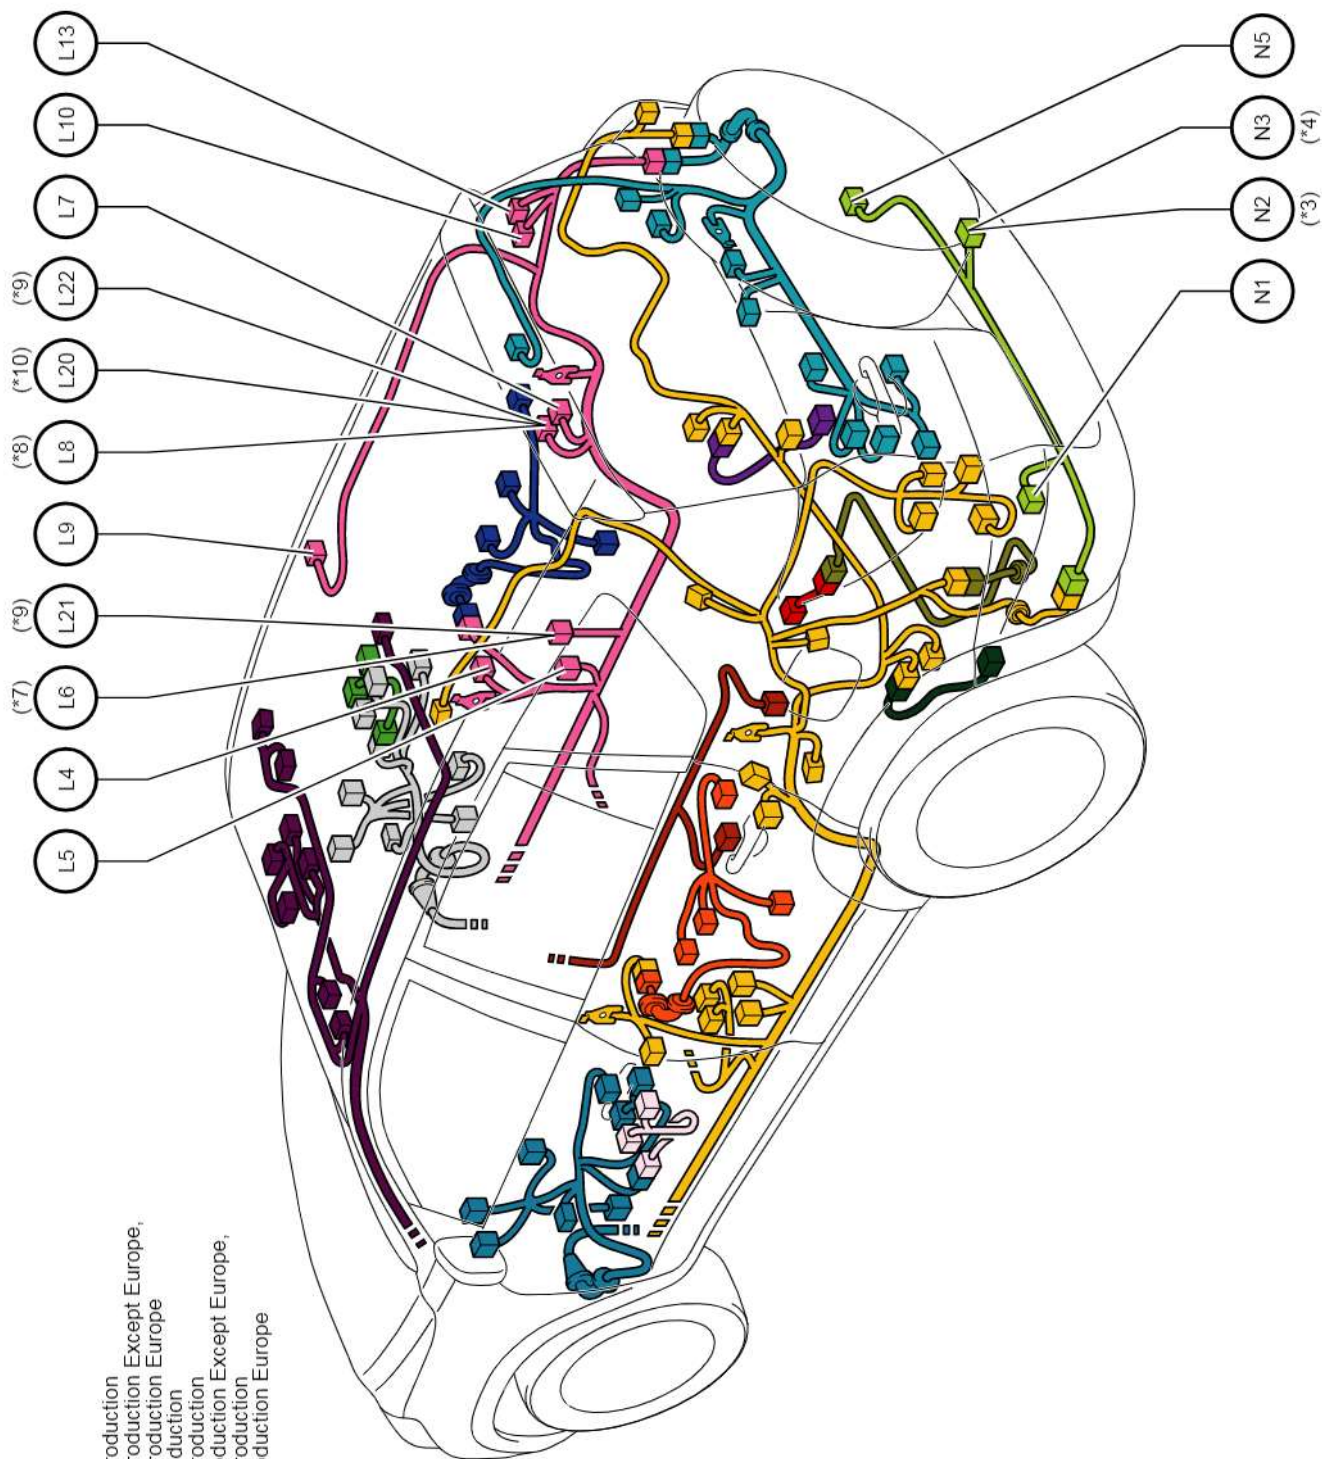


- L 4 Door Courtesy SW (Front RH)
- L 5 Pretensioner (RH)
- L 6 Side Airbag Sensor (Front RH)
- L 7 Door Courtesy SW (Rear RH)
- L 8 Side Airbag Sensor (Rear RH)
- L 9 Curtain Shield Airbag Squib (RH)
- L 10 Door Control Receiver
- L 13 Door Control Receiver
- L 20 Side Airbag Sensor (Rear RH)
- L 21 Side Airbag Sensor (Front RH)
- L 22 Side Airbag Sensor (Rear RH)
- N 1 Rear Fog Light (LH)
- N 2 License Plate Lamp (LH)
- N 3 License Plate Lamp
- N 5 Rear Fog Light (RH)

Position of Parts in Body <LHD Short Body>










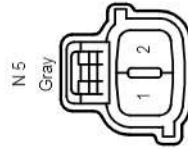
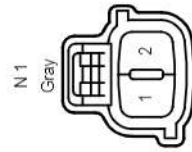
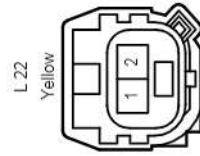
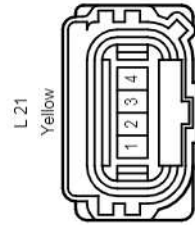
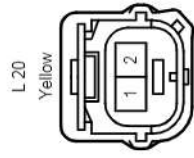
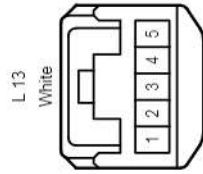
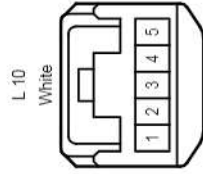
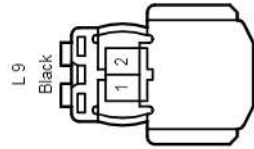
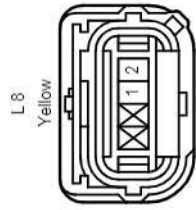
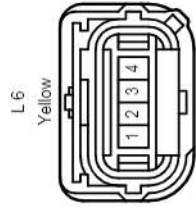
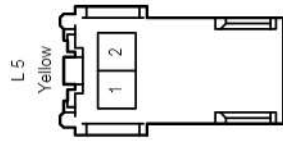


Position of Parts in Body <LHD Short Body>

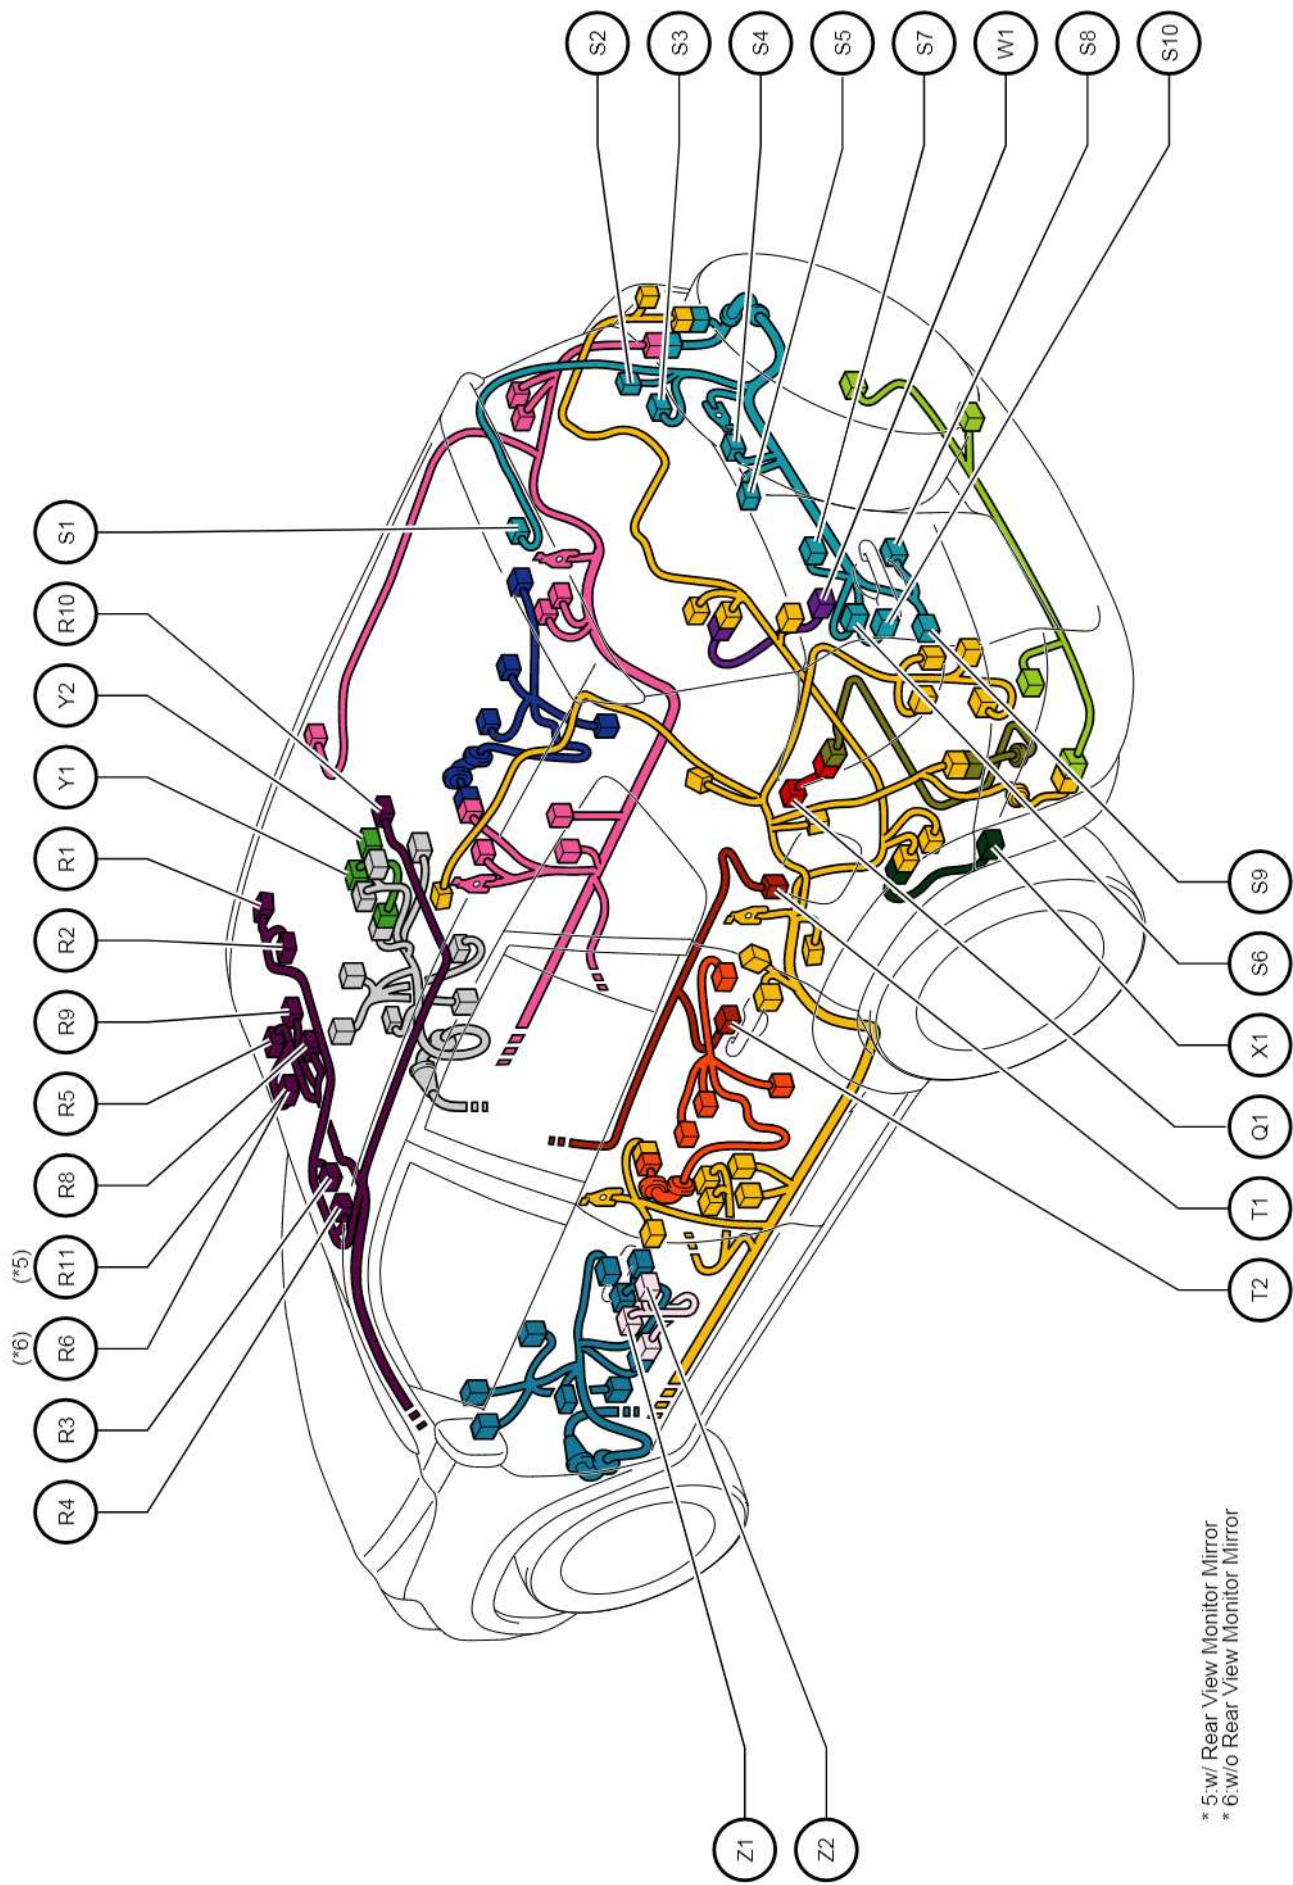


Q	1	4WD Linear Solenoid
R	1	Vanity Lamp SW (RH)
R	2	Vanity Lamp (RH)
R	3	Vanity Lamp (LH)
R	4	Vanity Lamp SW (LH)
R	5	Rain Sensor
R	6	Inner Rear View Mirror
R	8	Overhead J/B
R	9	Sliding Roof Control ECU
R	10	Room Lamp (Front)
R	11	Inner Rear View Mirror
S	1	Center Stop Lamp
S	2	Rear Window Defogger
S	3	Room Lamp (Rear)
S	4	Noise Filter (Stop and Rear Window Defogger)
S	5	Rear Wiper Motor
S	6	License Plate Lamp (RH)
S	6	License Plate Lamp (RH)
S	7	Television Camera (Rear)
S	8	Electrical Key Oscillator (Back Door)
S	9	Door Outside Handle (Back Door)
S	10	Back Door Lock Assembly
T	1	Fuel Suction Pump
T	2	Fuel Sender Gage
W	1	Speed Sensor (Rear RH)
X	1	Speed Sensor (Rear LH)
Y	1	Door Outside Handle (Front RH)
Y	2	Electrical Key Oscillator (Front Door RH)
Z	1	Door Outside Handle (Front LH)
Z	2	Electrical Key Oscillator (Front Door LH)

  Position of Parts in Body <LHD Short Body>

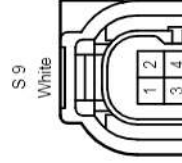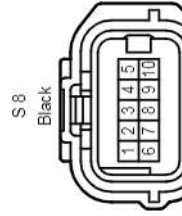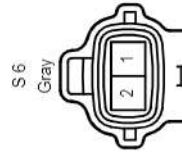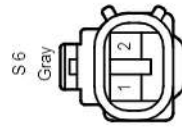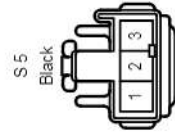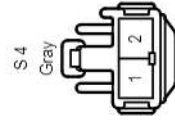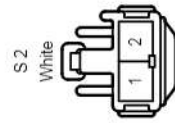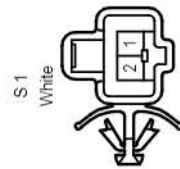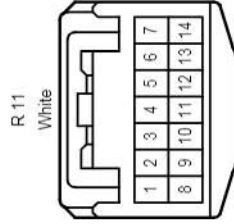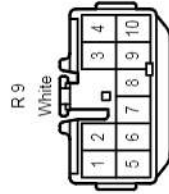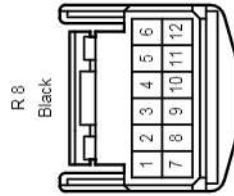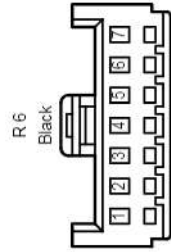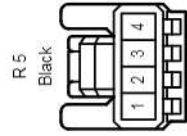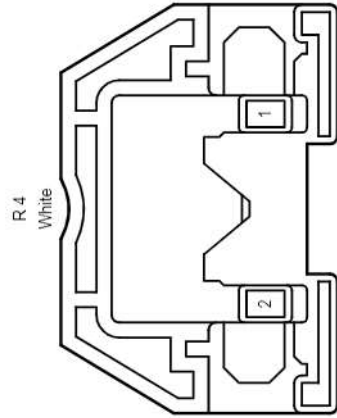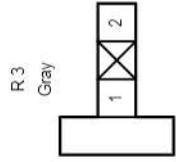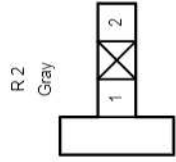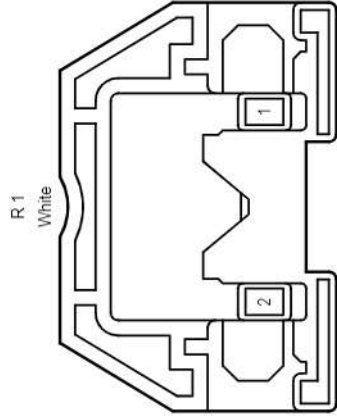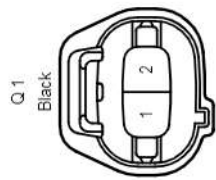


Position of Parts in Body <LHD Short Body>


Y 1
White

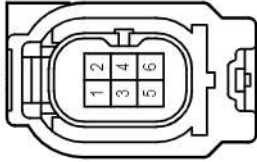


Y 2
Black

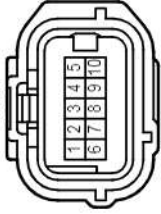

Z 1
White

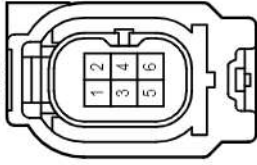





Z 2
Black

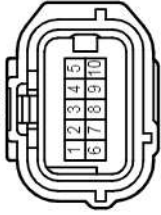





GY1
Gray



HZ1
Gray

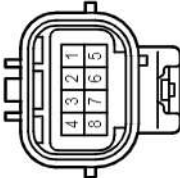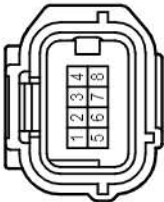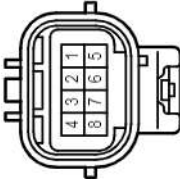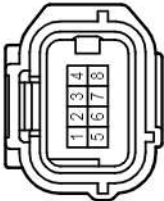

IL1
White

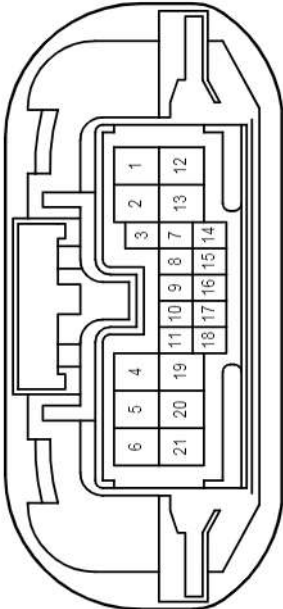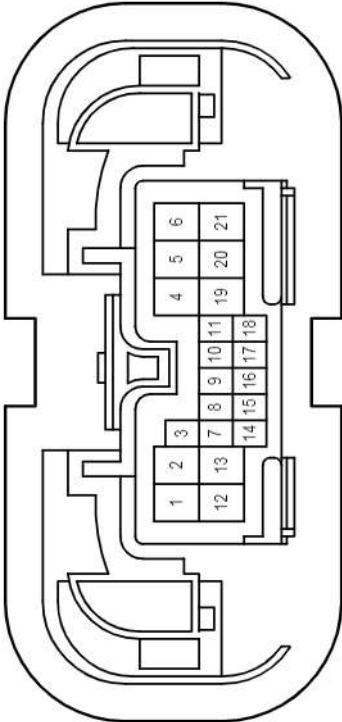

JK1
White

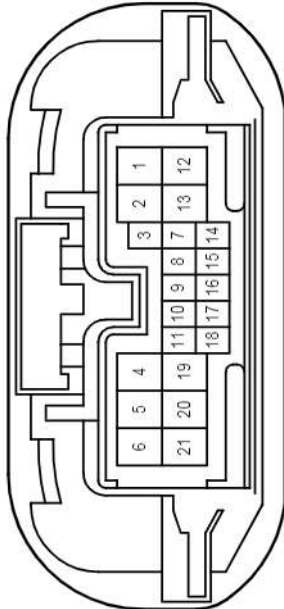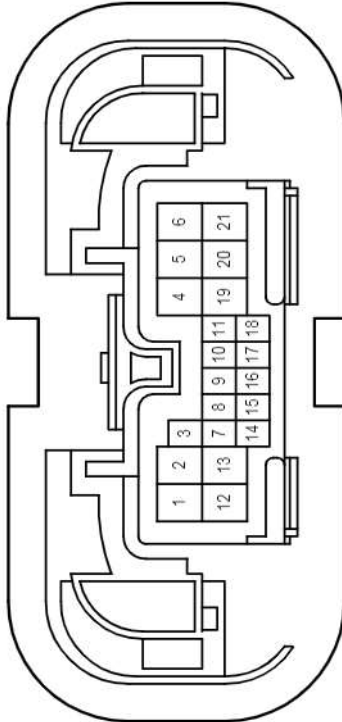


KN1
White


MK1
White

MQ1
Black





















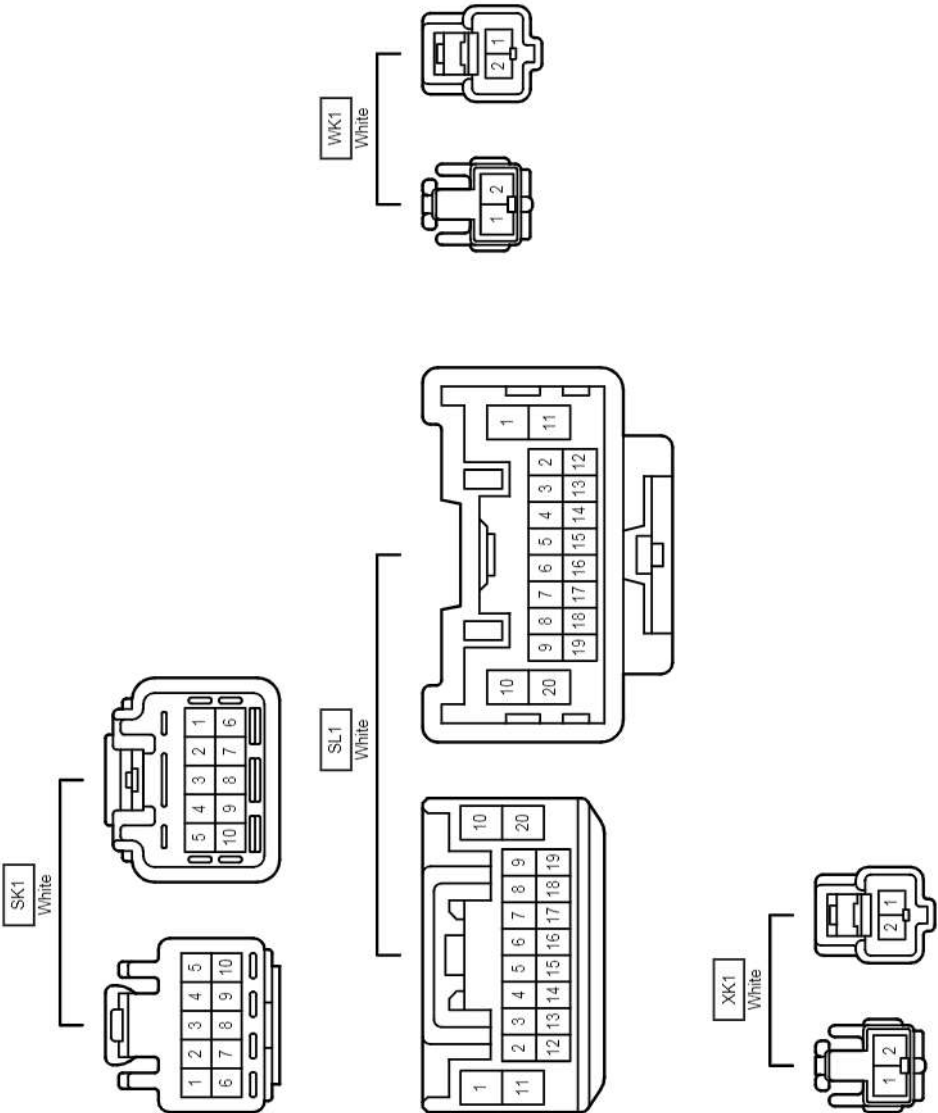


Position of Parts in Body <RHD Short Body>

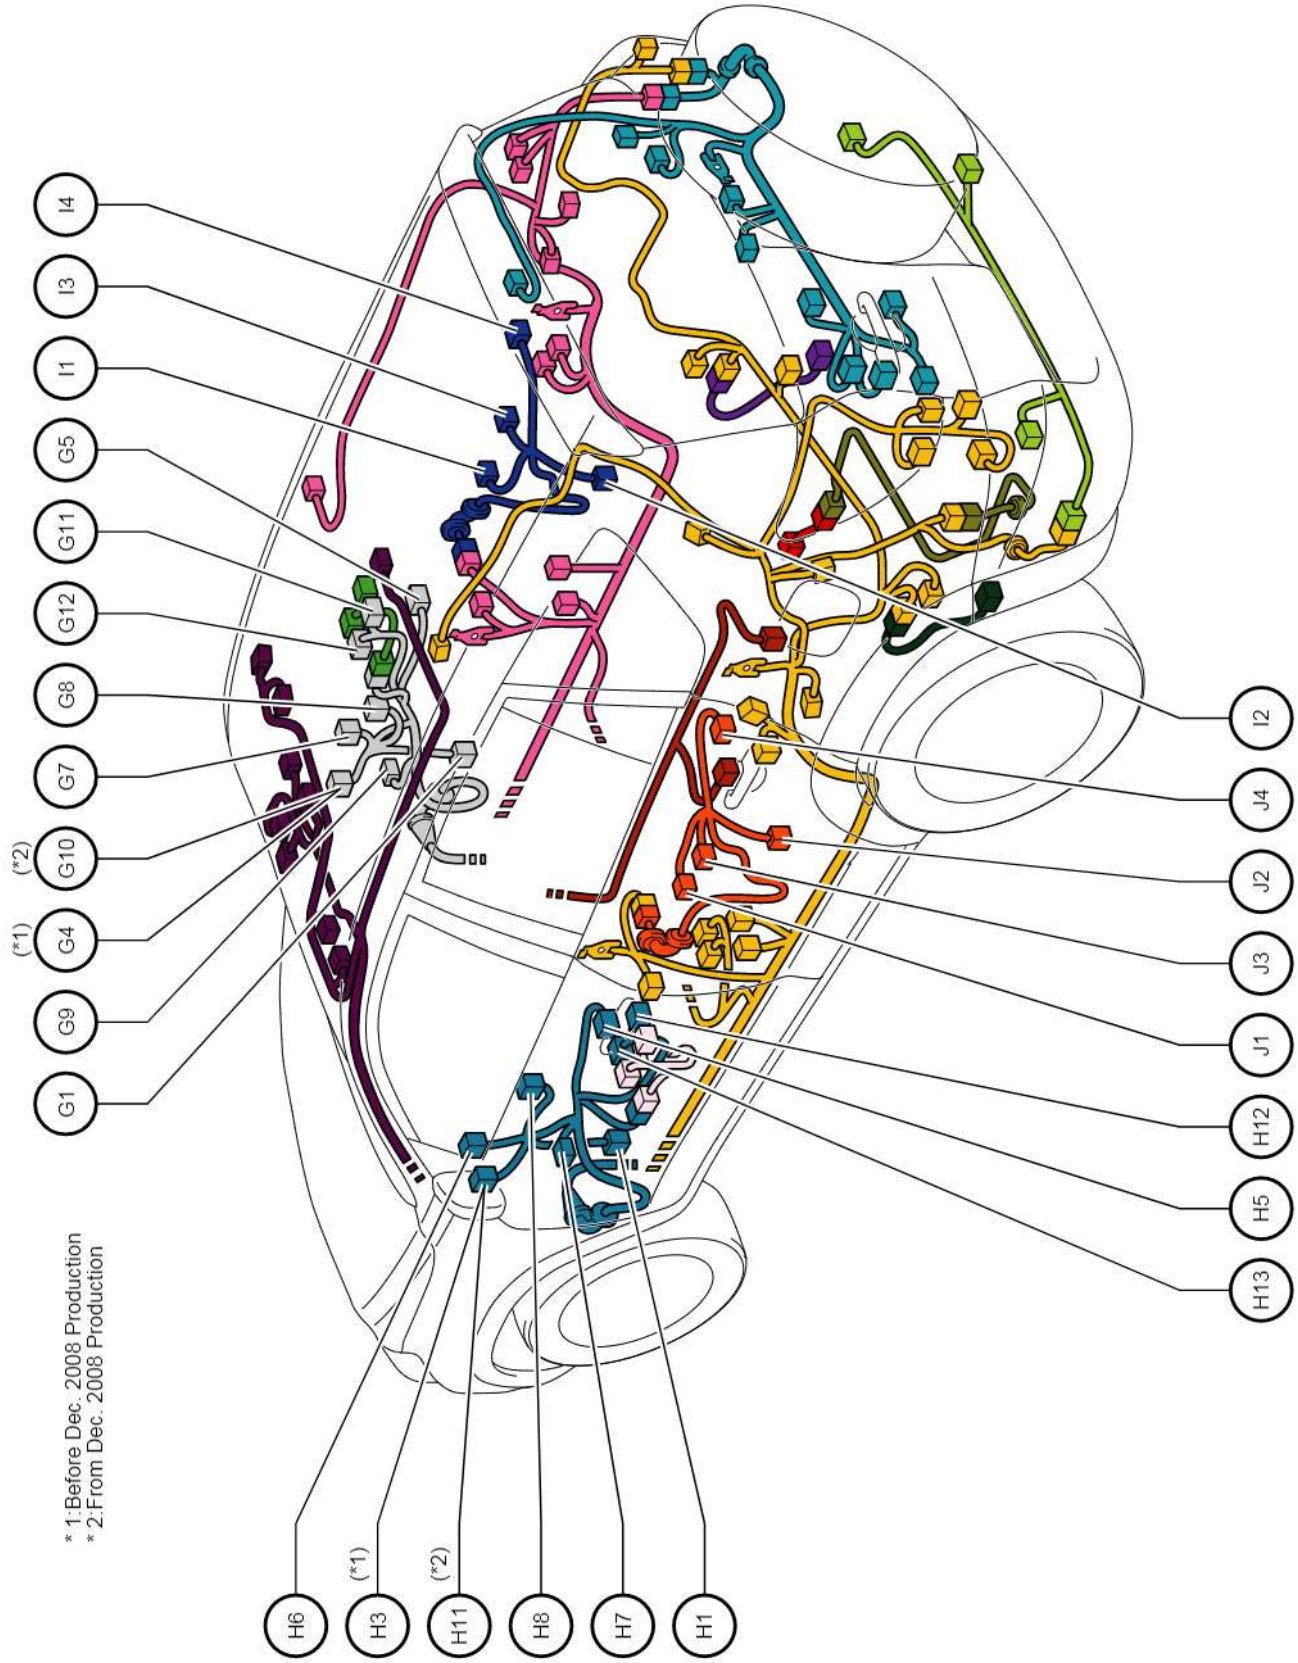

G	1	Speaker (Front Door RH)
G	4	Outer Rear View Mirror (RH)
G	5	Door Lock Assembly (Front RH)
G	7	Tweeter (Front RH)
G	8	Power Window SW (Driver's Side)
G	9	Power Window Regulator Motor (Front RH)
G	10	Outer Rear View Mirror (RH)
G	11	Electrical Key Oscillator (Front Door RH)
G	12	Door Outside Handle (Front RH)
H	1	Speaker (Front Door LH)
H	3	Outer Rear View Mirror (LH)
H	5	Door Lock Assembly (Front LH)
H	6	Tweeter (Front LH)
H	7	Power Window Regulator Motor (Front LH)
H	8	Power Window SW (Front Passenger's Side)
H	8	Power Window SW (Front Passenger's Side)
H	11	Outer Rear View Mirror (LH)
H	12	Electrical Key Oscillator (Front Door LH)
H	13	Door Outside Handle (Front LH)
I	1	Power Window SW (Rear RH)
I	2	Speaker (Rear RH)
I	3	Power Window Regulator Motor (Rear RH)
I	4	Door Lock Assembly (Rear RH)
J	1	Power Window SW (Rear LH)
J	2	Speaker (Rear LH)
J	3	Power Window Regulator Motor (Rear LH)
J	4	Door Lock Assembly (Rear LH)

 

 
Position of Parts in Body <RHD Short Body>

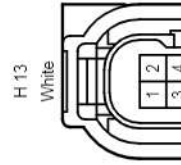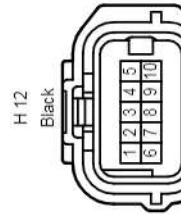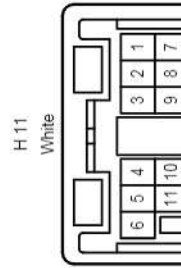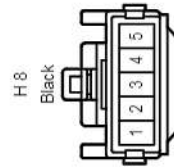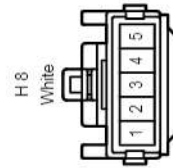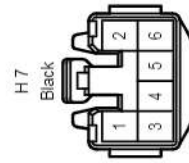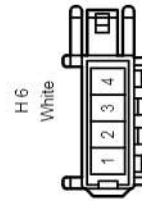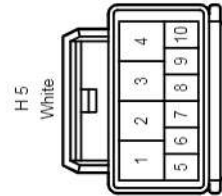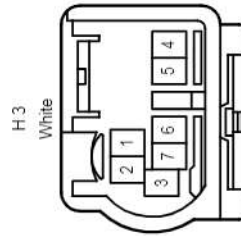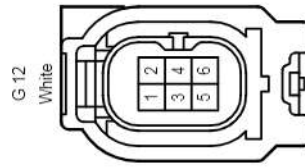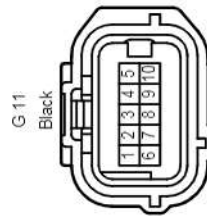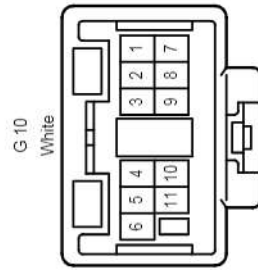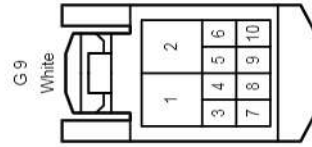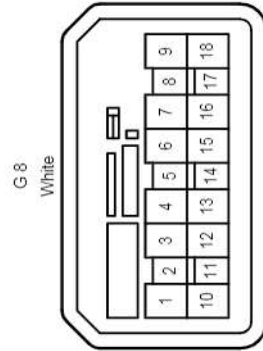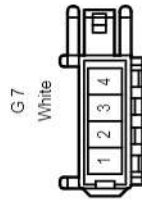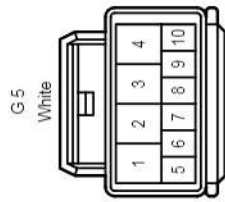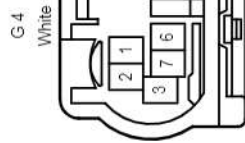


(Before Aug. 2007 Production)

cardiagn.com

 Position of Parts in Body <RHD Short Body>


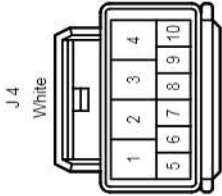
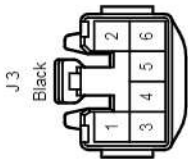



Position of Parts in Body <RHD Short Body>

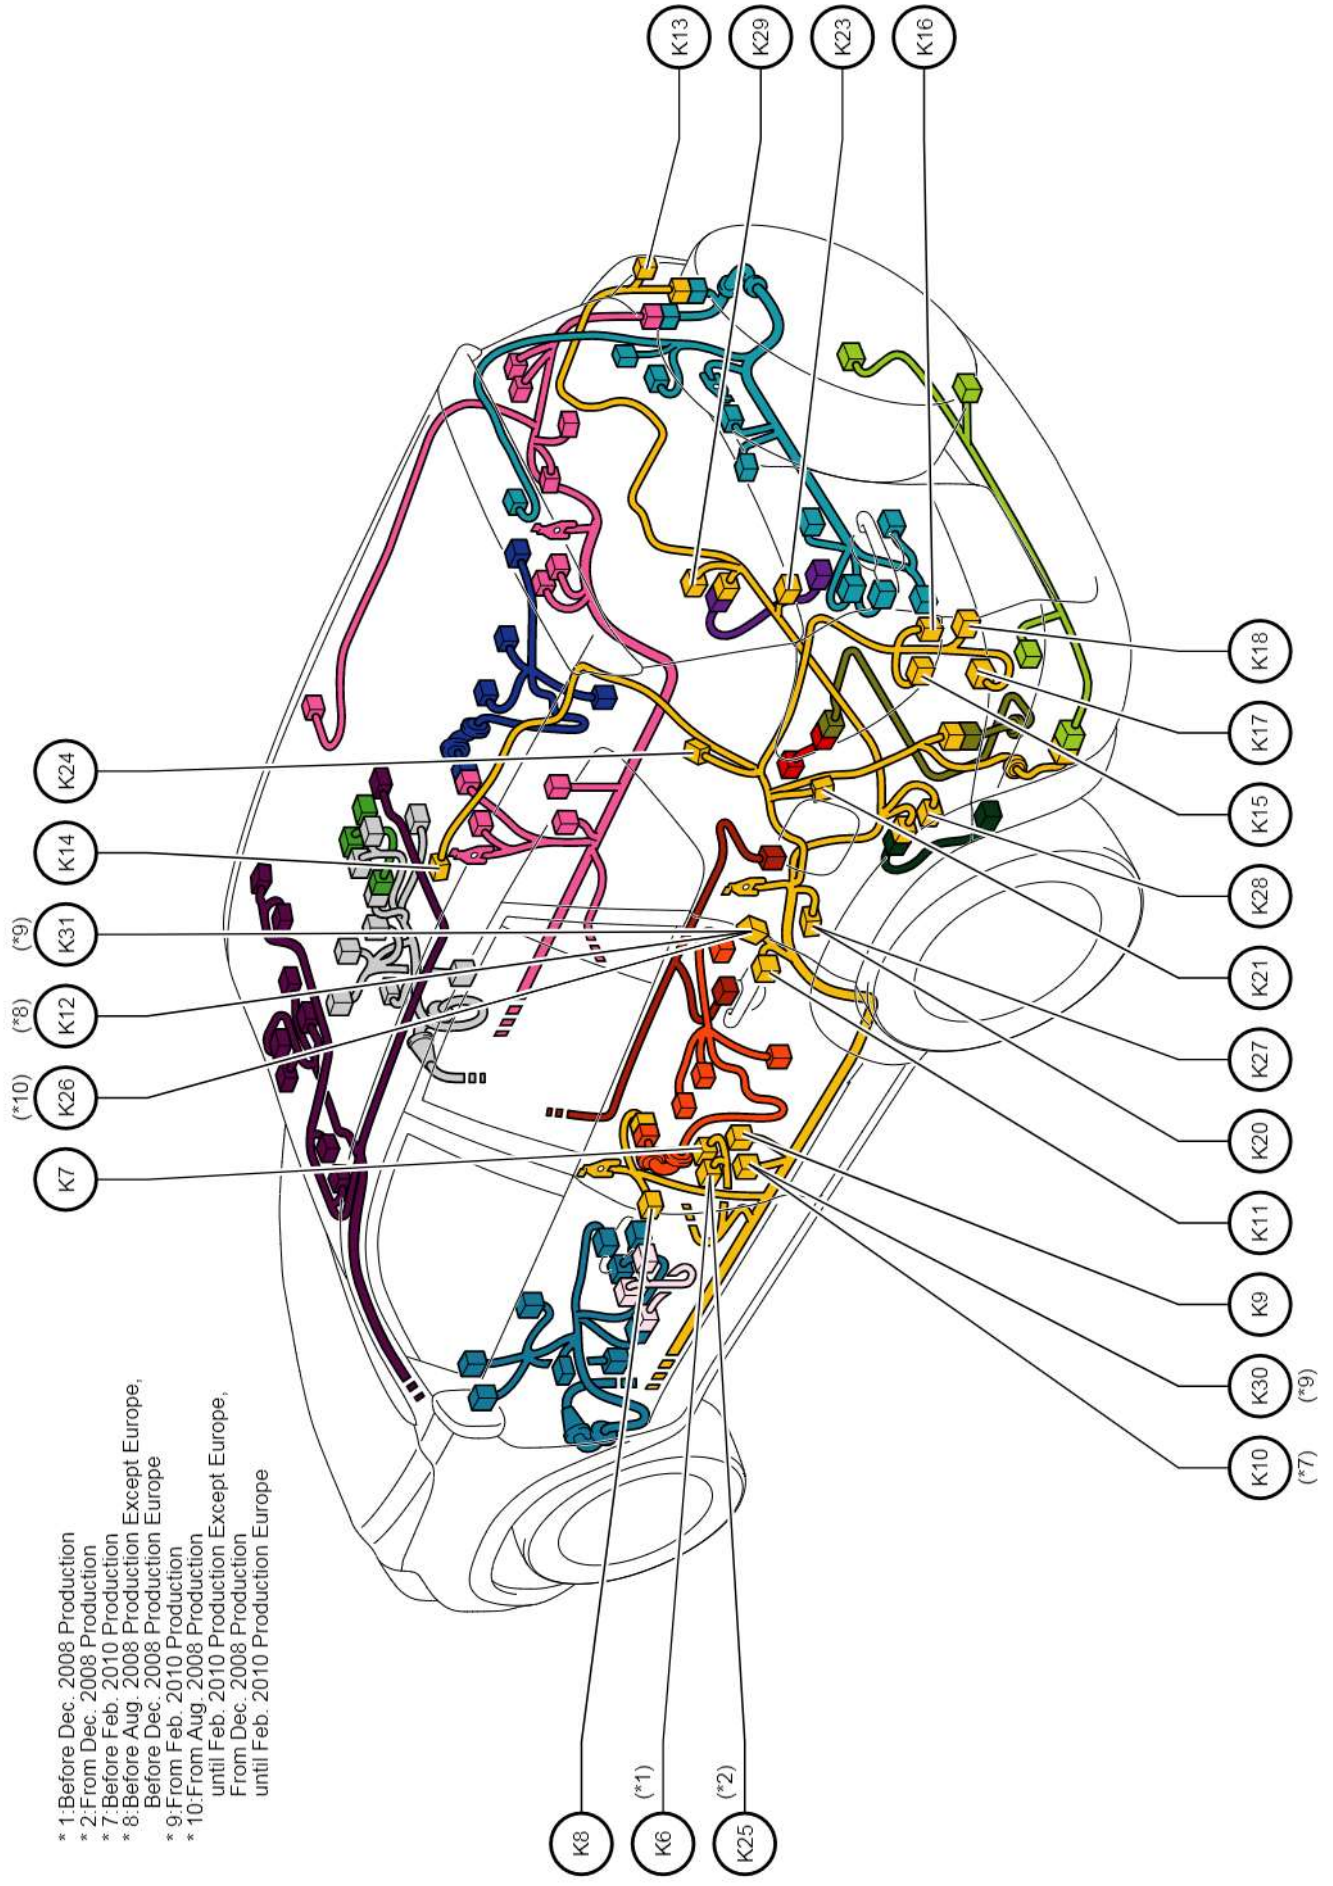

K	6	Yaw Rate Sensor
K	7	Deceleration Sensor
K	8	Door Courtesy SW (Front LH)
K	9	Pretensioner (LH)
K	10	Side Airbag Sensor (Front LH)
K	11	Door Courtesy SW (Rear LH)
K	12	Side Airbag Sensor (Rear LH)
K	13	Rear Combination Lamp (RH)
K	14	Curtain Shield Airbag Squib (LH)
K	15	Rear Combination Lamp (LH)
K	16	Diode (Room Lamp)
K	17	Power Outlet Socket (Rear)
K	18	Door Courtesy SW (Back Door)
K	20	Junction Connector
K	21	Junction Connector
K	23	Electrical Key Oscillator (Inside Luggage Room)
K	23	Electrical Key Oscillator (Inside Luggage Room)
K	24	Tire Pressure Warning Antenna (Rear)
K	25	Yaw Rate Sensor
K	26	Side Airbag Sensor (Rear LH)
K	27	Junction Connector
K	28	Speed Sensor (Rear LH)
K	29	Speed Sensor (Rear RH)
K	30	Side Airbag Sensor (Front LH)
K	31	Side Airbag Sensor (Rear LH)

Position of Parts in Body <RHD Short Body>

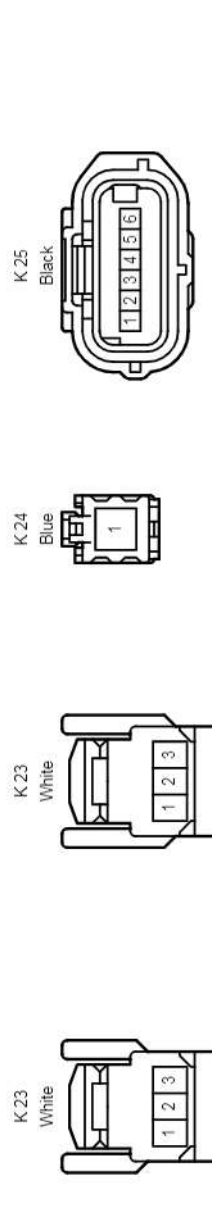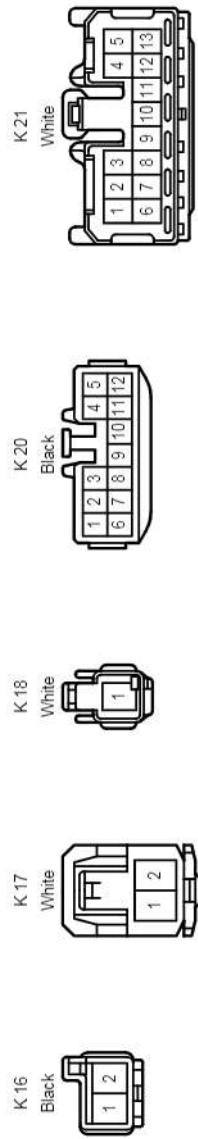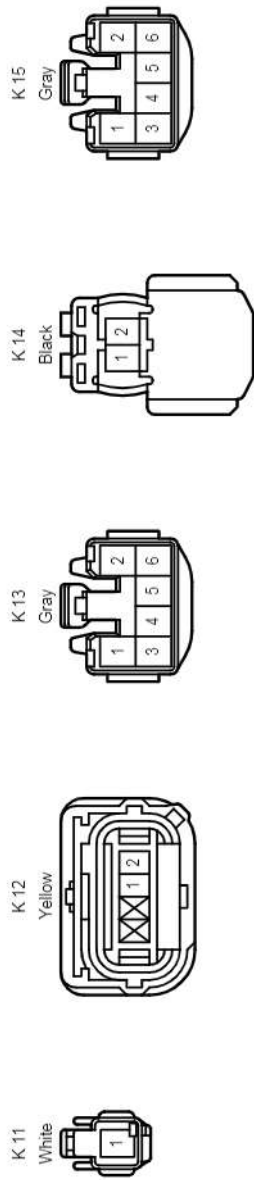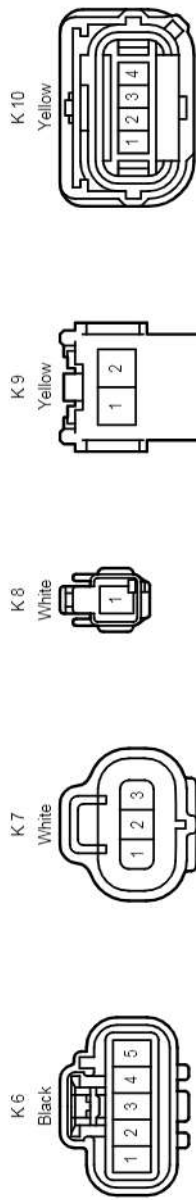


(From Aug. 2007 Production)

(Before Aug. 2007 Production)















Position of Parts in Body <RHD Short Body>

- * 3.w/ Rear Fog Light
- * 4.w/o Rear Fog Light
- * 7.Before Feb. 2010 Production
- * 8.Before Aug. 2008 Production Except Europe,
- Before Dec. 2008 Production Europe
- * 9.From Feb. 2010 Production
- * 10.From Aug. 2008 Production
- until Feb. 2010 Production Except Europe,
- From Dec. 2008 Production
- until Feb. 2010 Production Europe

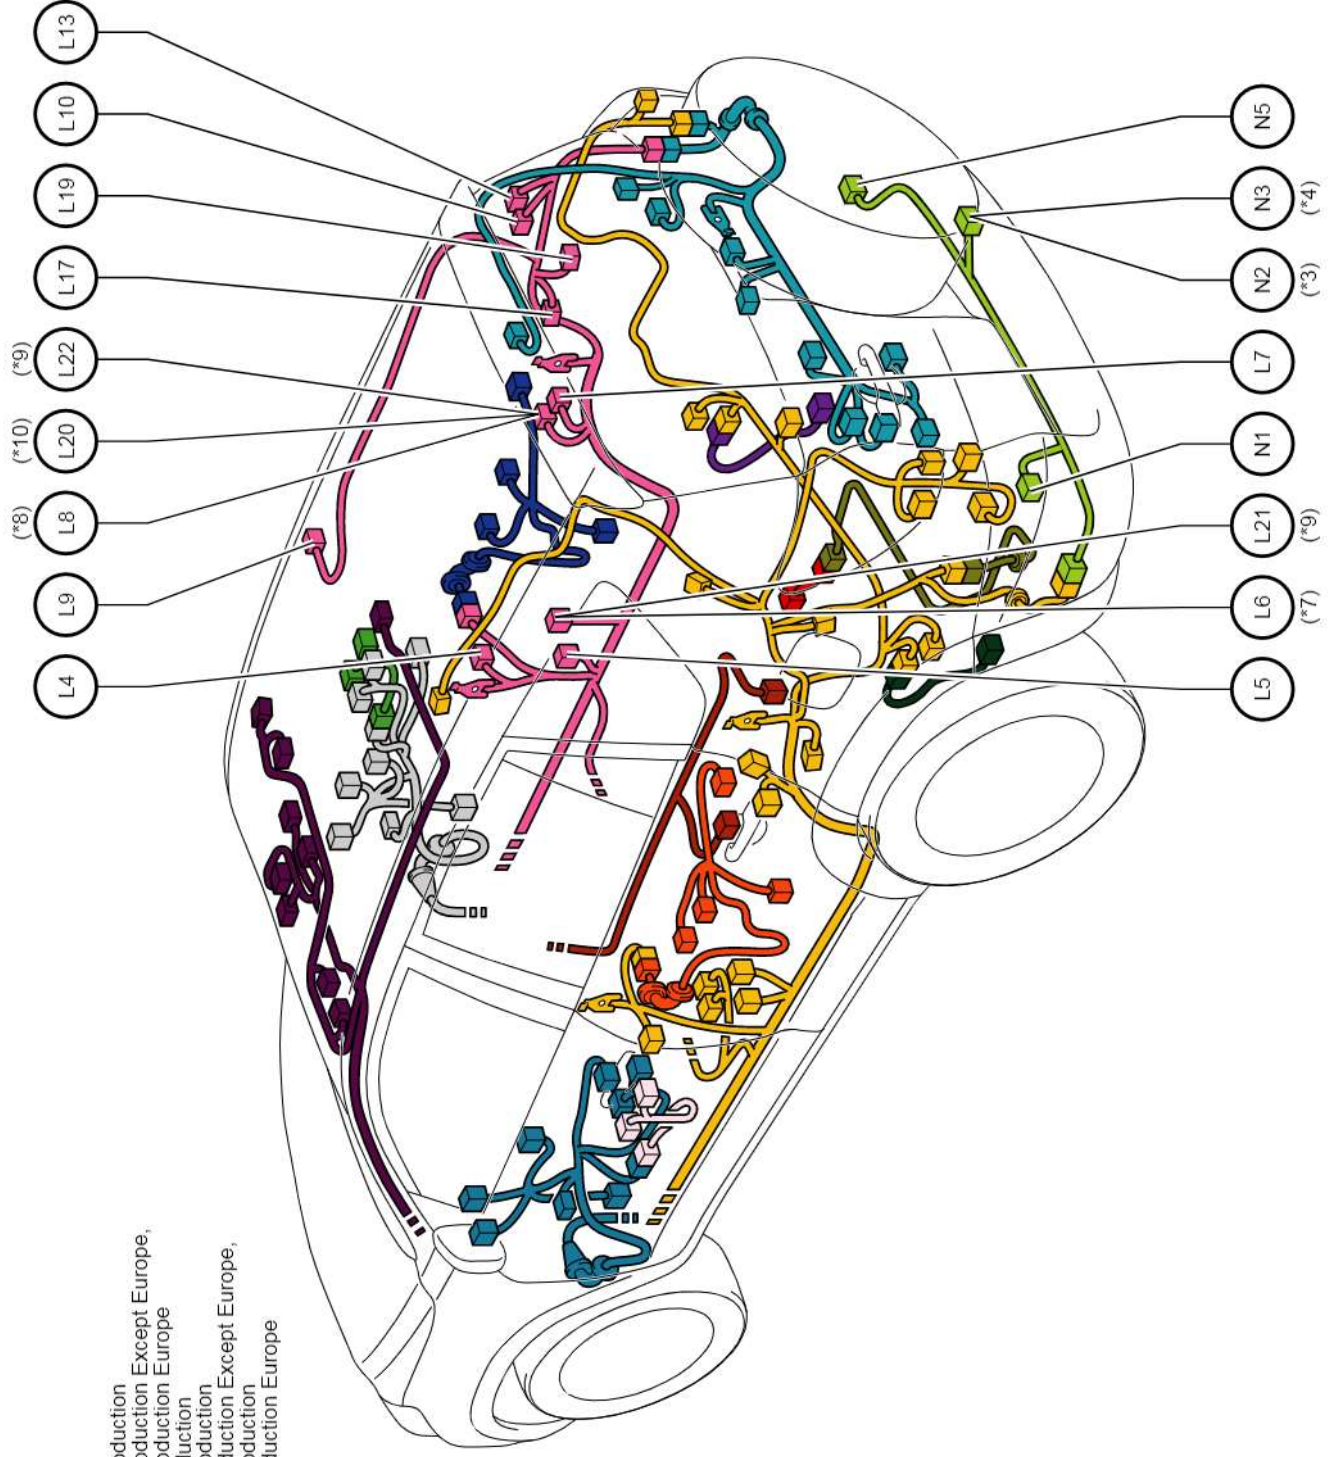


- L 4 Door Courtesy SW (Front RH)
- L 5 Pretensioner (RH)
- L 6 Side Airbag Sensor (Front RH)
- L 7 Door Courtesy SW (Rear RH)
- L 8 Side Airbag Sensor (Rear RH)
- L 9 Curtain Shield Airbag Squib (RH)
- L 10 Door Control Receiver
- L 13 Door Control Receiver
- L 17 Theft Warning Siren
- L 19 Glass Breakage Sensor
- L 20 Side Airbag Sensor (Rear RH)
- L 21 Side Airbag Sensor (Front RH)
- L 22 Side Airbag Sensor (Rear RH)
- N 1 Rear Fog Light (LH)
- N 2 License Plate Lamp (LH)
- N 3 License Plate Lamp
- N 5 Rear Fog Light (RH)

 Position of Parts in Body <RHD Short Body>

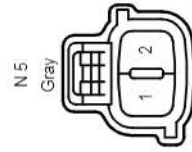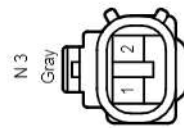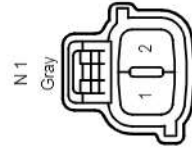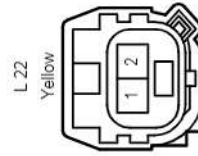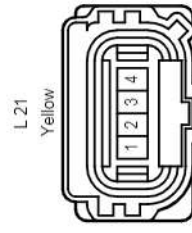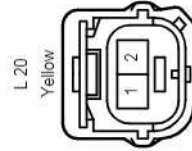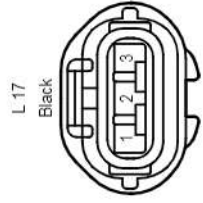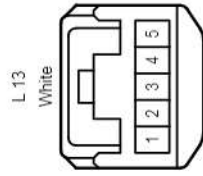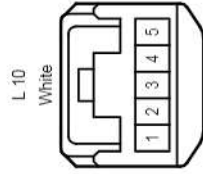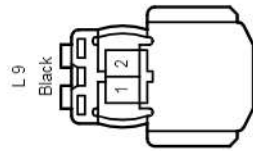
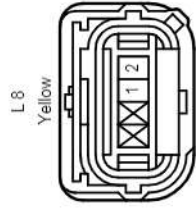
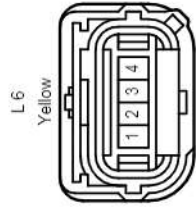
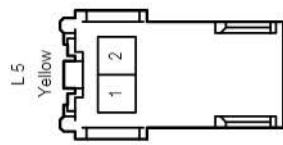


Position of Parts in Body <RHD Short Body>

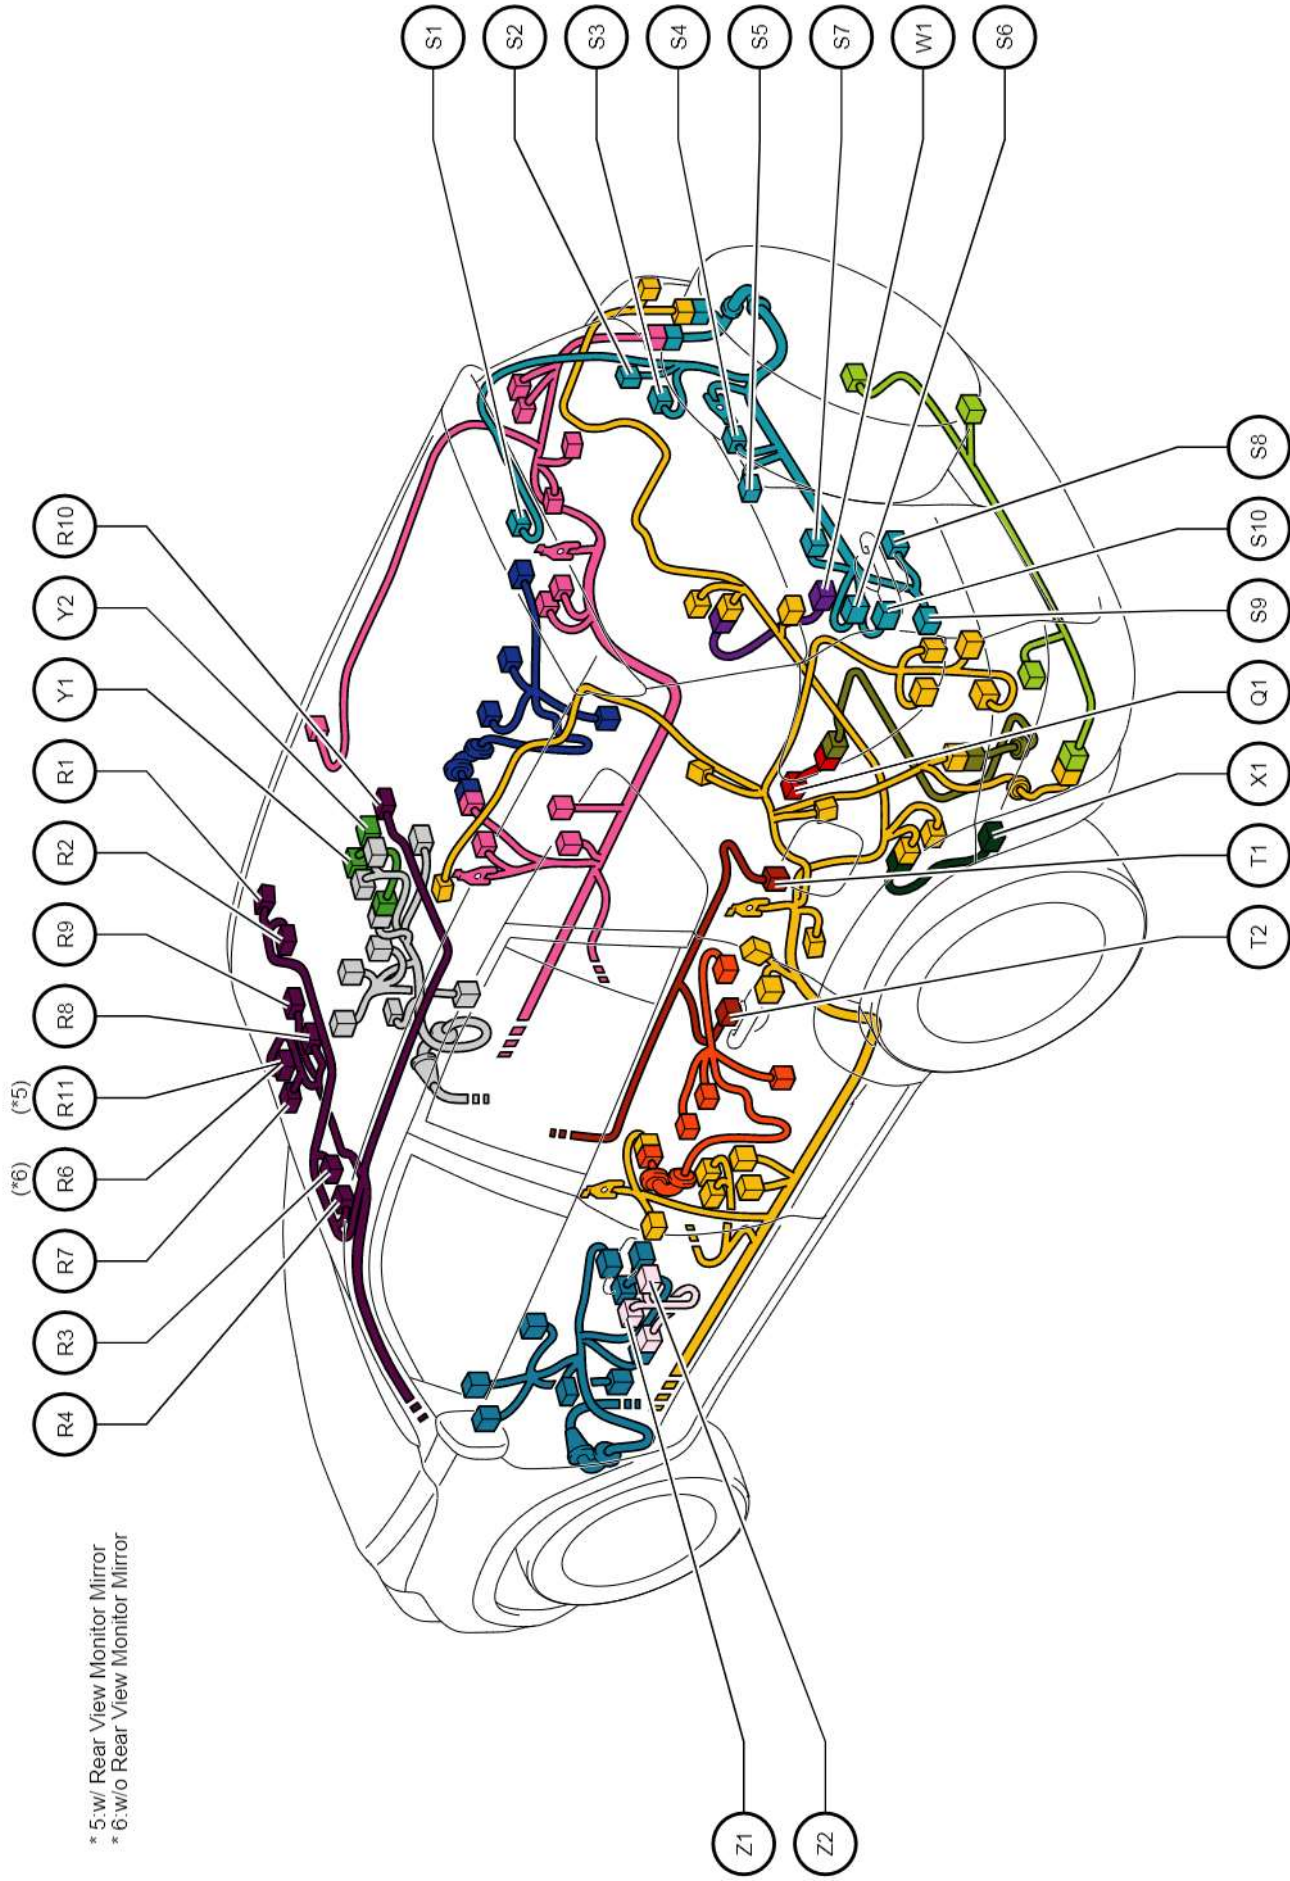


Q	1	4WD Linear Solenoid
R	1	Vanity Lamp SW (RH)
R	2	Vanity Lamp (RH)
R	3	Vanity Lamp (LH)
R	4	Vanity Lamp SW (LH)
R	6	Inner Rear View Mirror
R	7	Rain Sensor
R	8	Overhead J/B
R	9	Sliding Roof Control ECU
R	10	Room Lamp (Front)
R	11	Inner Rear View Mirror
S	1	Center Stop Lamp
S	2	Rear Window Defogger
S	3	Room Lamp (Rear)
S	4	Noise Filter (Stop and Rear Window Defogger)
S	5	Rear Wiper Motor
S	6	License Plate Lamp (RH)
S	6	License Plate Lamp (RH)
S	7	Television Camera (Rear)
S	8	Electrical Key Oscillator (Back Door)
S	9	Door Outside Handle (Back Door)
S	10	Back Door Lock Assembly
T	1	Fuel Suction Pump
T	2	Fuel Sender Gage
W	1	Speed Sensor (Rear RH)
X	1	Speed Sensor (Rear LH)
Y	1	Door Outside Handle (Front RH)
Y	2	Electrical Key Oscillator (Front Door RH)
Z	1	Door Outside Handle (Front LH)
Z	2	Electrical Key Oscillator (Front Door LH)


Position of Parts in Body <RHD Short Body>

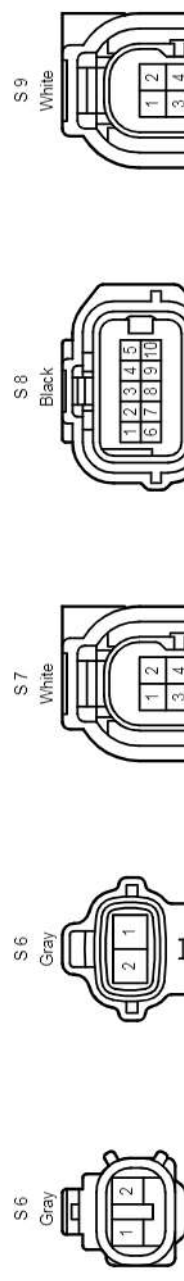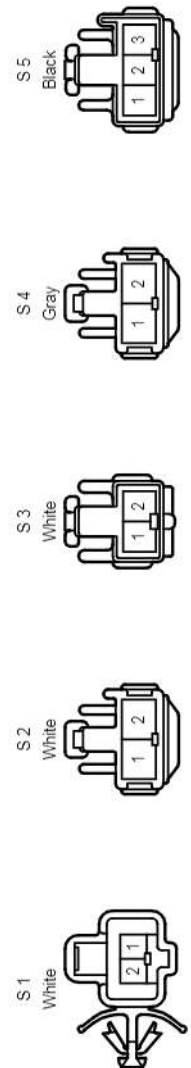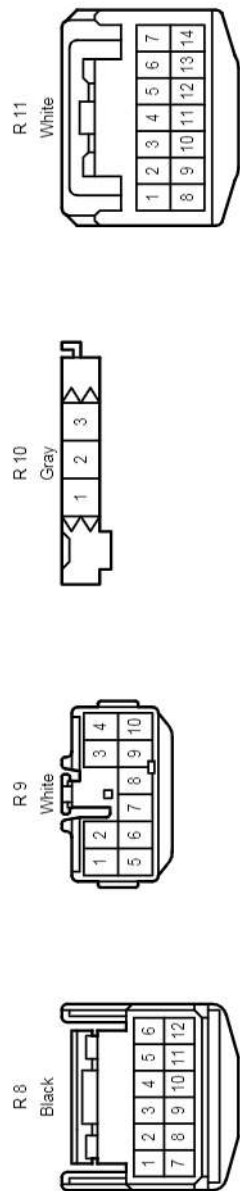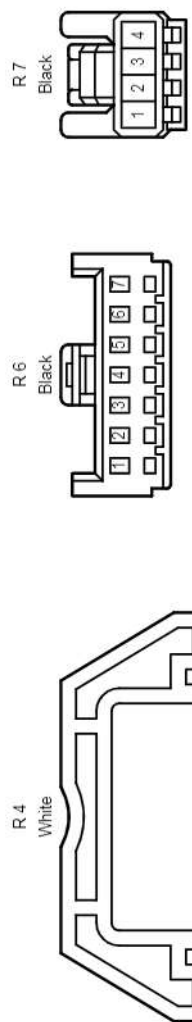


Y 1
White

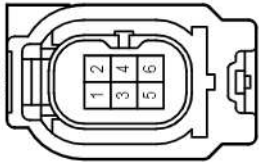


Y 2
Black

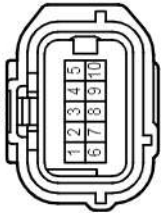


Z 1
White

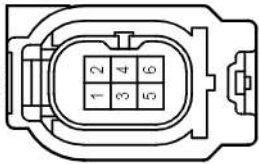


Z 2
Black

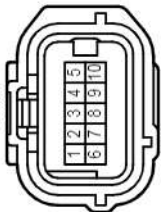




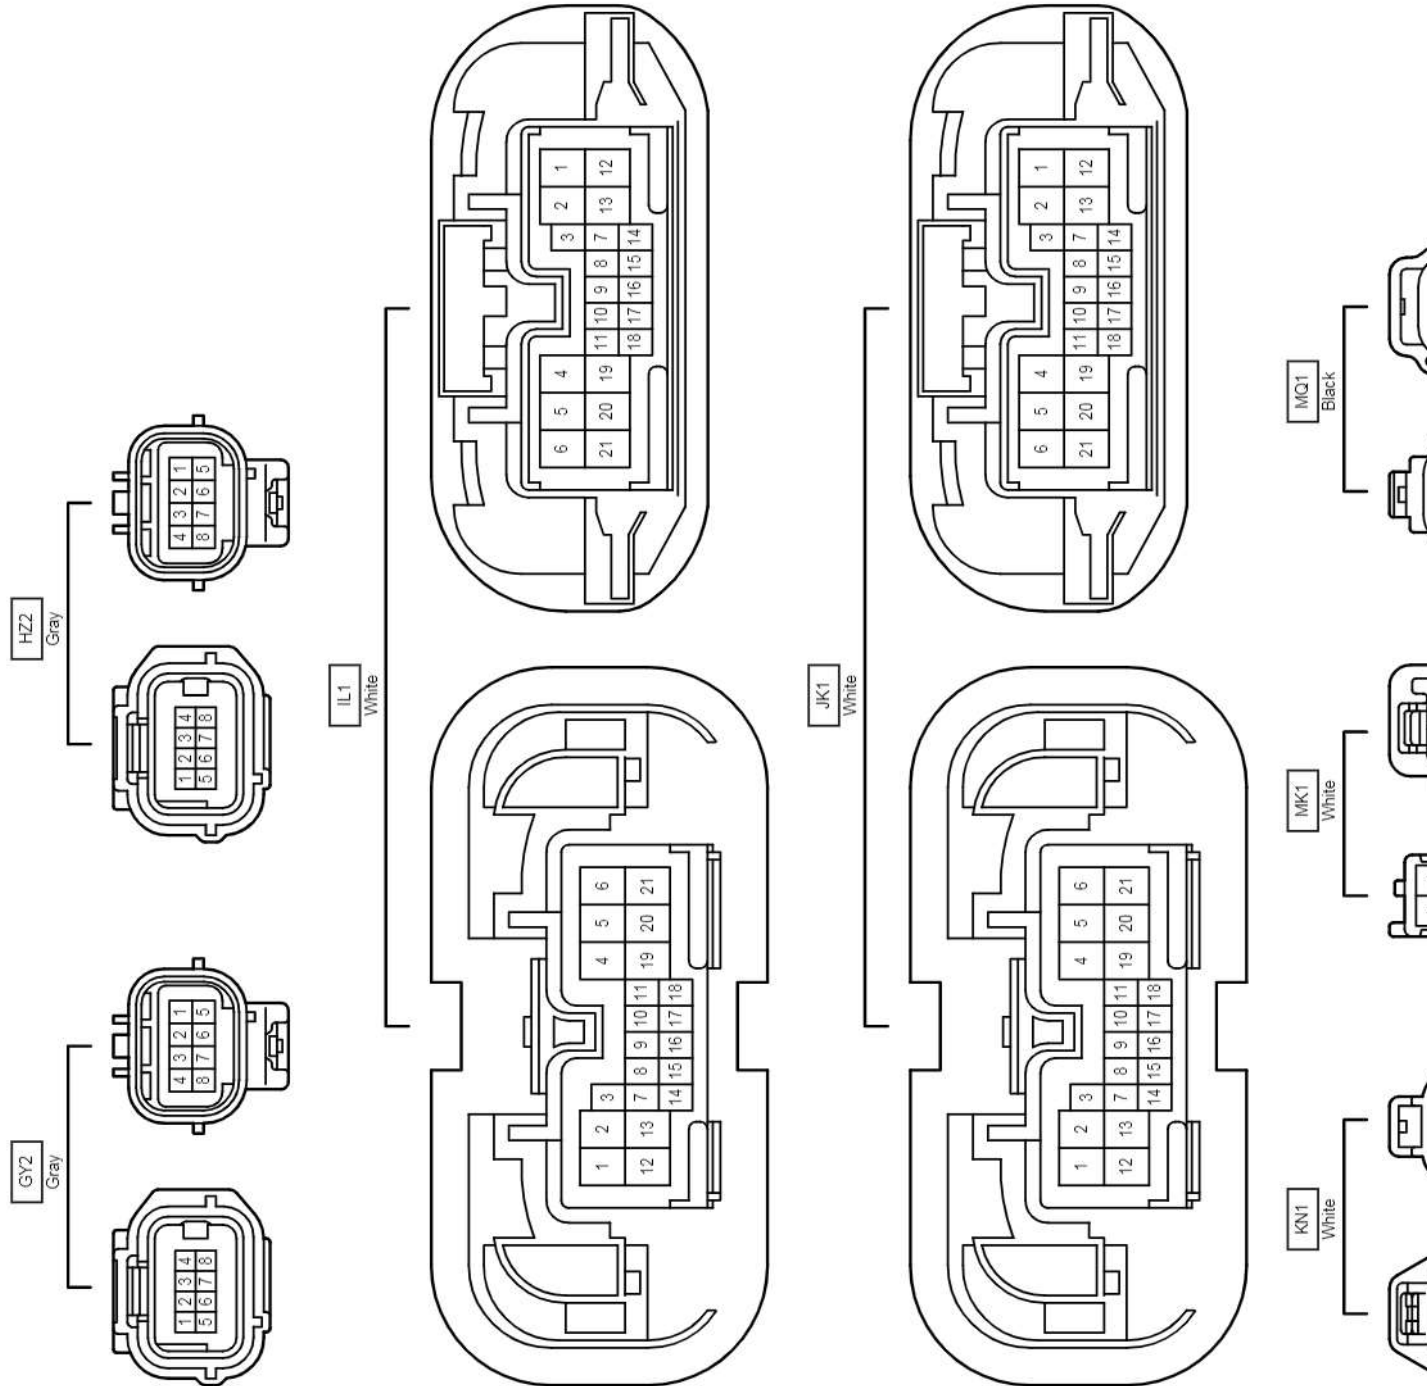


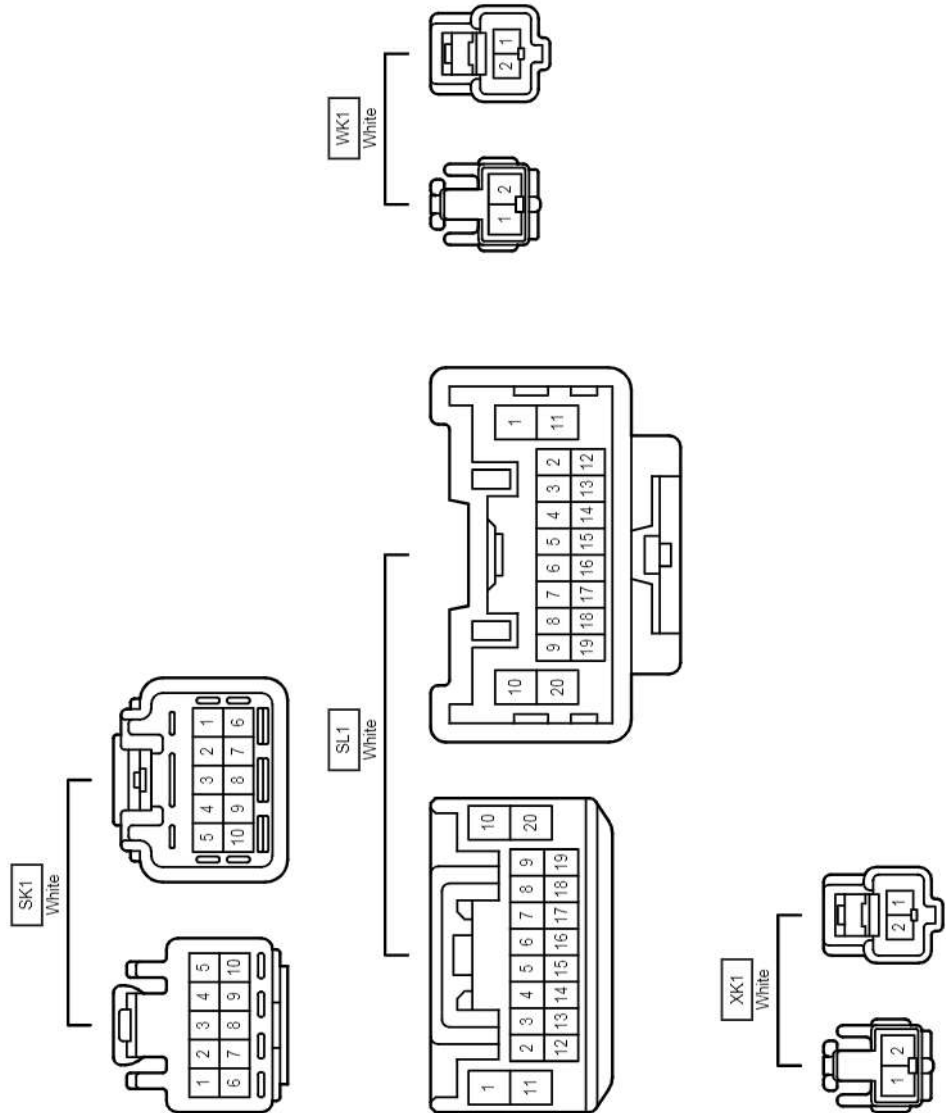

Ground Points in Instrument Panel <LHD>

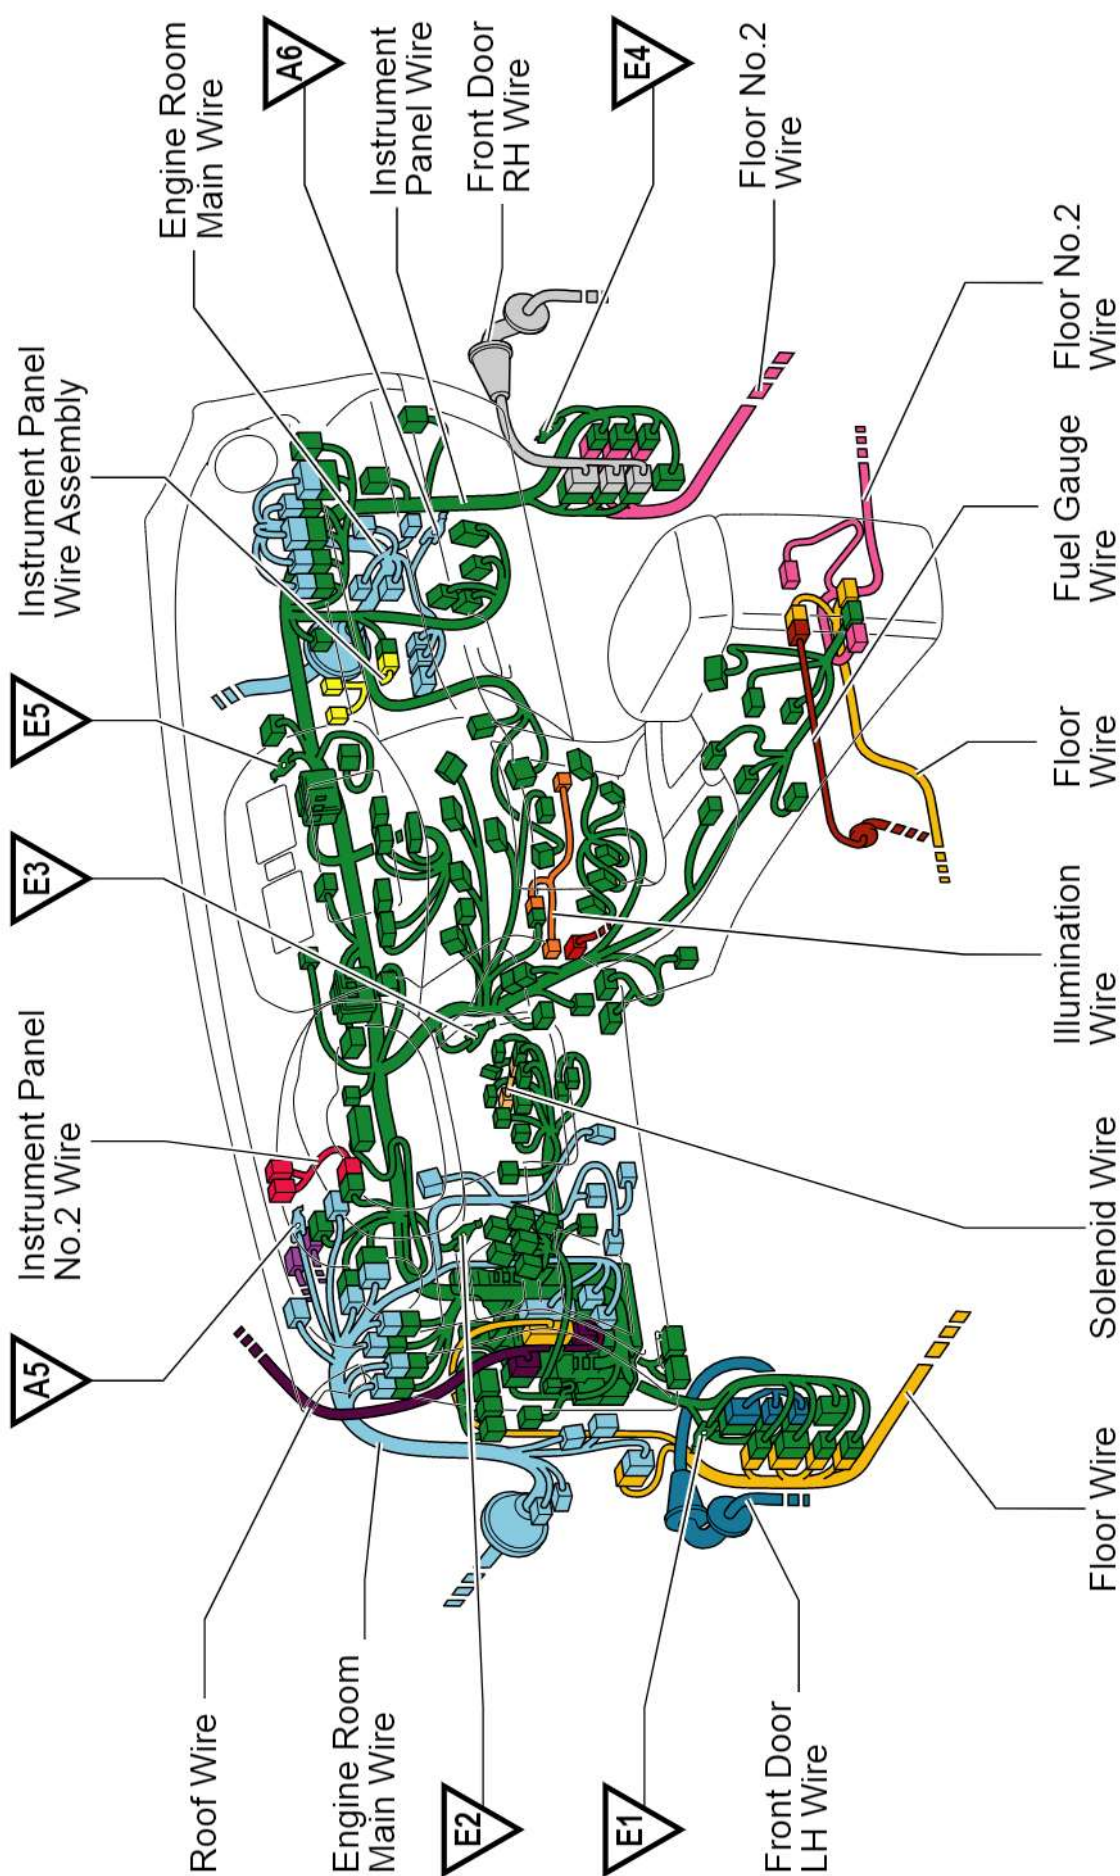


Position of Parts in Instrument Panel <LHD>

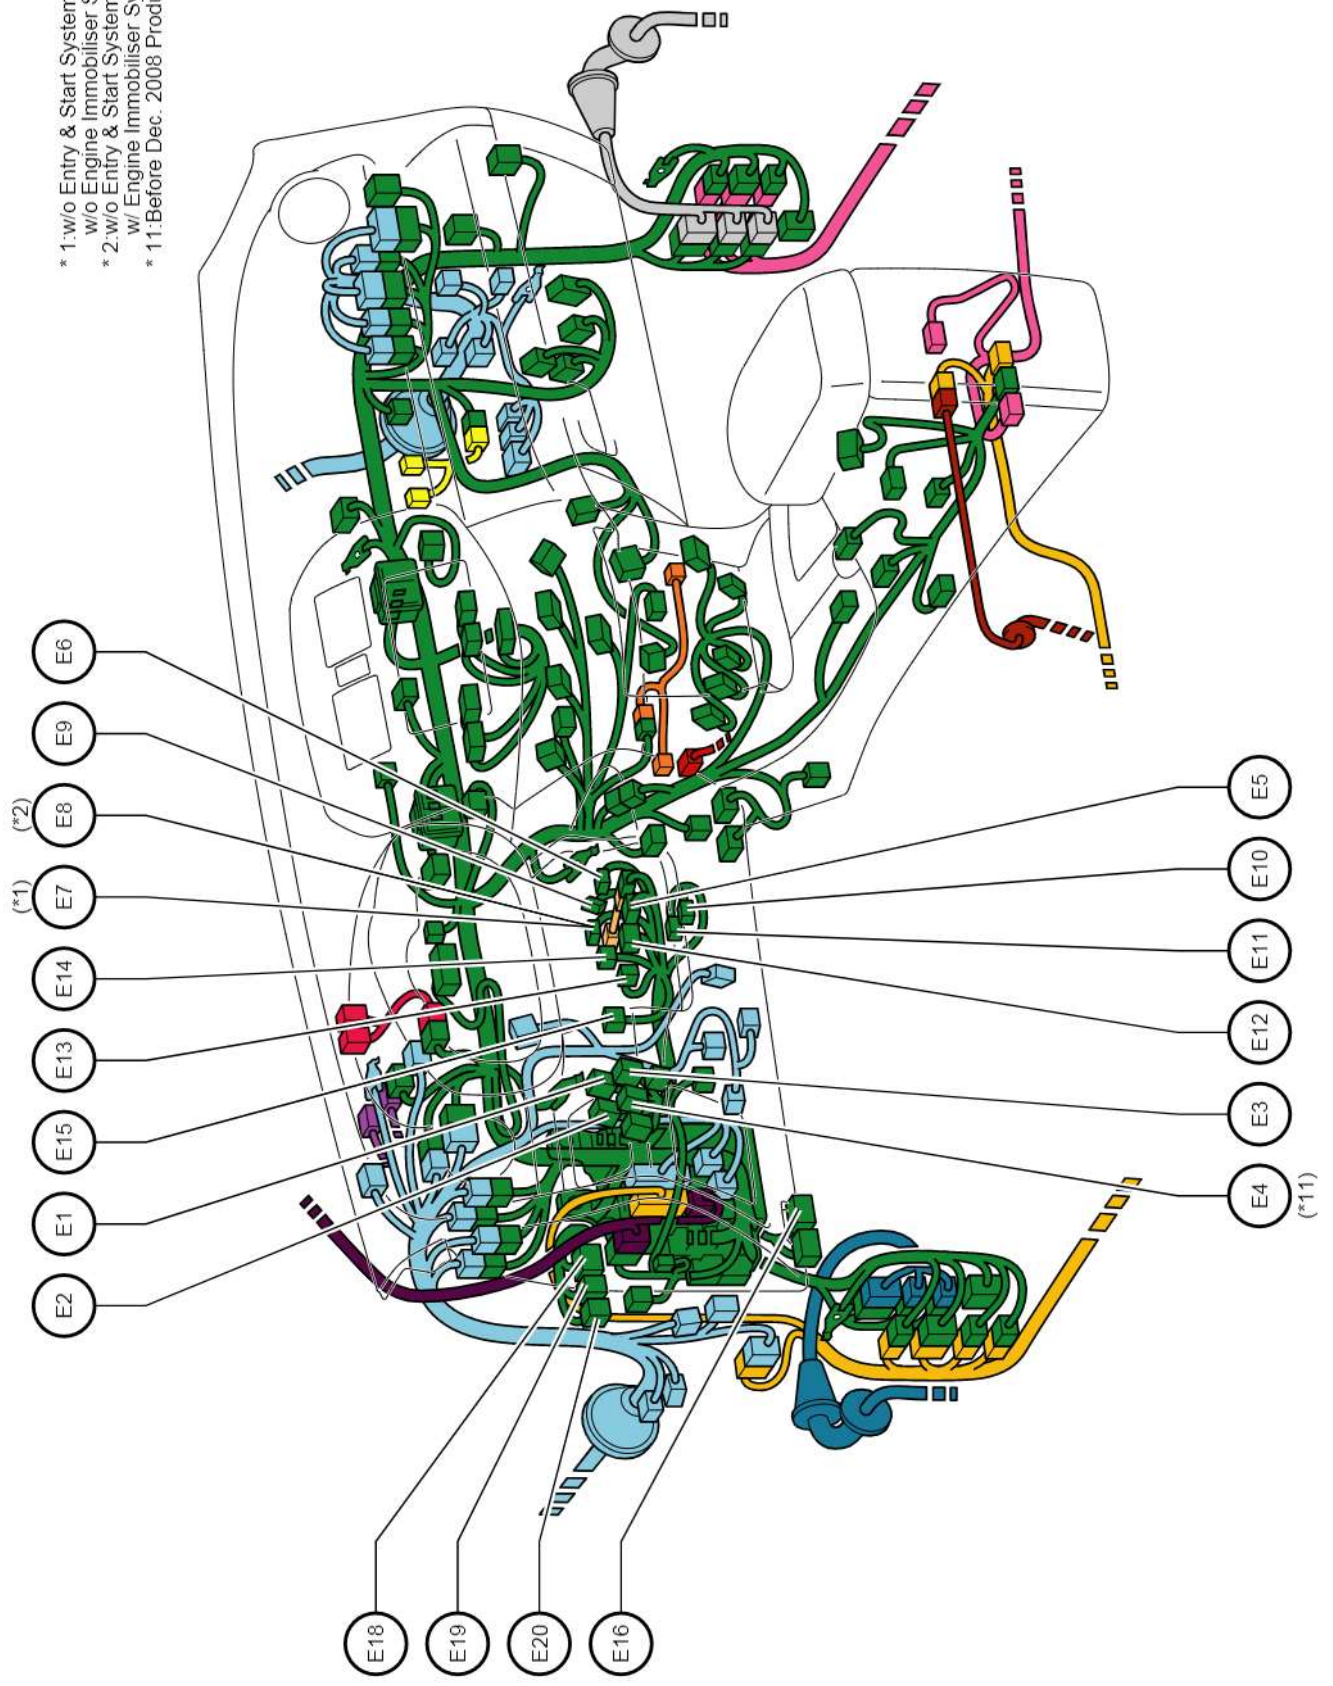


E	1	Power Heater SW
E	2	Light Control Rheostat
E	3	Headlamp Leveling SW
E	4	Headlamp Cleaner SW
E	5	Ignition SW
E	6	Steering Lock ECU
E	7	Ignition Key Cylinder Lamp
E	8	Transponder Key Amplifier
E	9	Unlock Warning SW
E	10	Spiral Cable
E	11	Airbag Squib (Steering Wheel Pad)
E	12	Windshield Wiper SW Assembly
E	13	Windshield Wiper SW Assembly
E	14	Steering Sensor
E	15	Headlamp Dimmer SW Assembly
E	16	DLC3
E	18	Main Body ECU
E	19	Main Body ECU
E	20	Main Body ECU

Position of Parts in Instrument Panel <LHD>

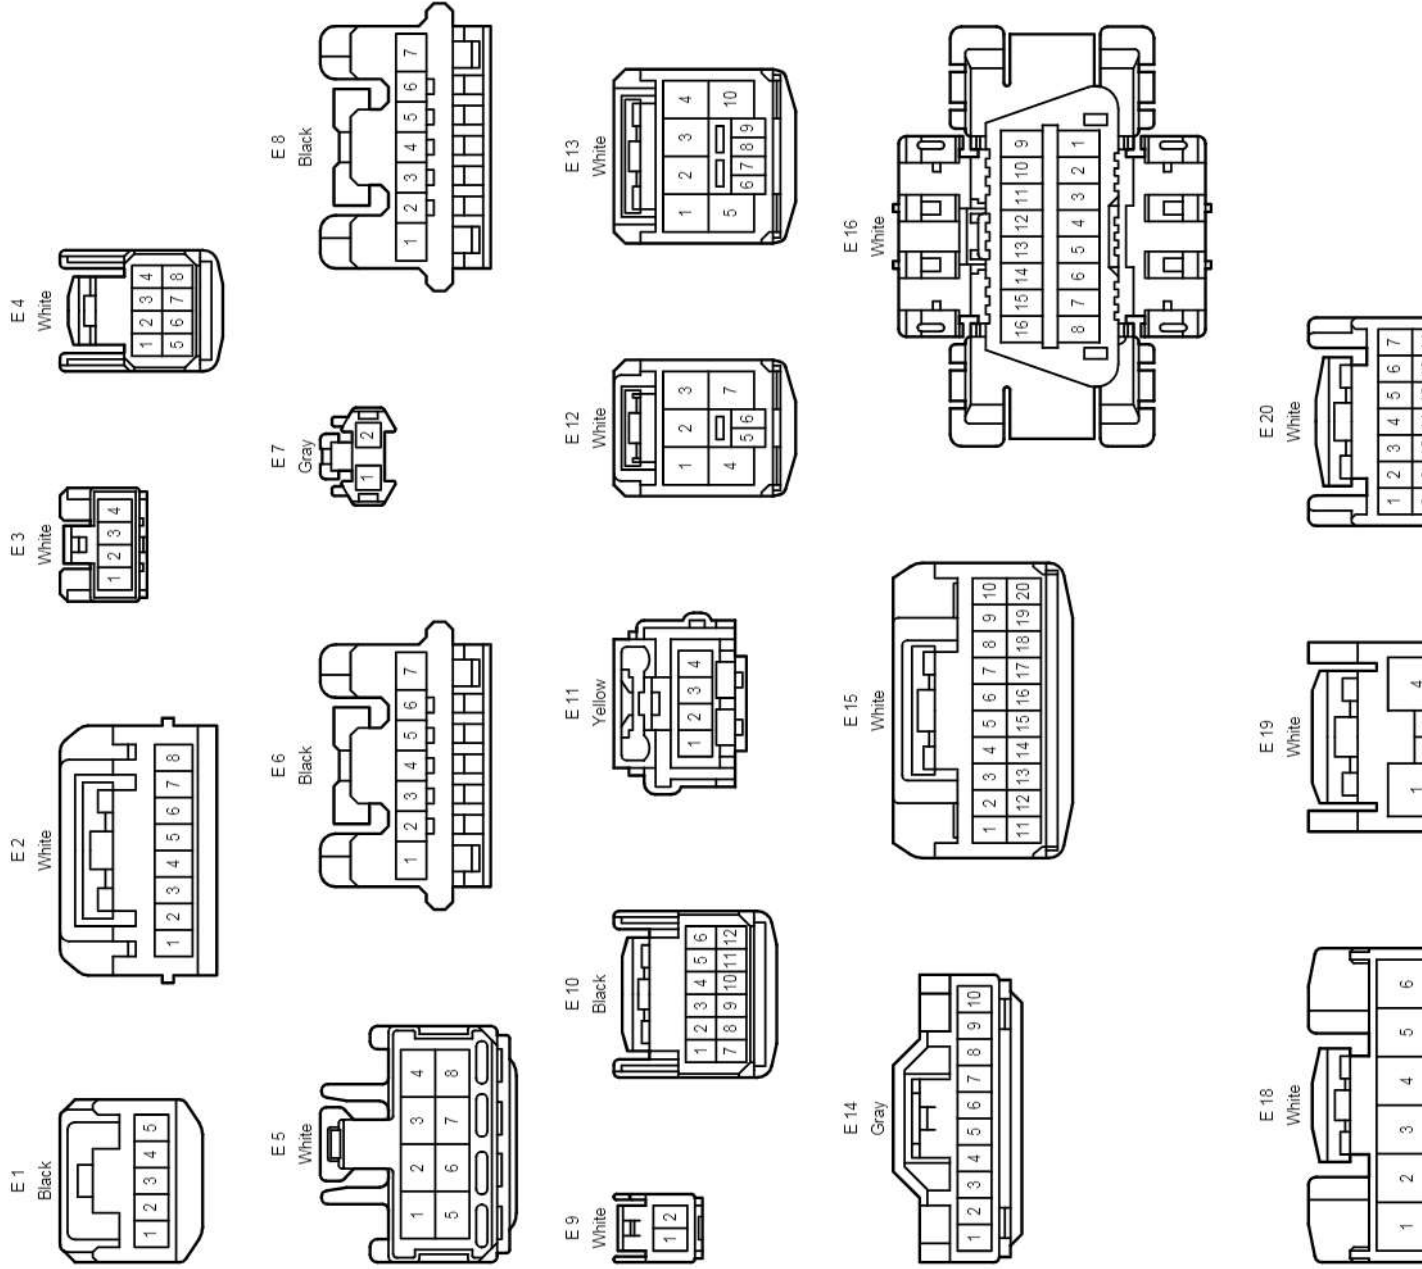


Position of Parts in Instrument Panel <LHD>

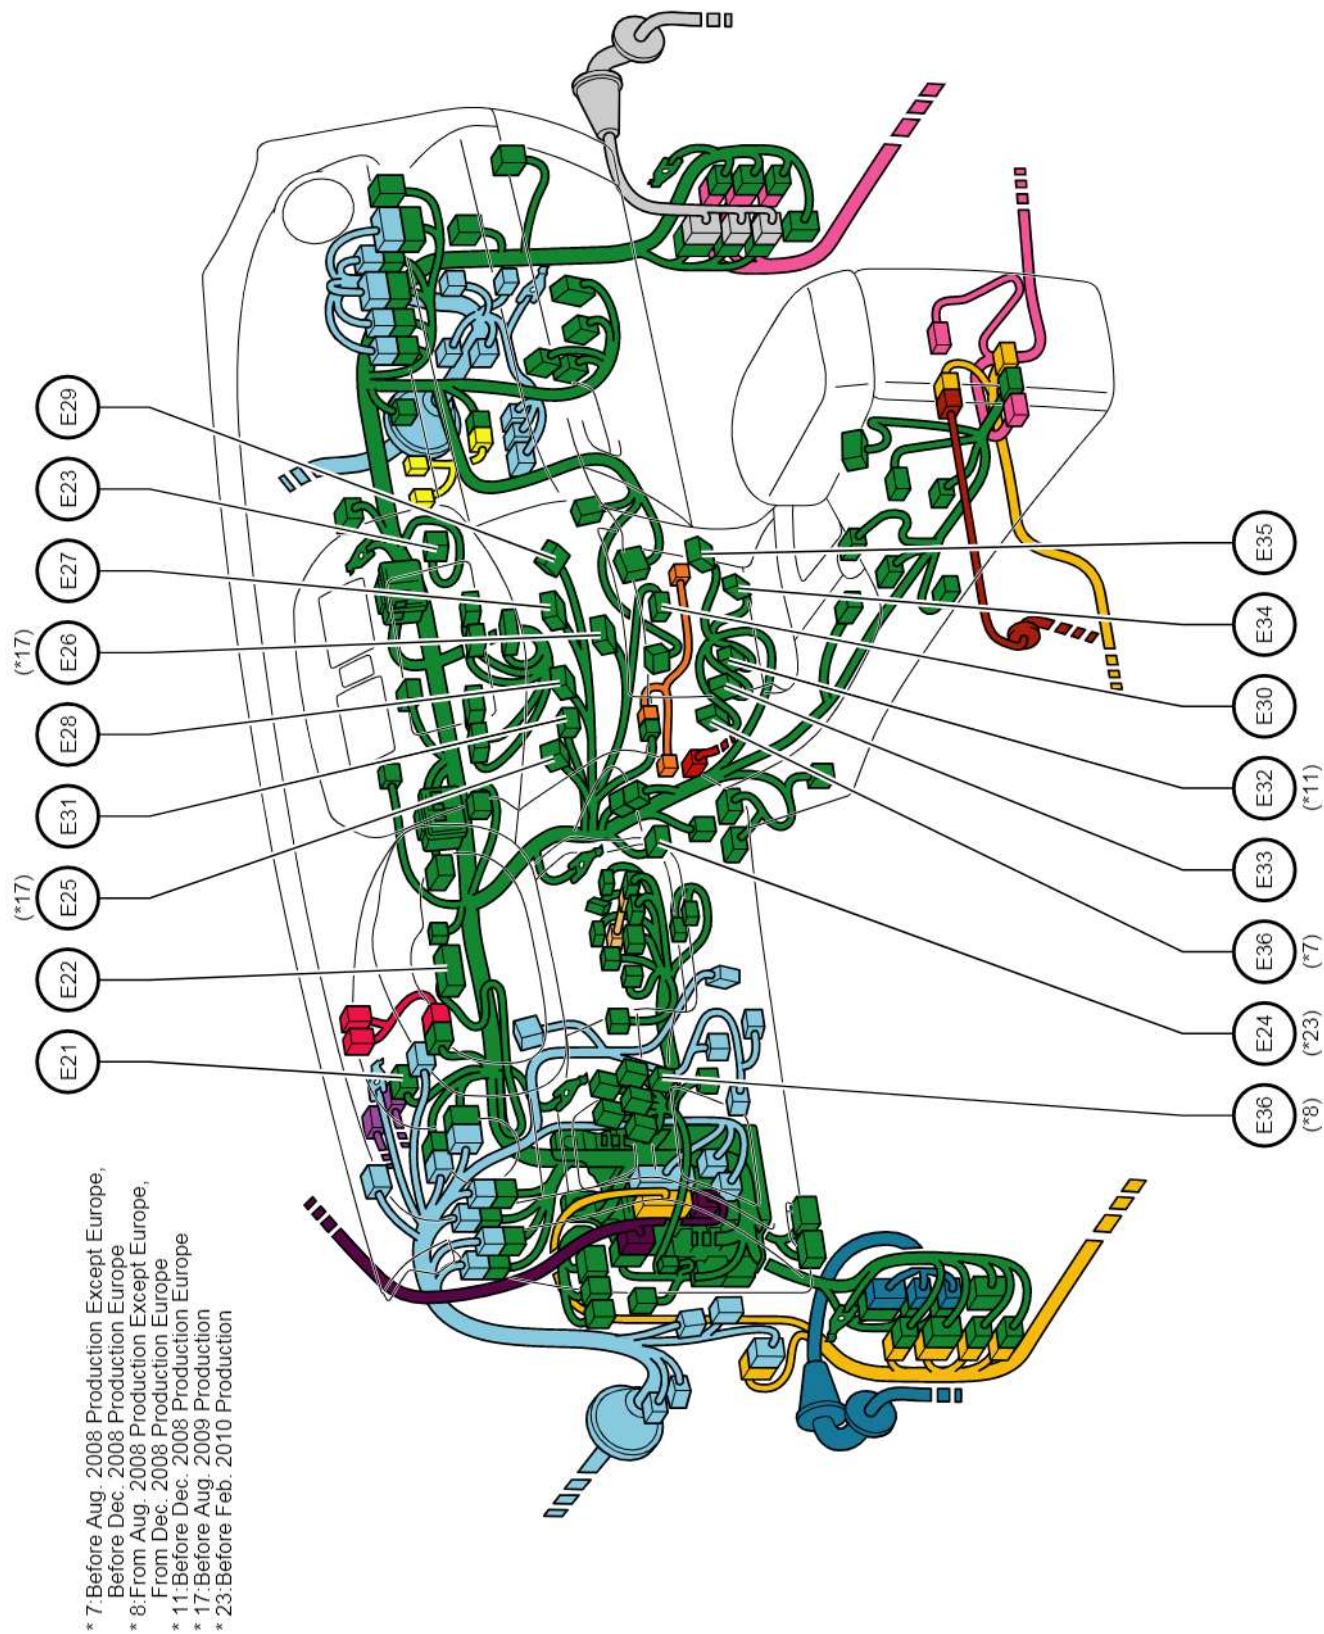


E 21	Power Steering ECU
E 22	Combination Meter
E 23	Hazard Warning Signal SW
E 24	A/C Room Temp. Sensor
E 25	Clock
E 26	Integration Control and Panel Assembly
E 27	Integration Control and Panel Assembly
E 28	Air Inlet Control SW
E 29	A/C SW , Max Hot SW
E 30	Front Console Illumination
E 31	Power SW
E 32	Front Wiper Deicer SW
E 33	Seat Heater SW
E 34	Cigarette Lighter Illumination
E 35	Cigarette Lighter
E 36	Downhill Assist Control SW

Position of Parts in Instrument Panel <LHD>














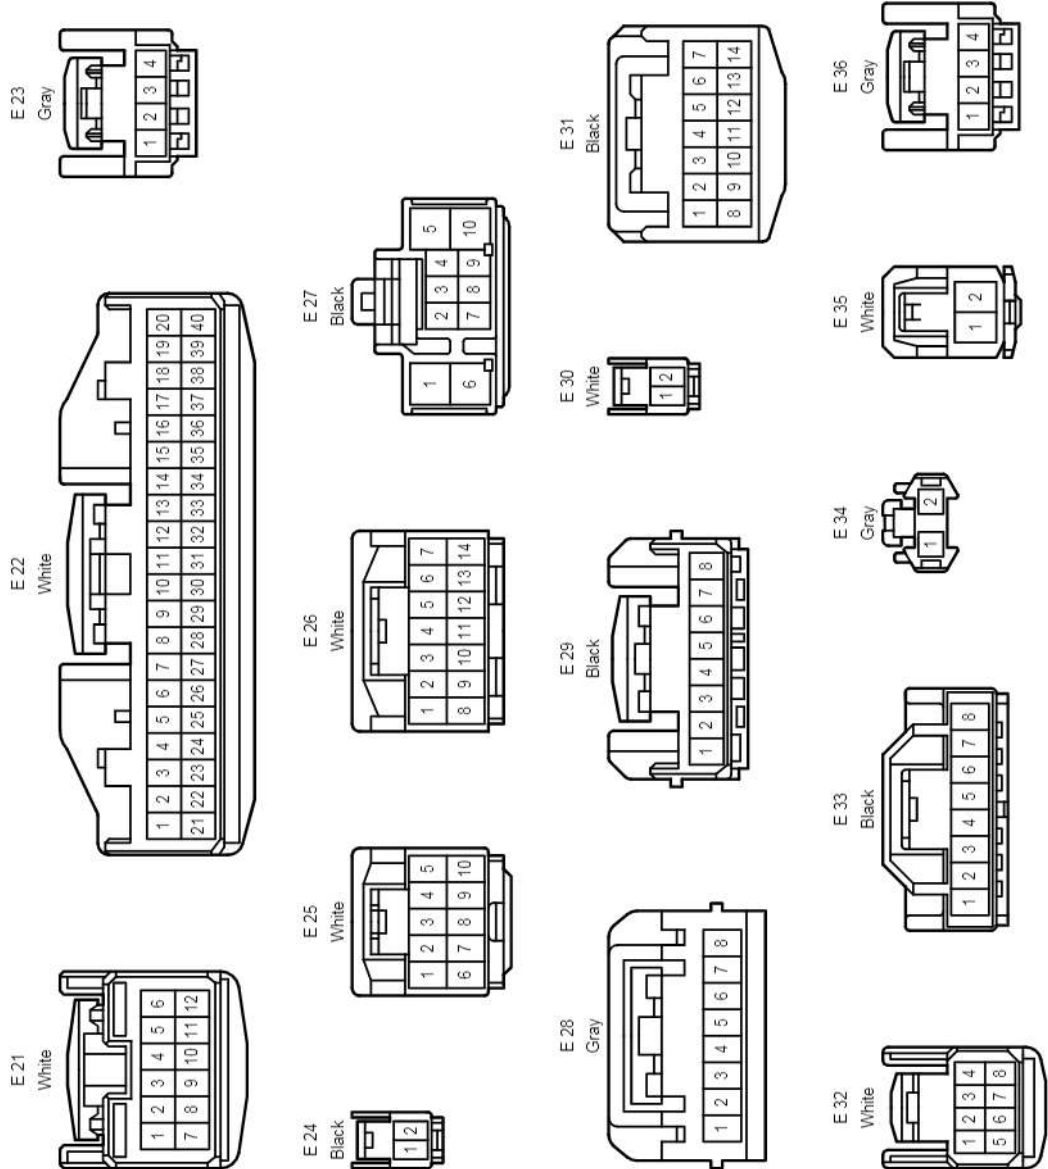


Position of Parts in Instrument Panel <LHD>

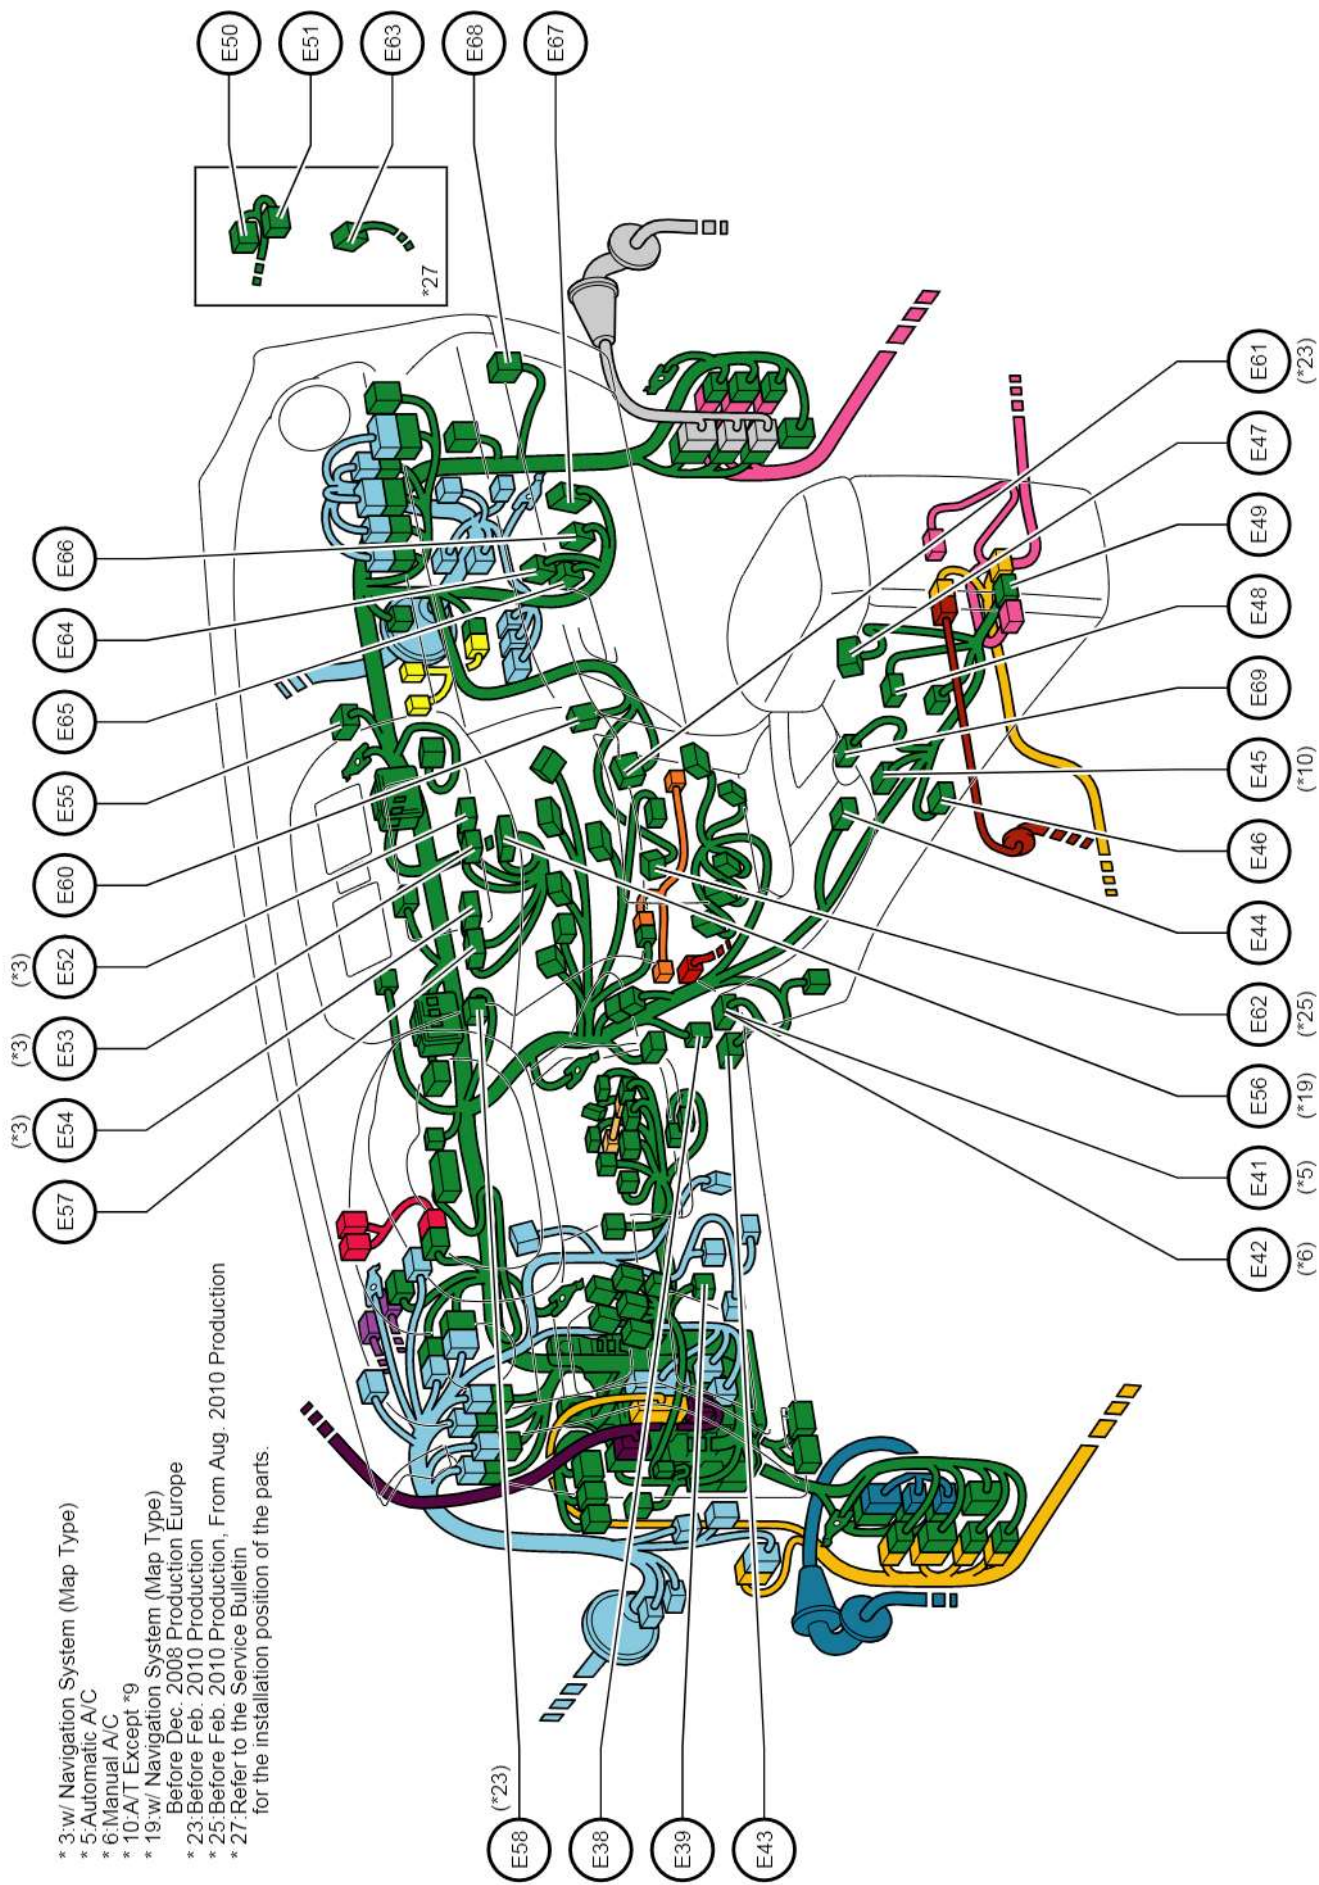



E 38	A/C Evaporator Temp. Sensor
E 39	Knee Airbag Squib
E 41	A/C Amplifier
E 42	A/C Amplifier
E 43	A/C Amplifier
E 44	Shift Lock Control ECU
E 45	Transmission Control SW
E 46	Parking Brake SW
E 47	Outer Mirror SW
E 48	Power Outlet Socket (Front)
E 49	Airbag Sensor Assembly Center
E 50	Transponder Key ECU
E 51	ID Code Box
E 52	Navigation Receiver Assembly
E 53	Navigation Receiver Assembly
E 54	Navigation Receiver Assembly
E 55	Antenna Amplifier
E 56	Navigation Receiver Assembly
E 57	Navigation Receiver Assembly
E 58	4WD Control SW
E 60	Blower Motor
E 61	Blower Motor
E 62	Blower Resistor
E 63	Certification ECU
E 64	Tire Pressure Warning ECU and Receiver
E 65	Tire Pressure Warning ECU and Receiver
E 66	Auto Wiper Relay
E 67	4WD Control ECU
E 68	Airbag Cut Off SW
E 69	A/T Shift Lever Illumination

 Position of Parts in Instrument Panel <LHD>

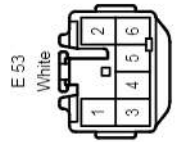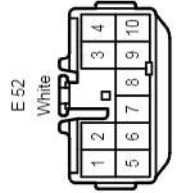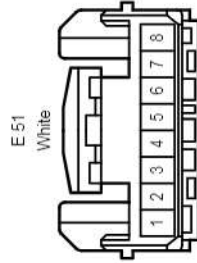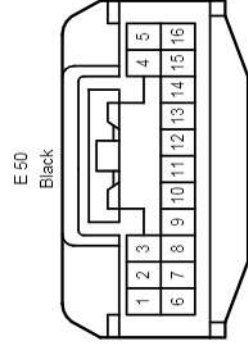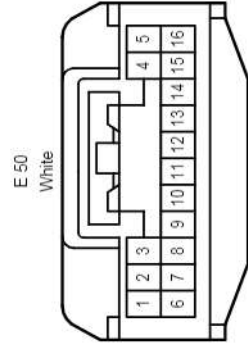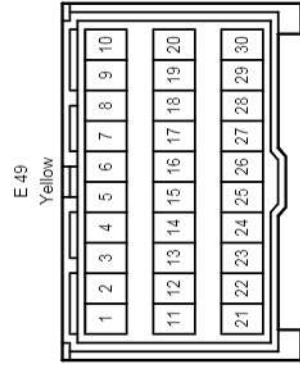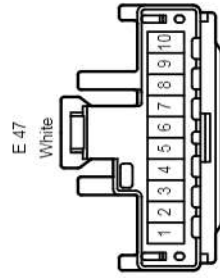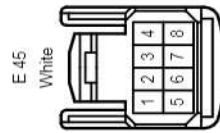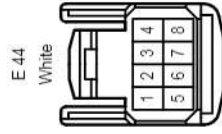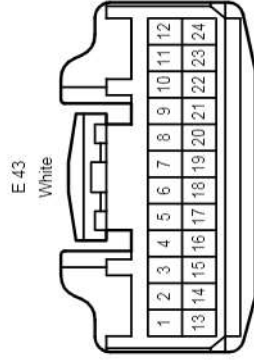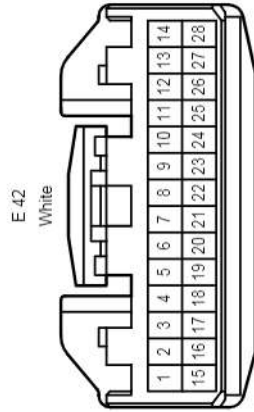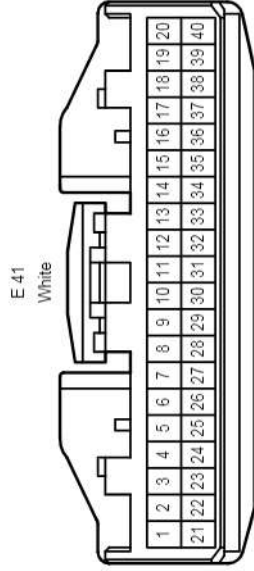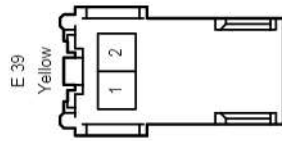






Position of Parts in Instrument Panel <LHD>

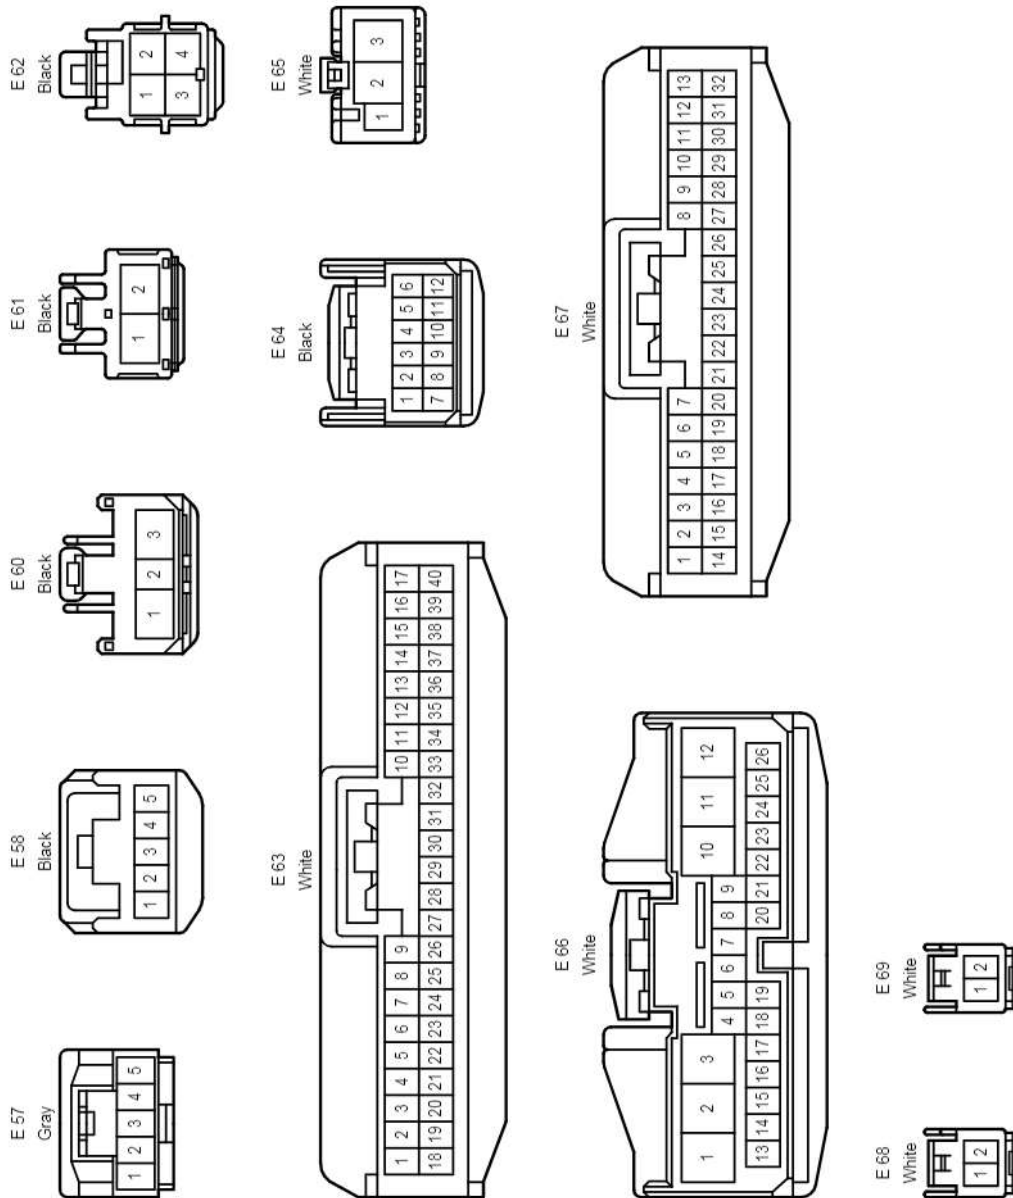

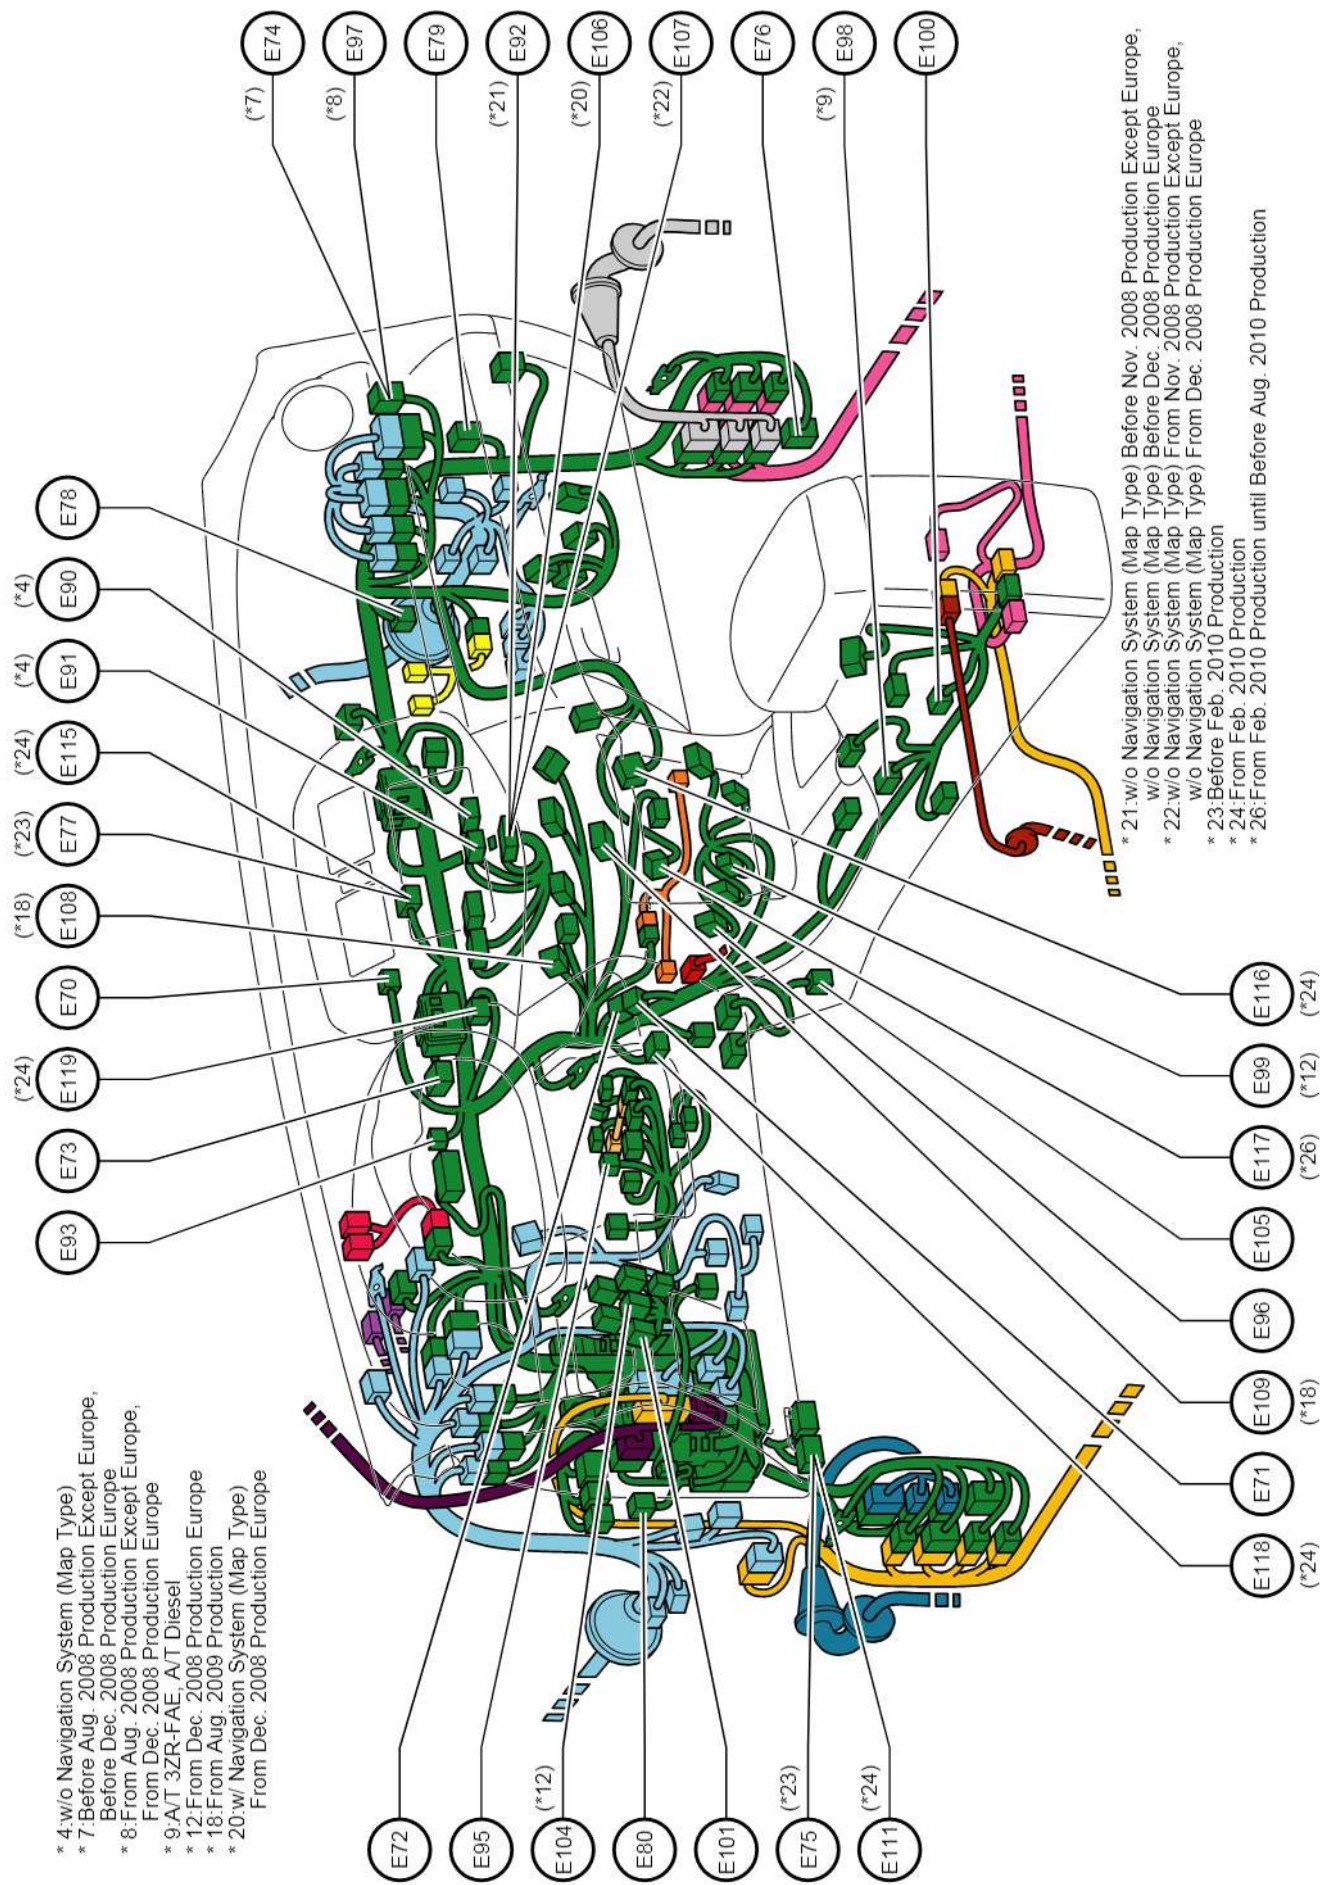


E 70	Air Inlet Control Servo Motor
E 71	Short Connector
E 72	Short Connector
E 73	Junction Connector
E 74	Junction Connector
E 75	Junction Connector
E 76	Junction Connector
E 77	Junction Connector
E 78	Diode (Rear Wiper)
E 79	Junction Connector
E 80	Junction Connector
E 90	Radio Receiver Assembly
E 91	Radio Receiver Assembly
E 92	Radio Receiver Assembly
E 93	Diode (Heater)
E 95	Steering Sensor
E 96	VSC OFF SW
E 97	Junction Connector
E 98	Transmission Control SW
E 99	Front Wiper Deicer SW
E 100	No.1 Stereo Jack Adapter Assembly
E 101	No.1 Pattern Select Switch Assembly
E 104	Headlamp Cleaner SW
E 105	Heated Oxygen Sensor (Bank 1 Sensor 2)
E 106	Navigation Receiver Assembly
E 107	Radio Receiver Assembly
E 108	Clock
E 109	Integration Control and Panel Assembly
E 111	Junction Connector
E 115	Junction Connector
E 116	Blower Motor
E 117	Blower Resistor
E 118	A/C Room Temp. Sensor
E 119	4WD Control SW

Position of Parts in Instrument Panel <LHD>

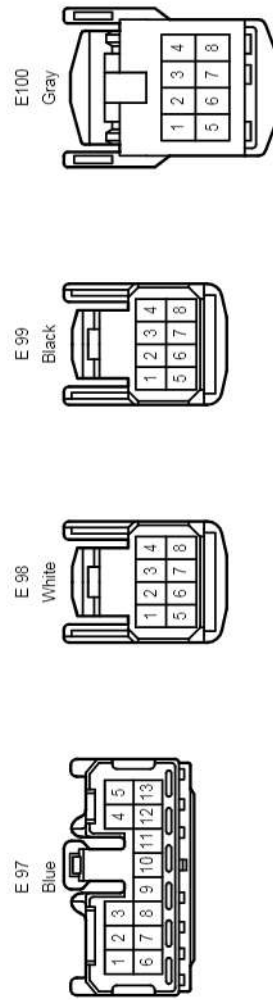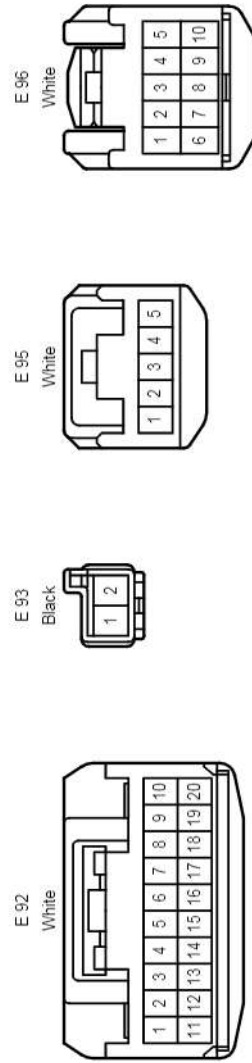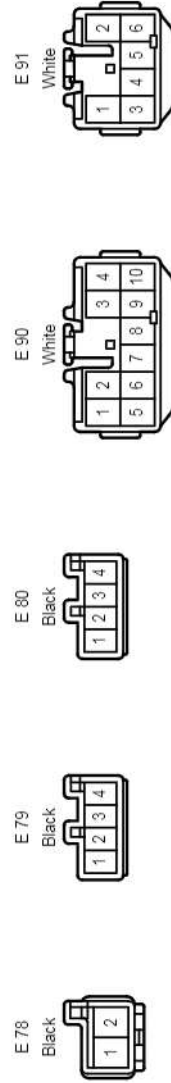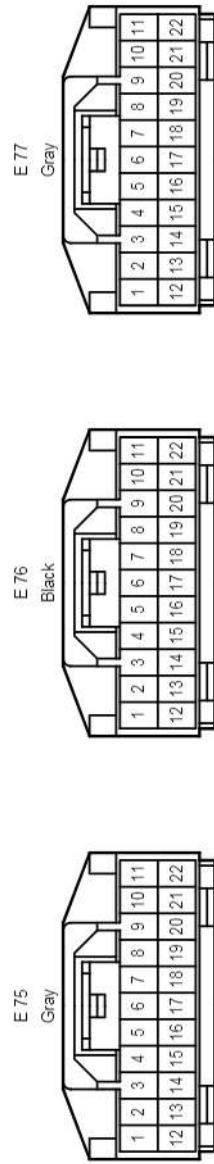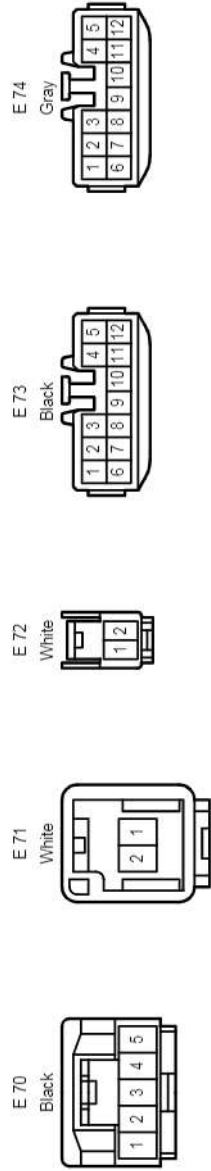


E111

Gray

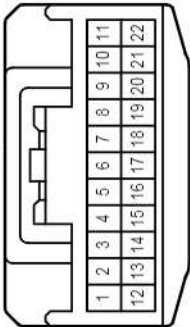


E115

Gray

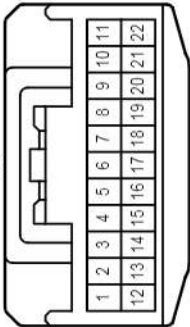


E116

White

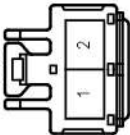

E117

White

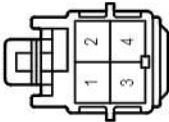


E118

White




E119

White






















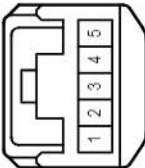


Position of Parts in Instrument Panel <LHD>

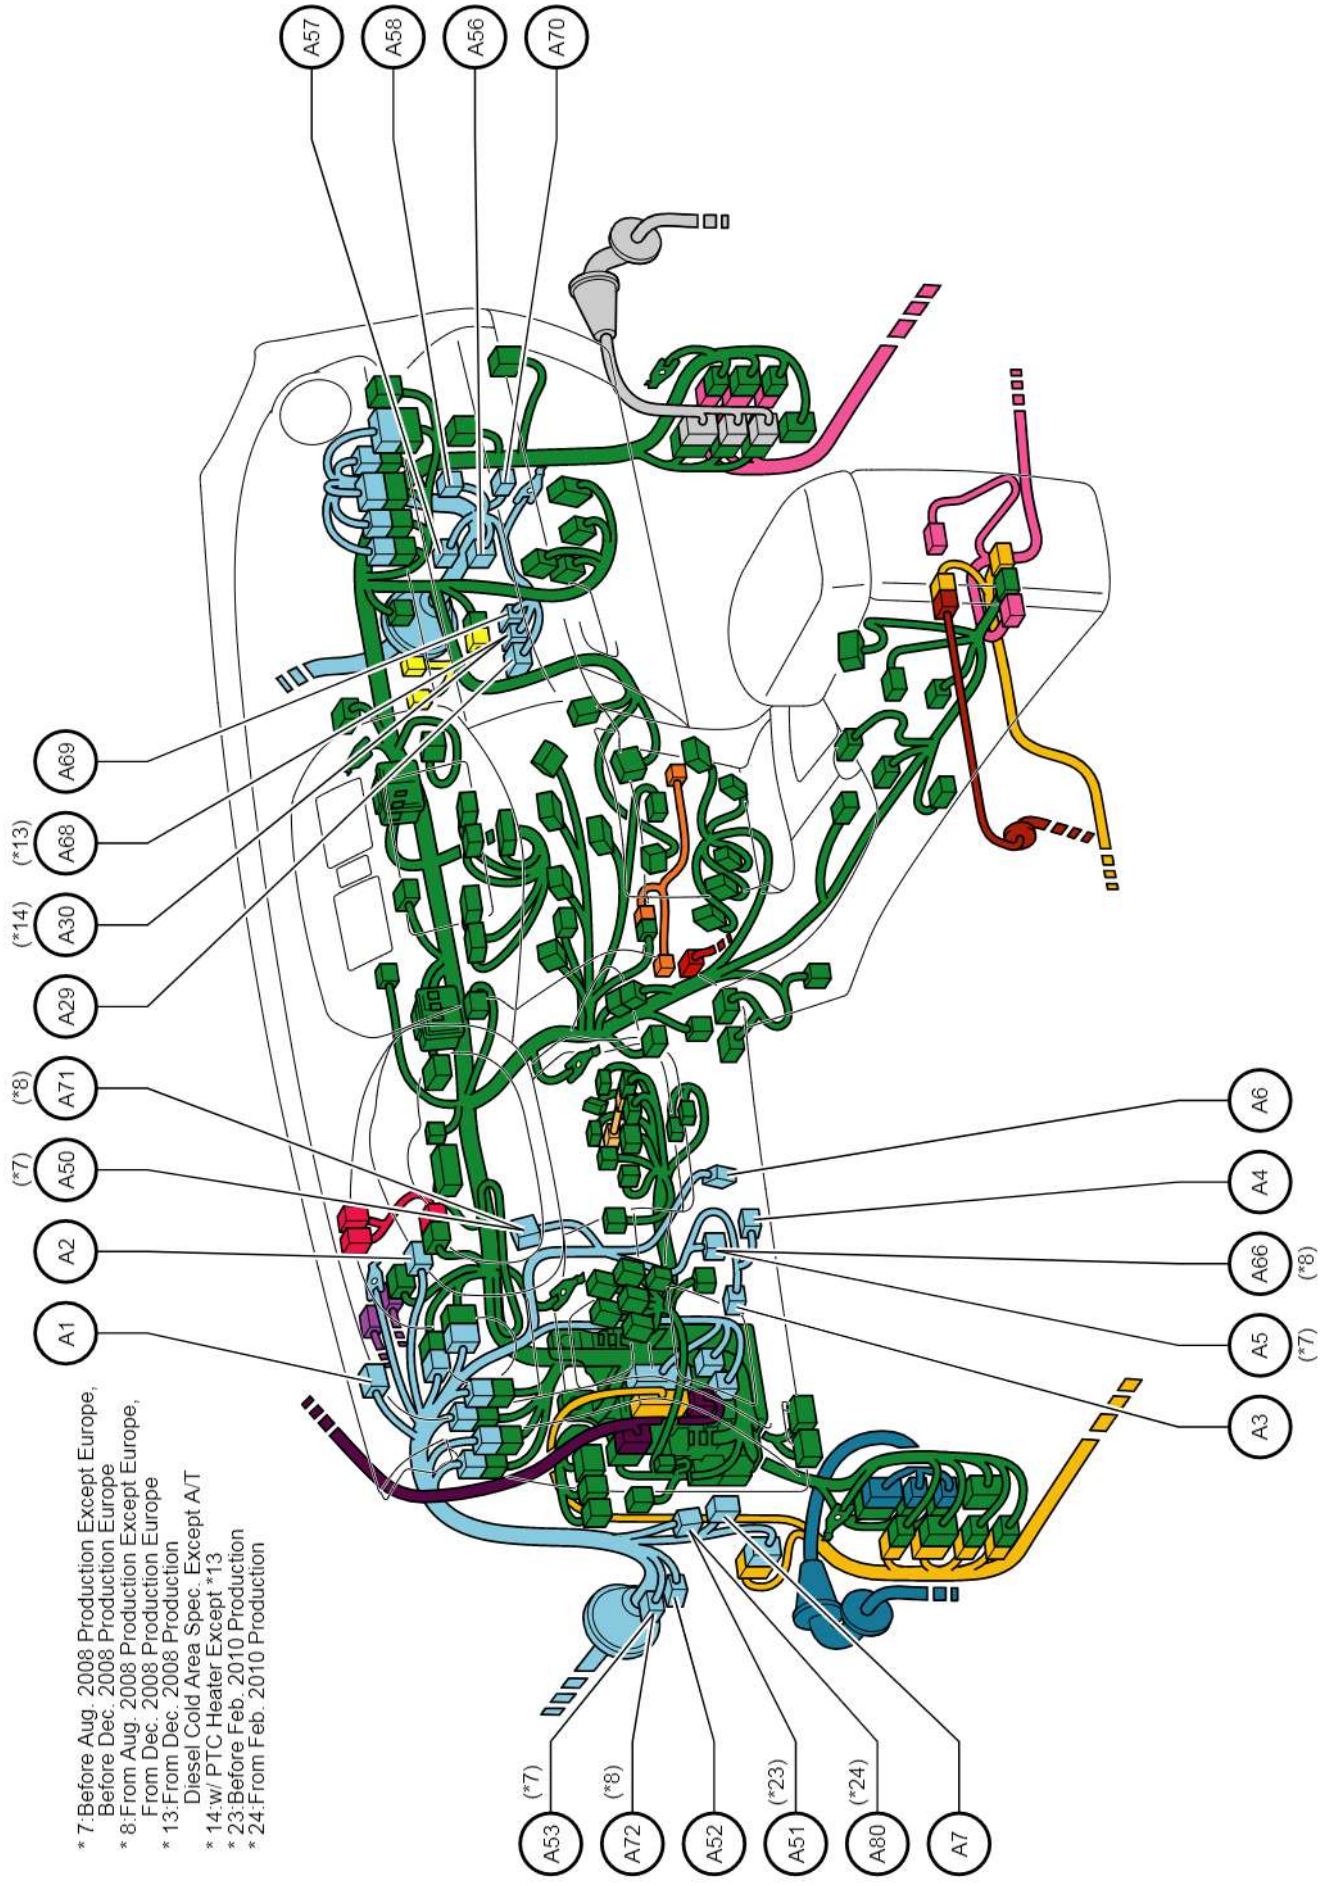


A 1	Cruise Control Clutch SW
A 2	Power Steering ECU
A 3	Brake Pedal Load Sensing SW
A 4	Clutch Start SW
A 5	Stop Lamp SW
A 6	Accelerator Position Sensor
A 7	Option Connector
A 29	PTC Heater
A 30	PTC Heater
A 50	Junction Connector
A 51	Junction Connector
A 52	Junction Connector
A 53	Junction Connector
A 56	Diode (Power Heater)
A 57	Resistor
A 58	Resistor
A 66	Stop Lamp SW
A 68	PTC Heater
A 69	PTC Heater
A 70	Stop Light Control Relay
A 71	Junction Connector
A 72	Junction Connector
A 80	Junction Connector

       

 
 
 
Position of Parts in Instrument Panel <LHD>

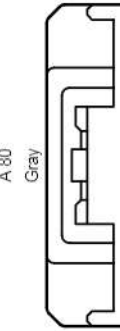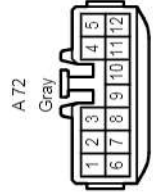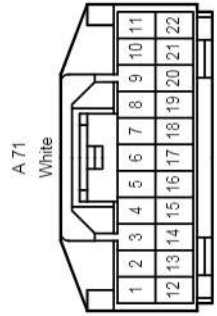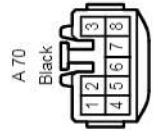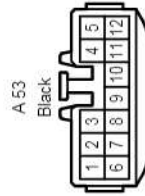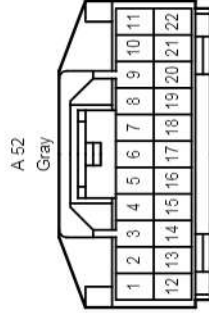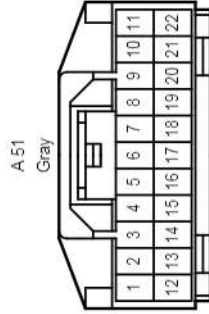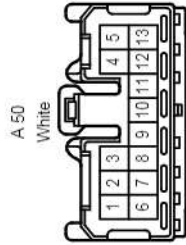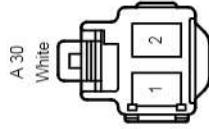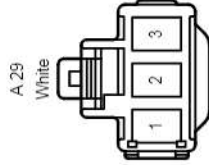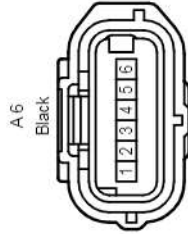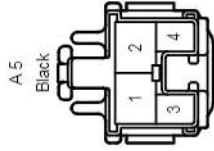




Position of Parts in Instrument Panel <LHD>

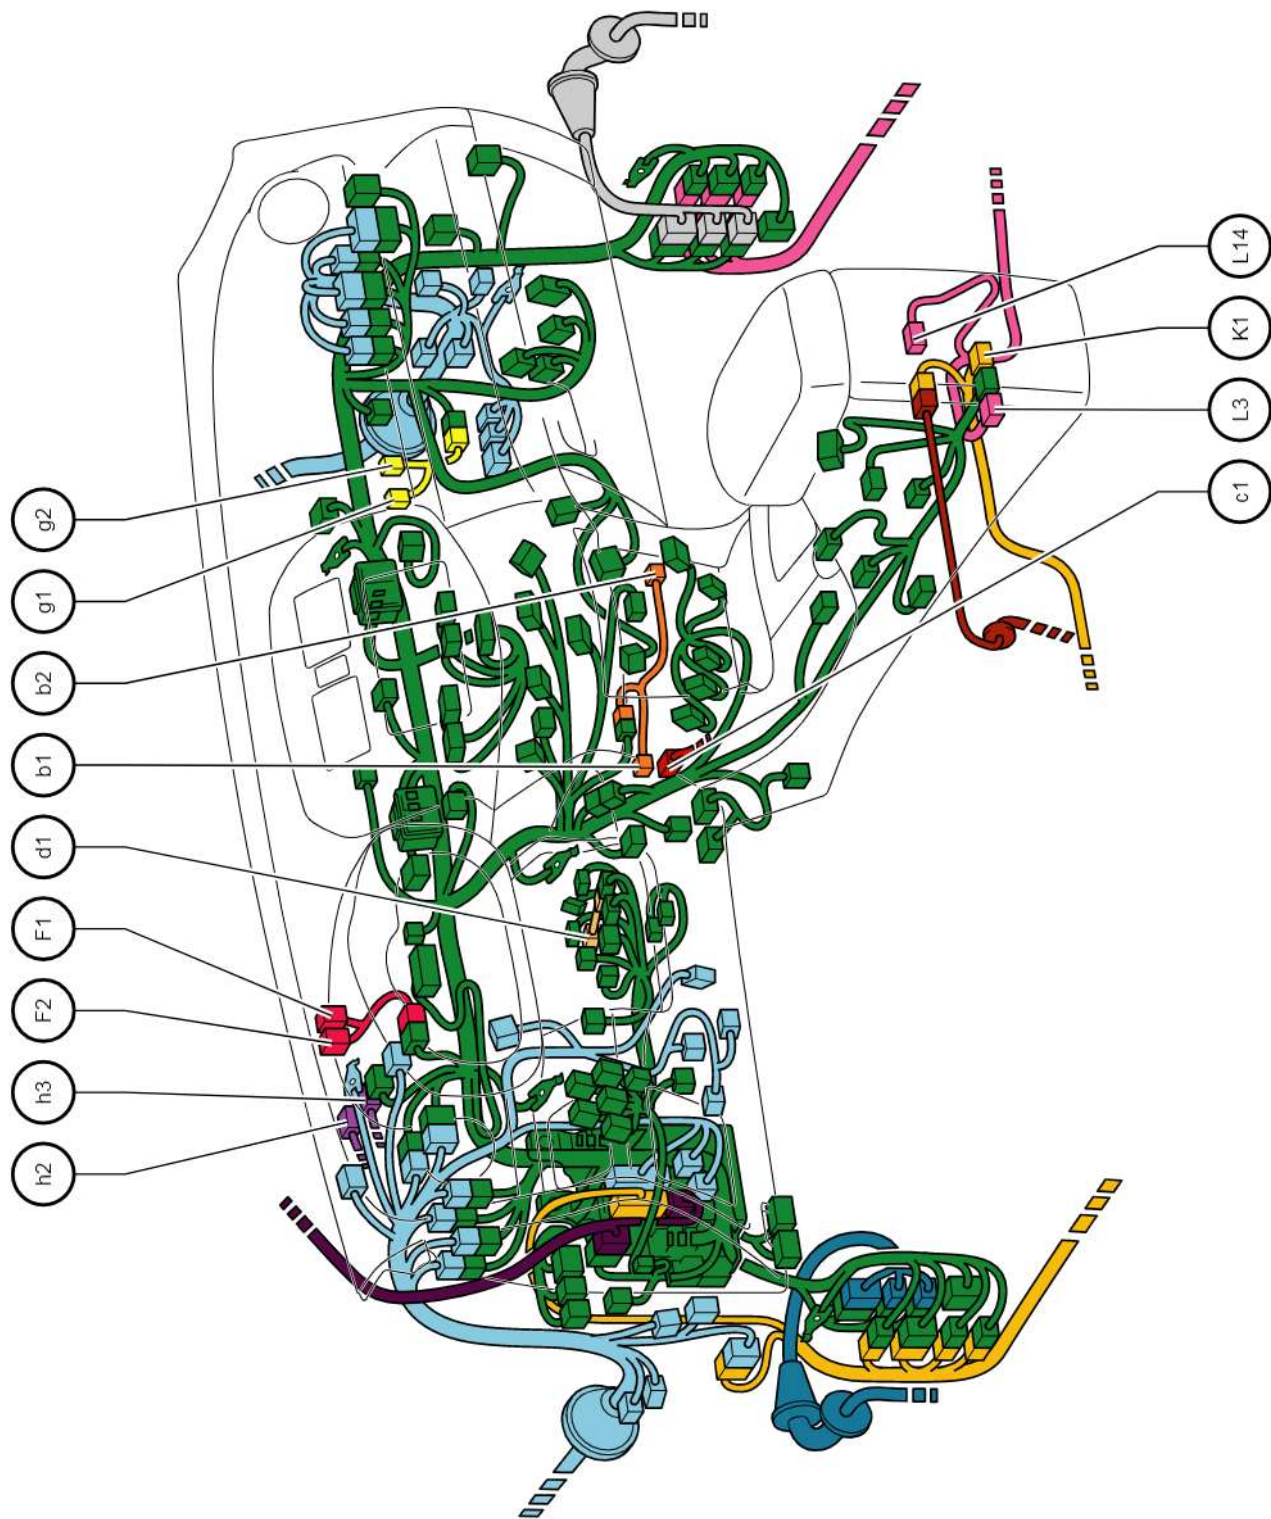




F	1	A/C Solar Sensor
F	2	Automatic Light Control Sensor
K	1	Airbag Sensor Assembly Center
L	3	Airbag Sensor Assembly Center
L	14	Electrical Key Oscillator (Front)
L	14	Electrical Key Oscillator (Front)
b	1	Foot Lamp (Front LH)
b	2	Foot Lamp (Front RH)
c	1	A/C Amplifier , A/C Blower Assembly
d	1	Key Interlock Solenoid
g	1	Airbag Squib (Front Passenger's Airbag Assembly)
g	2	Airbag Squib (Front Passenger's Airbag Assembly)
h	2	Power Steering ECU , Power Steering Torque Sensor
h	3	Power Steering ECU , Rotation Angle Sensor

 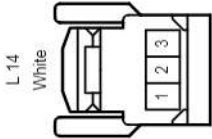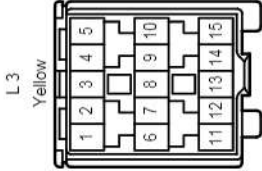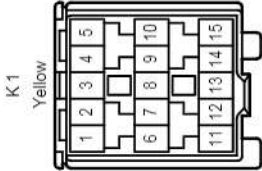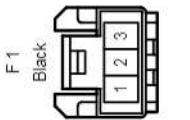





(Before Aug. 2007 Production)

 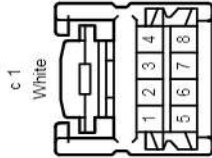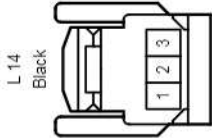


(From Aug. 2007 Production)

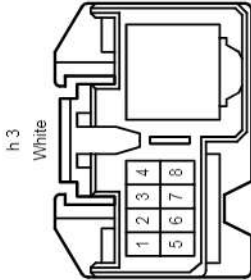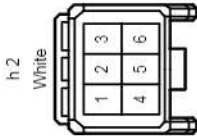 




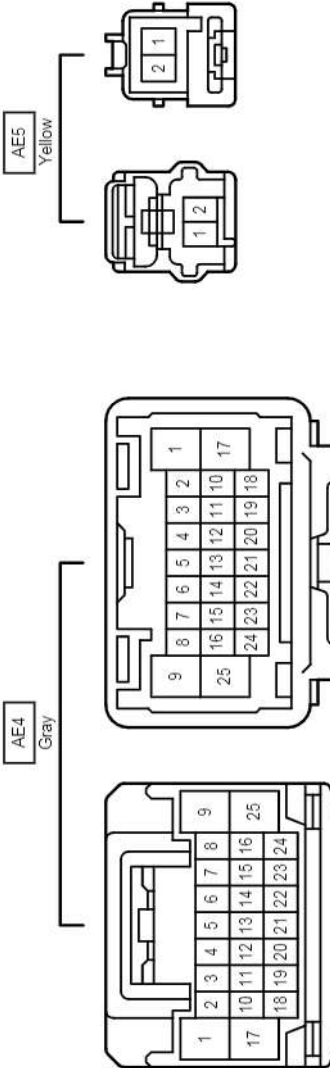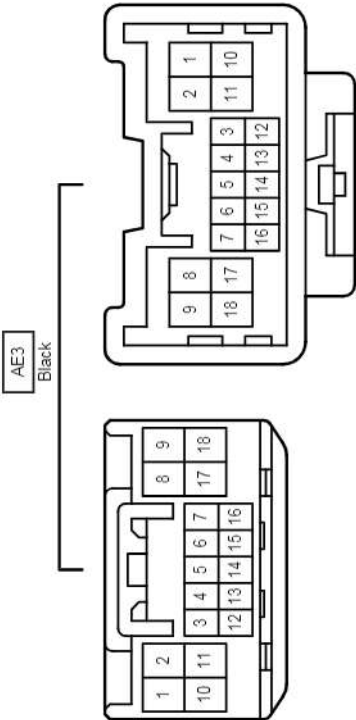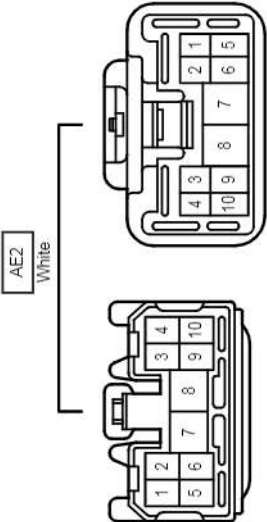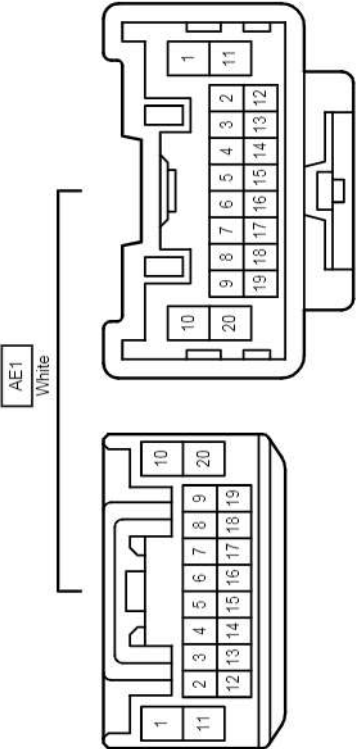

Wire and Wire in Instrument Panel <LHD>




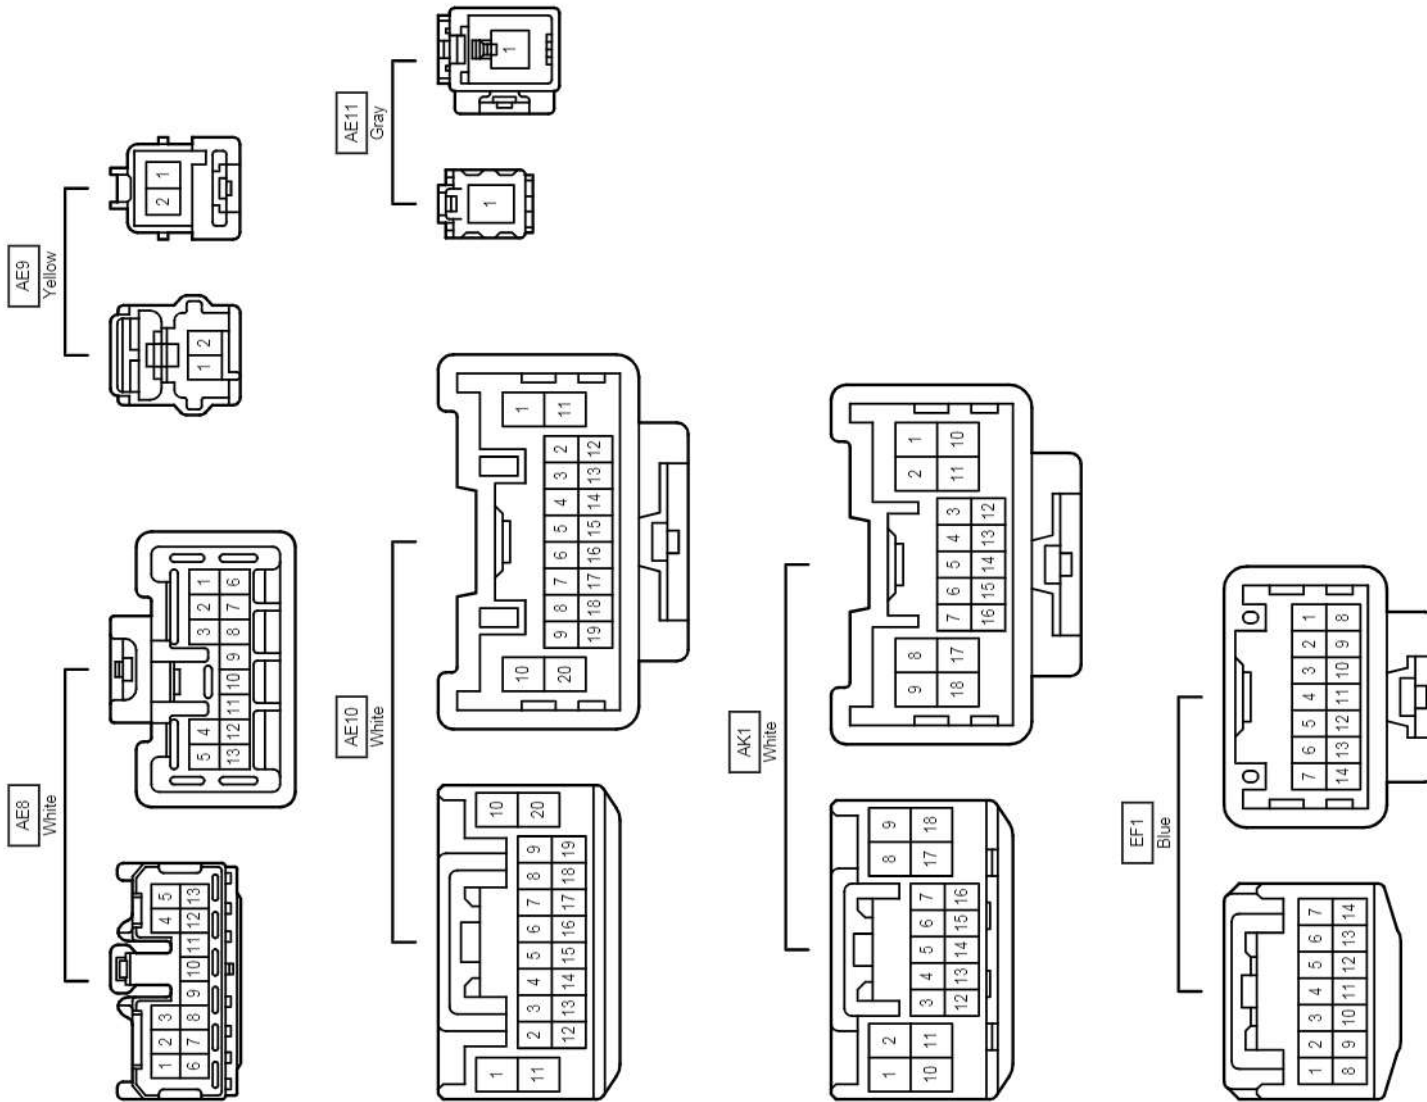


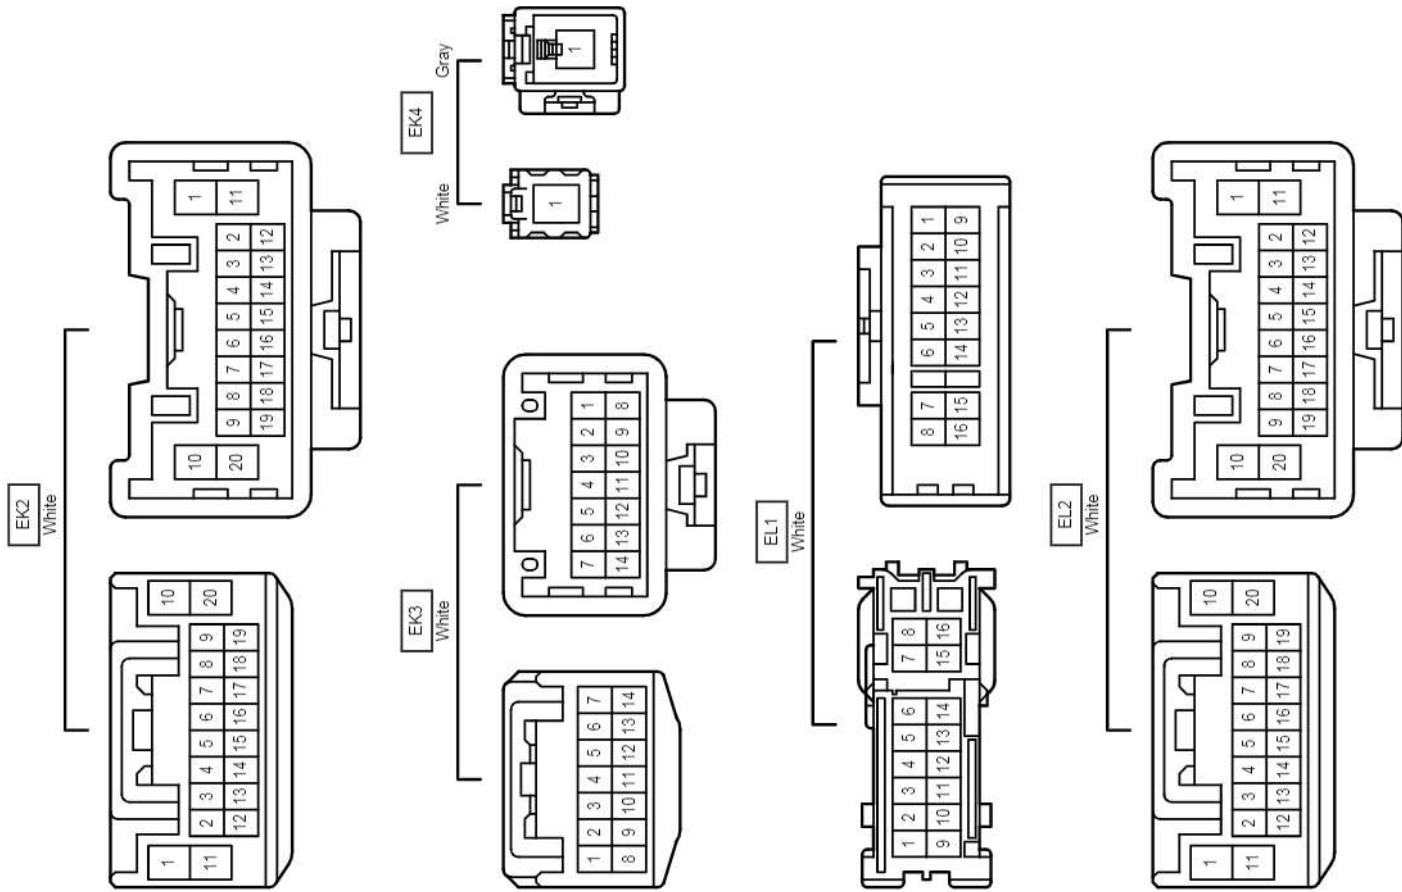

Wire and Wire in Instrument Panel <LHD>




Eg1
Yellow

GE1
White

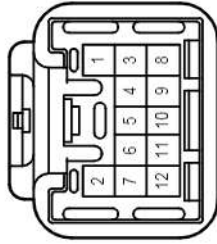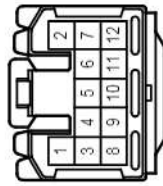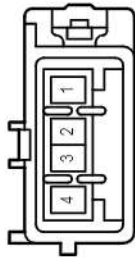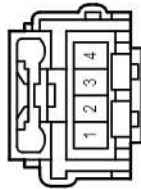

GE2
White







GE3
White

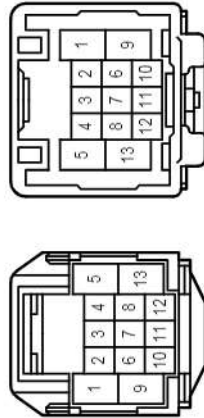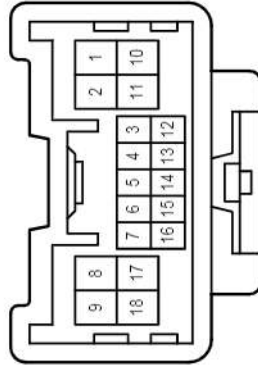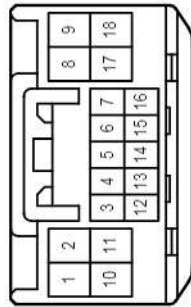


HE1
White


HE2
White

HE3
White

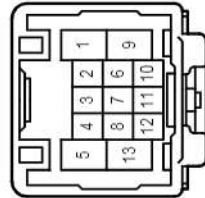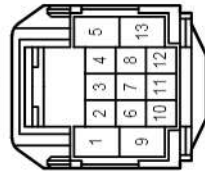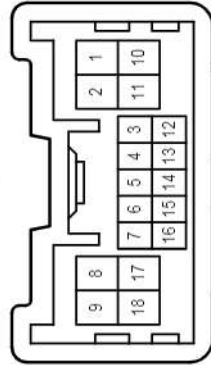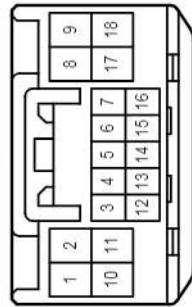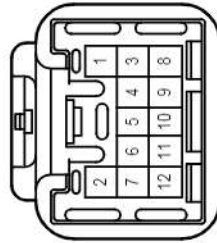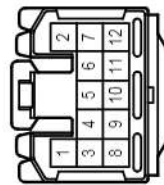

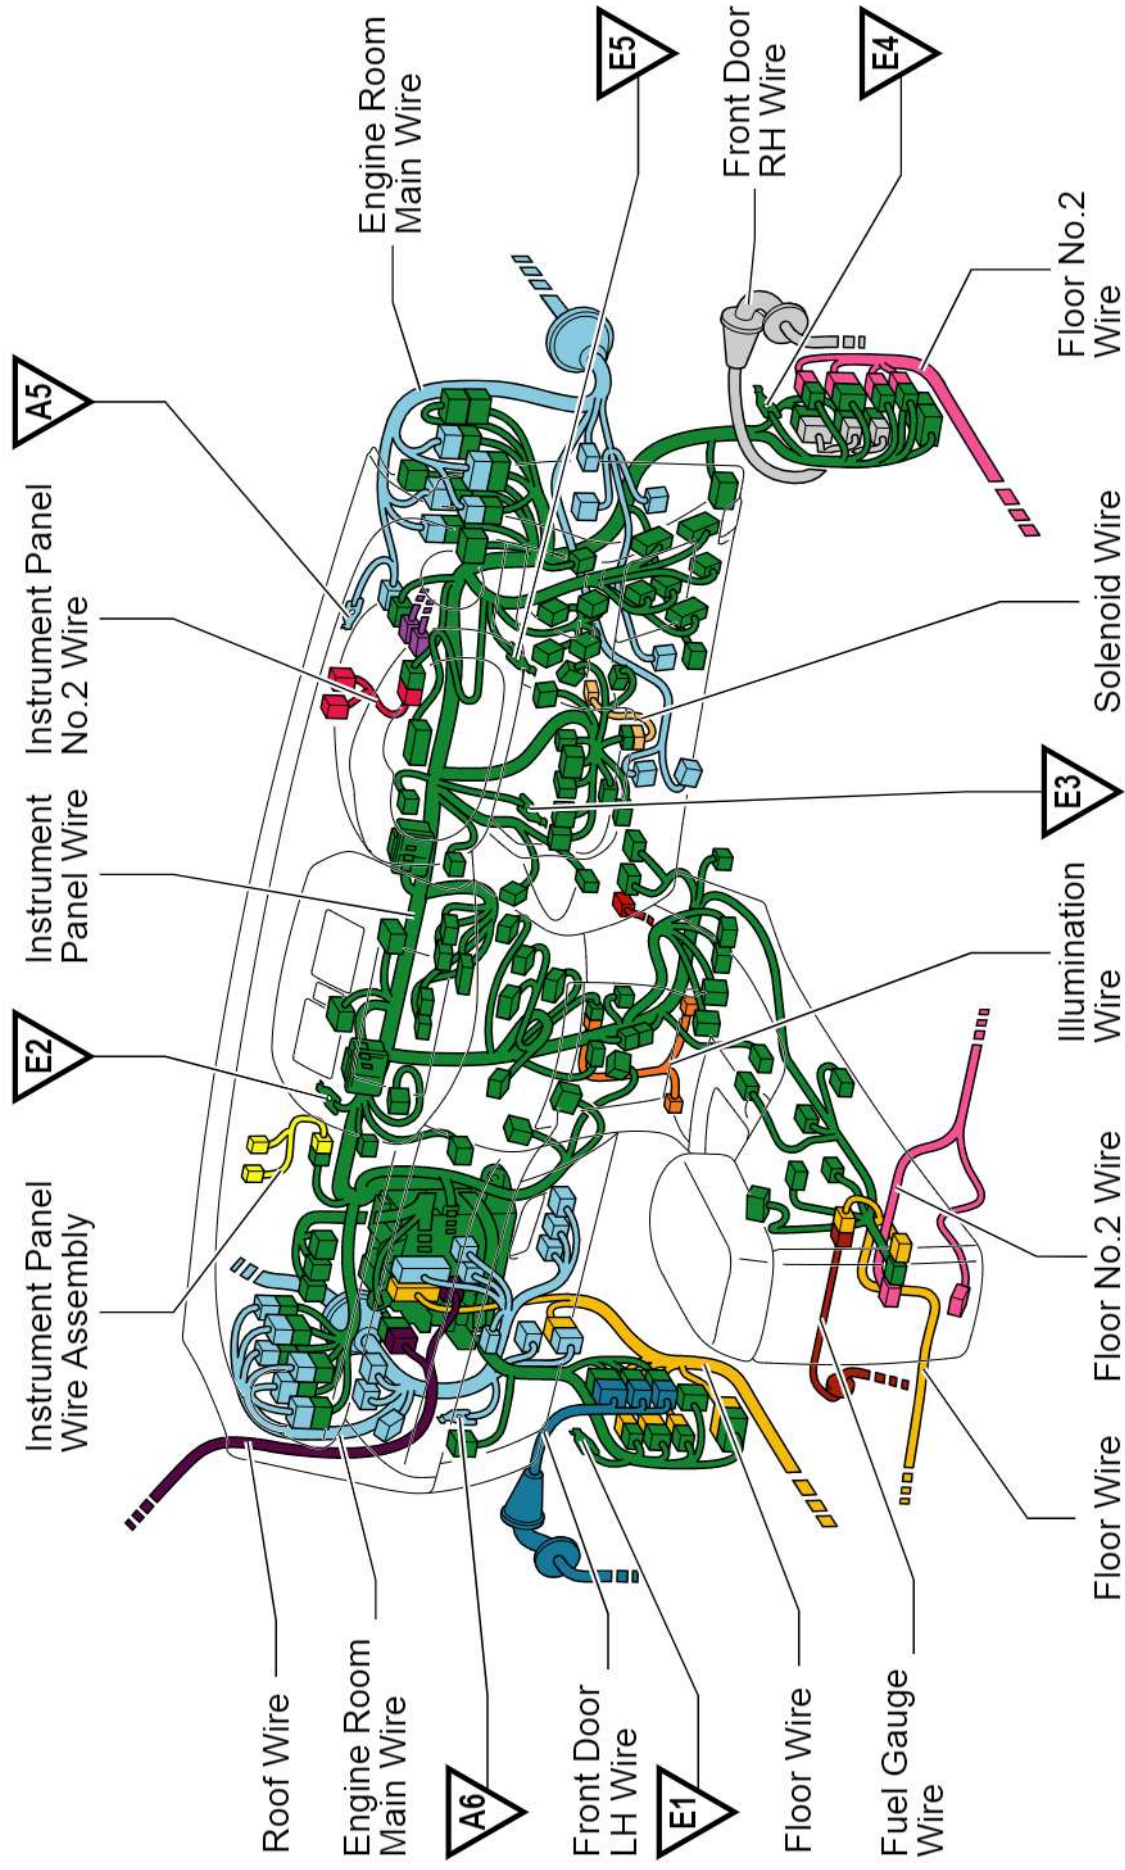


Position of Parts in Instrument Panel <RHD>

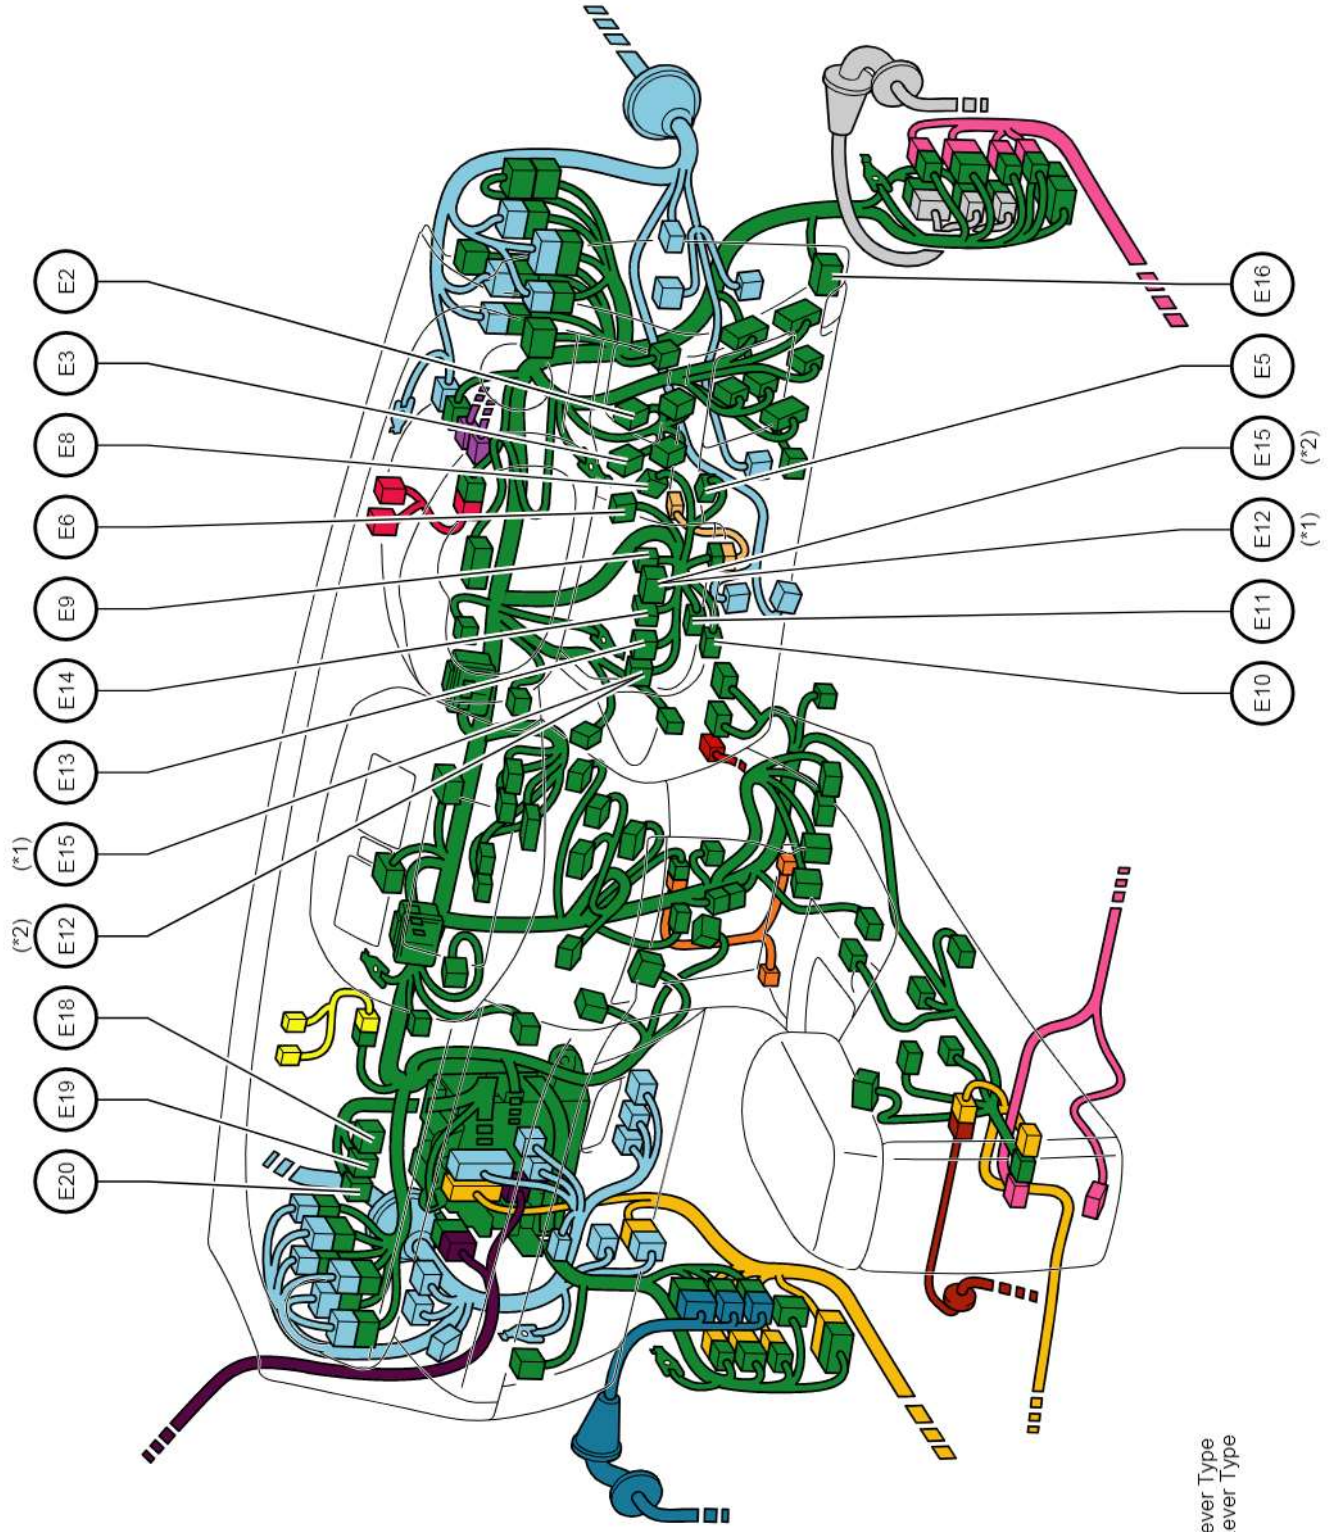


* 1:LH Turn Lever Type
* 2:RH Turn Lever Type

E	2	Light Control Rheostat
E	3	Headlamp Leveling SW
E	5	Ignition SW
E	6	Steering Lock ECU
E	8	Transponder Key Amplifier
E	9	Unlock Warning SW
E	10	Spiral Cable
E	11	Airbag Squib (Steering Wheel Pad)
E	12	Windshield Wiper SW Assembly
E	13	Windshield Wiper SW Assembly
E	14	Steering Sensor
E	15	Headlamp Dimmer SW Assembly
E	16	DLC3
E	18	Main Body ECU
E	19	Main Body ECU
E	20	Main Body ECU


E 2
White

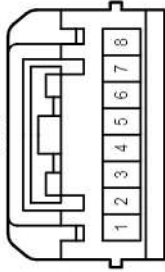


E 3
White

 


E 5
White

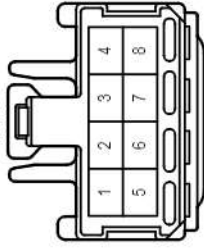

E 6
Black

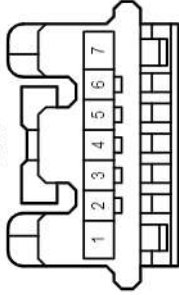


E 8
Black

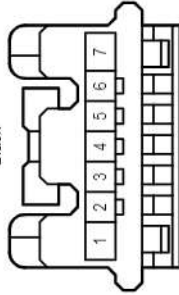


E 9
White




E 10
Black

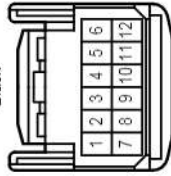


E 11
Yellow

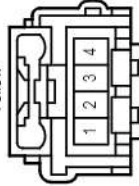


E 12
White

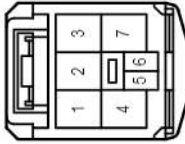


E 13
White

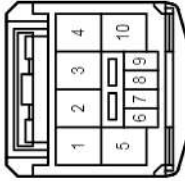


E 14
Gray

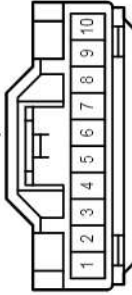


E 15
White

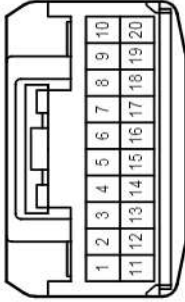


E 16
White

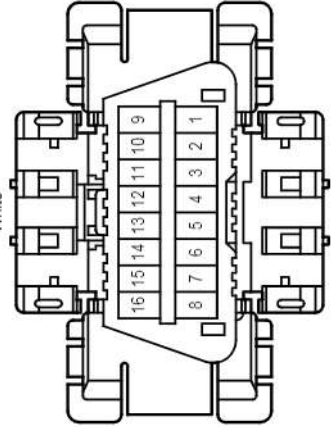


E 18
White

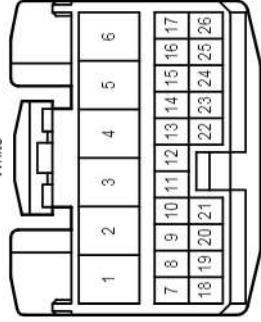


E 19
White

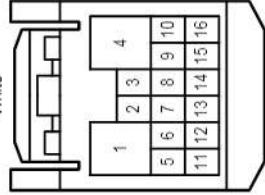

E 20
White

 


Position of Parts in Instrument Panel <RHD>

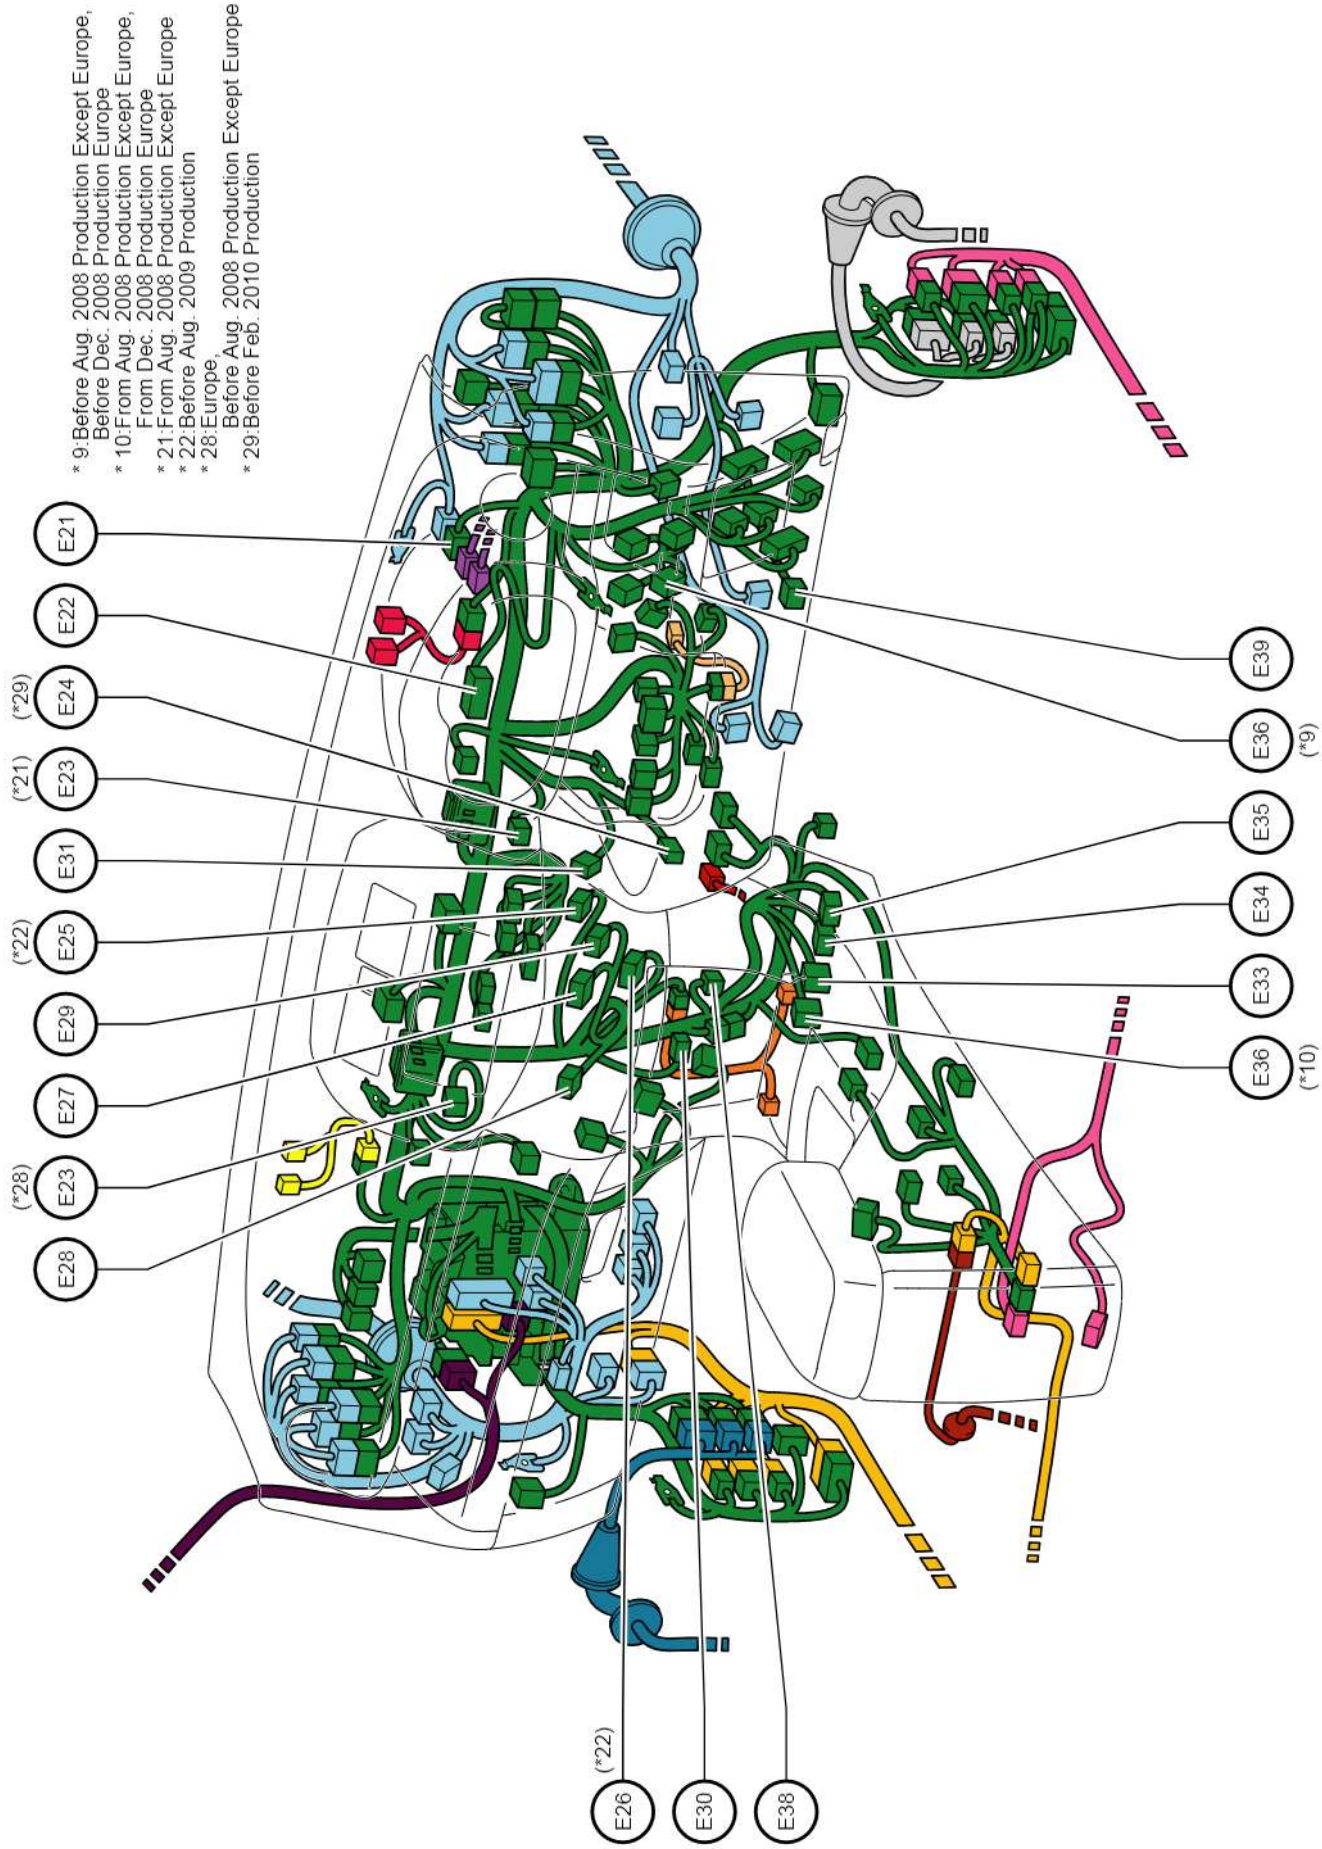


E 21	Power Steering ECU
E 22	Combination Meter
E 23	Hazard Warning Signal SW
E 24	A/C Room Temp. Sensor
E 25	Clock
E 26	Integration Control and Panel Assembly
E 27	Integration Control and Panel Assembly
E 28	Air Inlet Control SW
E 29	A/C SW , Max Hot SW
E 30	Front Console Illumination
E 31	Power SW
E 33	Seat Heater SW
E 34	Cigarette Lighter Illumination
E 35	Cigarette Lighter
E 36	Downhill Assist Control SW
E 38	A/C Evaporator Temp. Sensor
E 39	Knee Airbag Squib

Position of Parts in Instrument Panel <RHD>

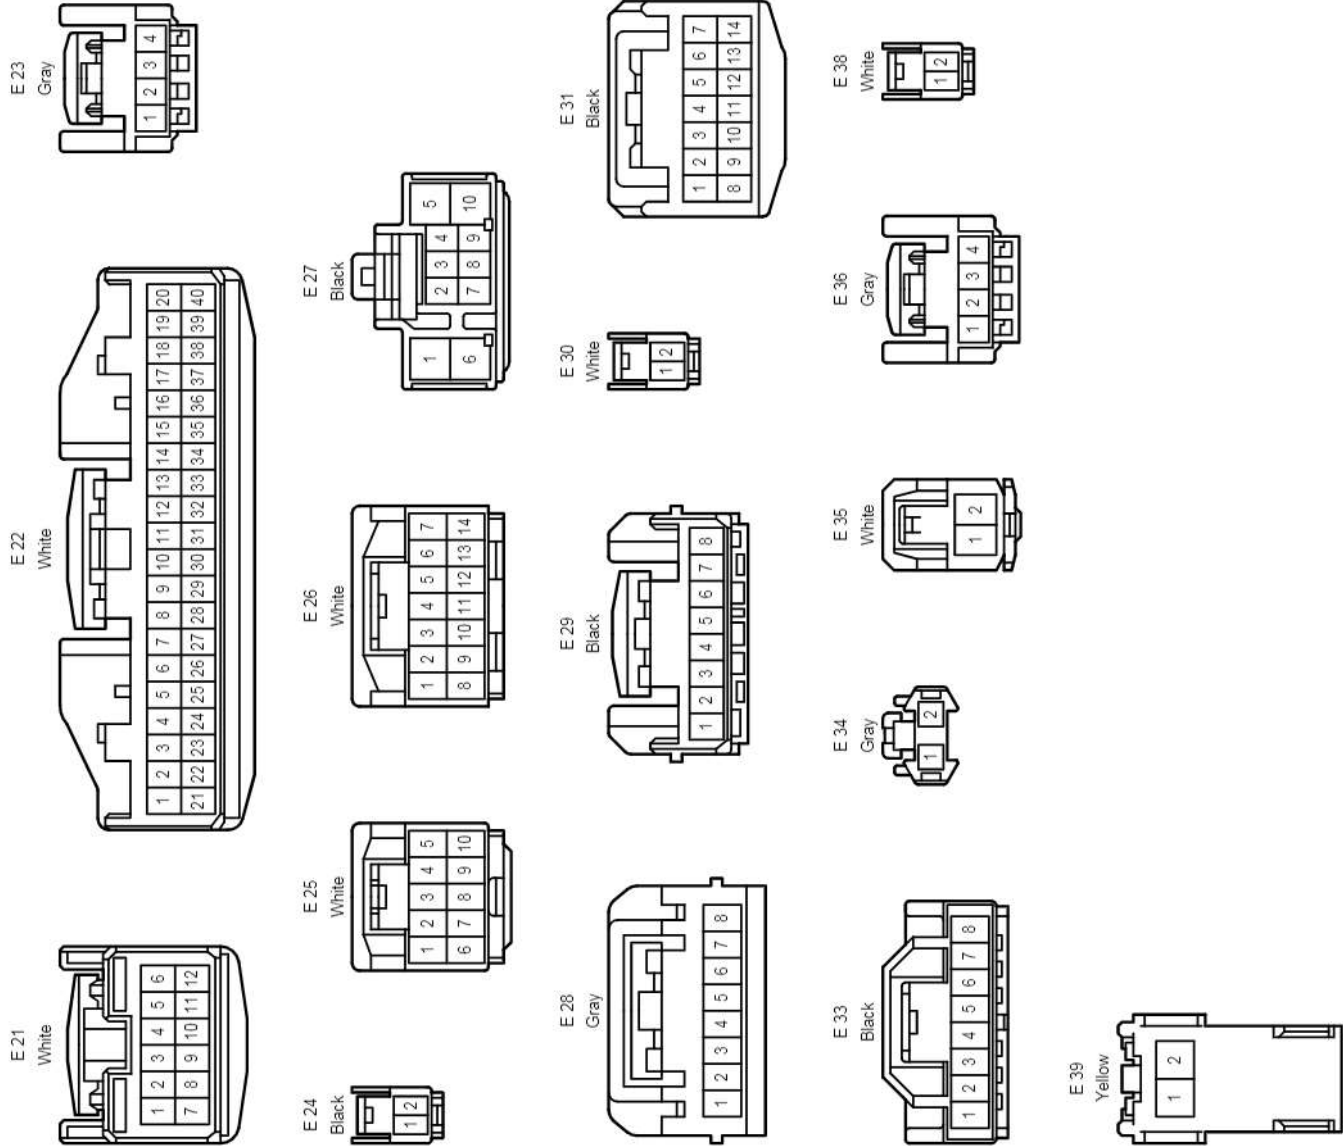


Position of Parts in Instrument Panel <RHD>

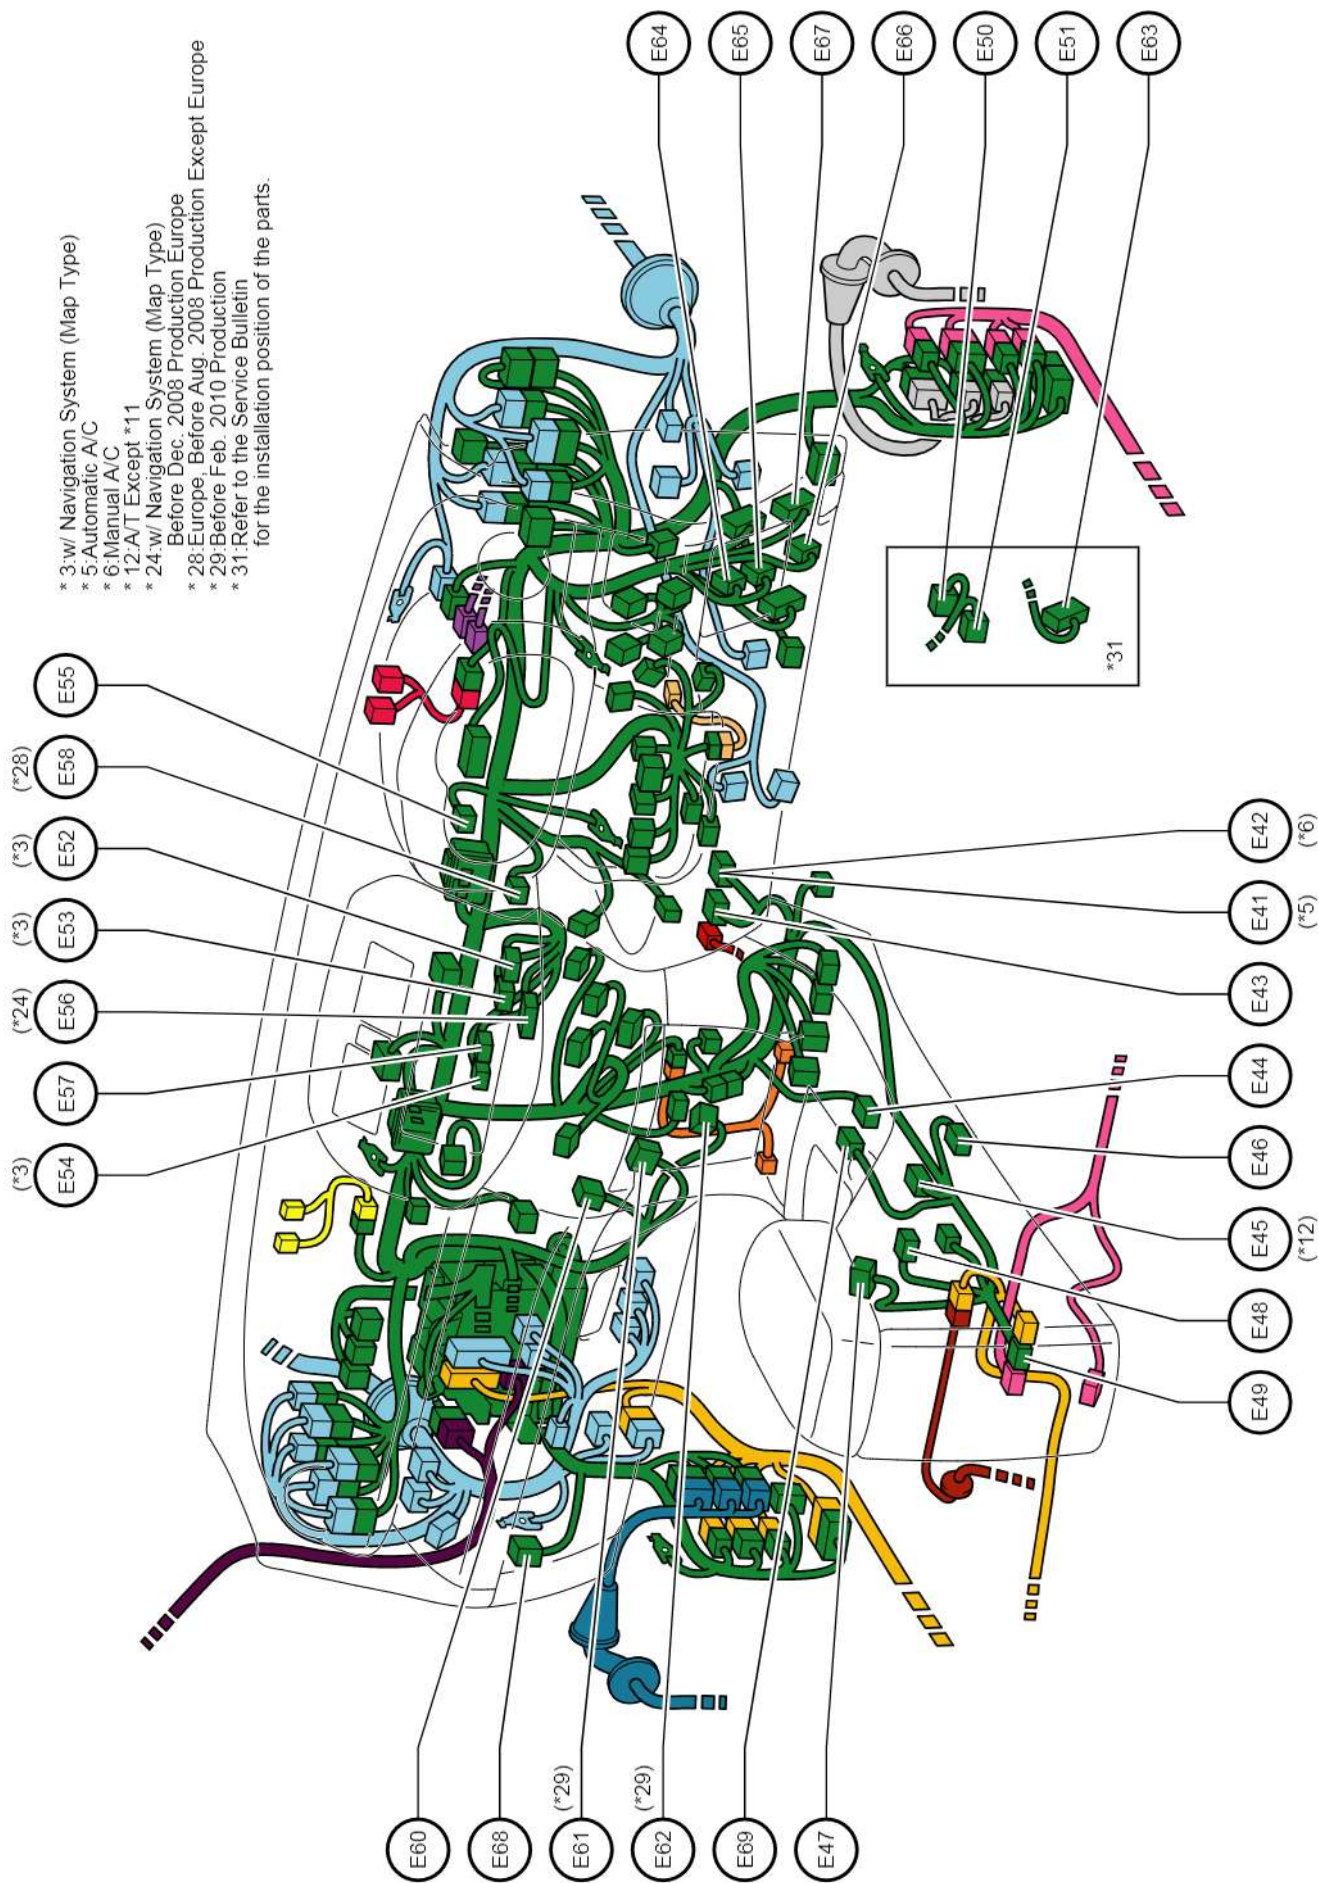


E 41	A/C Amplifier
E 42	A/C Amplifier
E 43	A/C Amplifier
E 44	Shift Lock Control ECU
E 45	Transmission Control SW
E 46	Parking Brake SW
E 47	Outer Mirror SW
E 48	Power Outlet Socket (Front)
E 49	Airbag Sensor Assembly Center
E 50	Transponder Key ECU
E 51	ID Code Box
E 52	Navigation Receiver Assembly
E 53	Navigation Receiver Assembly
E 54	Navigation Receiver Assembly
E 55	Antenna Amplifier
E 56	Navigation Receiver Assembly
E 57	Navigation Receiver Assembly
E 58	4WD Control SW
E 60	Blower Motor
E 61	Blower Motor
E 62	Blower Resistor
E 63	Certification ECU
E 64	Tire Pressure Warning ECU and Receiver
E 65	Tire Pressure Warning ECU and Receiver
E 66	Auto Wiper Relay
E 67	4WD Control ECU
E 68	Airbag Cut Off SW
E 69	A/T Shift Lever Illumination

Position of Parts in Instrument Panel <RHD>


E 41
White

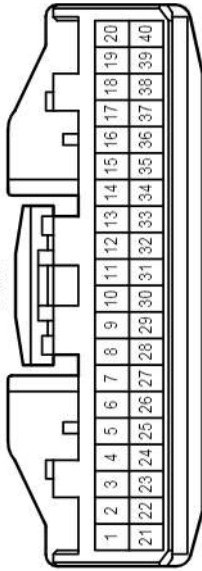


E 42
White

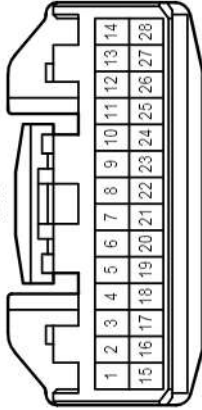


E 43
White

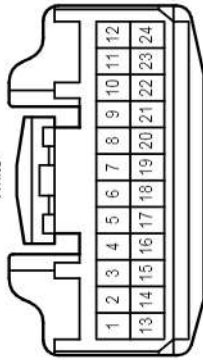

E 44
White

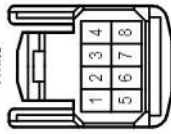


E 45
White

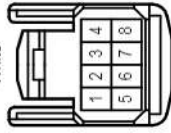


E 46
Black




E 47
White

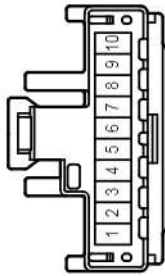


E 48
White

 


E 49
Yellow

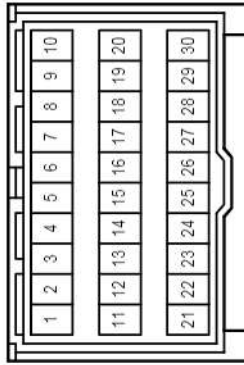


E 50
White

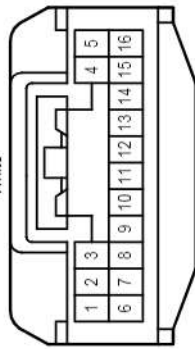


E 50
Black

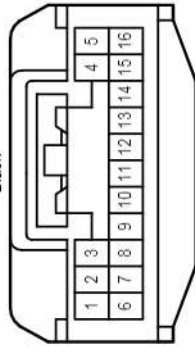


E 51
White

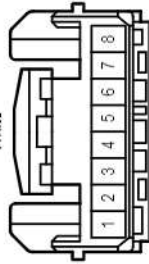


E 52
White

 

E 53
White

 

E 54
White

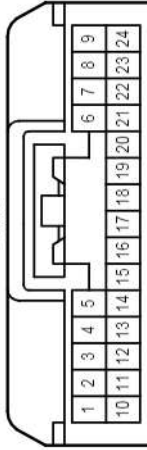


E 55
White




Position of Parts in Instrument Panel <RHD>


E 61
Black

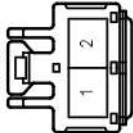


E 62
Black

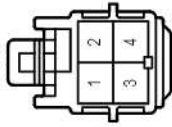


E 63
White

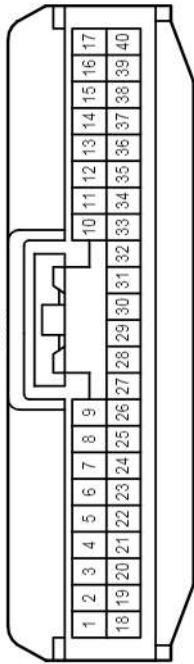


E 64
Black

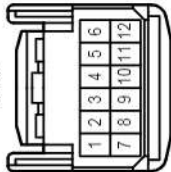


E 65
White

 

E 66
White

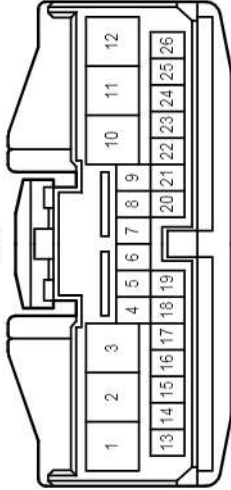

E 67
White

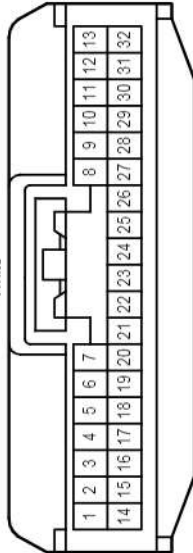

E 68
White




E 69
White



Position of Parts in Instrument Panel <RHD>

E93 (*4)
E102 (*4)
E91 (*4)
E73 (*4)
E90 (*29)
E77 (*30)
E115 (*30)


- * 4: w/o Navigation System (Map Type)
- * 11: AT 3ZR-FAE, A/T Diesel
- * 23: From Aug. 2009 Production
- * 25: w/ Navigation System (Map Type) From Dec. 2008 Production Except Europe
- * 26: w/o Navigation System (Map Type) Before Nov. 2008 Production Except Europe
- * 25: w/ Navigation System (Map Type) Before Dec. 2008 Production Except Europe
- * 27: w/o Navigation System (Map Type) From Nov. 2008 Production Except Europe
- * 29: Before Feb. 2010 Production
- * 30: From Feb. 2010 Production

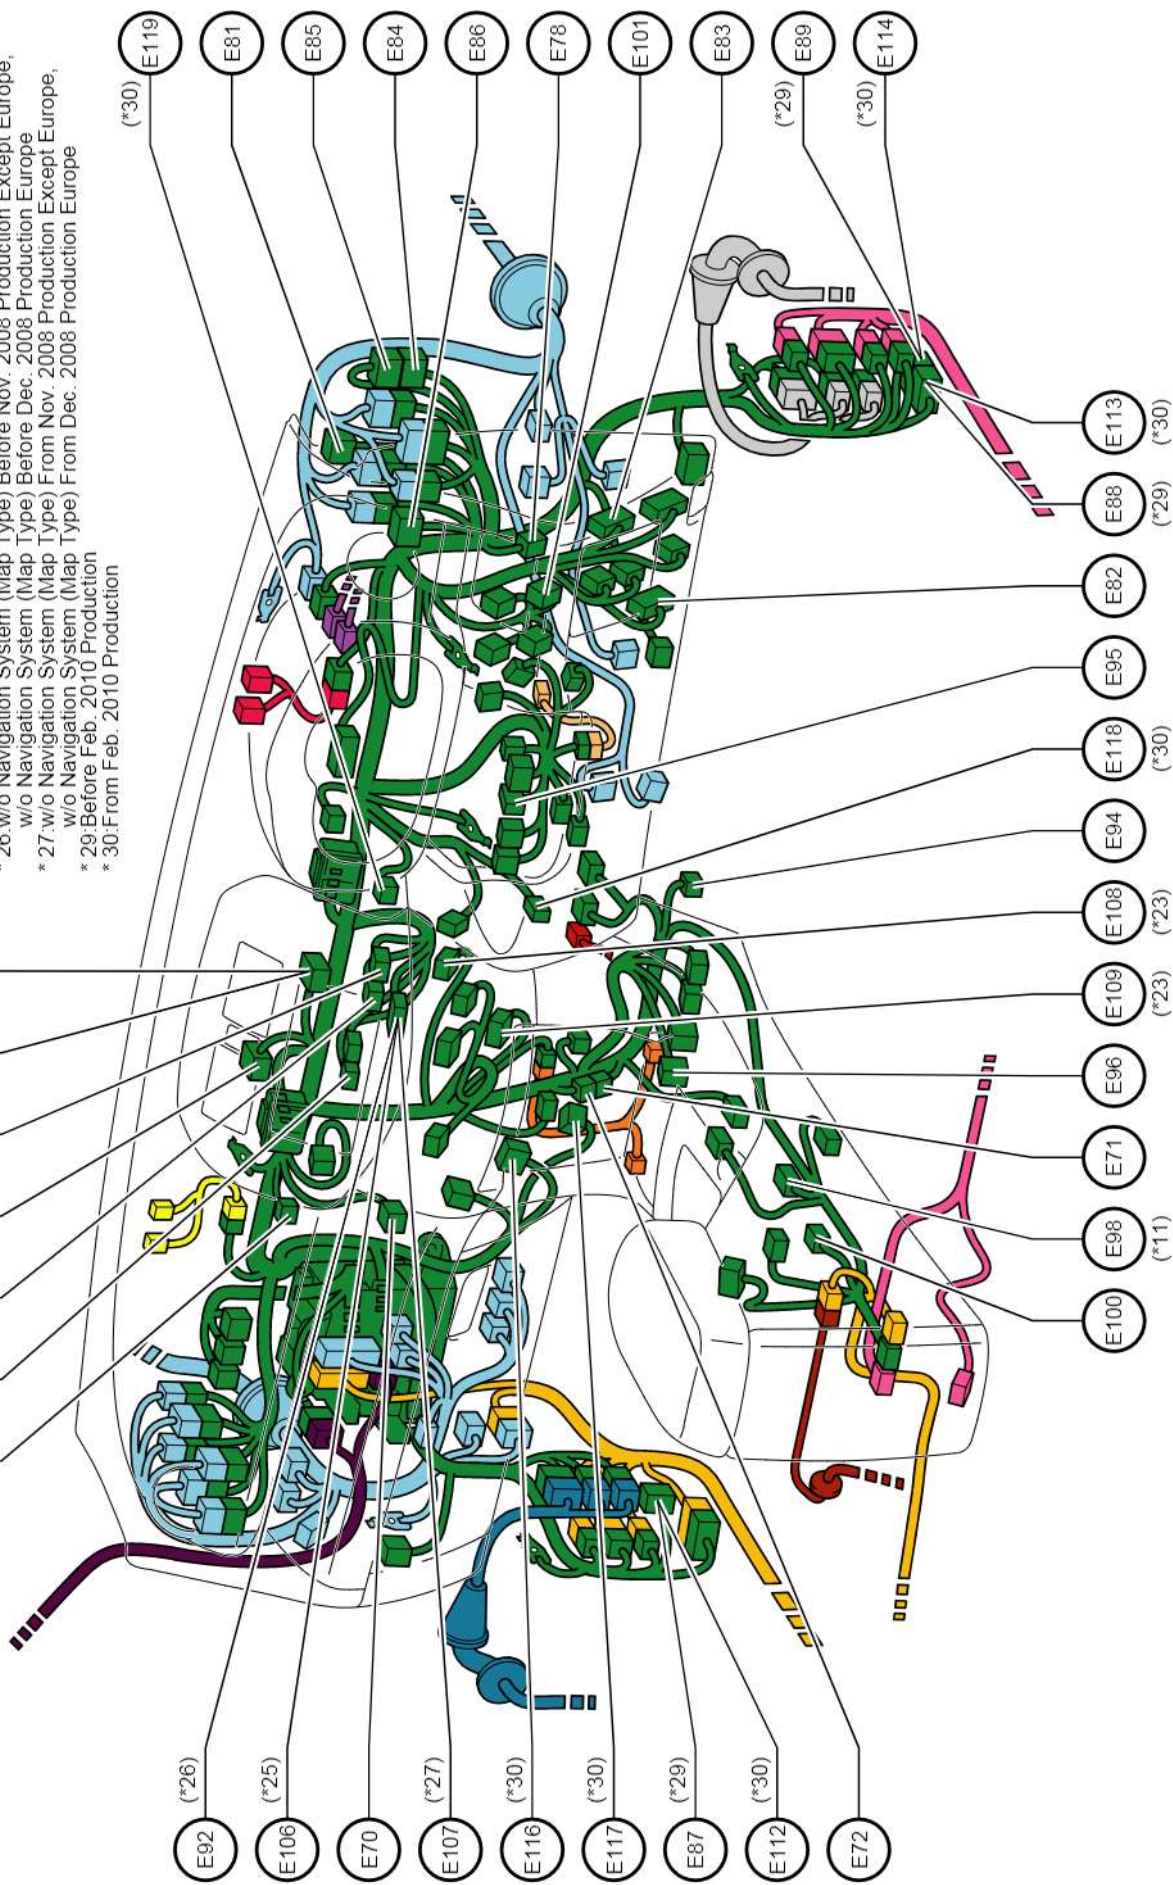


E 70	Air Inlet Control Servo Motor
E 71	Short Connector
E 72	Short Connector
E 73	Junction Connector
E 77	Junction Connector
E 78	Diode (Rear Wiper)
E 81	Turn Signal Flasher
E 82	Double Locking ECU
E 83	Theft Warning ECU
E 84	Junction Connector
E 85	Junction Connector
E 86	Junction Connector
E 87	Junction Connector
E 88	Junction Connector
E 89	Junction Connector
E 90	Radio Receiver Assembly
E 91	Radio Receiver Assembly
E 92	Radio Receiver Assembly
E 93	Diode (Heater)
E 94	Heated Oxygen Sensor (Bank 1 Sensor 2)
E 95	Steering Sensor
E 96	VSC OFF SW
E 98	Transmission Control SW
E 100	No.1 Stereo Jack Adapter Assembly
E 101	No.1 Pattern Select Switch Assembly
E 102	Radio Receiver Assembly
E 106	Navigation Receiver Assembly
E 107	Radio Receiver Assembly
E 108	Clock
E 109	Integration Control and Panel Assembly
E 112	Junction Connector
E 113	Junction Connector
E 114	Junction Connector
E 115	Junction Connector
E 116	Blower Motor
E 117	Blower Resistor
E 118	A/C Room Temp. Sensor
E 119	4WD Control SW

Position of Parts in Instrument Panel <RHD>

E 70
Black

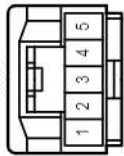


E 71
White

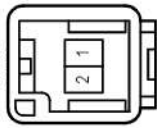


E 72
White



 E 73
Black



E 77
Gray

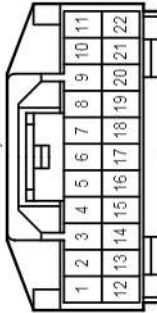

E 78
Black




E 81
Black




E 82
White




E 83
White

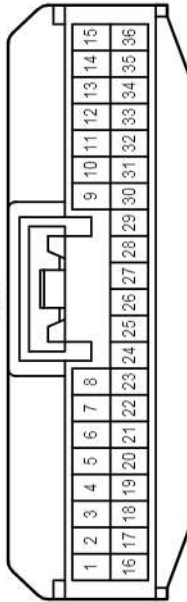


E 84
White

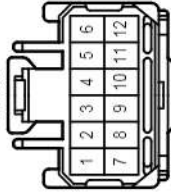


E 85
White

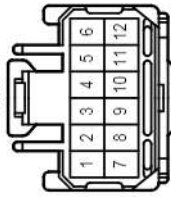


E 86
White

 


E 87
Gray

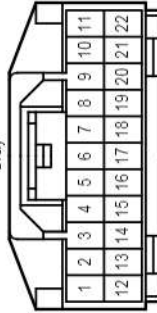


E 88
Blue

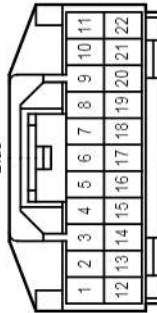


E 89
Blue

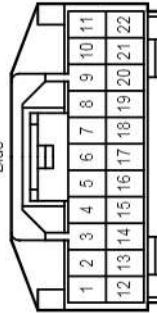


E 90
White

 

E 91
White

 


E 92
White

 


E 93
Black



 E 94
Gray




E 95
White

 


Position of Parts in Instrument Panel <RHD>


E102
White

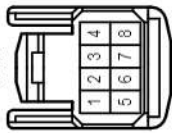


E106
Blue

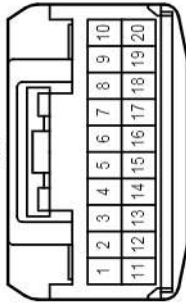


E107
Blue

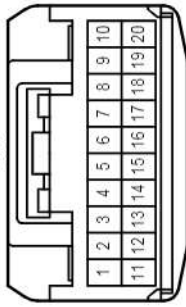


E108
Black

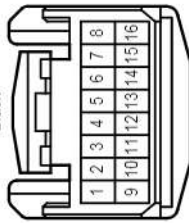


E109
Black

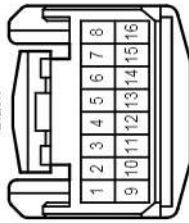


E112
Gray

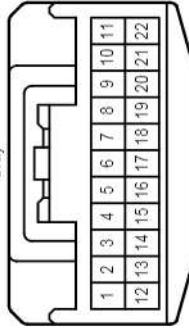


E113
Black

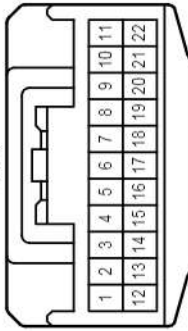


E114
Black

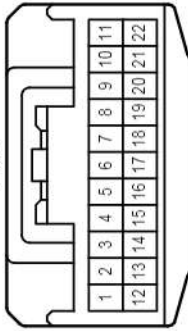


E115
Gray

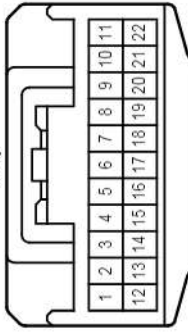

E116
White

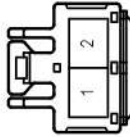


E117
White

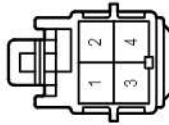


E118
White






















E119
White

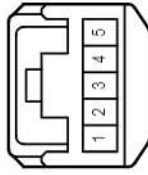

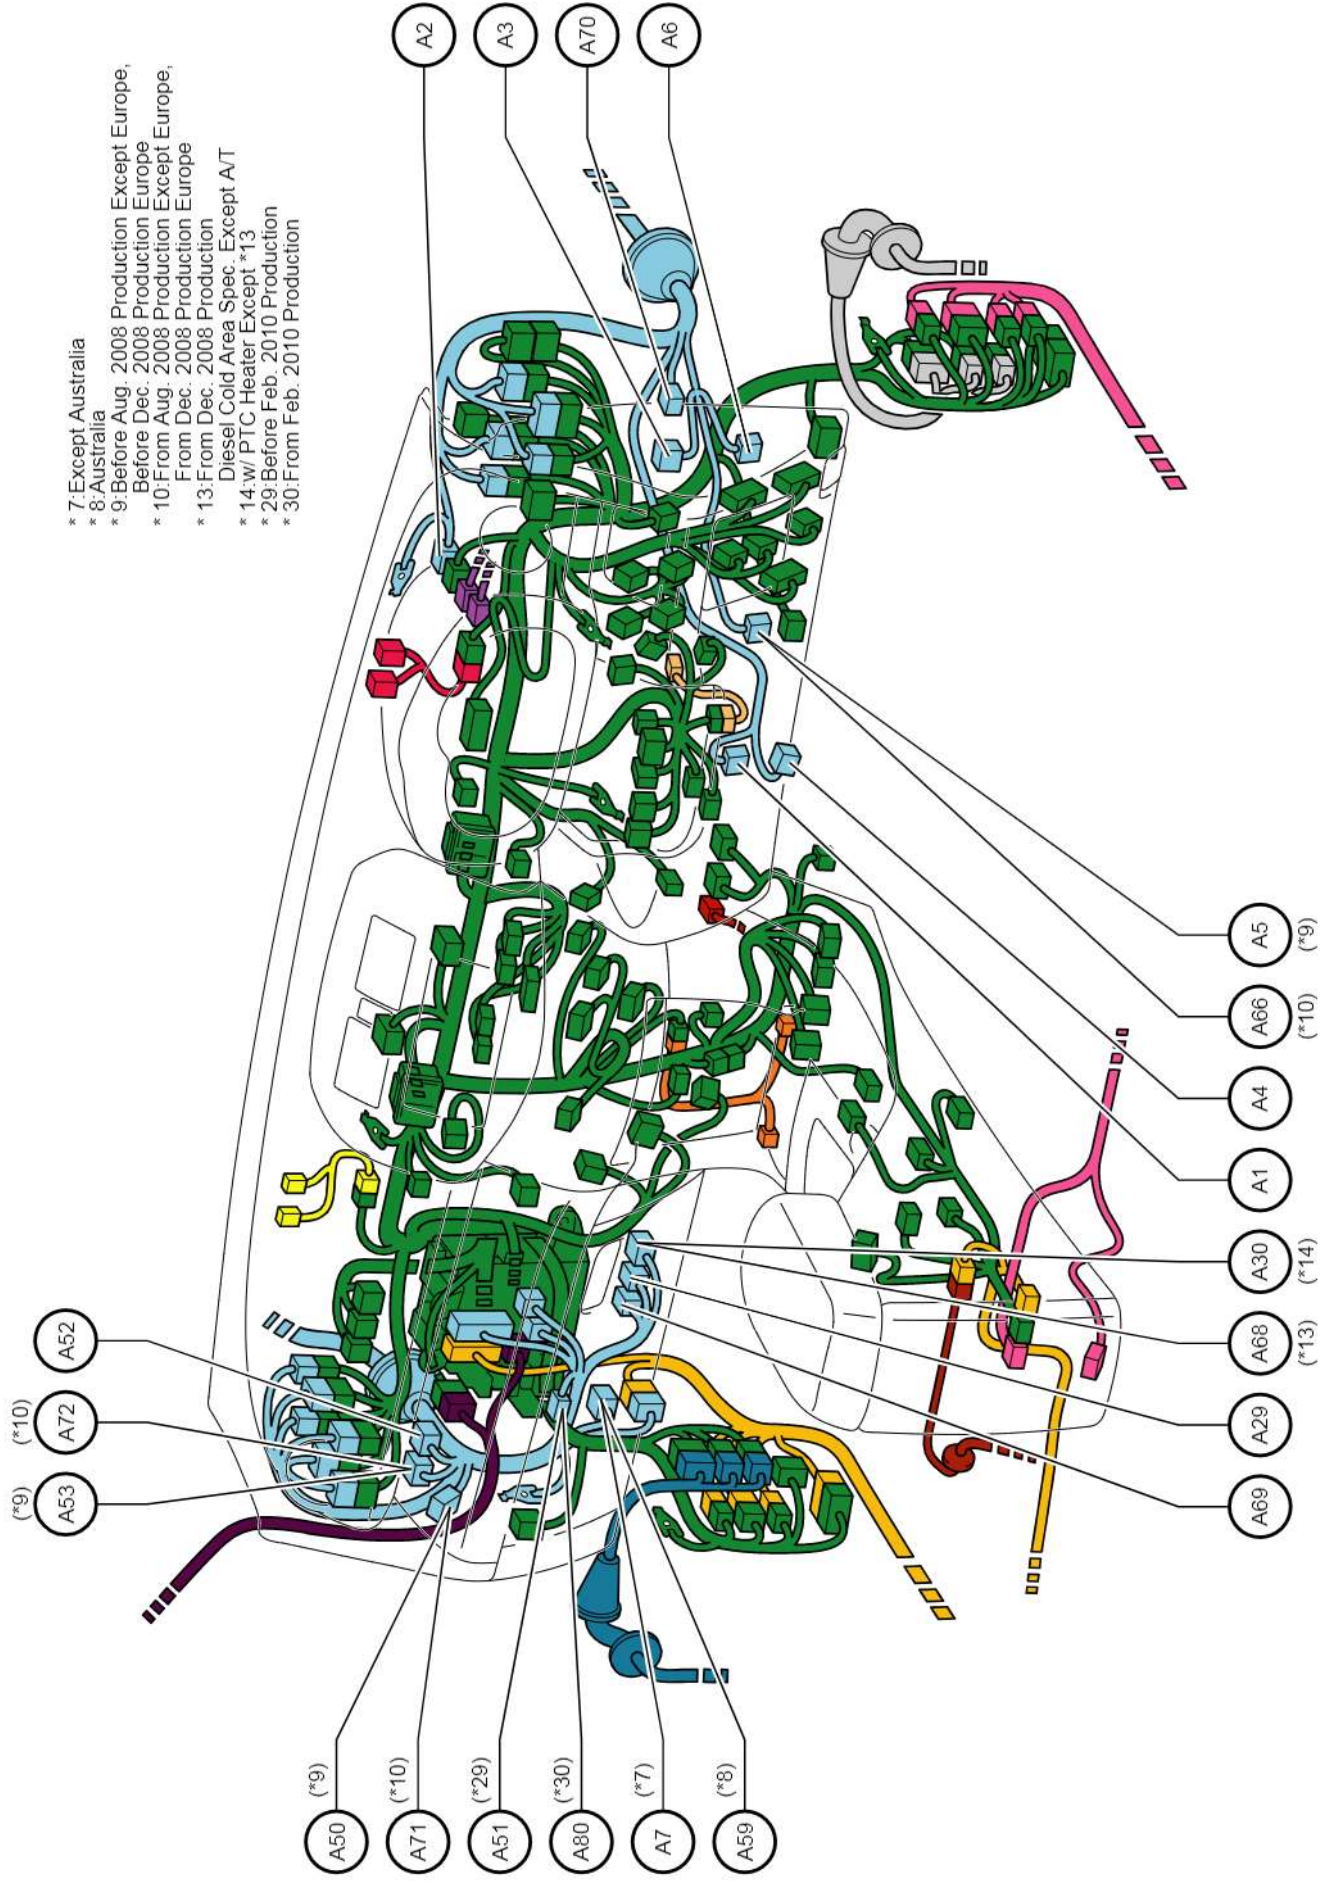


- A 1 Cruise Control Clutch SW
- A 2 Power Steering ECU
- A 3 Brake Pedal Load Sensing SW
- A 4 Clutch Start SW
- A 5 Stop Lamp SW
- A 6 Accelerator Position Sensor
- A 7 Option Connector
- A 29 PTC Heater
- A 30 PTC Heater
- A 50 Junction Connector
- A 51 Junction Connector
- A 52 Junction Connector
- A 53 Junction Connector
- A 59 Option Connector
- A 66 Stop Lamp SW
- A 68 PTC Heater
- A 69 PTC Heater
- A 70 Stop Light Control Relay
- A 71 Junction Connector
- A 72 Junction Connector
- A 80 Junction Connector

       Position of Parts in Instrument Panel <RHD>

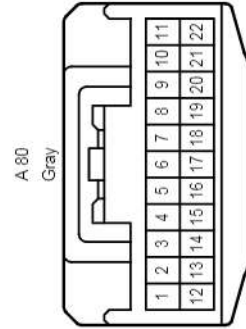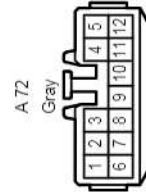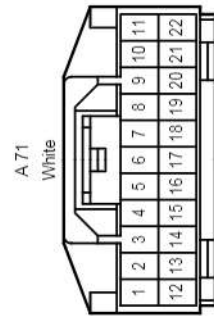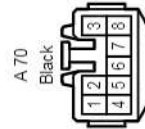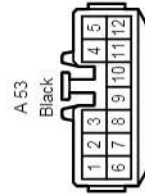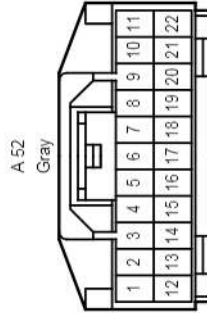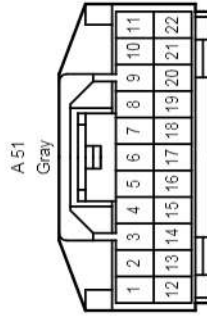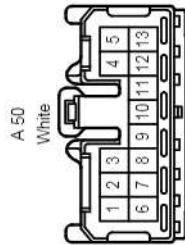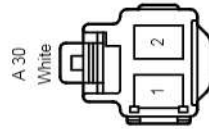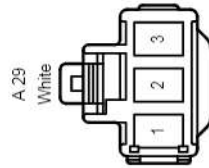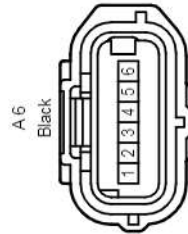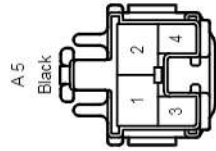






Position of Parts in Instrument Panel <RHD>

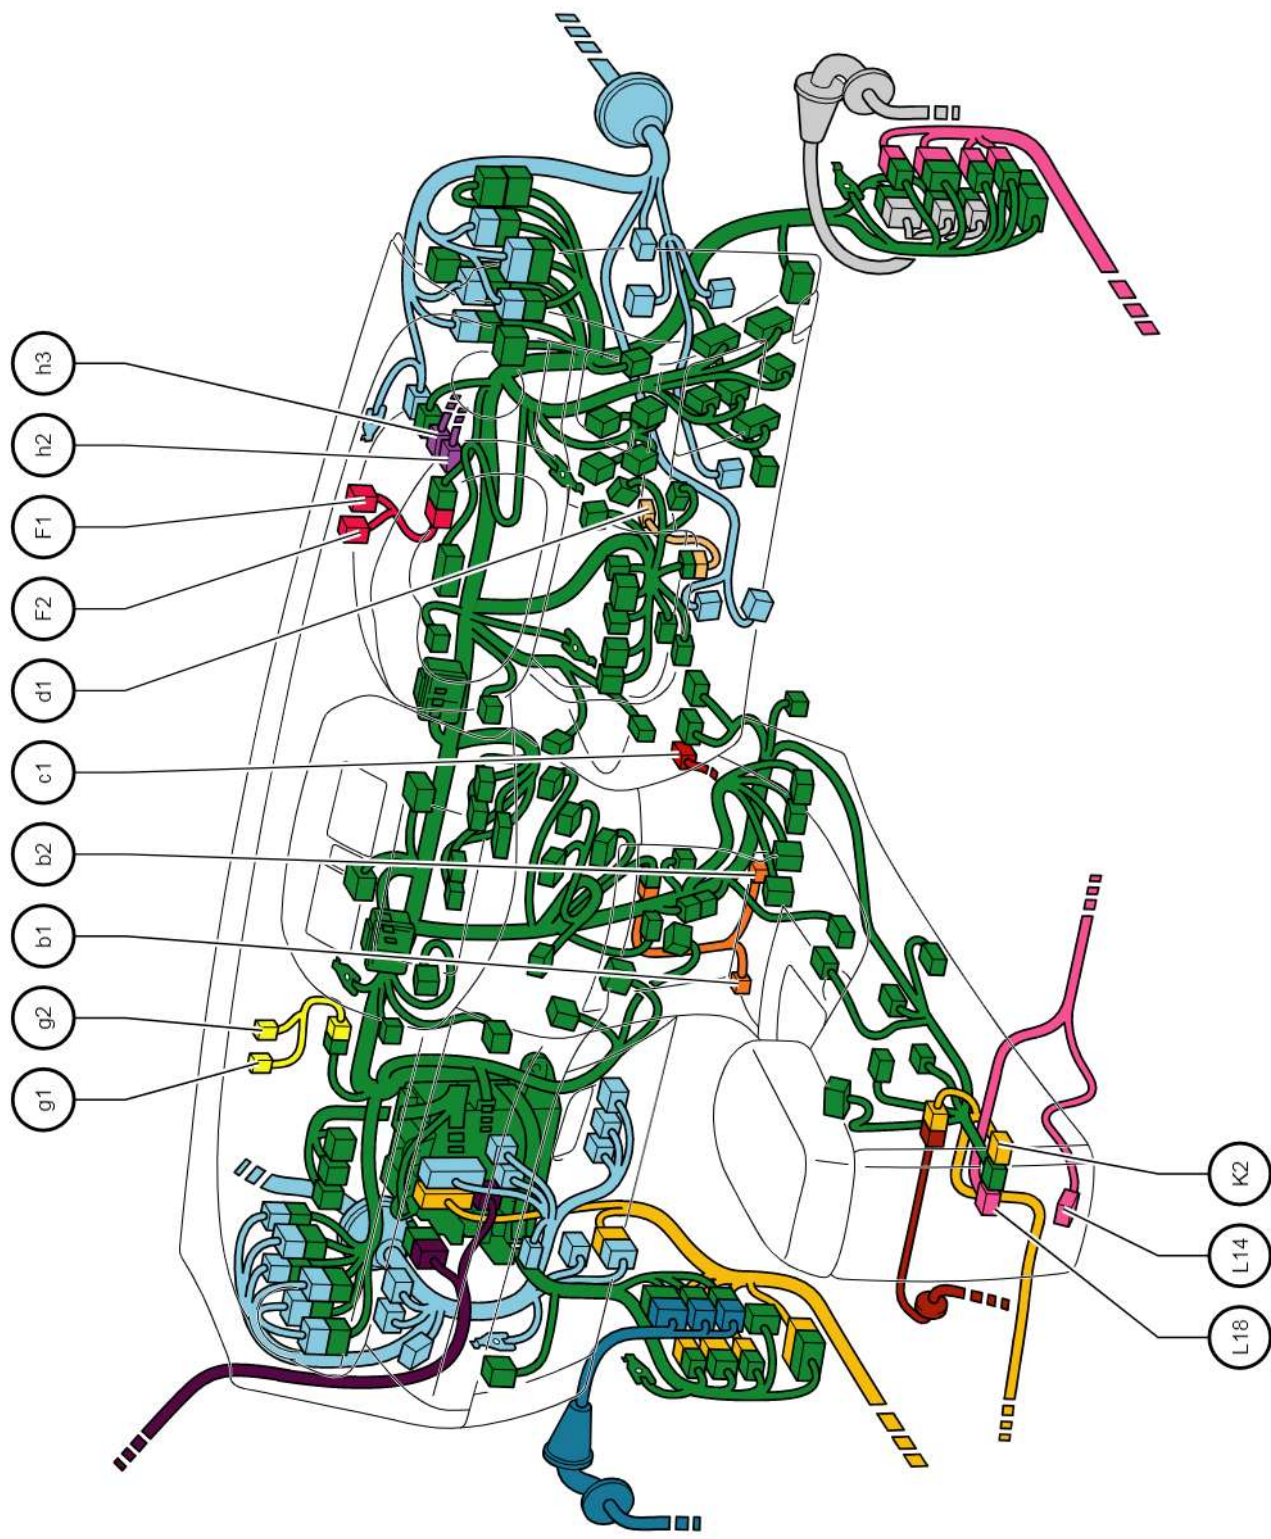







- F 1 A/C Solar Sensor
- F 2 Automatic Light Control Sensor
- K 2 Airbag Sensor Assembly Center
- L 14 Electrical Key Oscillator (Front)
- L 14 Electrical Key Oscillator (Front)
- L 18 Airbag Sensor Assembly Center
- b 1 Foot Lamp (Front LH)
- b 2 Foot Lamp (Front RH)
- c 1 A/C Amplifier , A/C Blower Assembly
- d 1 Key Interlock Solenoid
- g 1 Airbag Squib (Front Passenger's Airbag Assembly)
- g 2 Airbag Squib (Front Passenger's Airbag Assembly)
- h 2 Power Steering ECU , Power Steering Torque Sensor
- h 3 Power Steering ECU , Rotation Angle Sensor

 
Position of Parts in Instrument Panel <RHD>

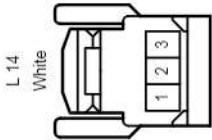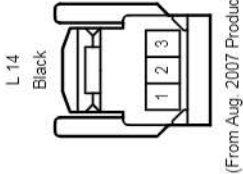
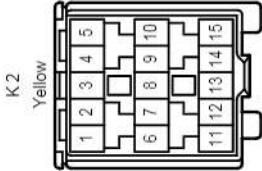

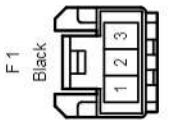


(Before Aug. 2007 Production)

  
(From Aug. 2007 Production)

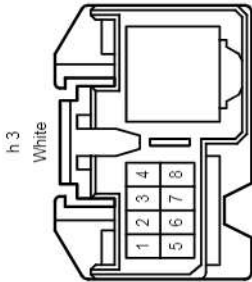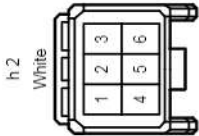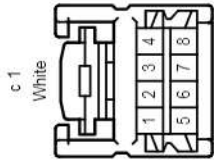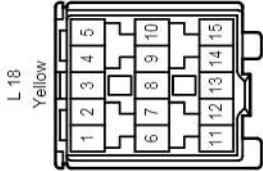





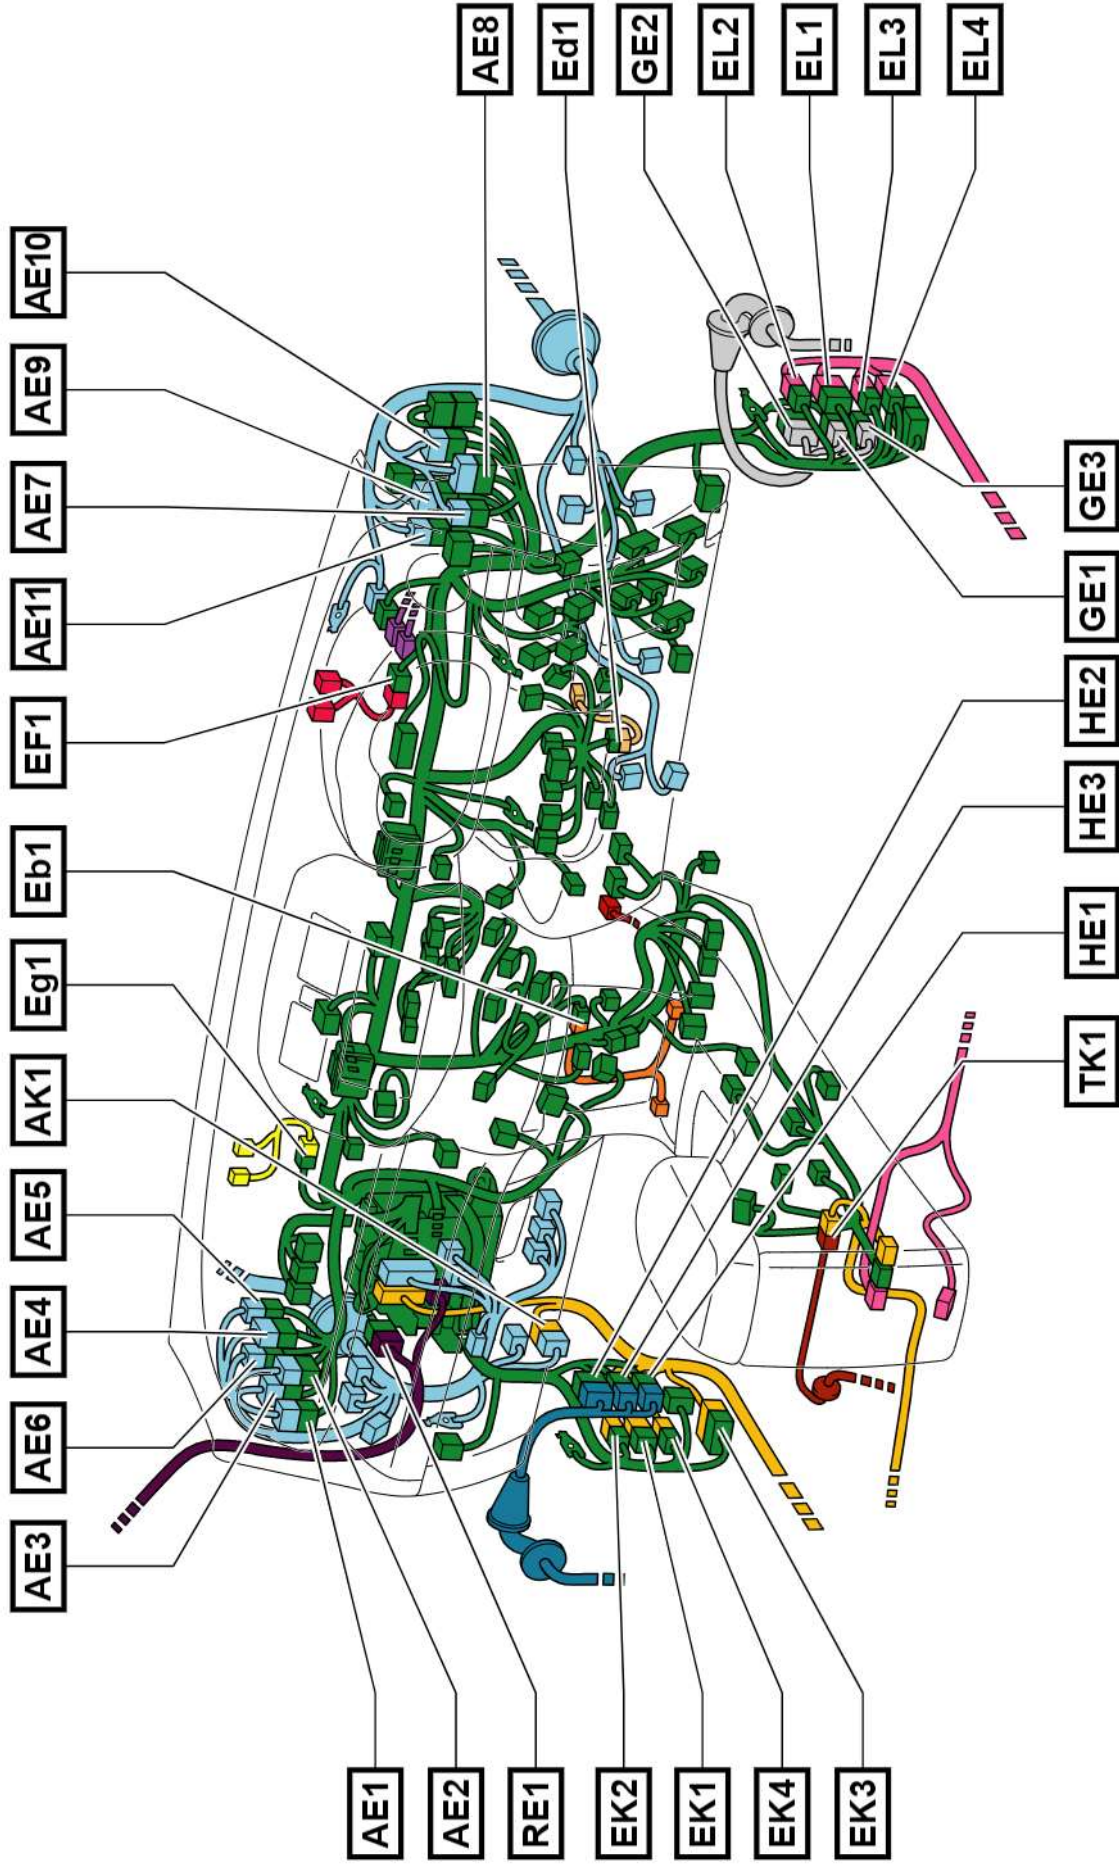


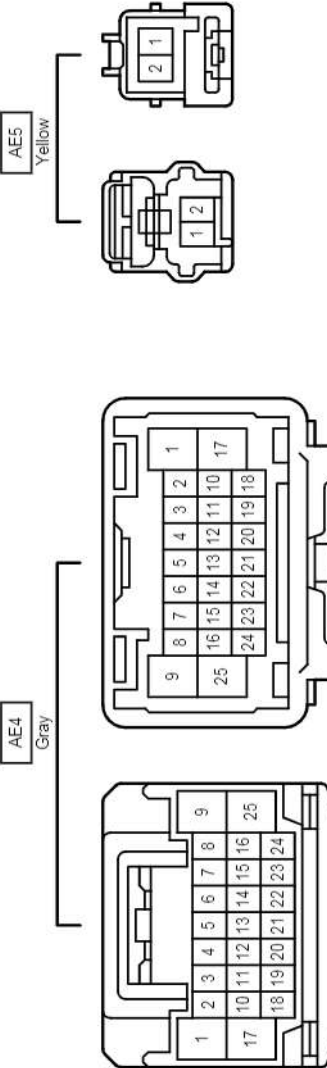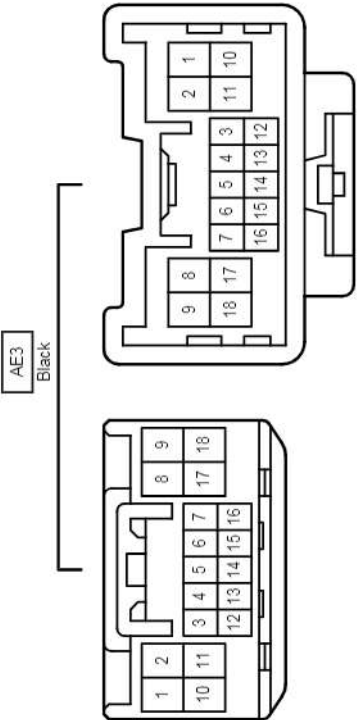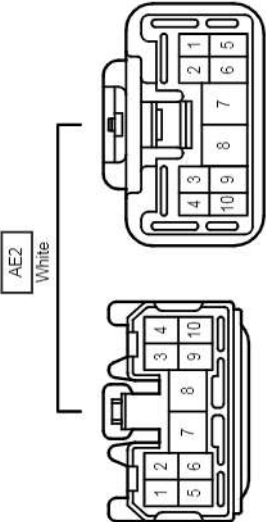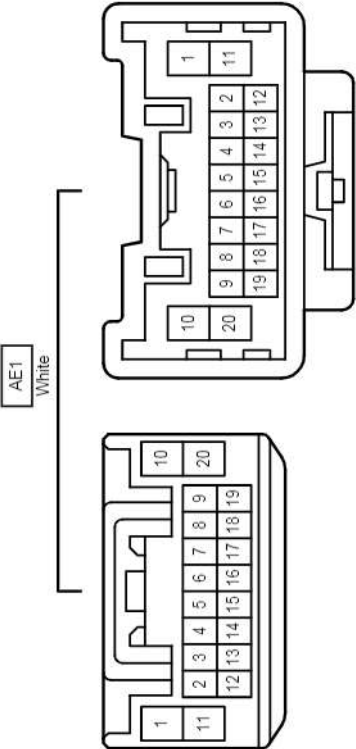


Wire and Wire in Instrument Panel <RHD>

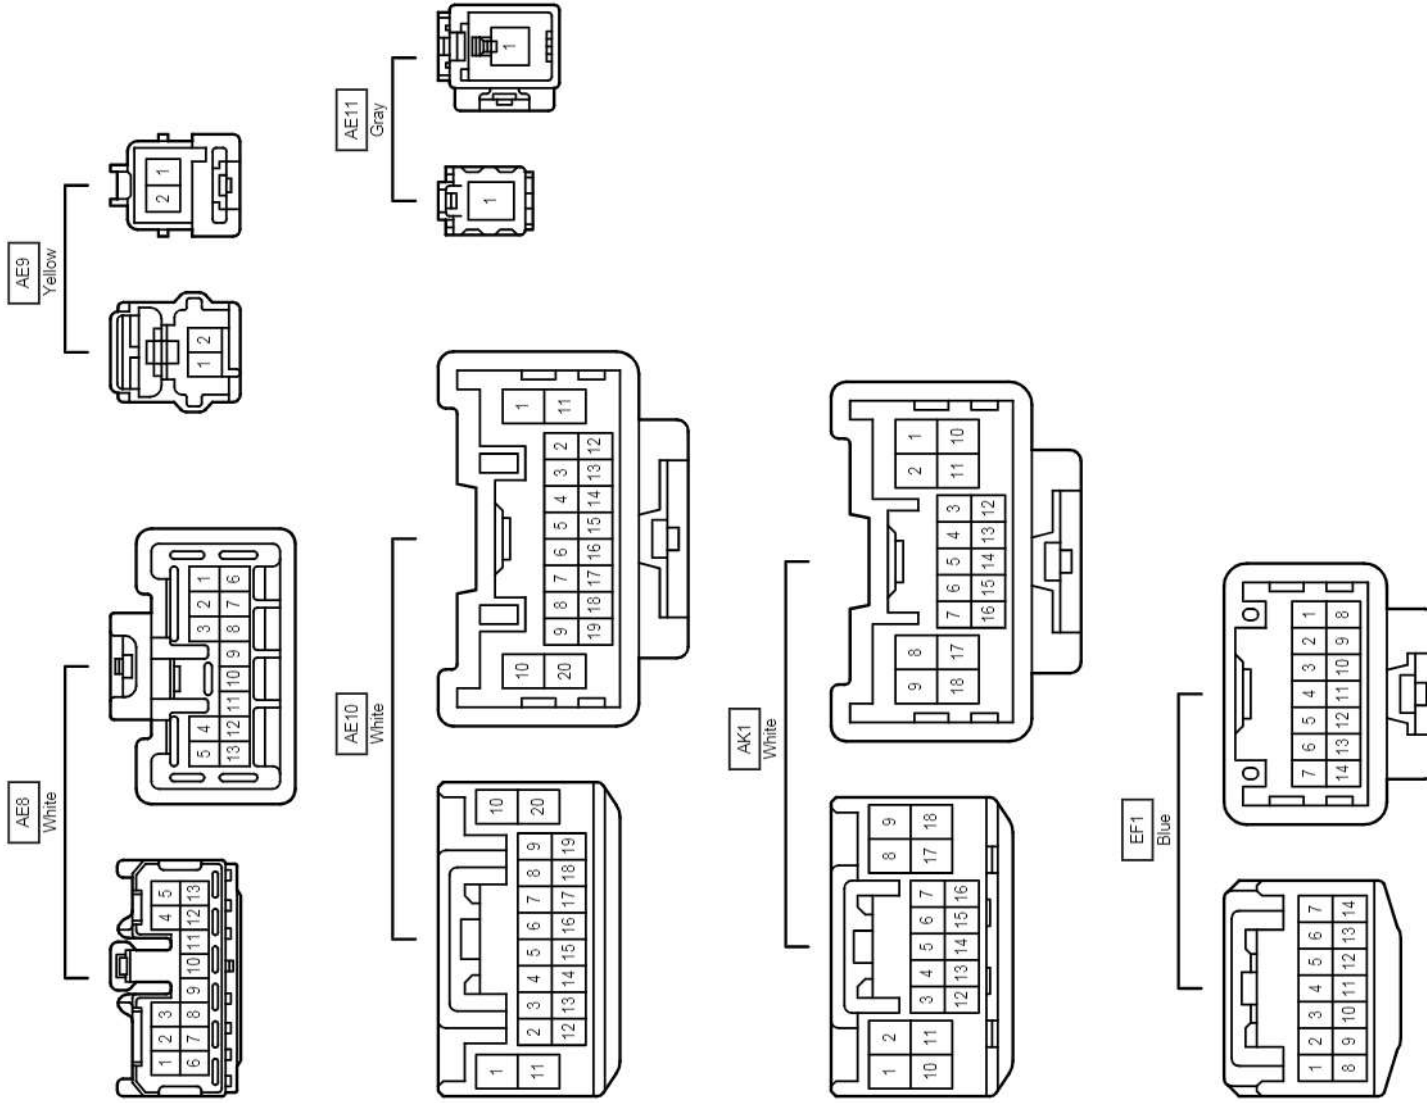


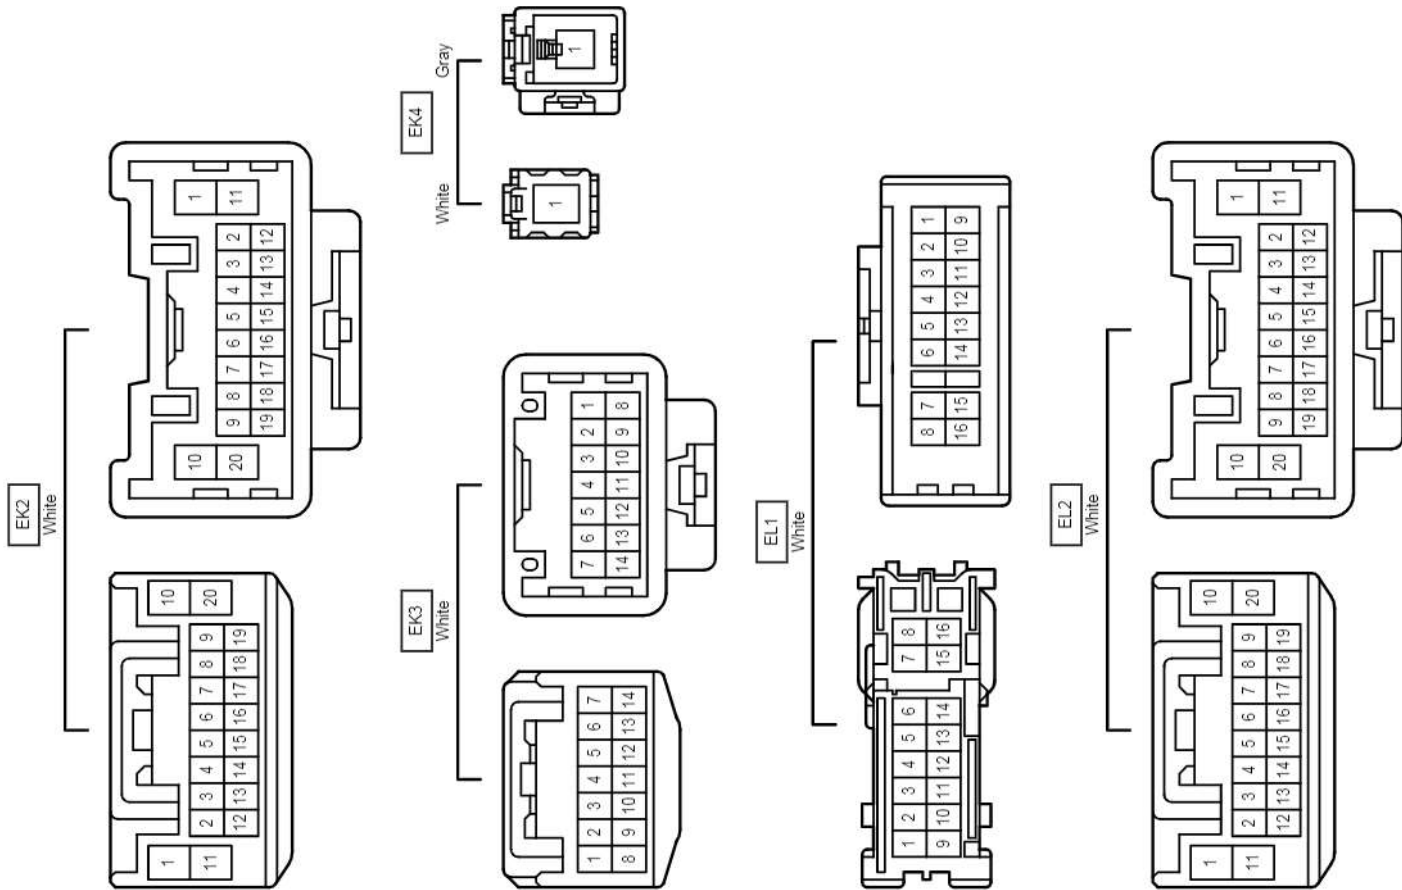

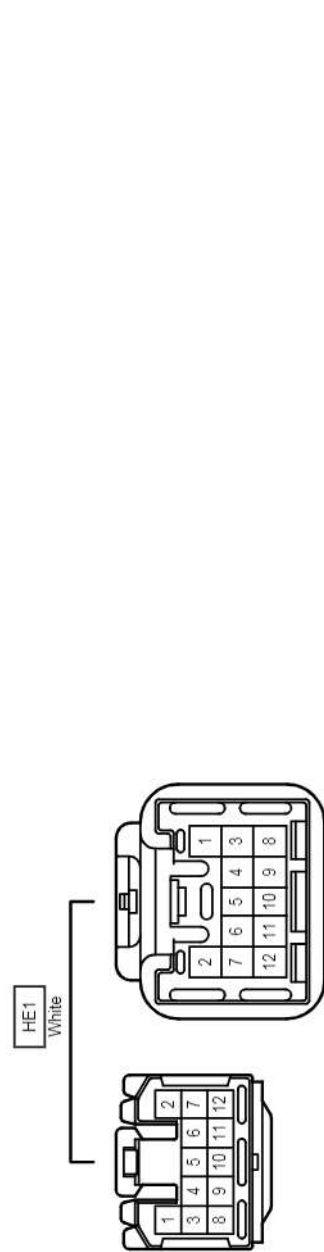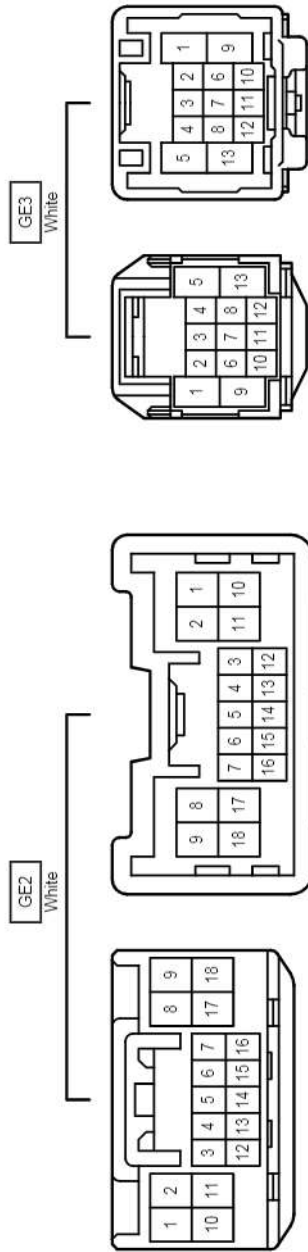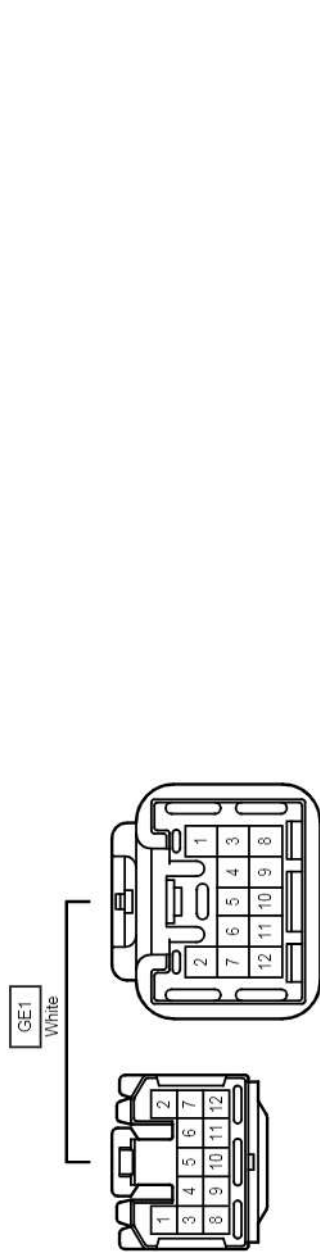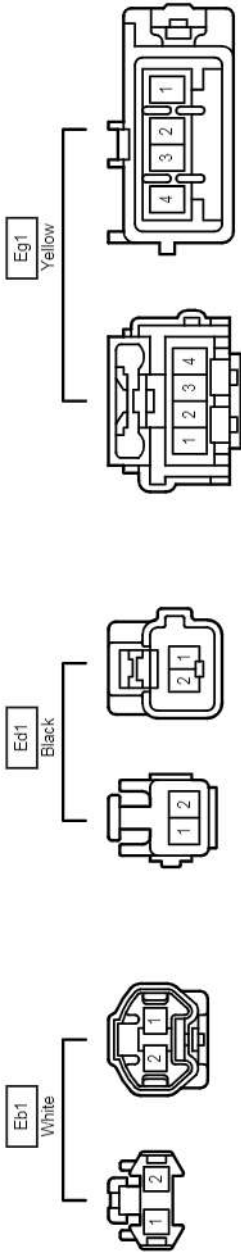

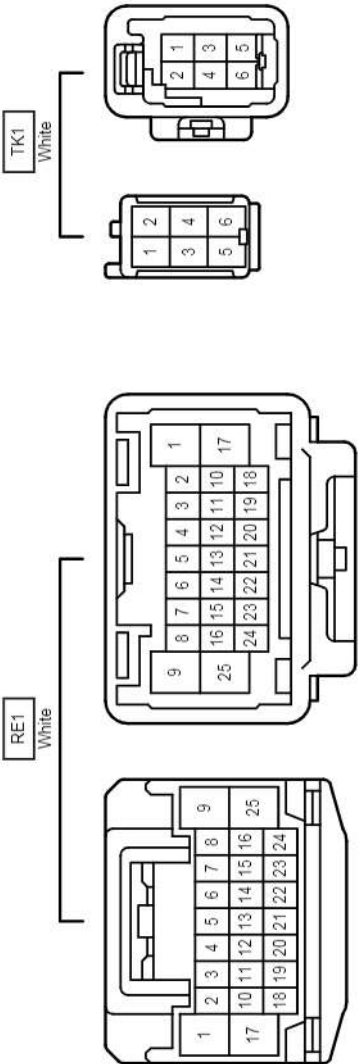


Position of Parts in Seat <LHD>

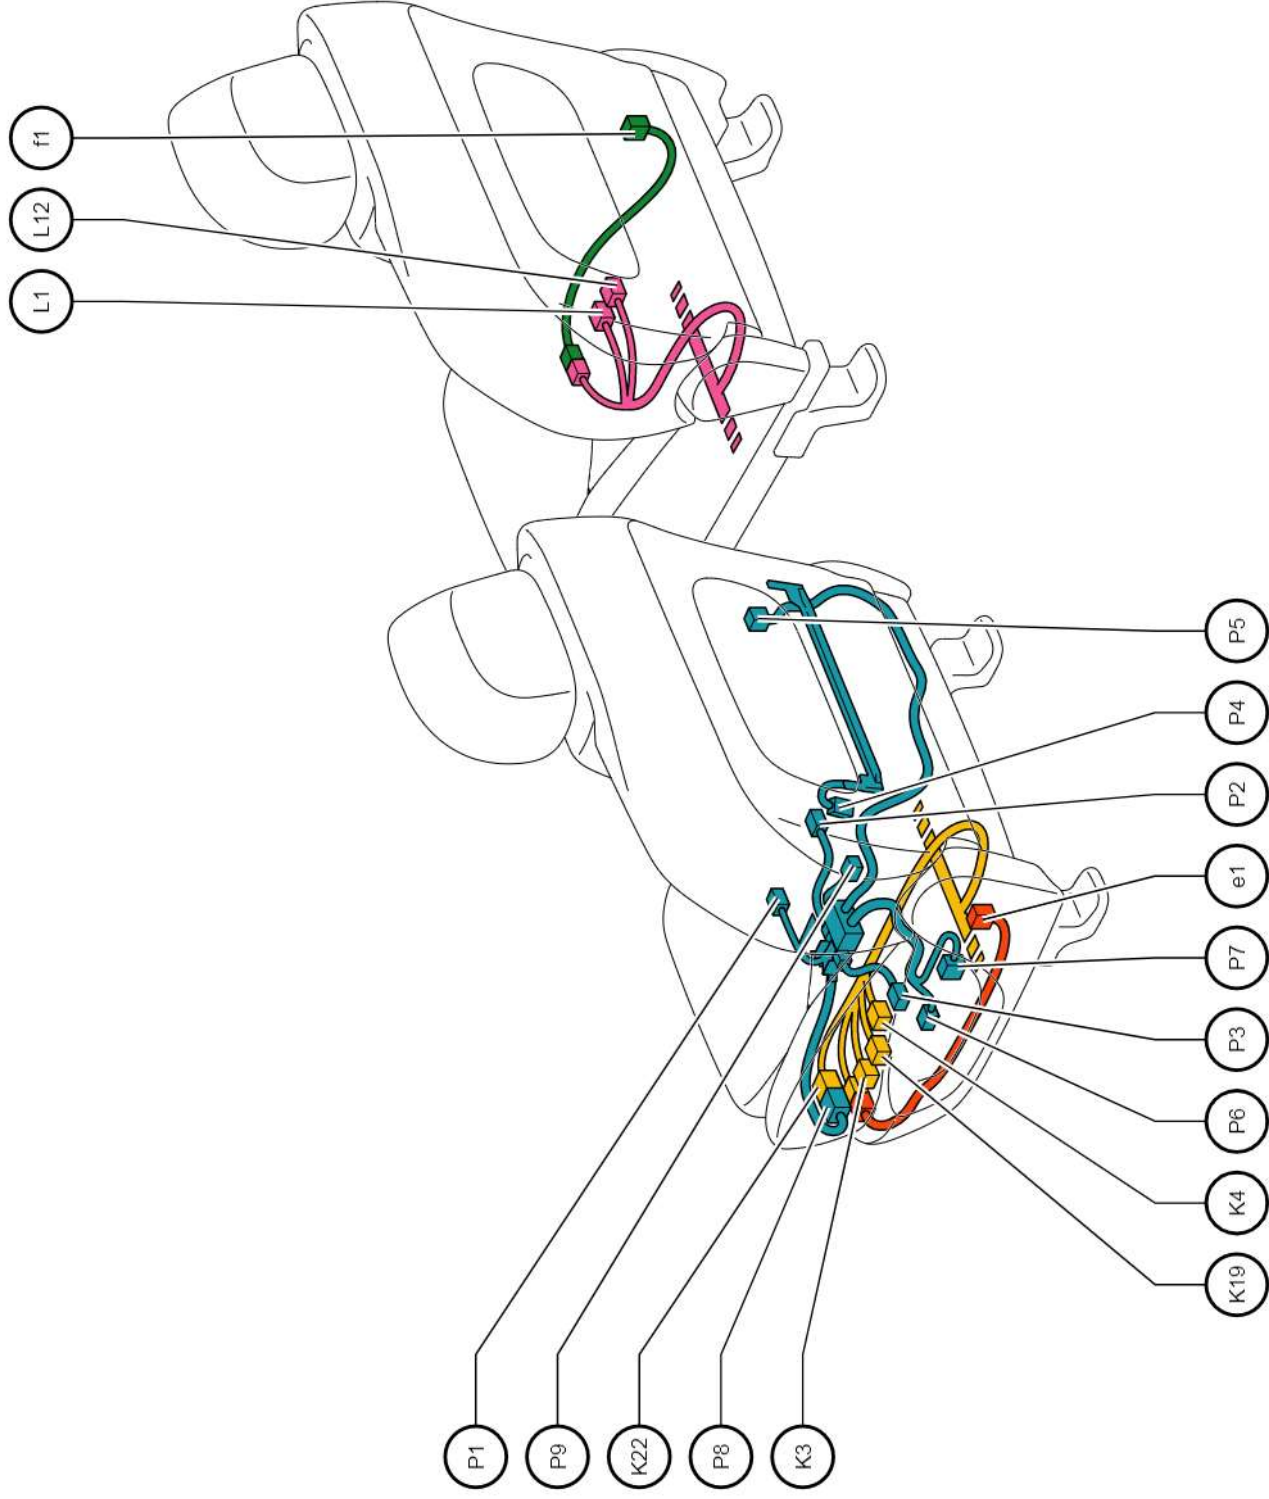



K	3	Front Seat Inner Belt (Driver's Side)
K	4	Seat Heater (LH)
K	19	Front Seat Inner Belt (Front Passenger's Side)
K	22	Junction Connector
L	1	Seat Heater (RH)
L	12	Front Seat Inner Belt (Front Passenger's Side)
P	1	Power Seat Motor (Driver's Seat Slide Control)
P	2	Power Seat Motor (Driver's Seat Lifter Control)
P	3	Power Seat Motor (Driver's Seat Front Vertical Control)
P	4	Power Seat Motor (Driver's Seat Reclining Control)
P	5	Power Seat Motor (Driver's Seat Lumbar Support Control)
P	6	Power Seat SW (Driver's Seat)
P	7	Power Seat SW (Lumbar Support)
P	8	Junction Connector
P	9	Seat Heater (LH)
e	1	Side Airbag Squib (LH)
f	1	Side Airbag Squib (RH)

Position of Parts in Seat <LHD>

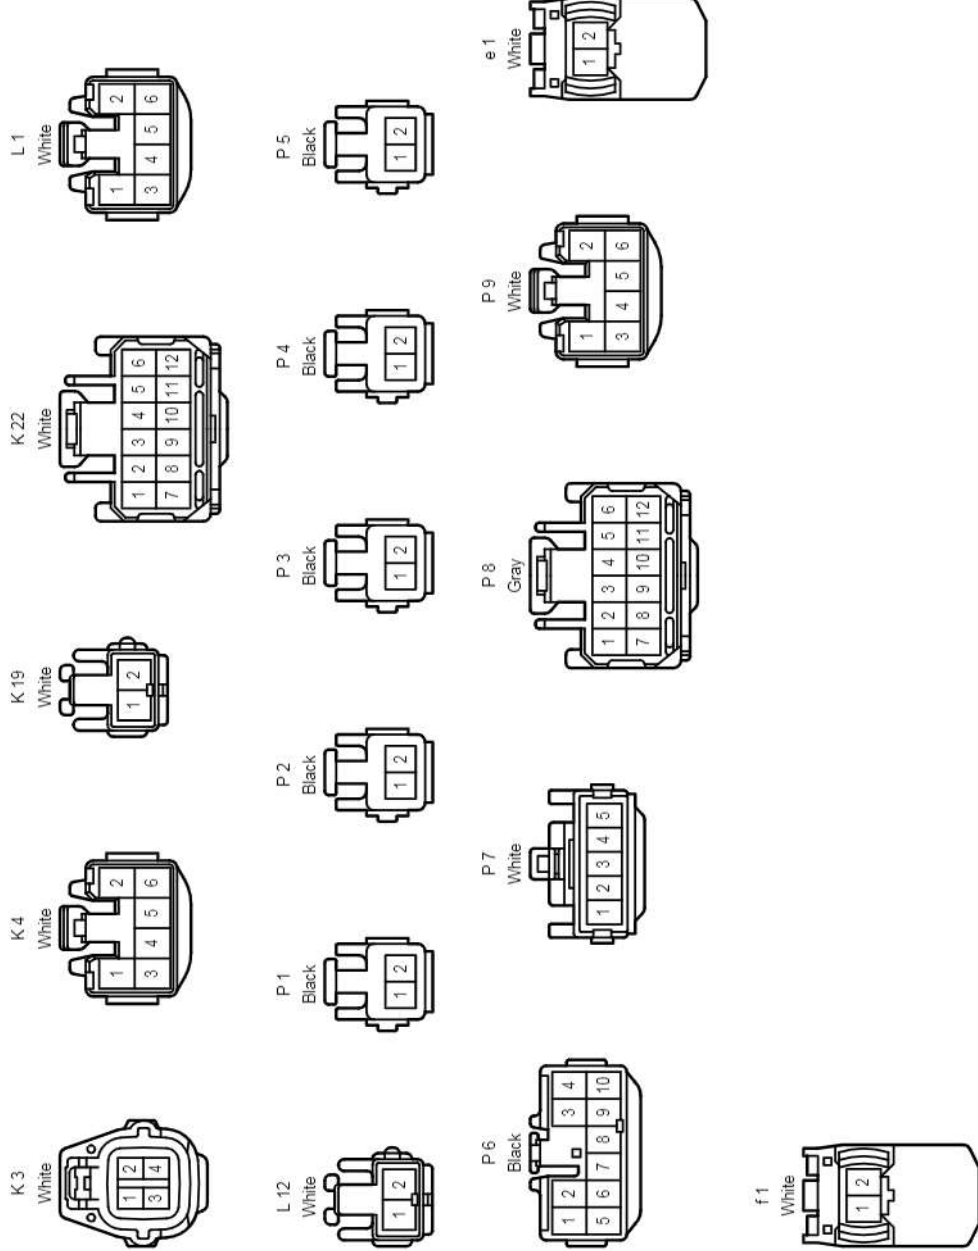


Wire and Wire in Seat <LHD>

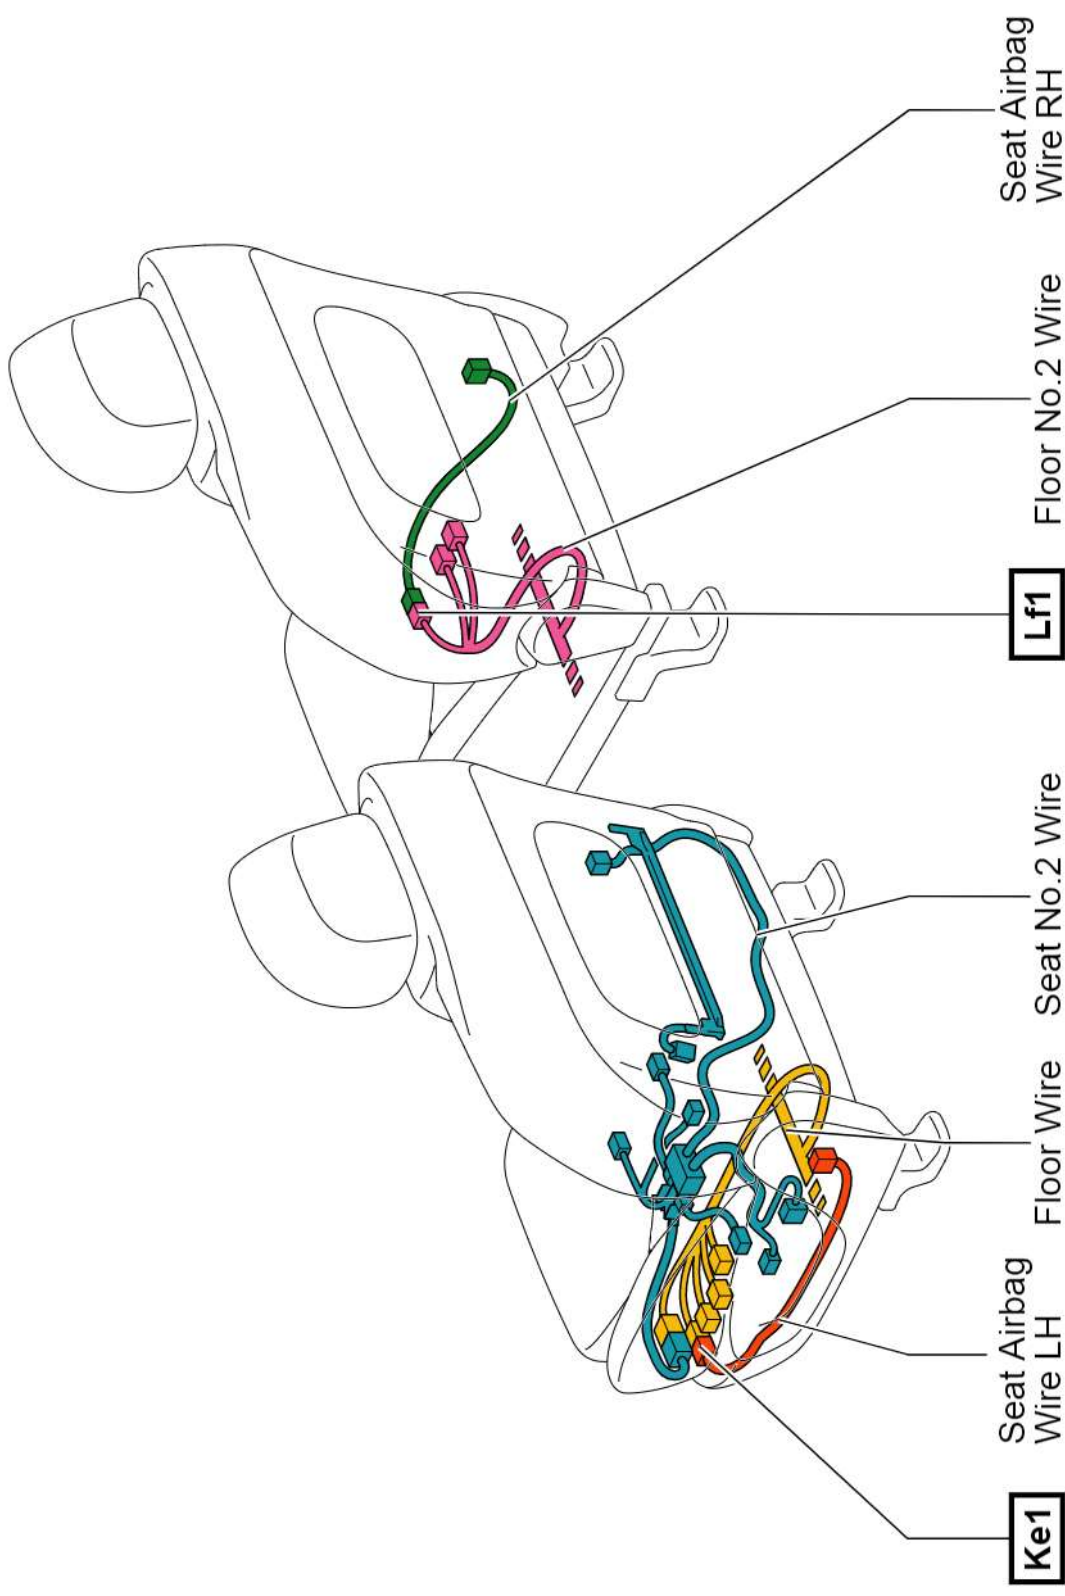














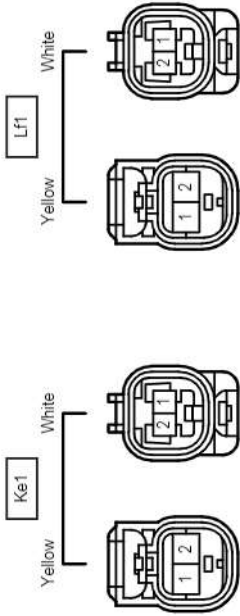


Position of Parts in Seat <RHD>

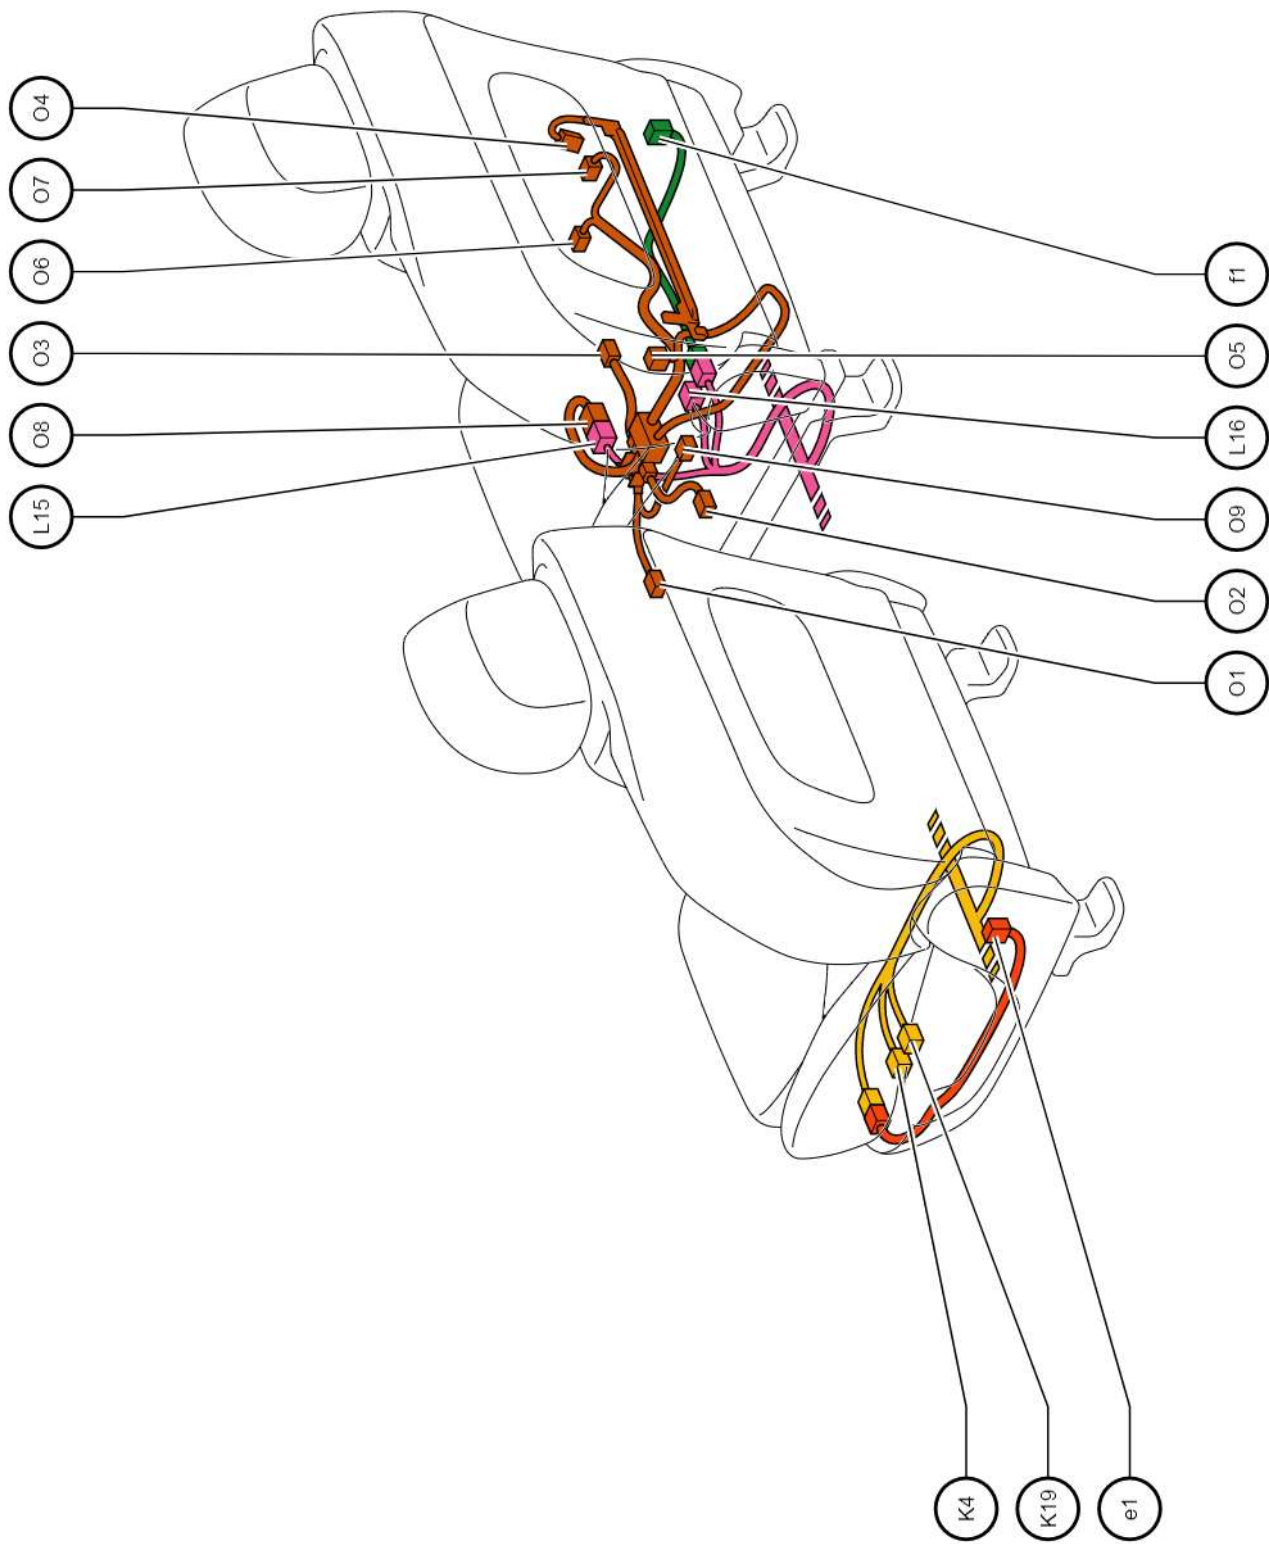

K	4	Seat Heater (LH)
K	19	Front Seat Inner Belt (Front Passenger's Side)
L	15	Junction Connector
L	16	Front Seat Inner Belt (Driver's Side)
O	1	Power Seat Motor (Driver's Seat Slide Control)
O	2	Power Seat Motor (Driver's Seat Lifter Control)
O	3	Power Seat Motor (Driver's Seat Front Vertical Control)
O	4	Power Seat Motor (Driver's Seat Reclining Control)
O	5	Power Seat Motor (Driver's Seat Lumbar Support Control)
O	6	Power Seat SW (Driver's Seat)
O	7	Power Seat SW (Lumbar Support)
O	8	Junction Connector
O	9	Seat Heater (RH)
e	1	Side Airbag Squib (LH)
f	1	Side Airbag Squib (RH)

        Position of Parts in Seat <RHD>

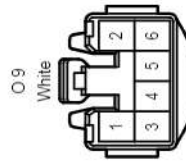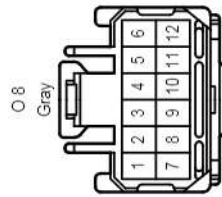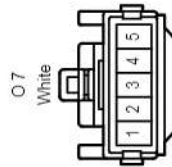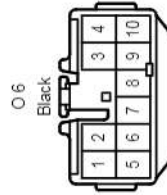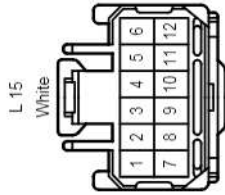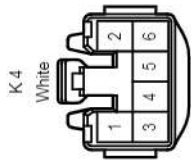

Wire and Wire in Seat <RHD>

