



F RELAY LOCATIONS

[Body] (Long Body)

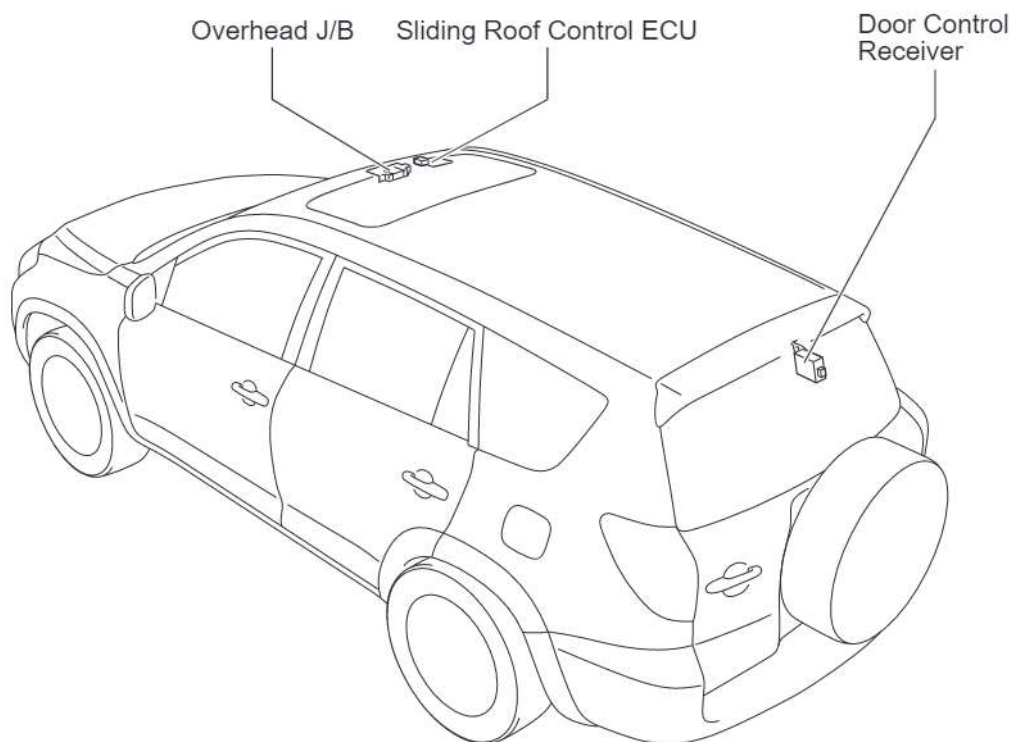


(Short Body)

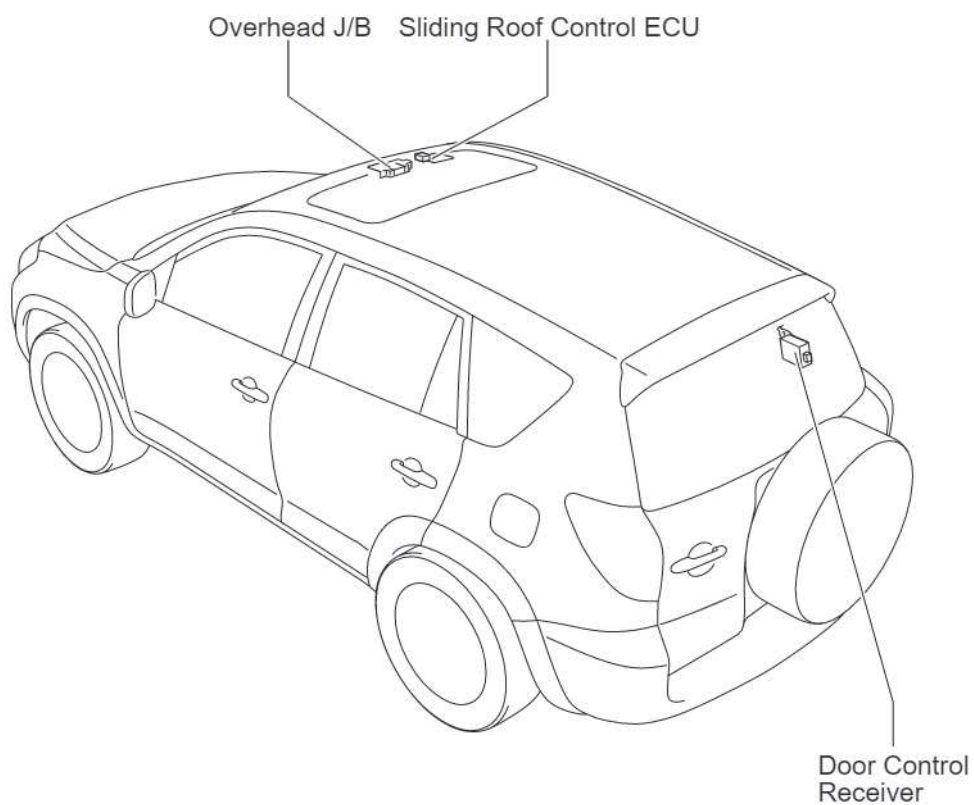


F RELAY LOCATIONS

[Body] (Long Body)

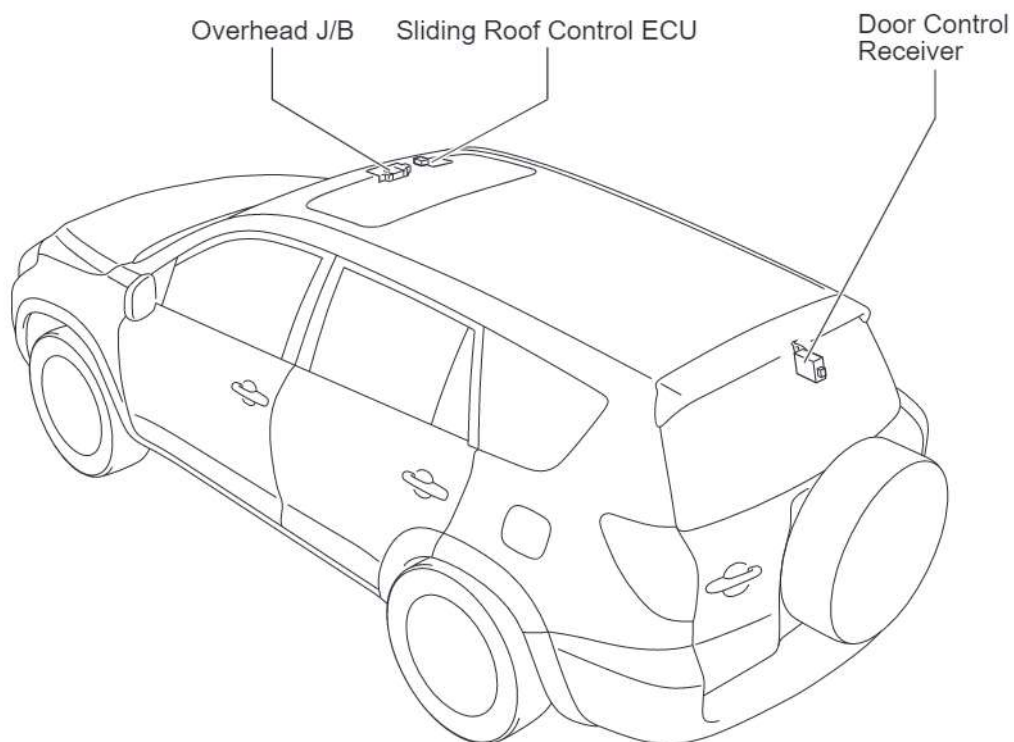


(Short Body)

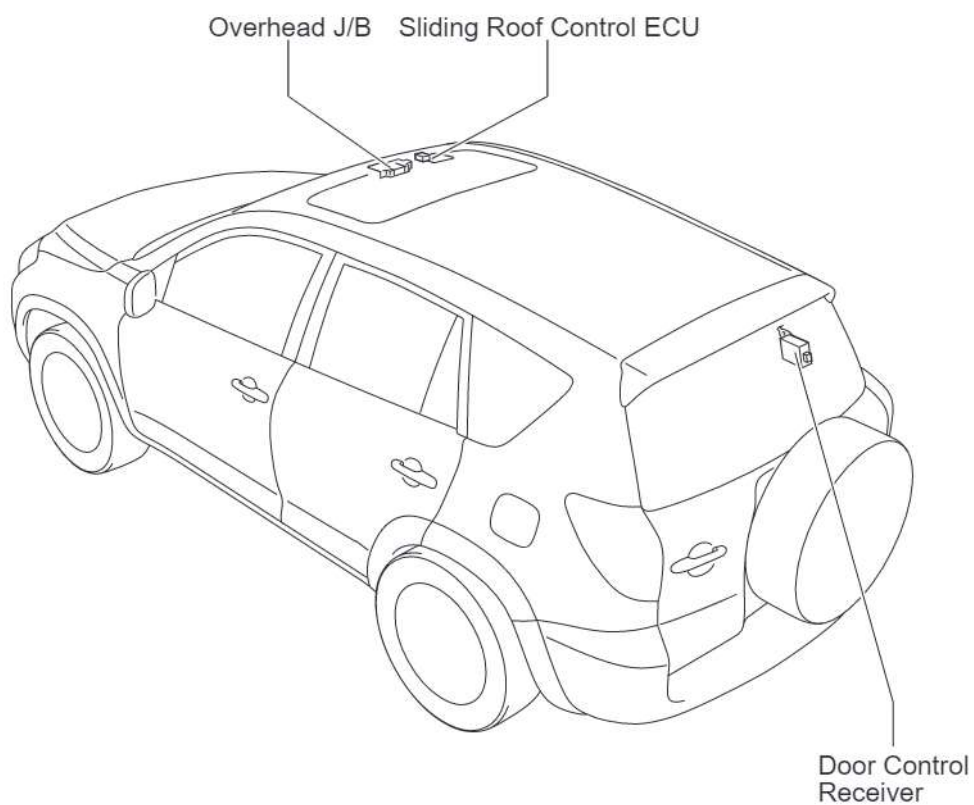

F RELAY LOCATIONS

[Engine Compartment]

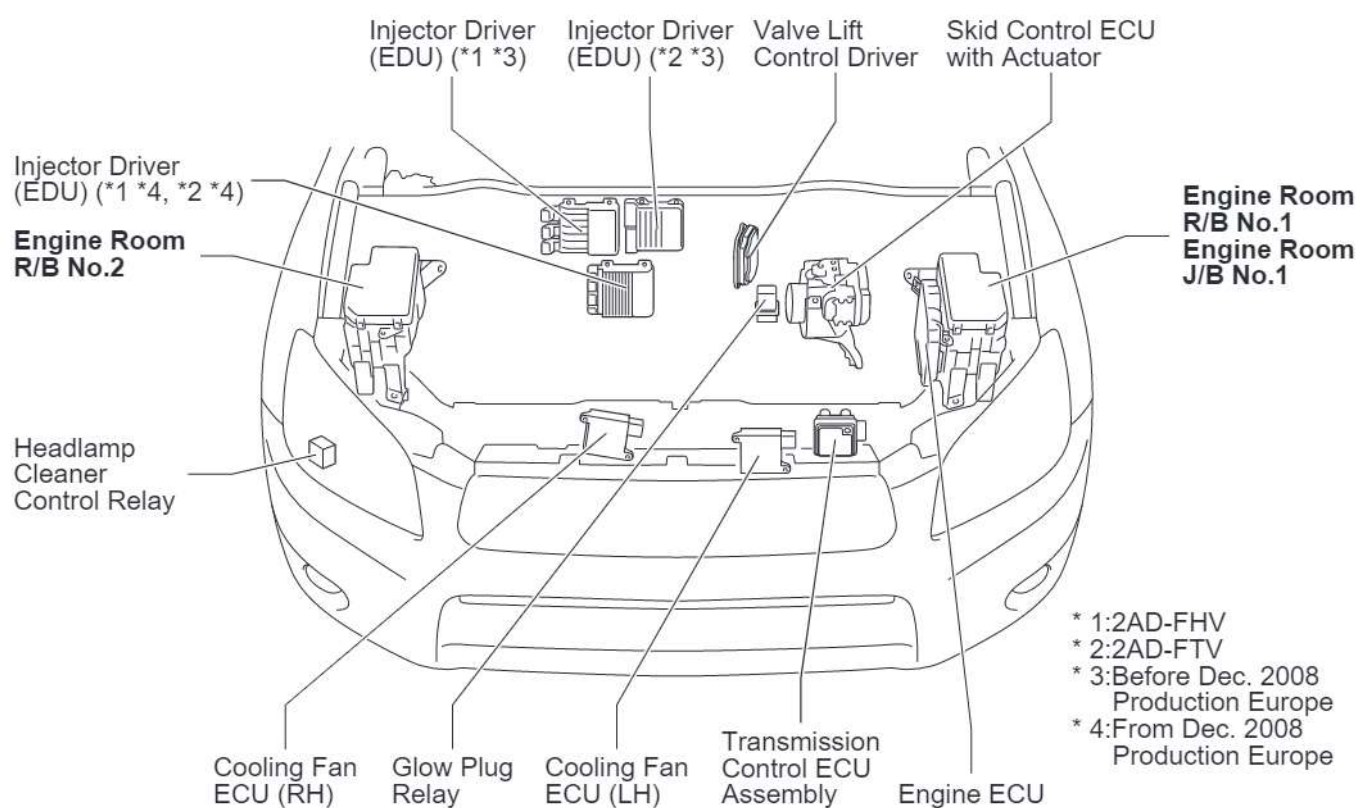


F RELAY LOCATIONS


① : Engine Room R/B No.1

② : Engine Room J/B No.1

Engine Compartment Left (See Page 20)

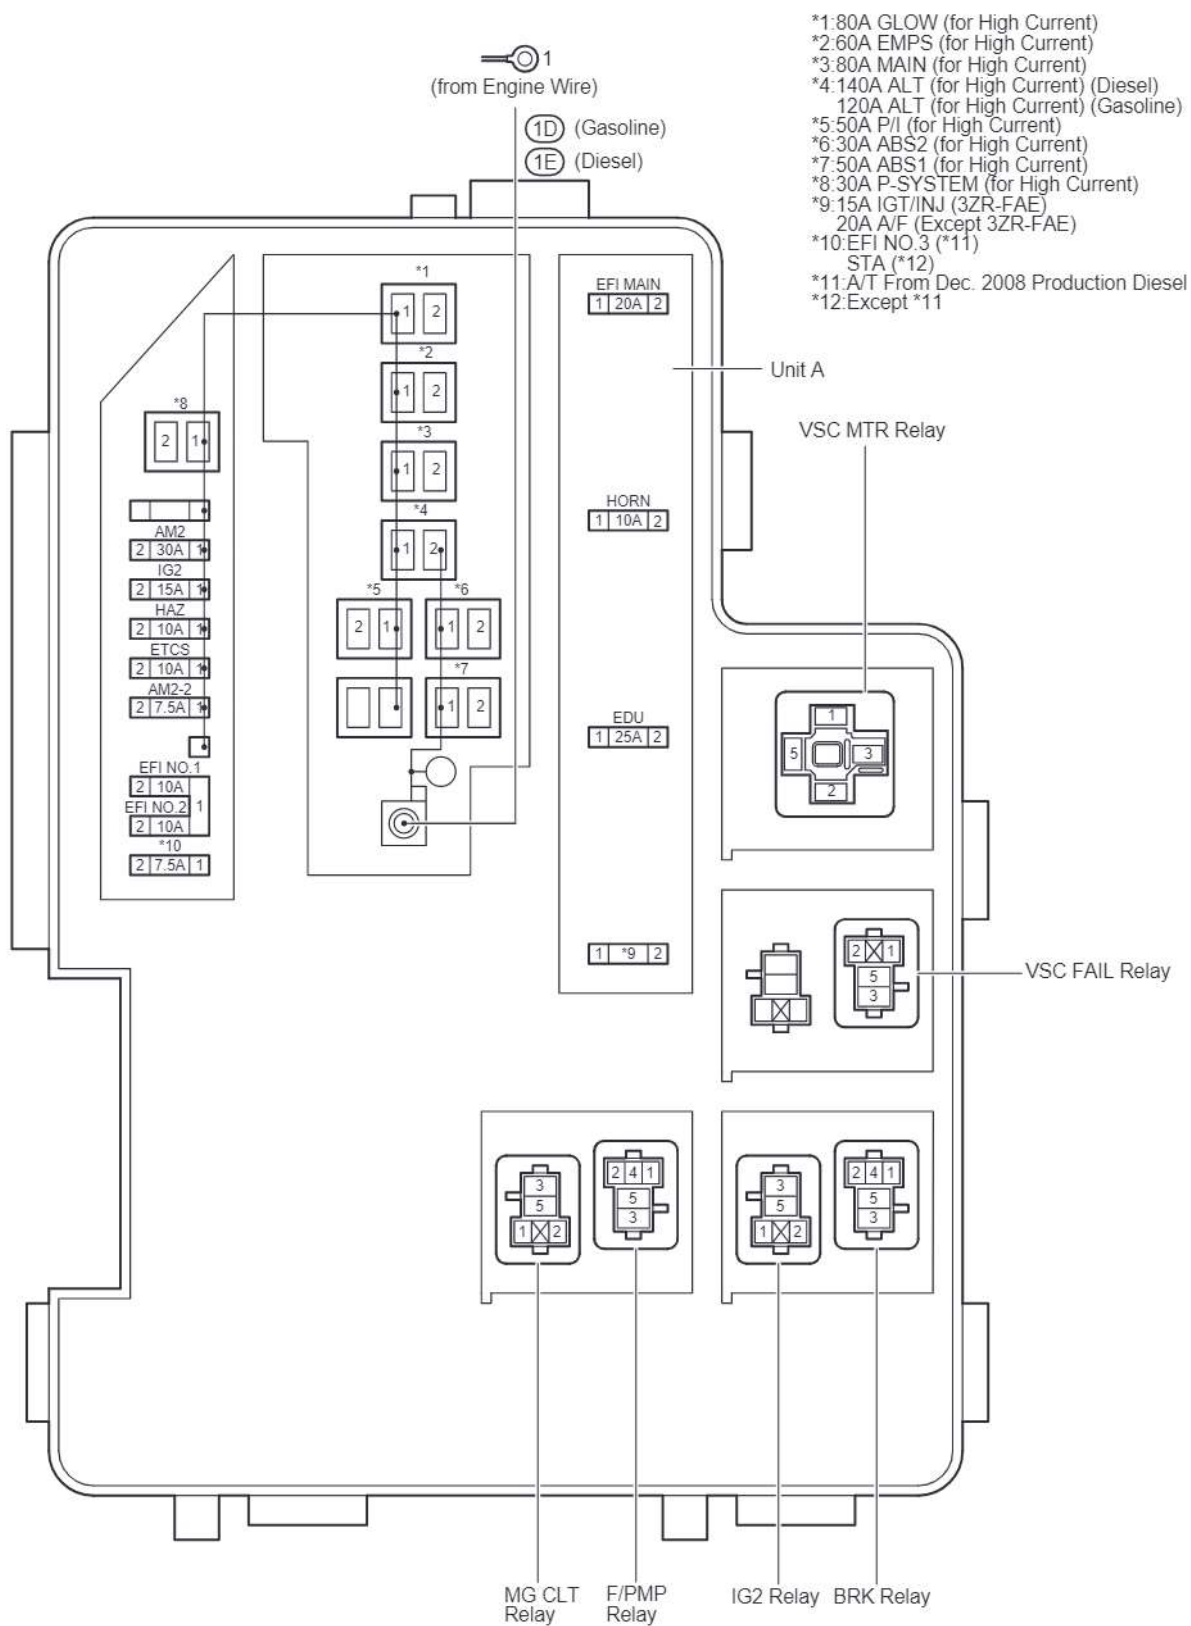


Unit A

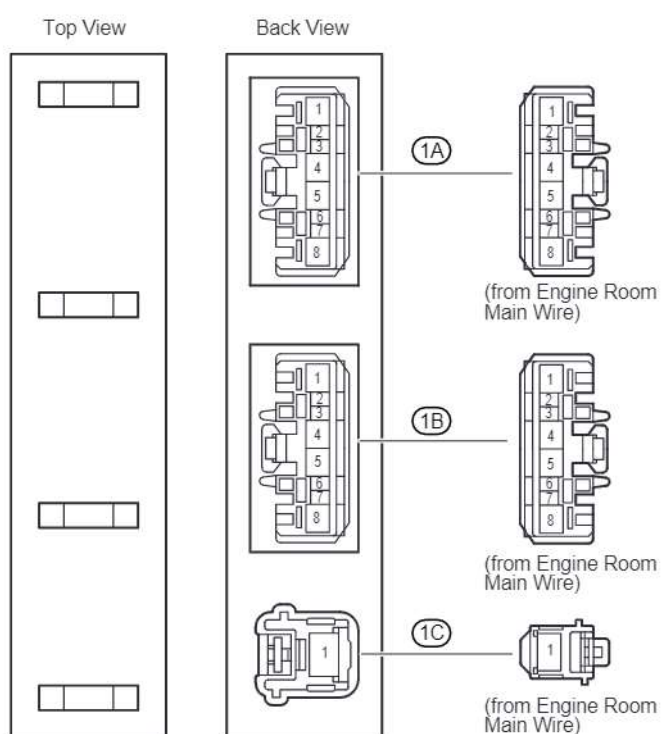

F RELAY LOCATIONS

[Engine Room R/B No.1 and Engine Room J/B No.1 Inner Circuit]


* 1:3ZR-FAE
* 2:Except 3ZR-FAE

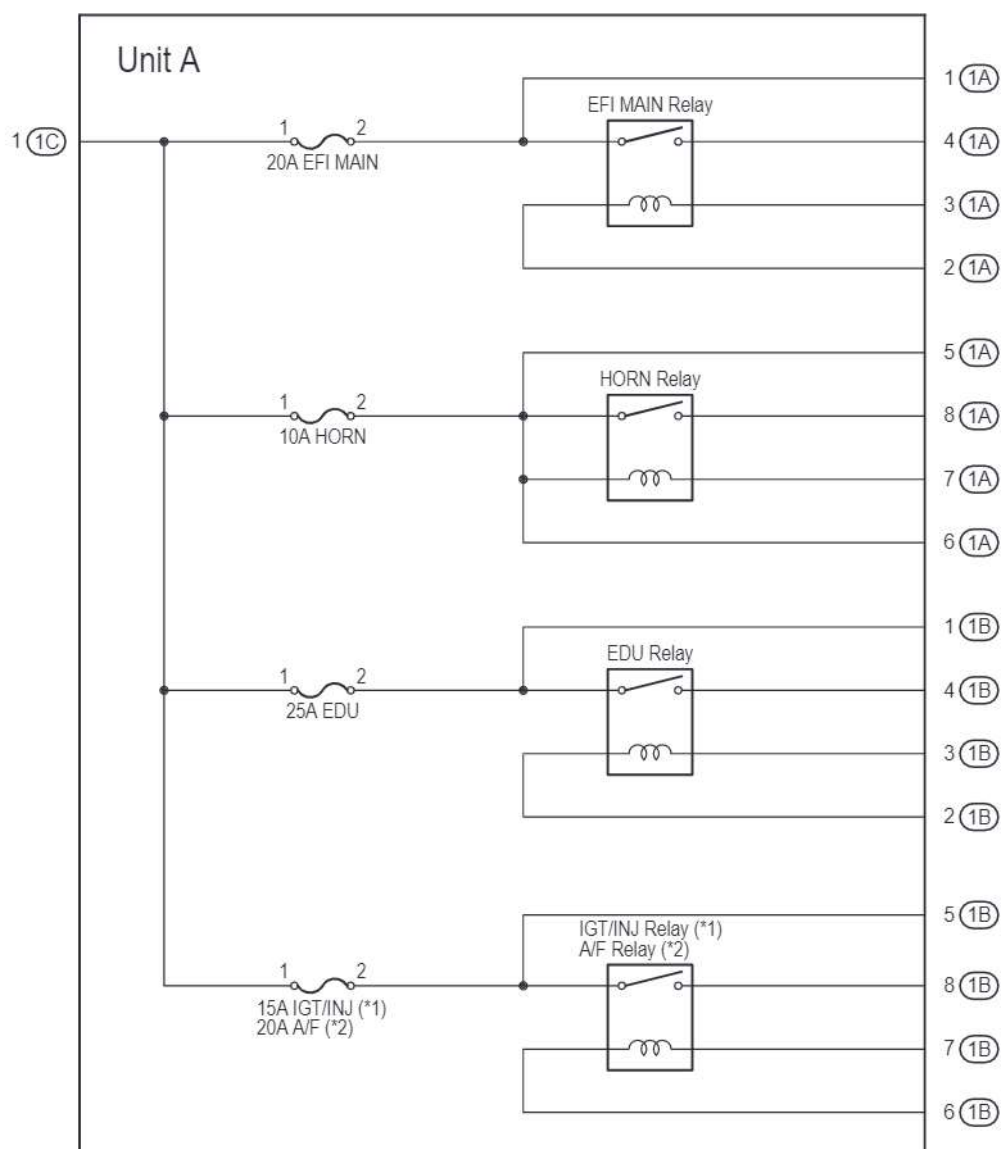

F RELAY LOCATIONS


② : Engine Room R/B No.2 Engine Compartment Right (See Page 20)


- *1: 50A HTR (for High Current)
- *3: 50A PTC2 (for High Current)
- *4: 50A PTC1 (for High Current)
- *5: 30A RDI (*9)
- 50A FAN2 (*10)
- (for High Current)
- *6: 30A CDS (*9)
- 50A FAN1 (*10)
- (for High Current)
- *7: 30A H-LP CLN (for High Current)
- *8: 50A HEAD MAIN (for High Current)
- *9: Except 2GR-FE
- *10: 2GR-FE
- *11: 50A PTC3 (for High Current)

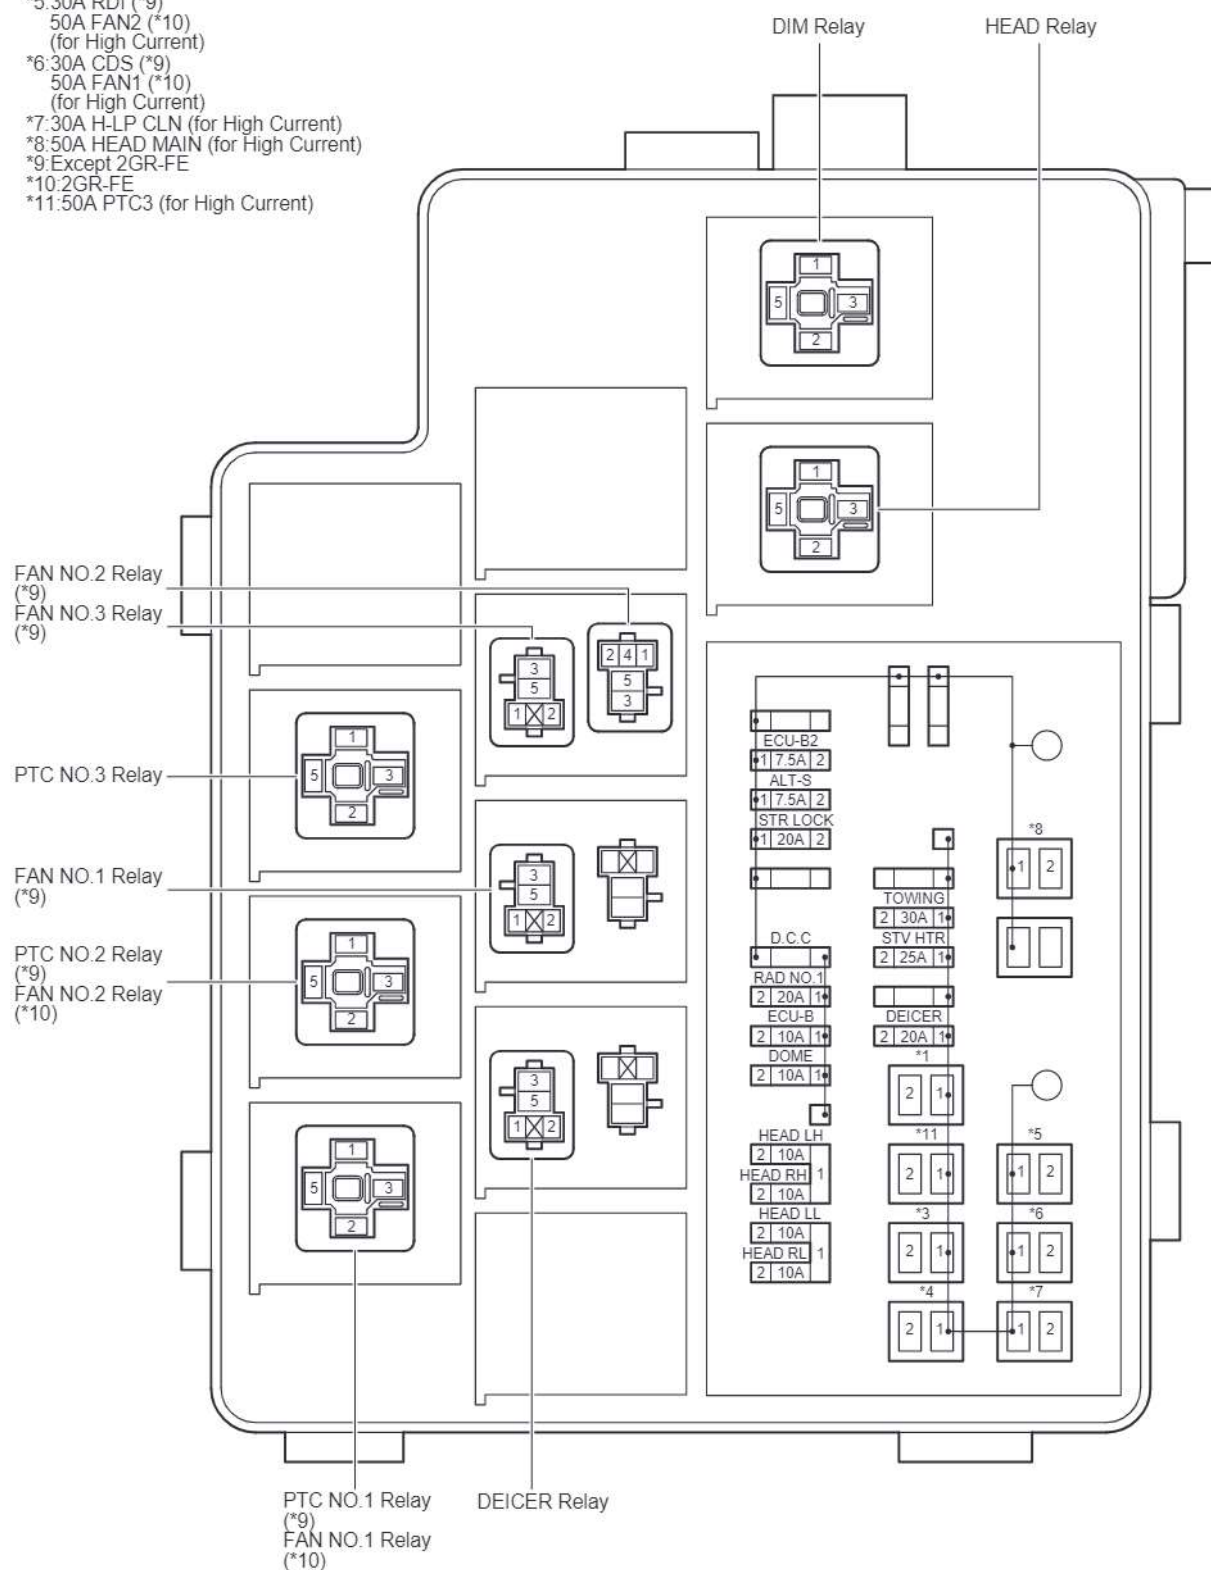

F RELAY LOCATIONS

○ : Instrument Panel J/B Cowl Side Left (See Page 21)
(LHD)

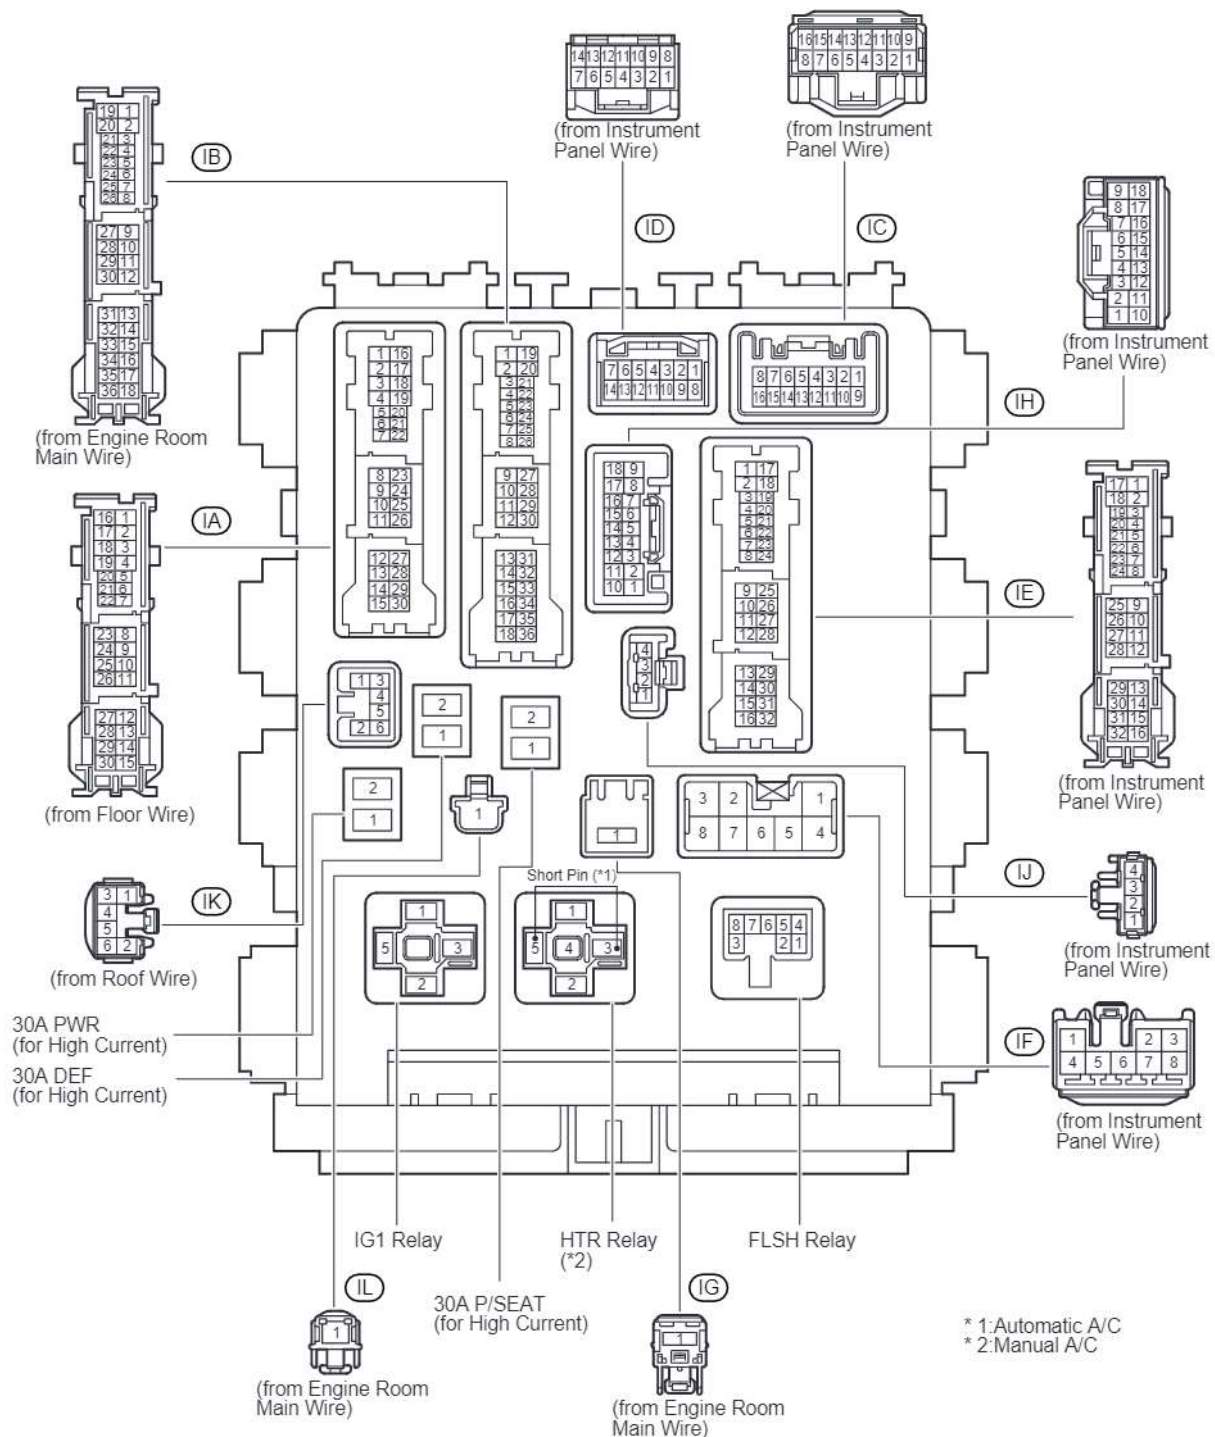

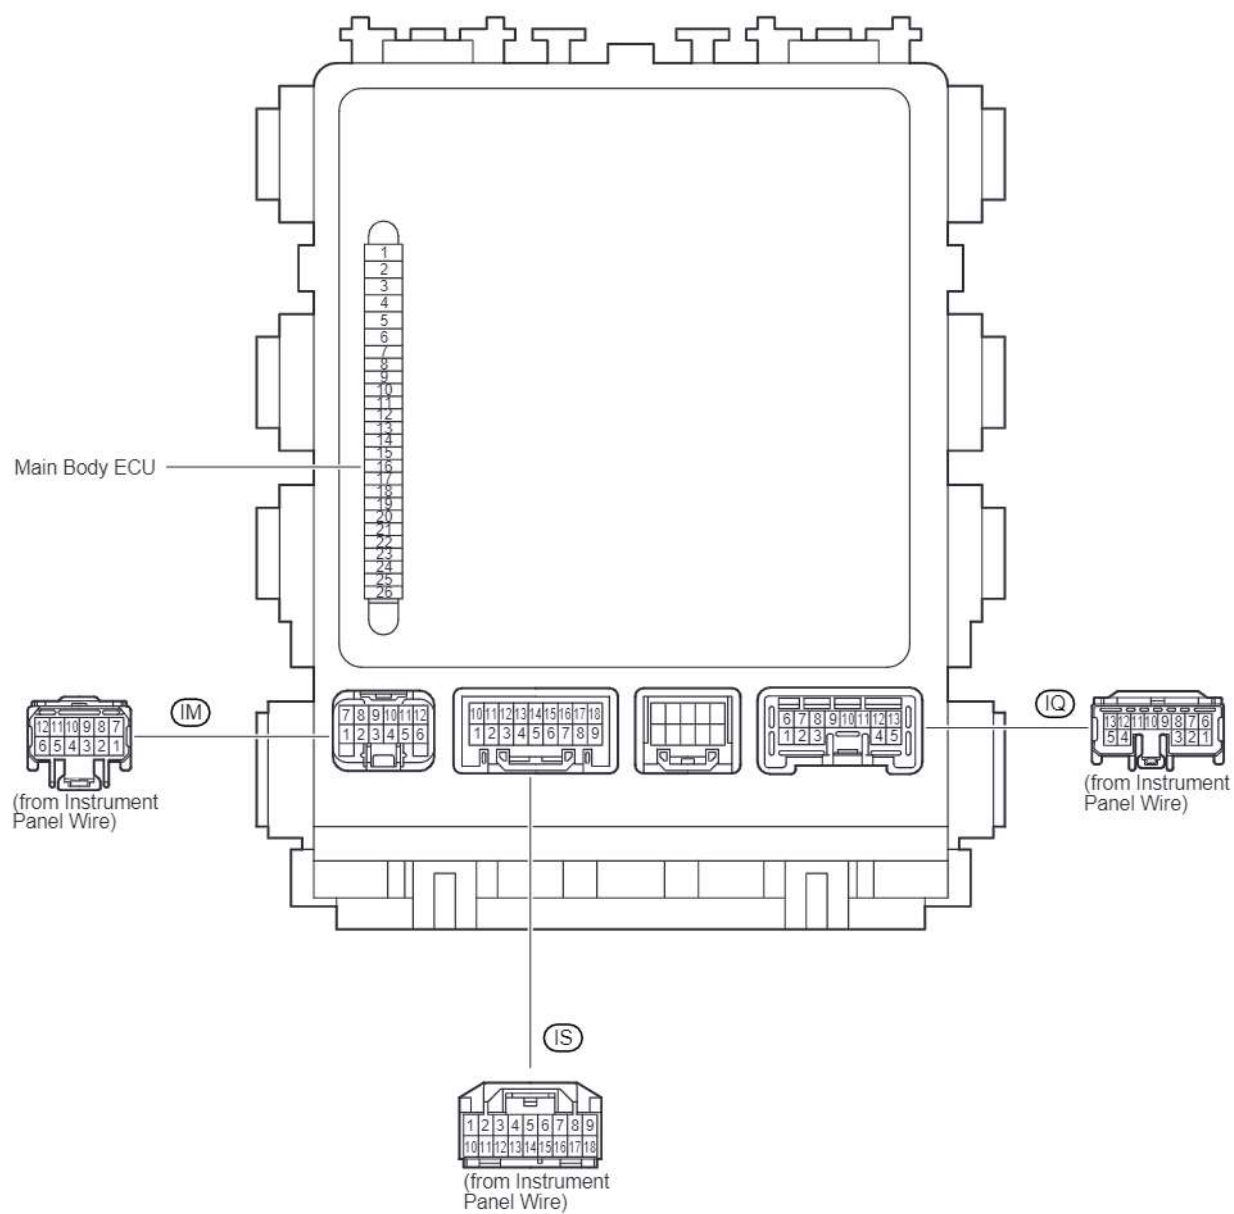


F RELAY LOCATIONS

 : Instrument Panel J/B

Cowl Side Left (See Page 21)

(LHD)

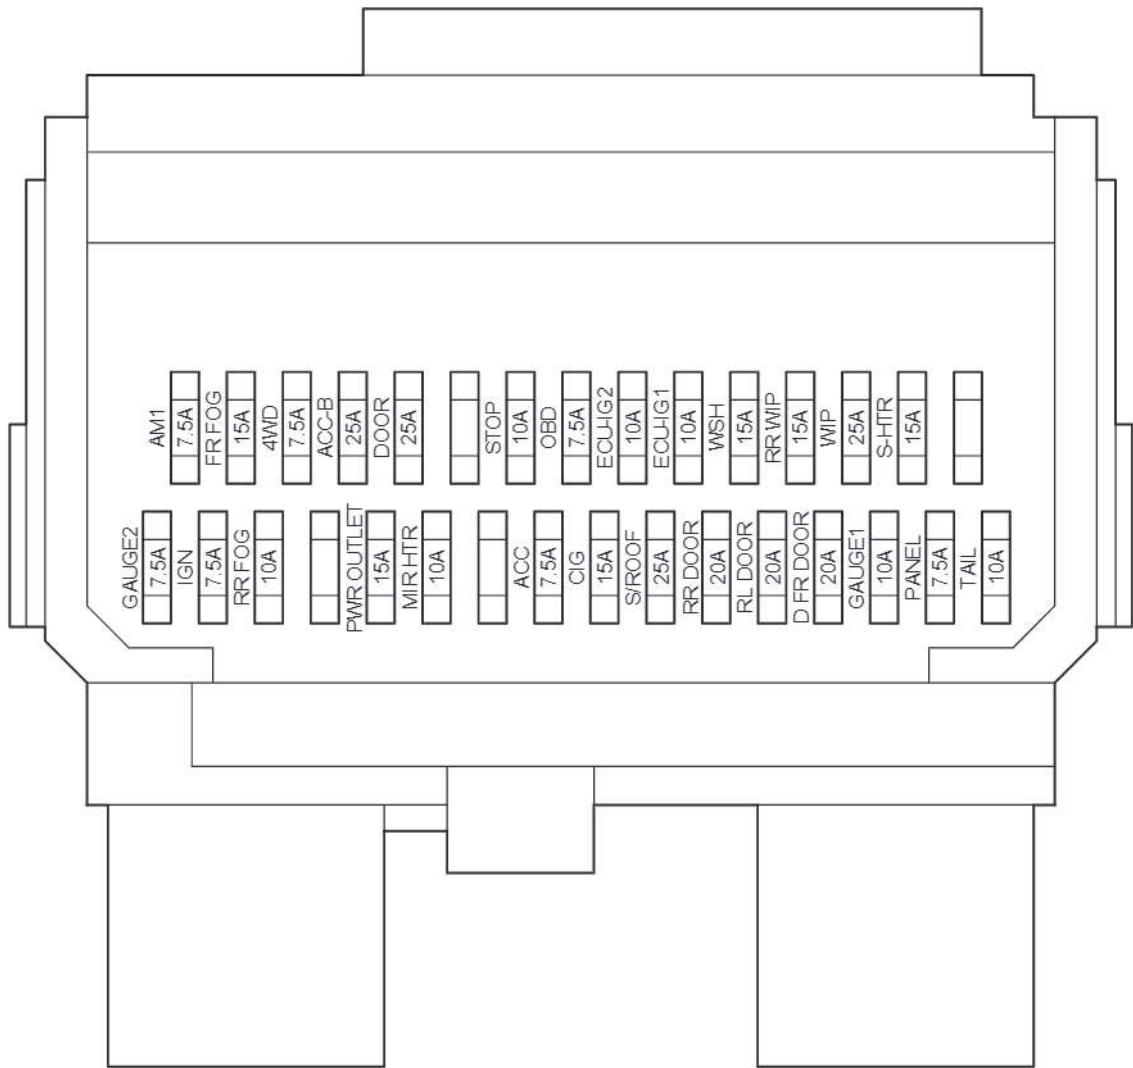


cardiagn.com

F RELAY LOCATIONS


○ : Instrument Panel J/B

Cowl Side Left (See Page 21)

(RHD)

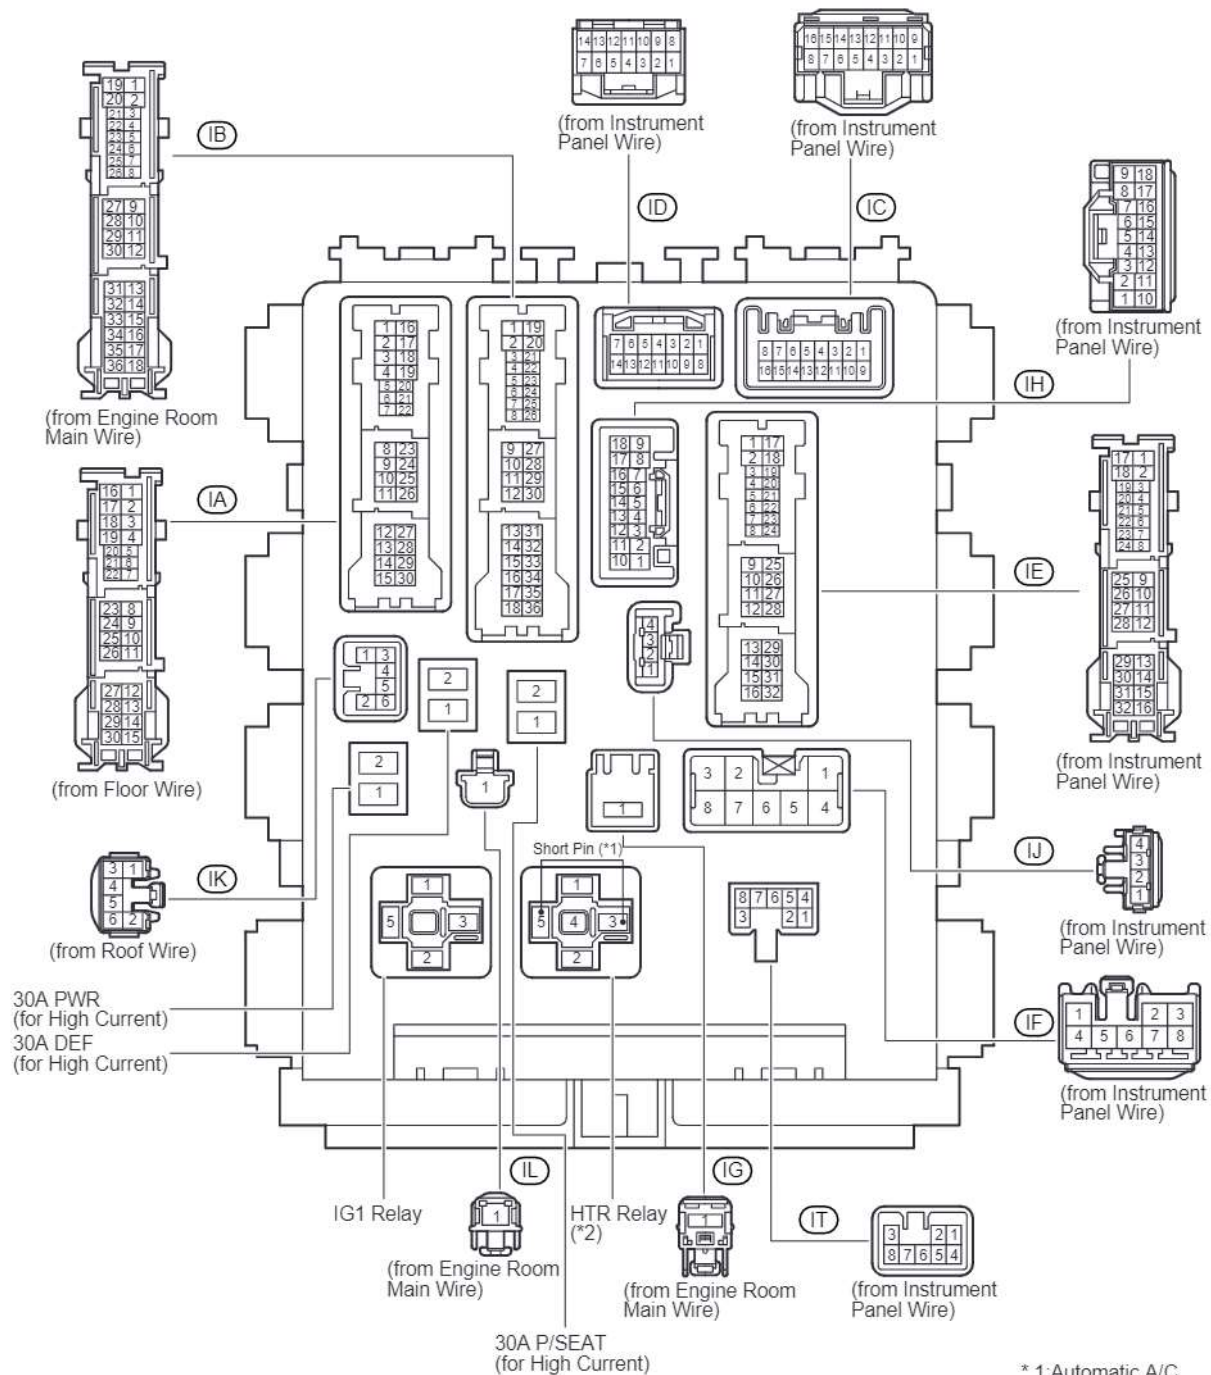


* 1: Automatic A/C
* 2: Manual A/C

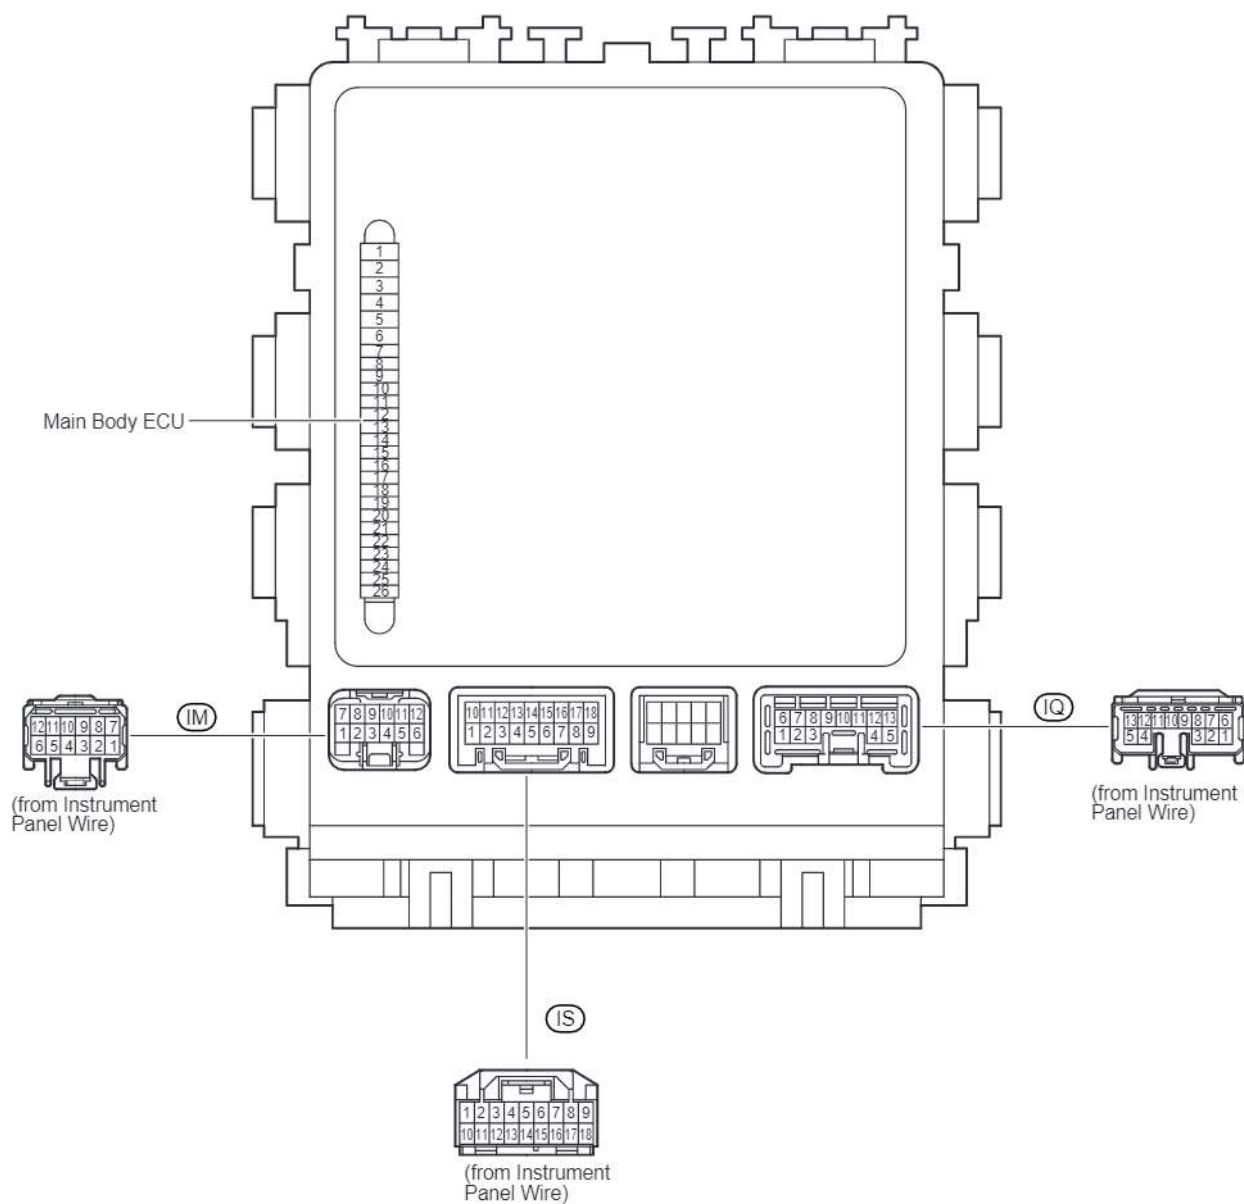

F RELAY LOCATIONS

 : Instrument Panel J/B	Cowl Side Left (See Page 21)
--	------------------------------


(RHD)

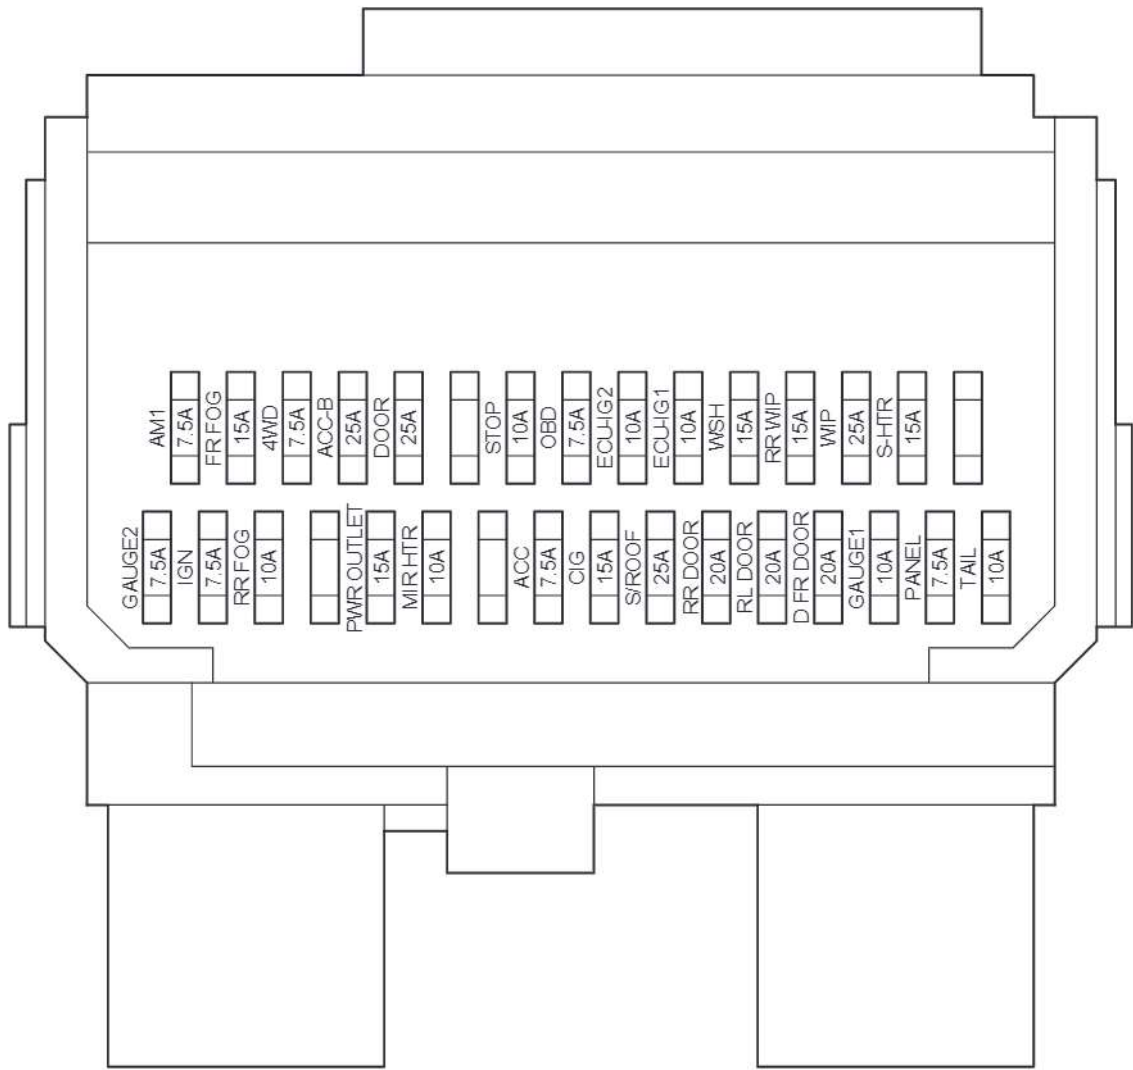

cardiagn.com

F RELAY LOCATIONS


[Instrument Panel J/B Inner Circuit] (LHD)

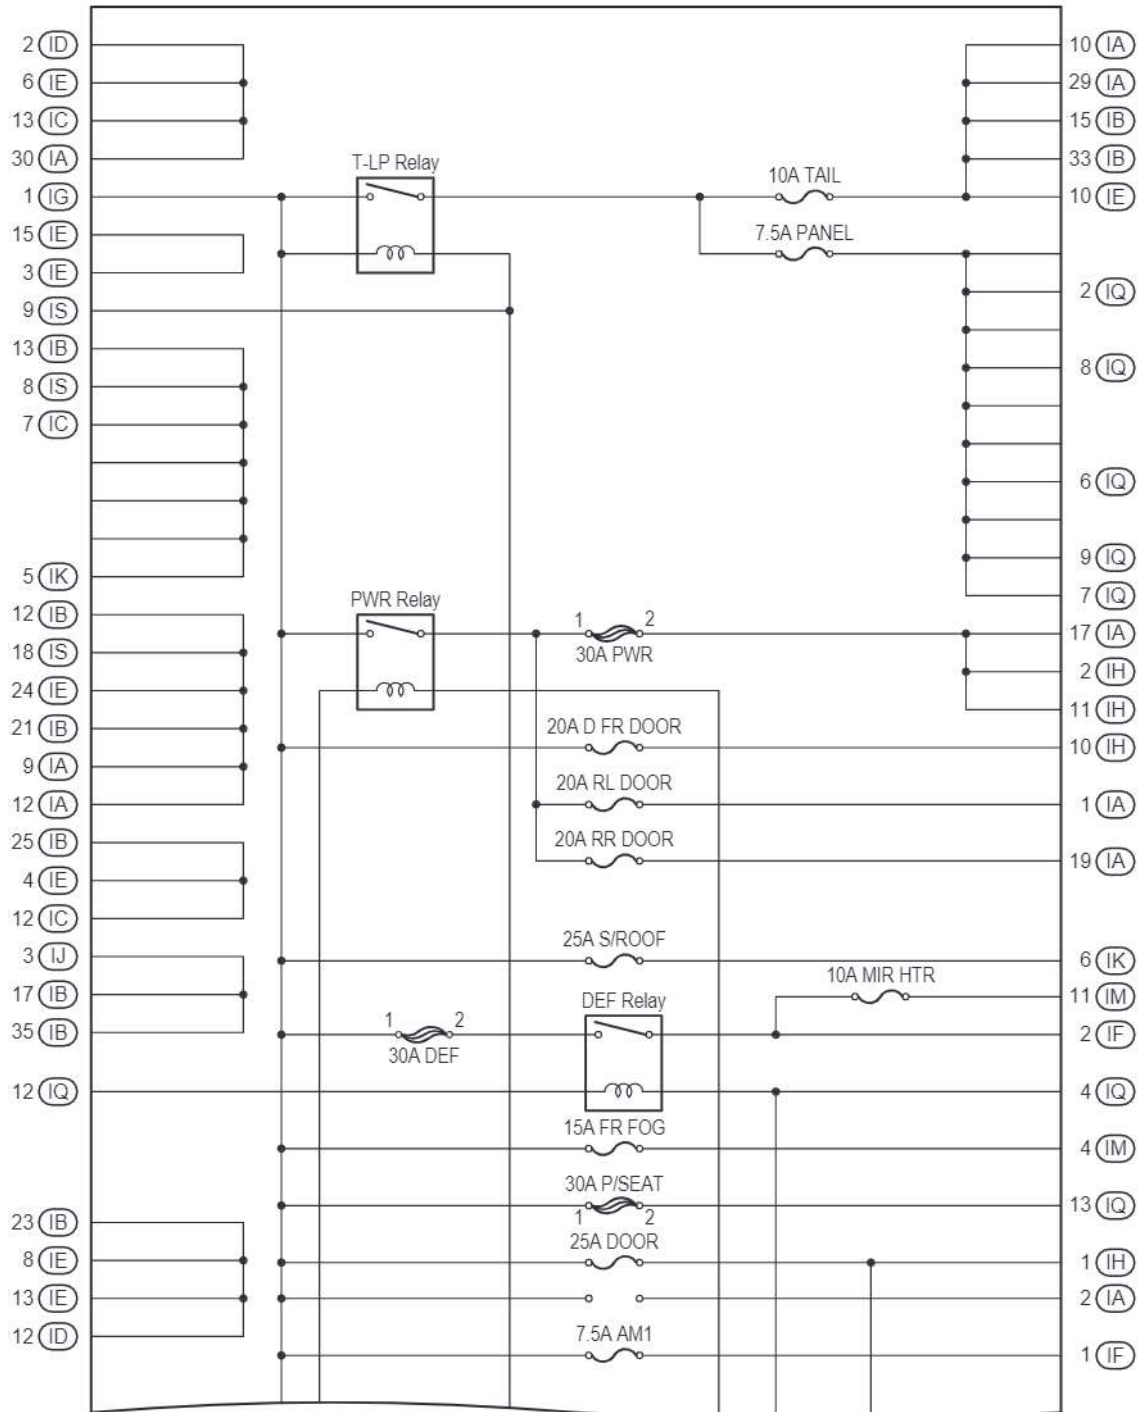

(Cont. Next Page)

* 1:Automatic A/C
* 2:Manual A/C


(Cont'd)

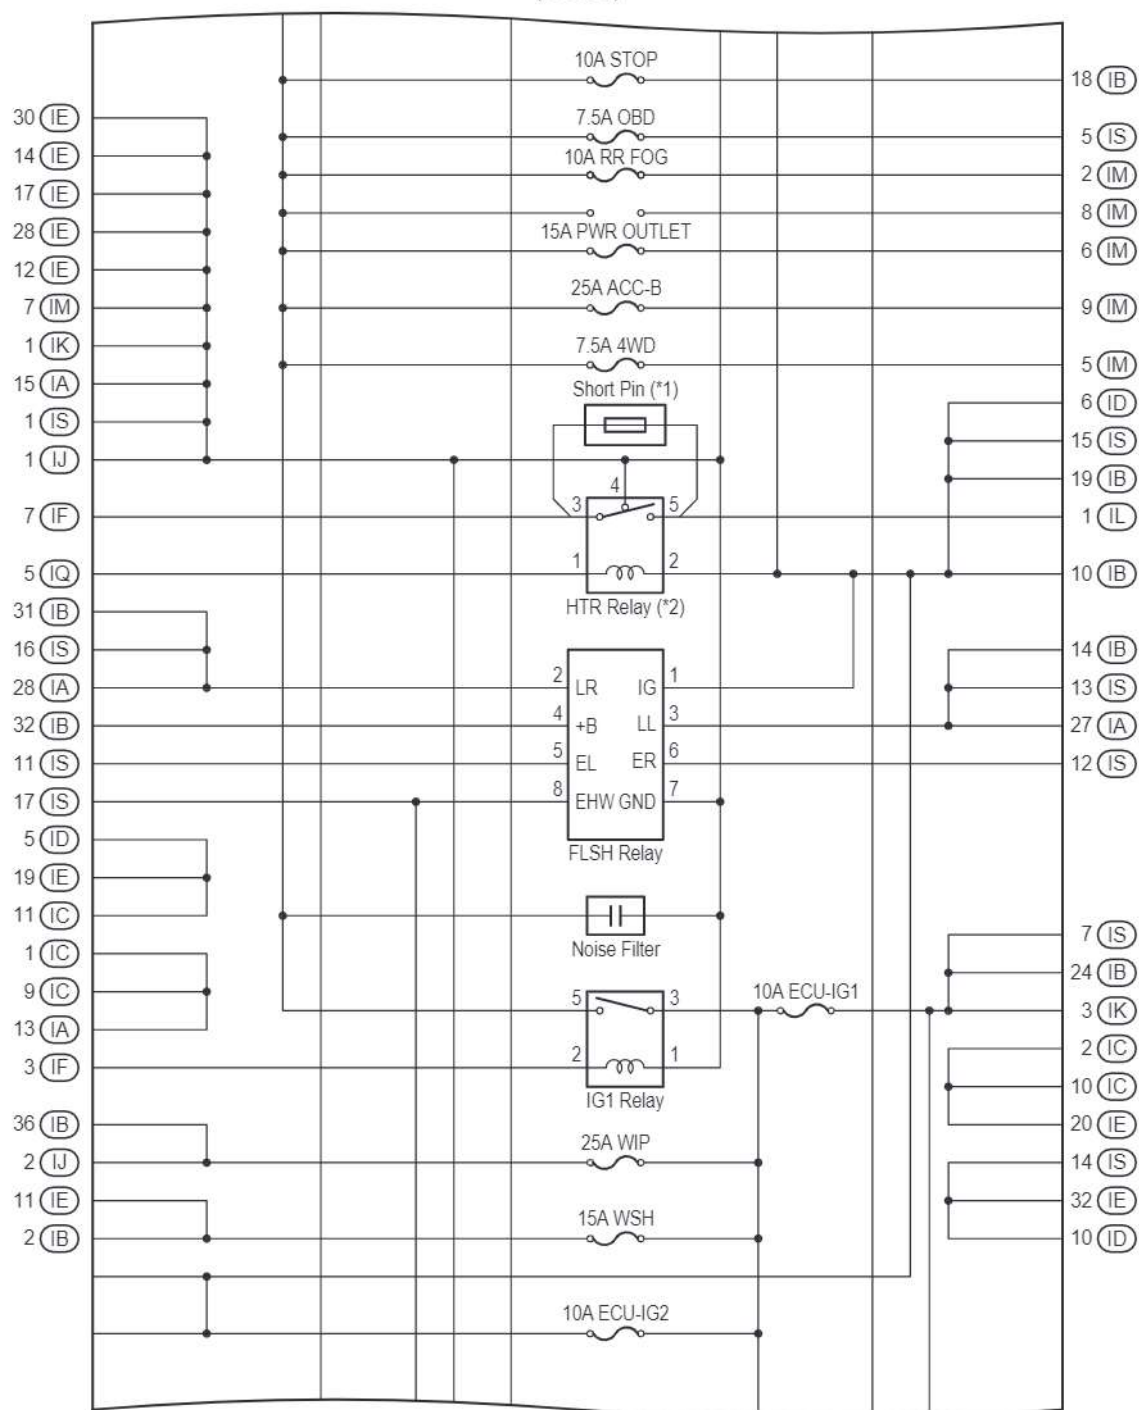


(Cont. Next Page)

F RELAY LOCATIONS

[Instrument Panel J/B Inner Circuit] (LHD)

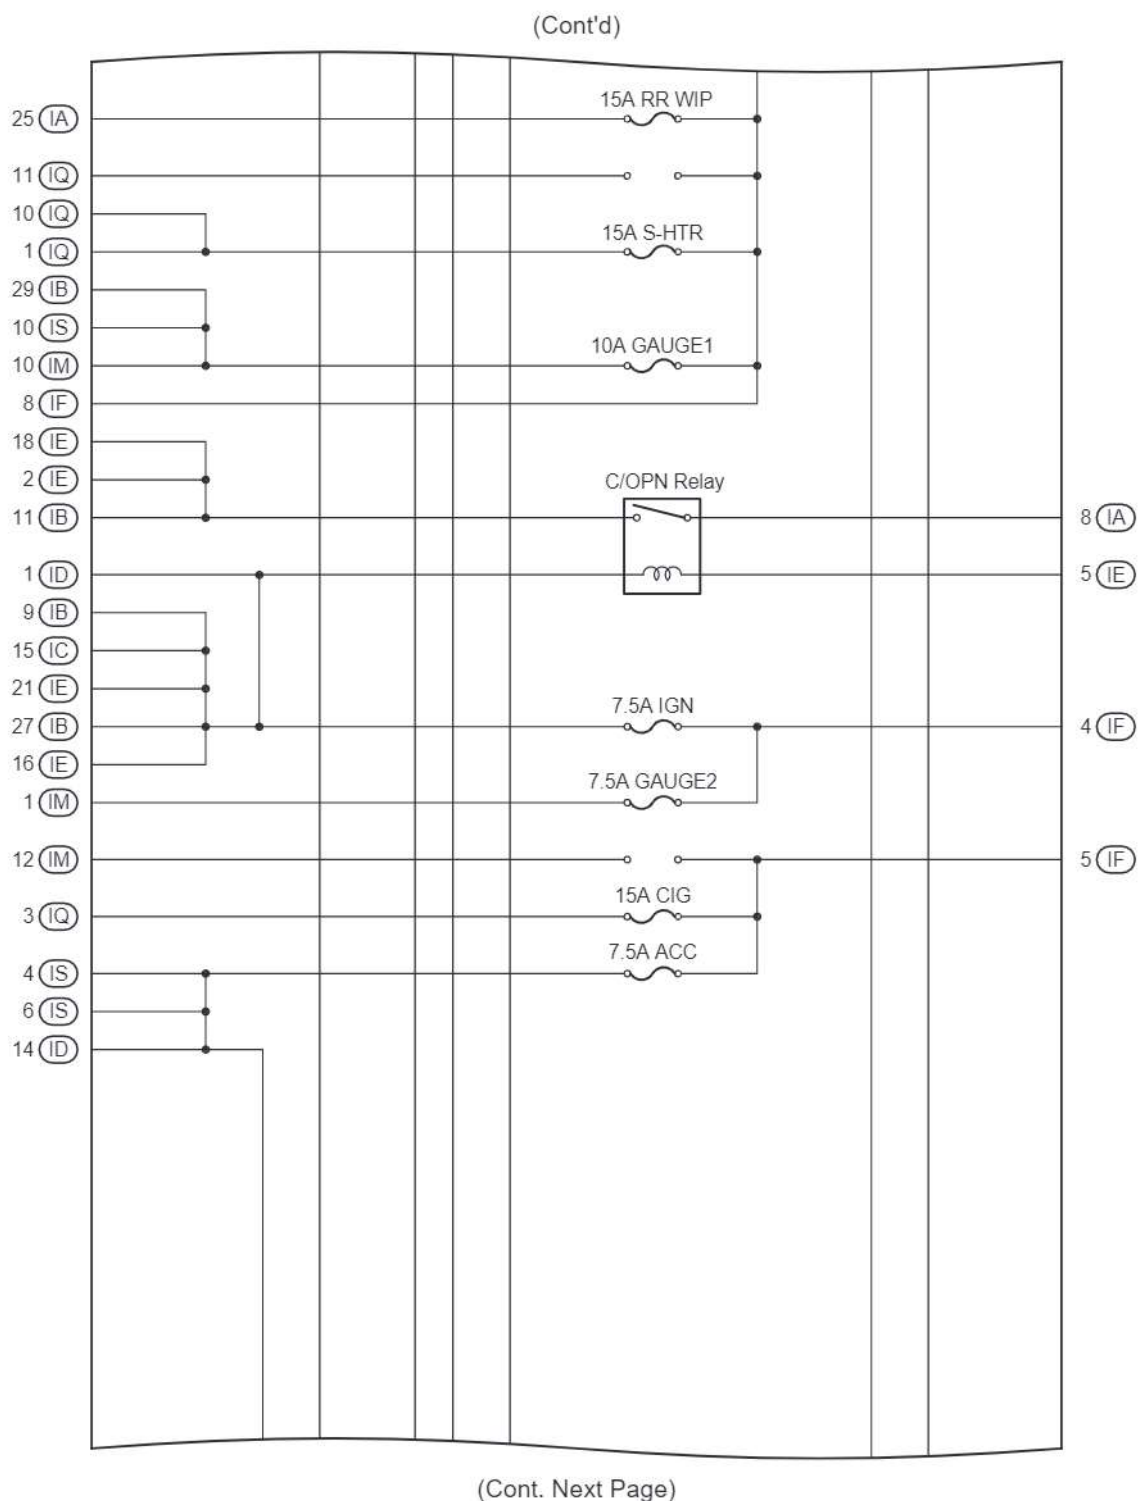


(Cont'd)

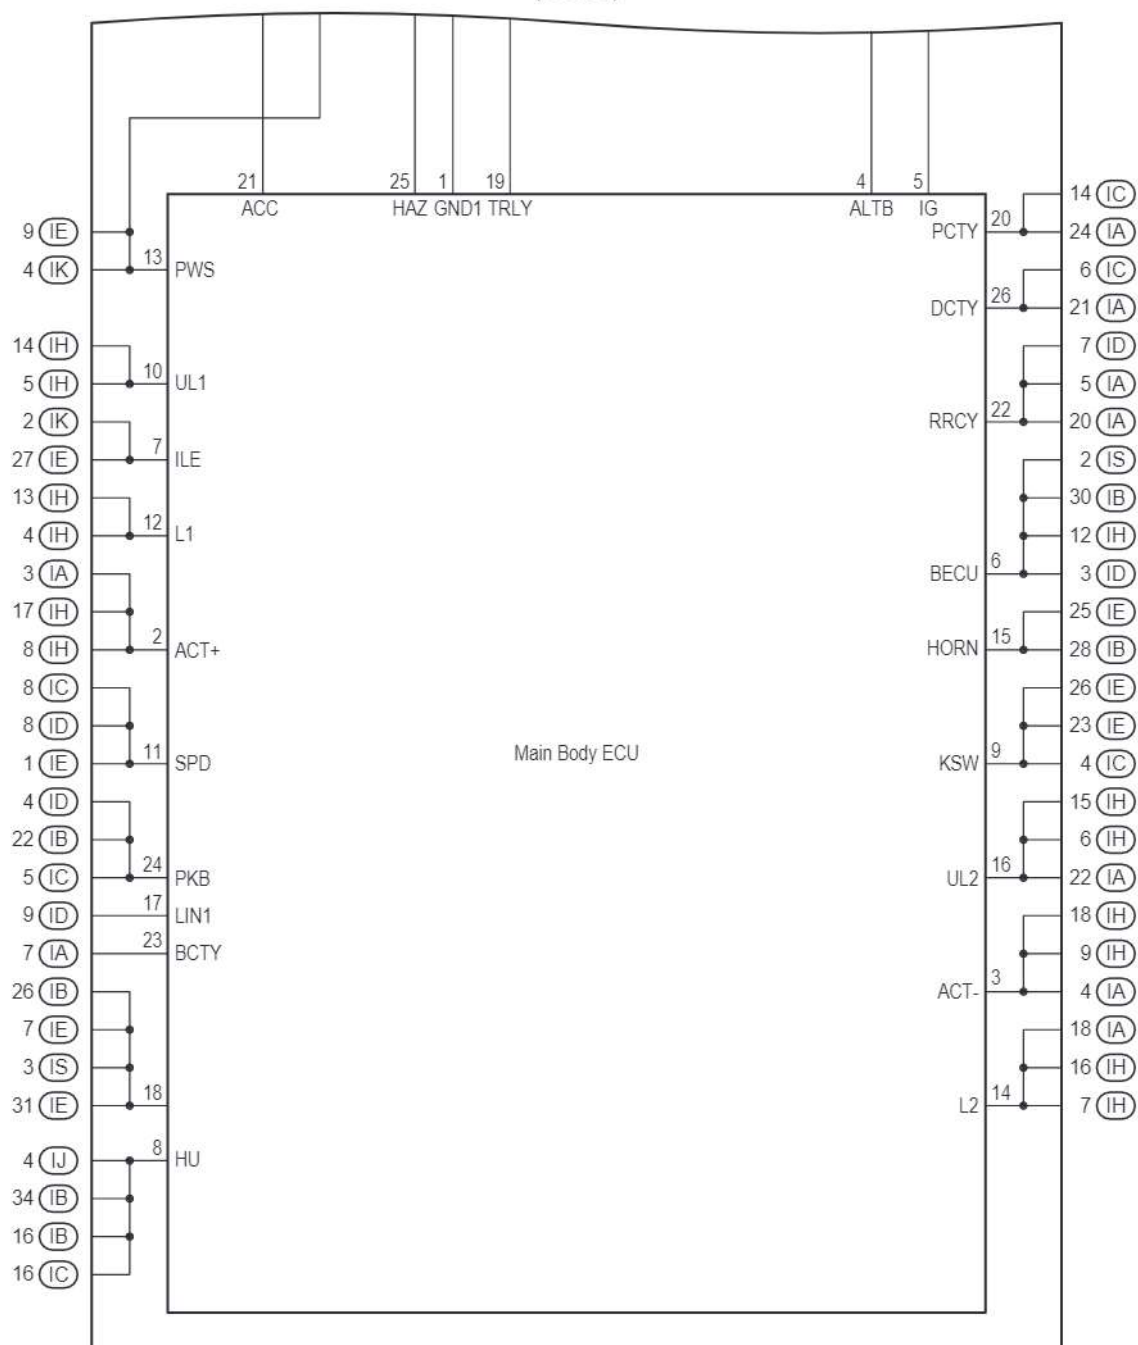

F RELAY LOCATIONS


[Instrument Panel J/B Inner Circuit] (RHD)

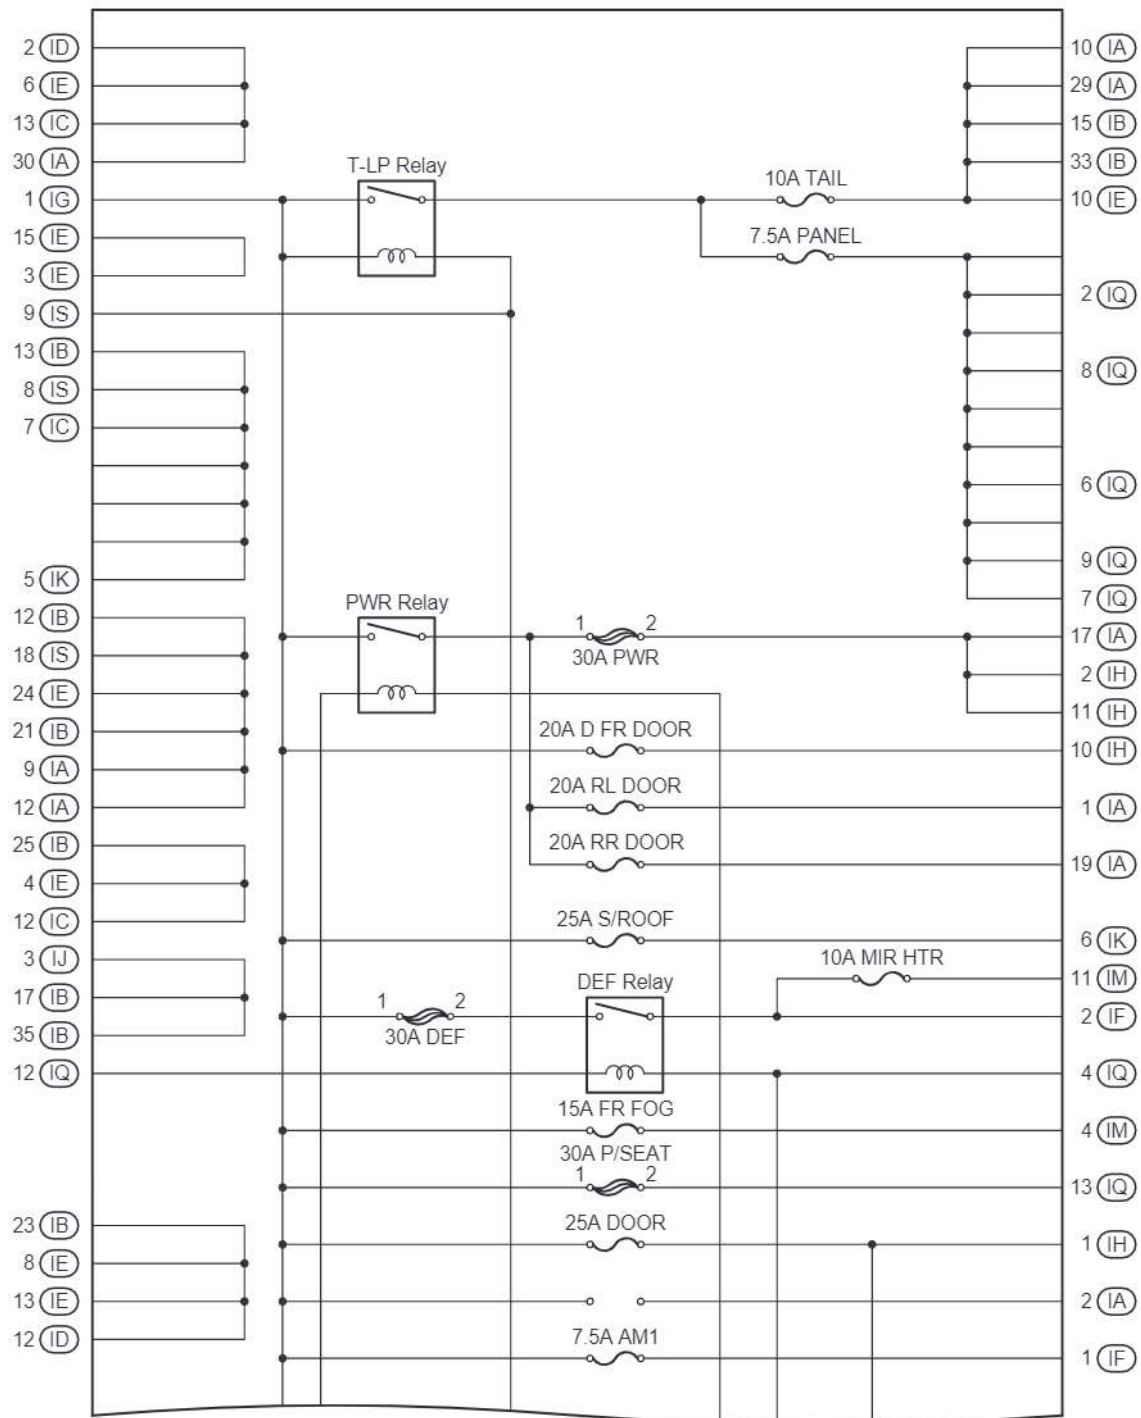

(Cont. Next Page)

* 1:Automatic A/C
 * 2:Manual A/C


(Cont'd)

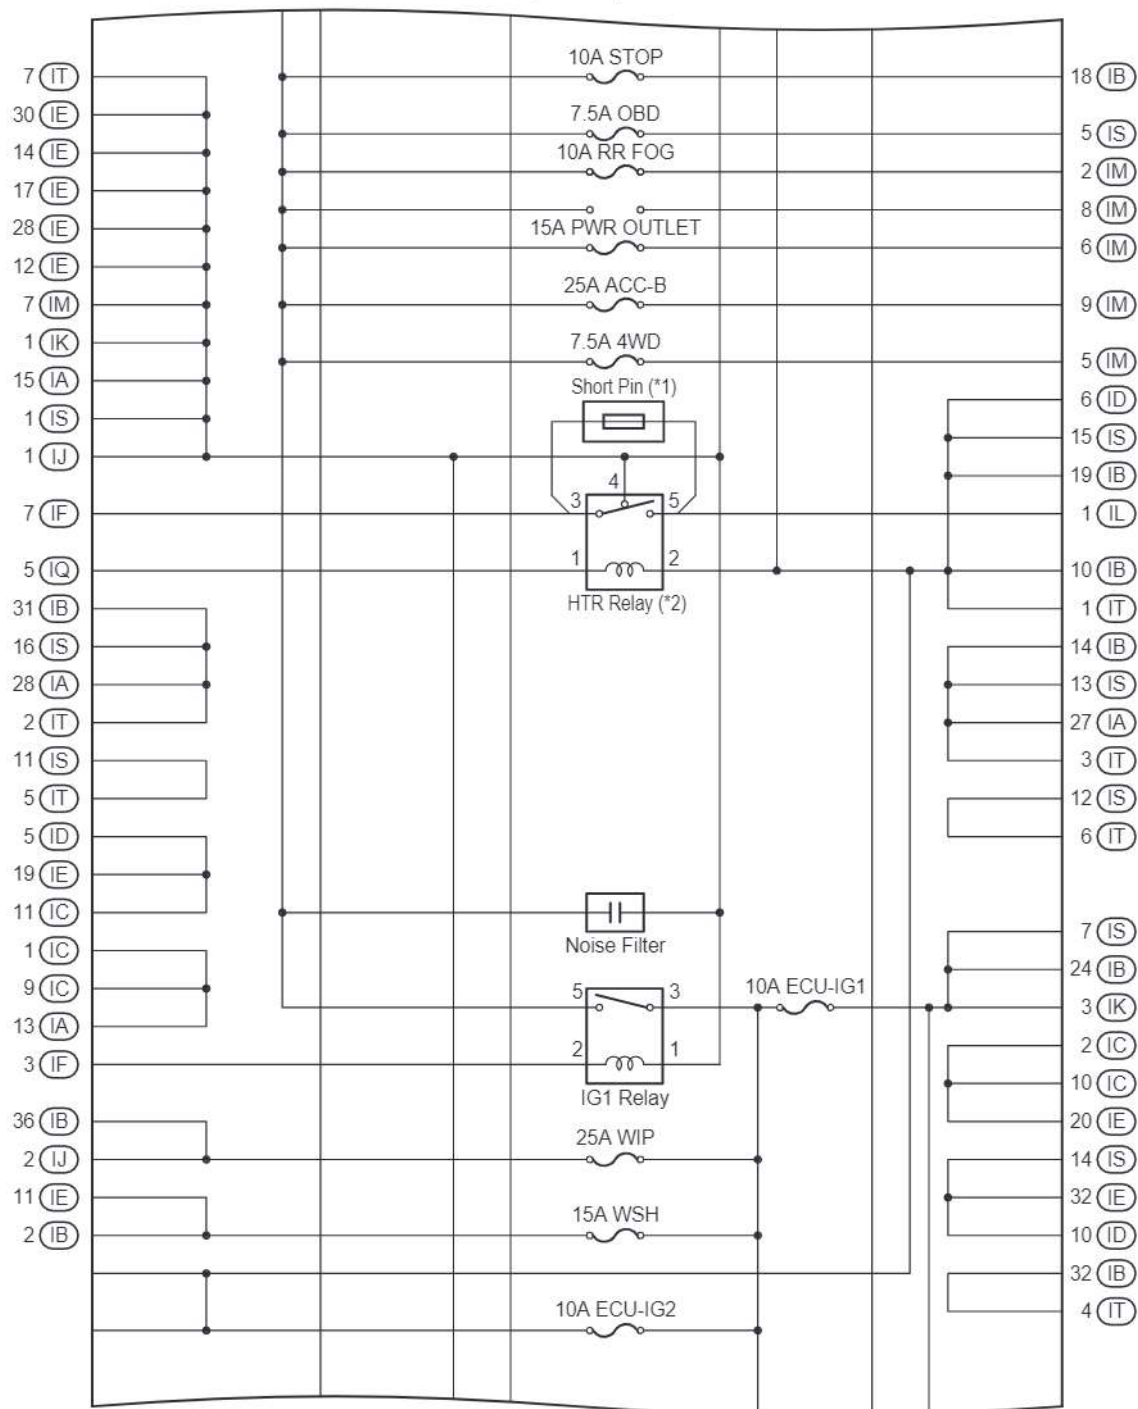


(Cont. Next Page)

F RELAY LOCATIONS

[Instrument Panel J/B Inner Circuit] (RHD)

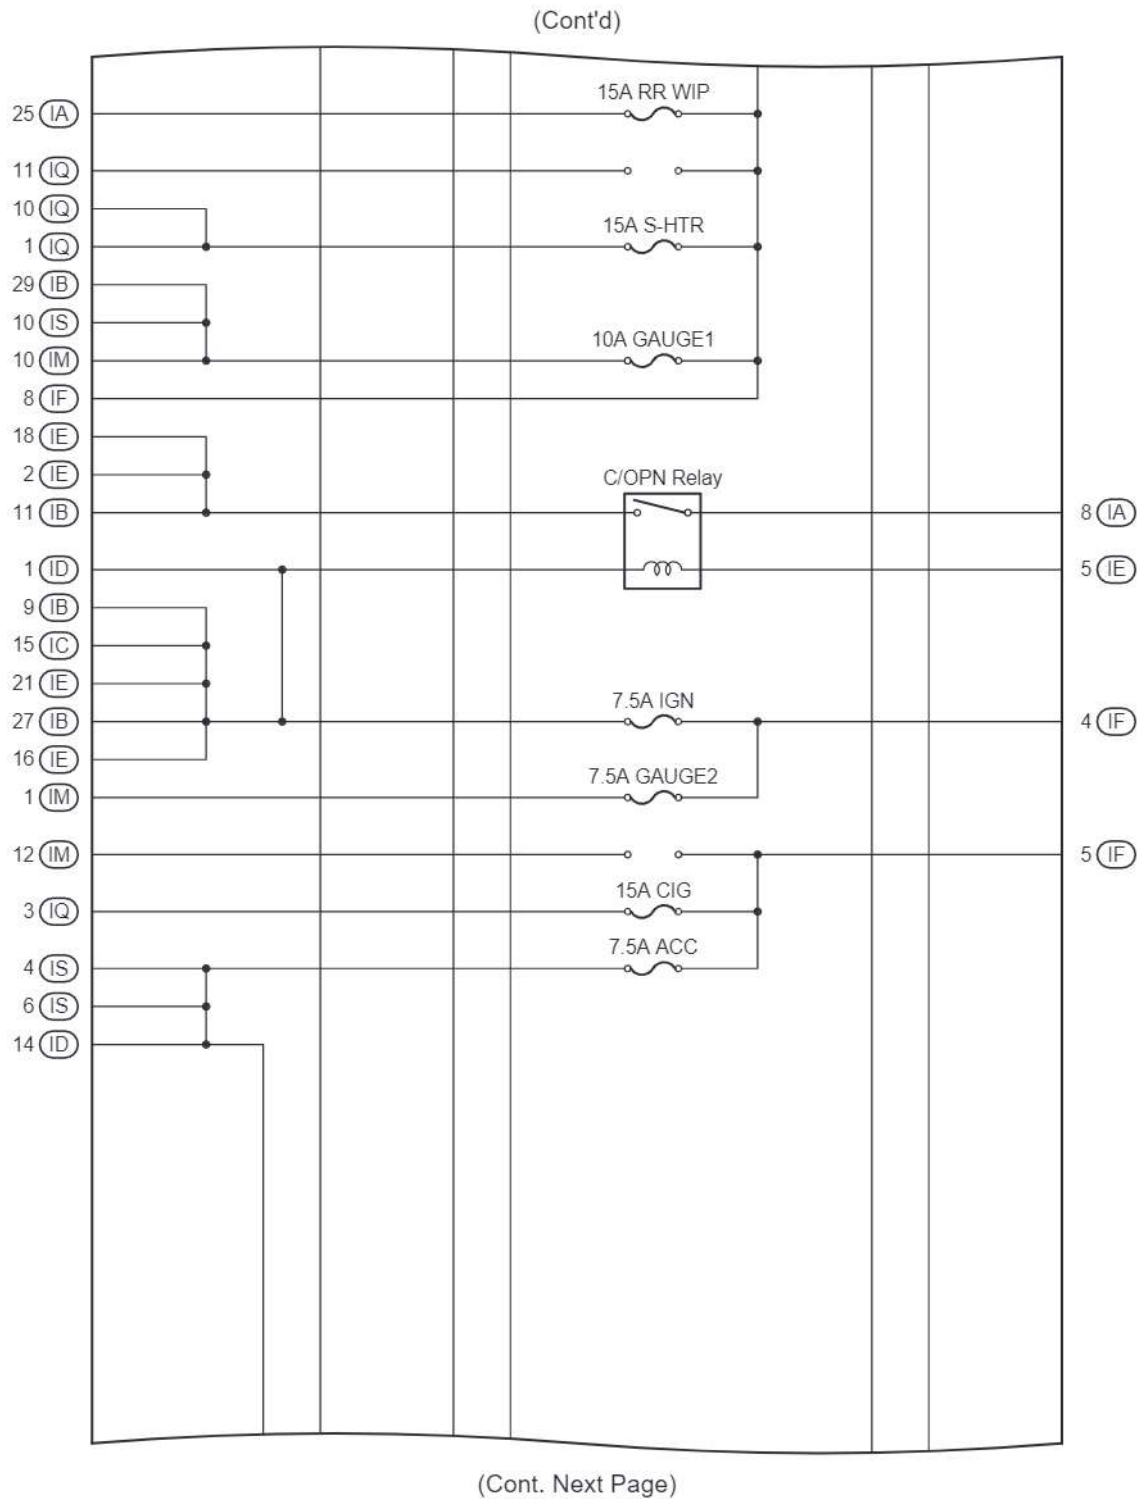


(Cont'd)

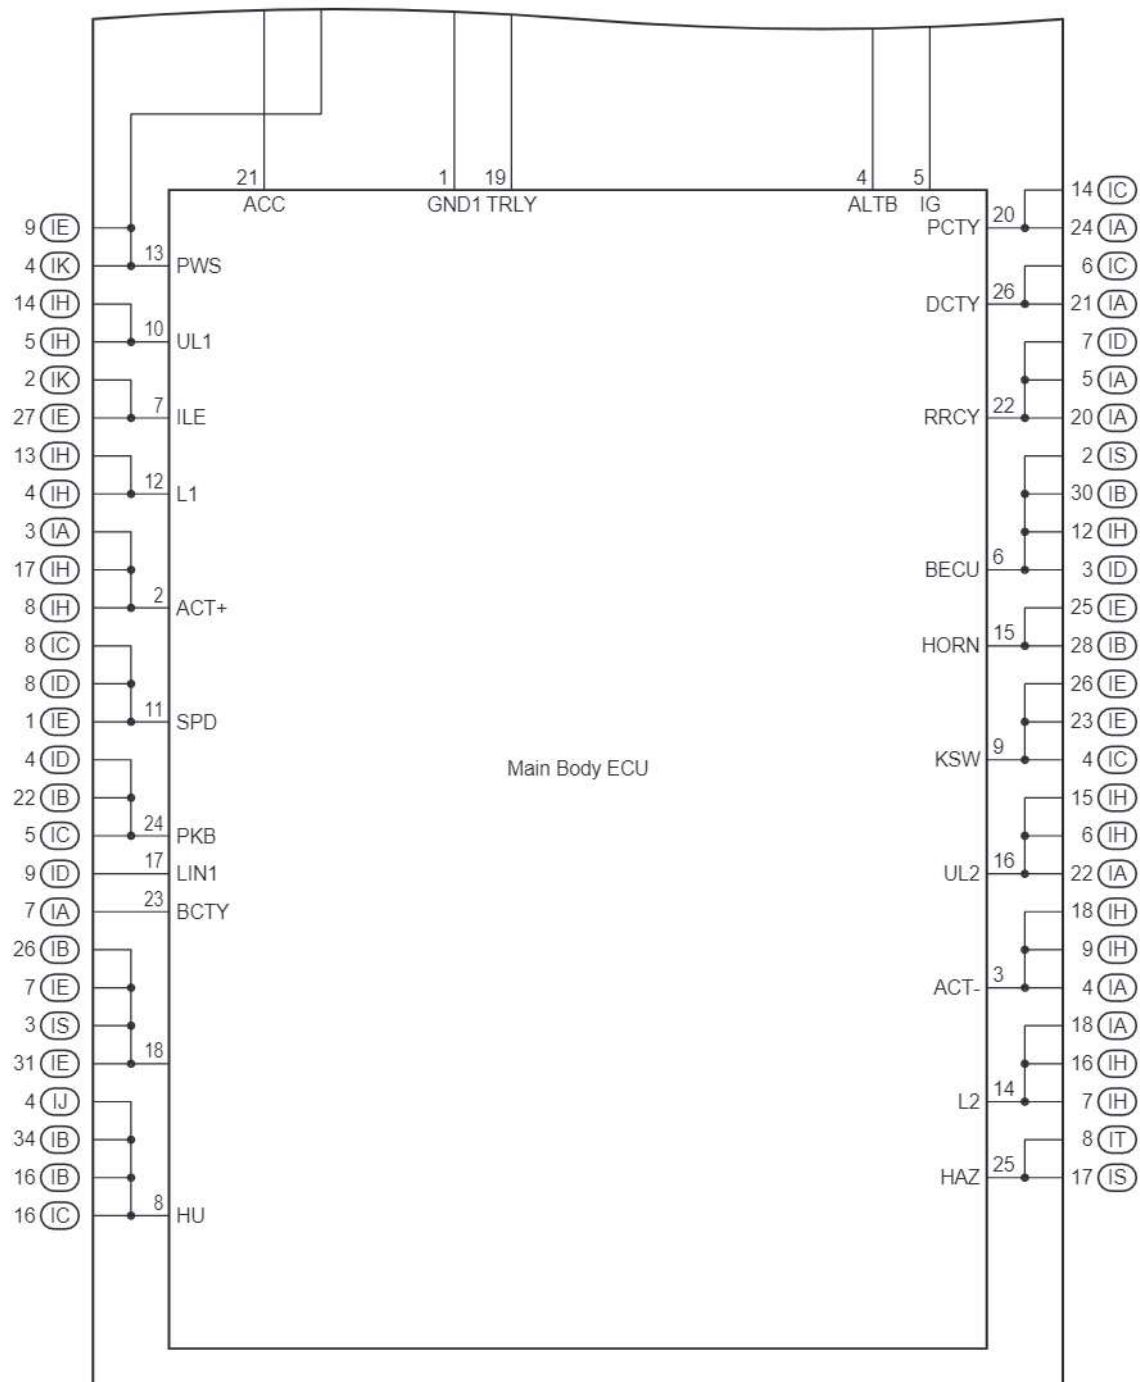


[Instrument Panel] (LHD)

- * 1:w/ Entry & Start System
- * 2:w/o Entry & Start System
- * 3:Refer to the Service Bulletin for the installation position of the parts.

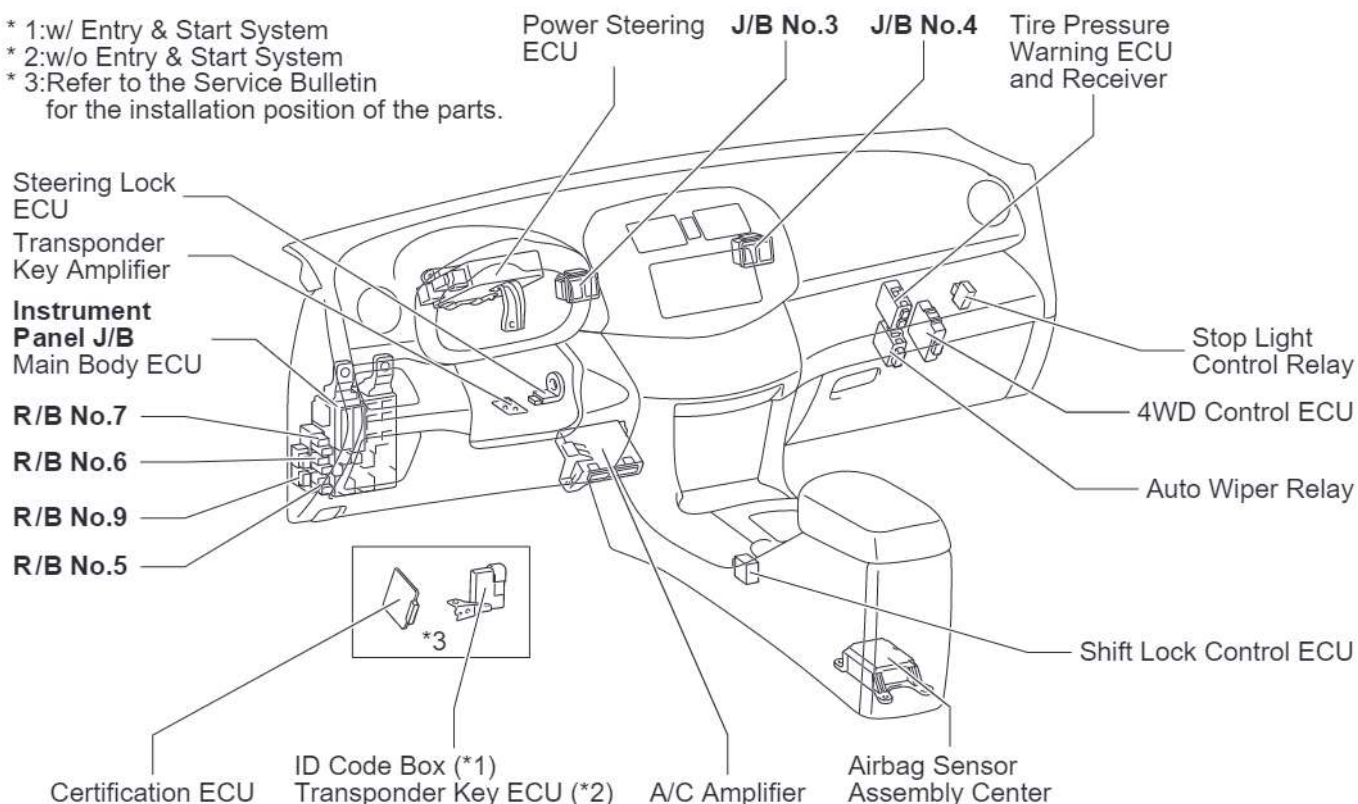


(RHD)

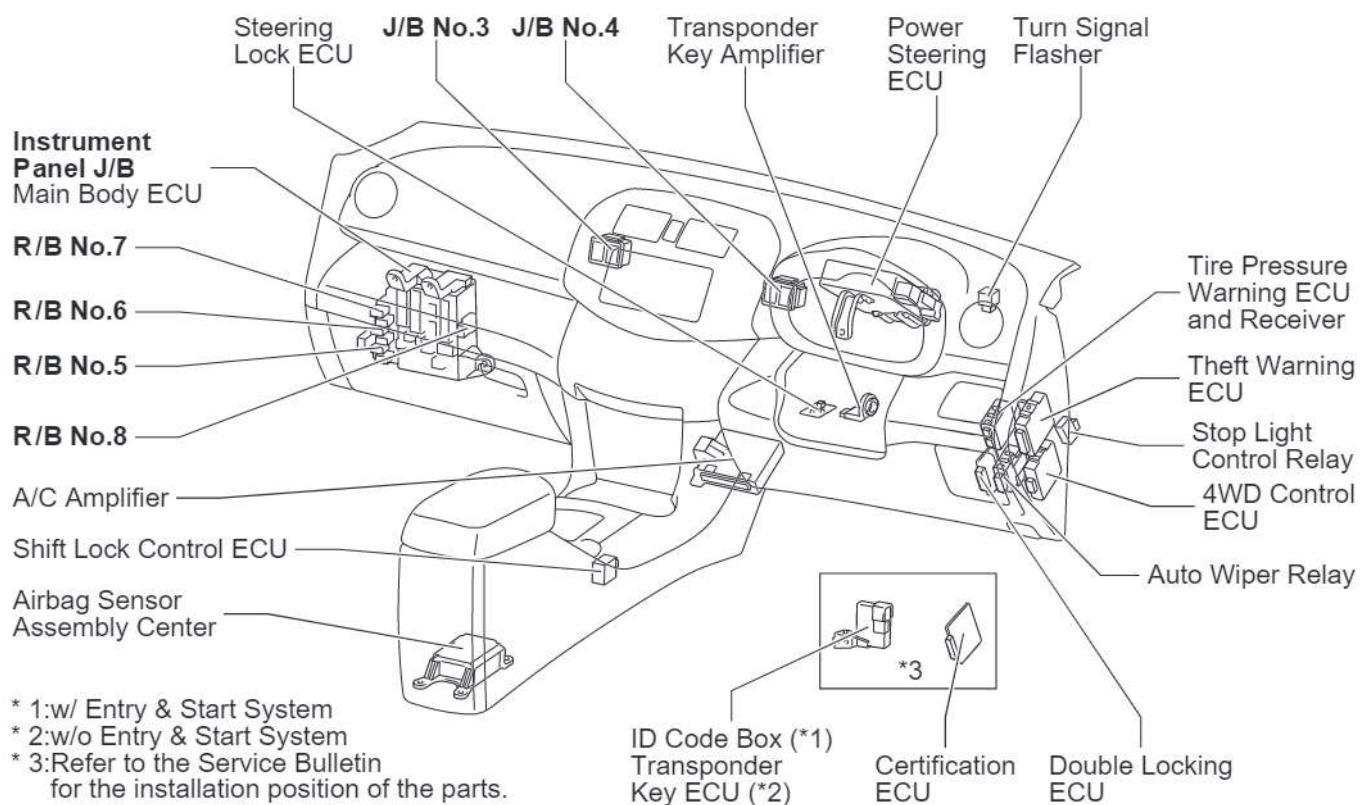


- * 1:w/ Entry & Start System
- * 2:w/o Entry & Start System
- * 3:Refer to the Service Bulletin for the installation position of the parts.

[Instrument Panel] (LHD)

- * 1:w/ Entry & Start System
- * 2:w/o Entry & Start System
- * 3:Refer to the Service Bulletin for the installation position of the parts.

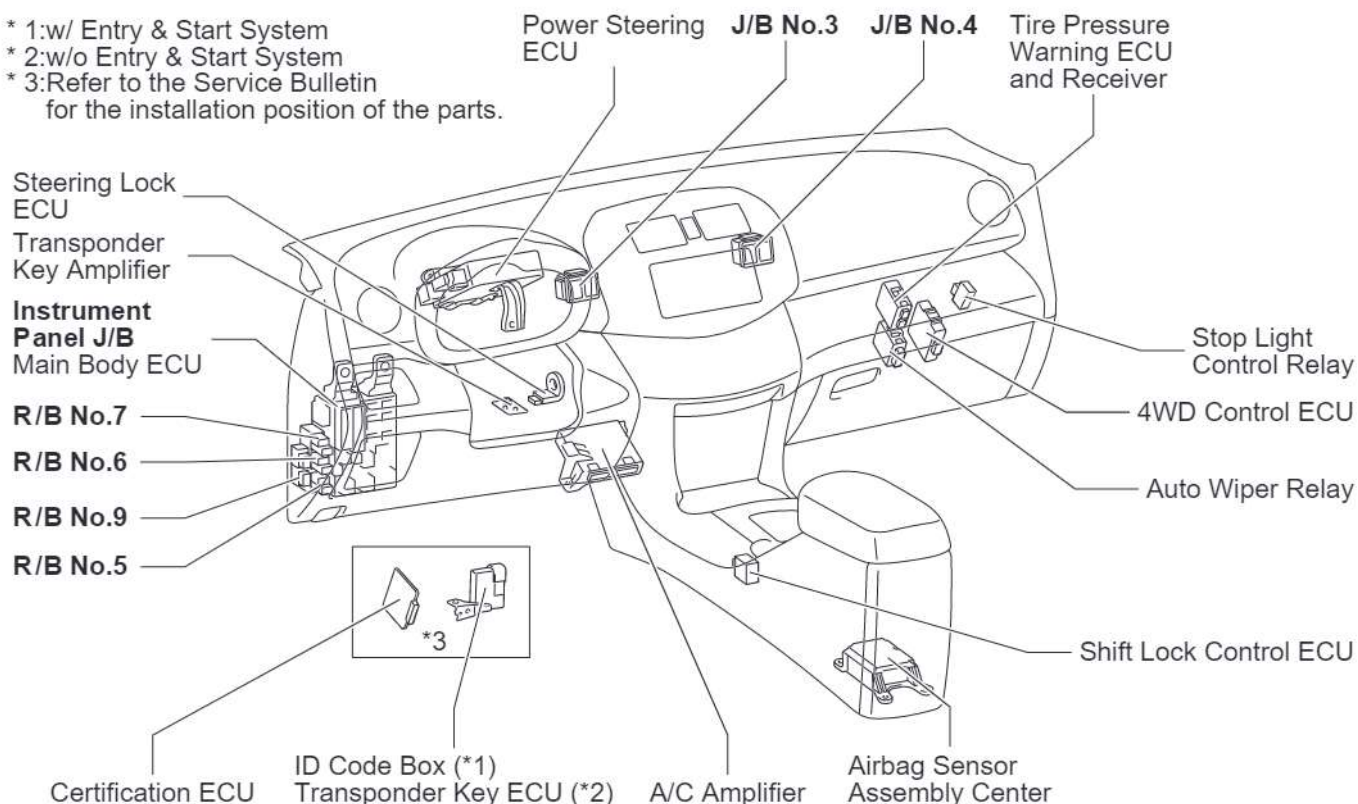

(RHD)

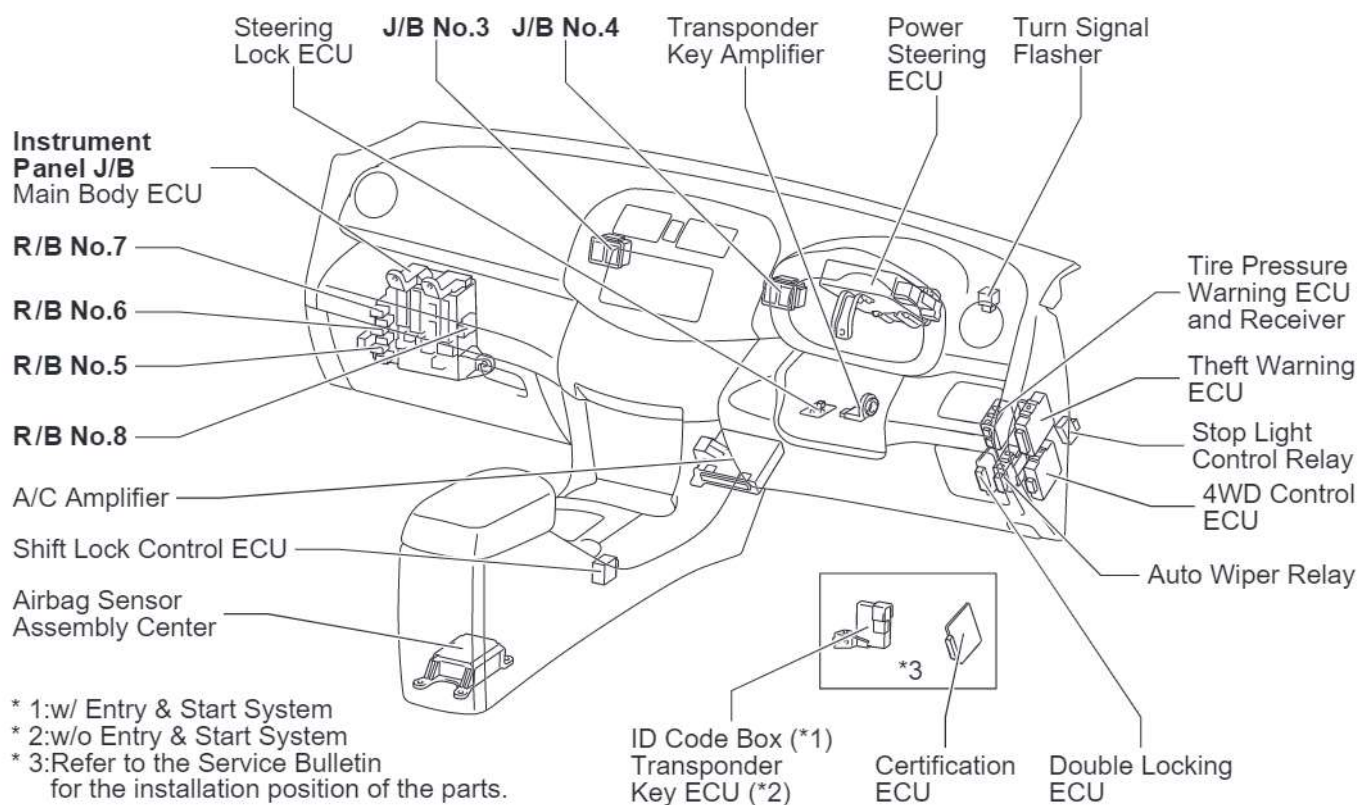


- * 1:w/ Entry & Start System
- * 2:w/o Entry & Start System
- * 3:Refer to the Service Bulletin for the installation position of the parts.

F RELAY LOCATIONS


○ : J/B No.3

Instrument Panel Center (See Page 21)

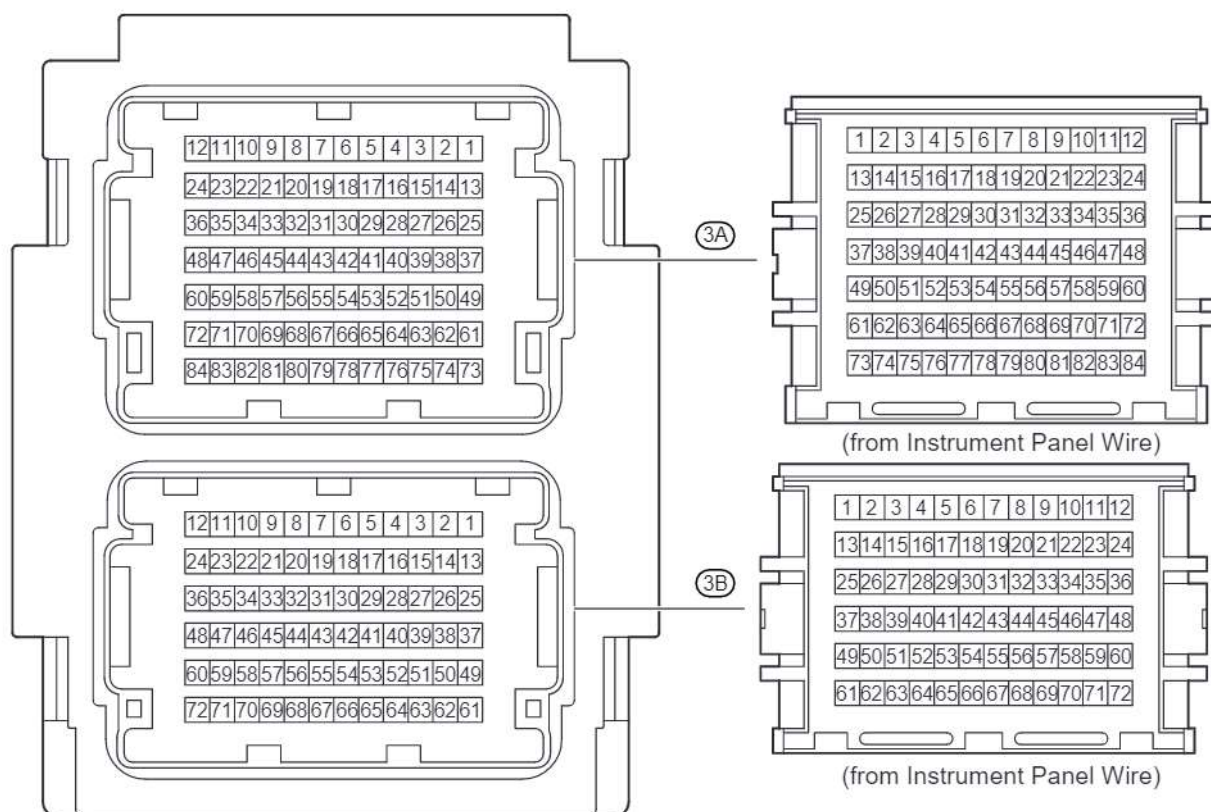

F RELAY LOCATIONS

[J/B No.3 Inner Circuit]
(LHD)

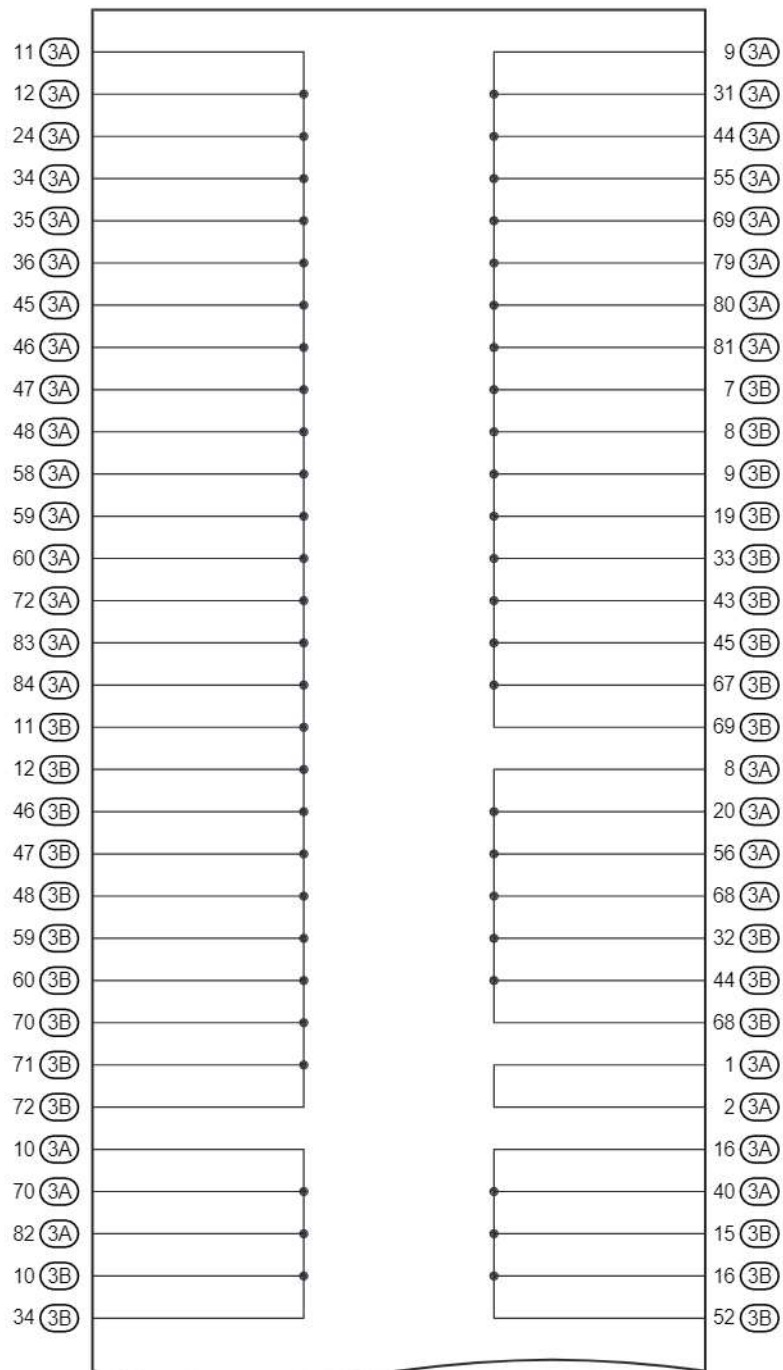

(Cont. Next Page)

(Cont'd)


7 (3A)			17 (3A)
43 (3A)			17 (3B)
67 (3A)			53 (3B)
6 (3A)			27 (3A)
42 (3A)			28 (3A)
66 (3A)			41 (3A)
5 (3B)			50 (3A)
6 (3B)			63 (3A)
54 (3B)			75 (3A)
3 (3A)			3 (3B)
26 (3A)			4 (3B)
2 (3B)			39 (3B)
13 (3B)			25 (3A)
25 (3B)			37 (3A)
26 (3B)			38 (3A)
27 (3B)			39 (3A)
38 (3B)			49 (3A)
62 (3B)			61 (3A)
18 (3A)			73 (3A)
29 (3A)			1 (3B)
53 (3A)			49 (3B)
54 (3A)			50 (3B)
77 (3A)			63 (3B)
78 (3A)			64 (3B)
18 (3B)			51 (3A)
42 (3B)			52 (3A)
13 (3A)			64 (3A)
14 (3A)			65 (3A)
37 (3B)			29 (3B)
61 (3B)			41 (3B)

(Cont. Next Page)

F RELAY LOCATIONS


[J/B No.3 Inner Circuit]
(LHD)

(Cont'd)

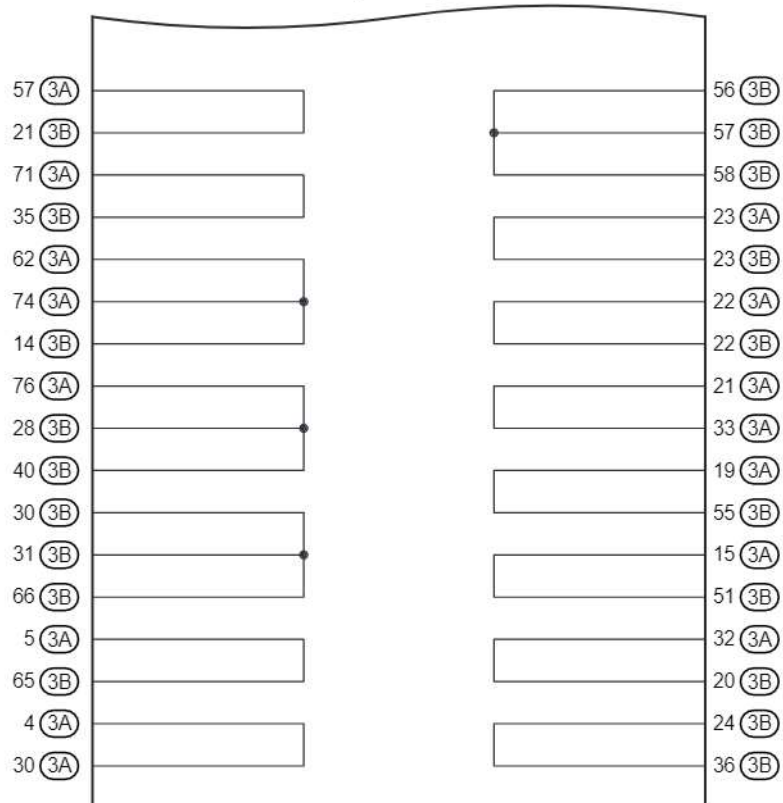


F RELAY LOCATIONS

[J/B No.3 Inner Circuit]
(RHD Except Australia)

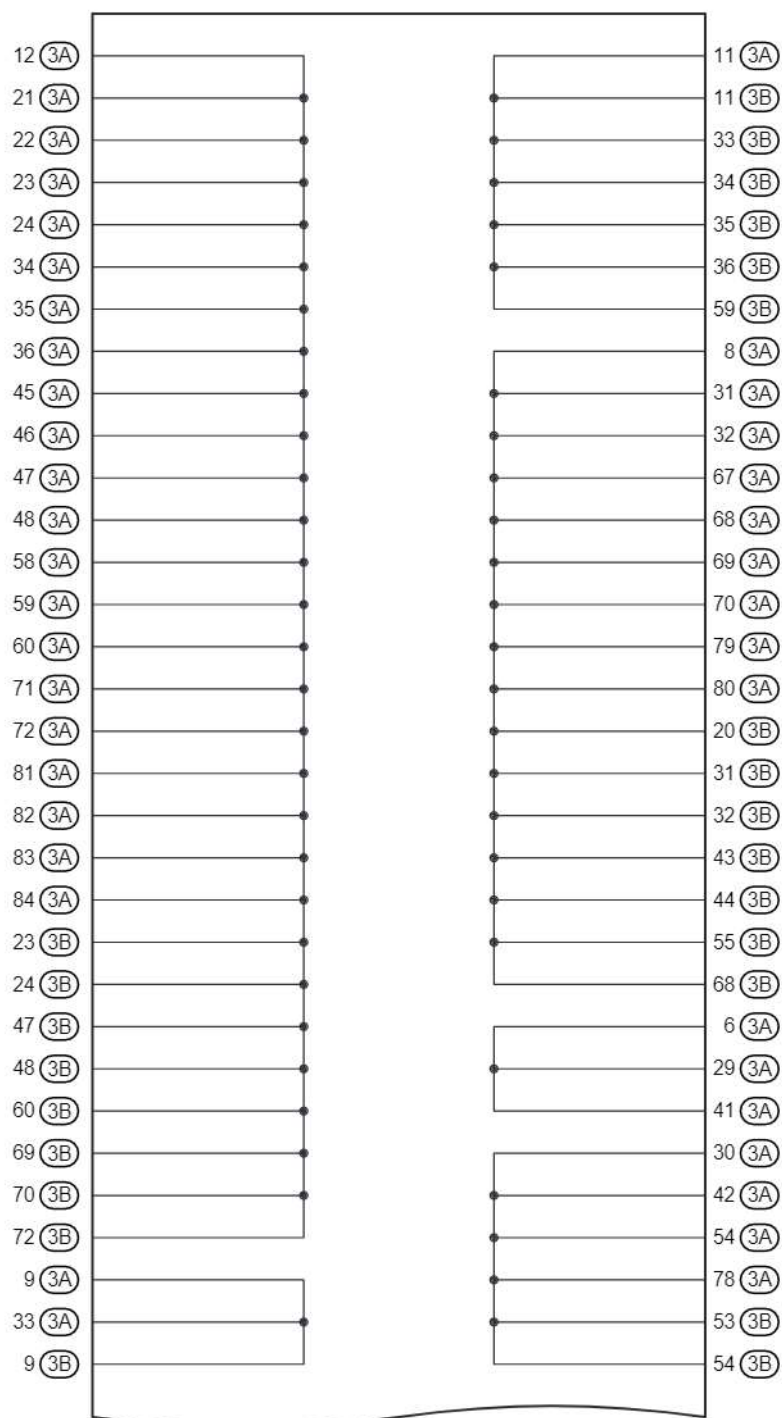

(Cont. Next Page)

(Cont'd)

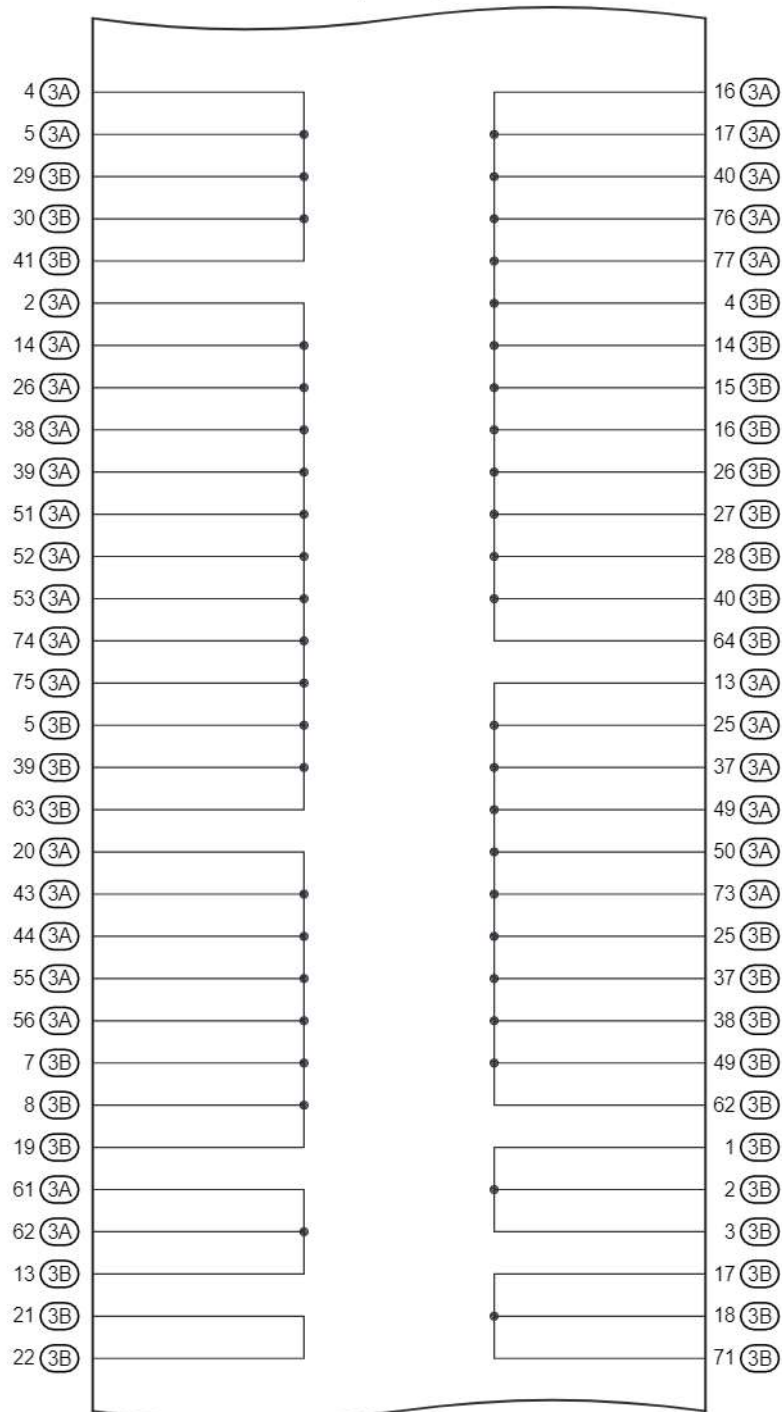


(Cont. Next Page)

F RELAY LOCATIONS


[J/B No.3 Inner Circuit]
(RHD Except Australia)

(Cont'd)

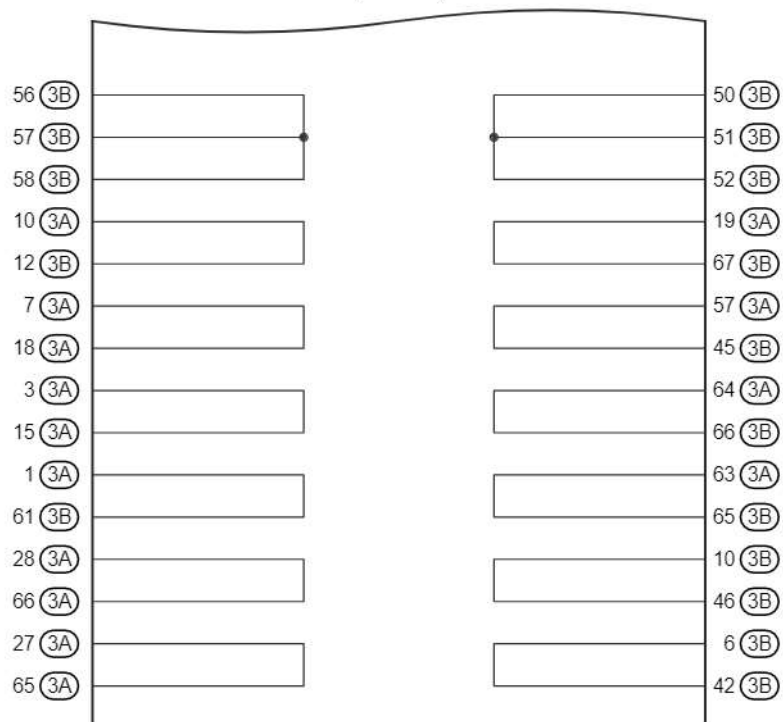


F RELAY LOCATIONS

[J/B No.3 Inner Circuit]
(Australia)

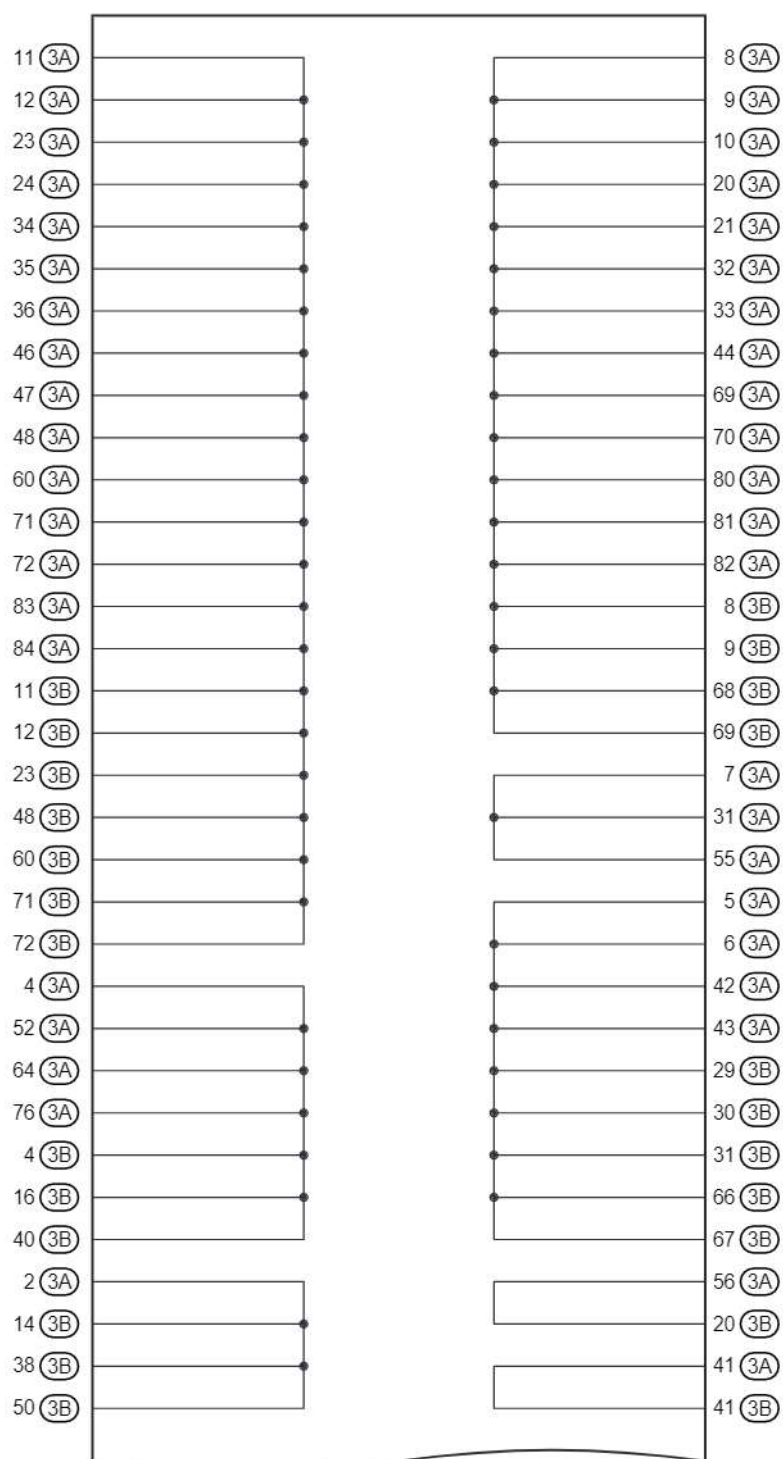

(Cont. Next Page)


(Cont'd)

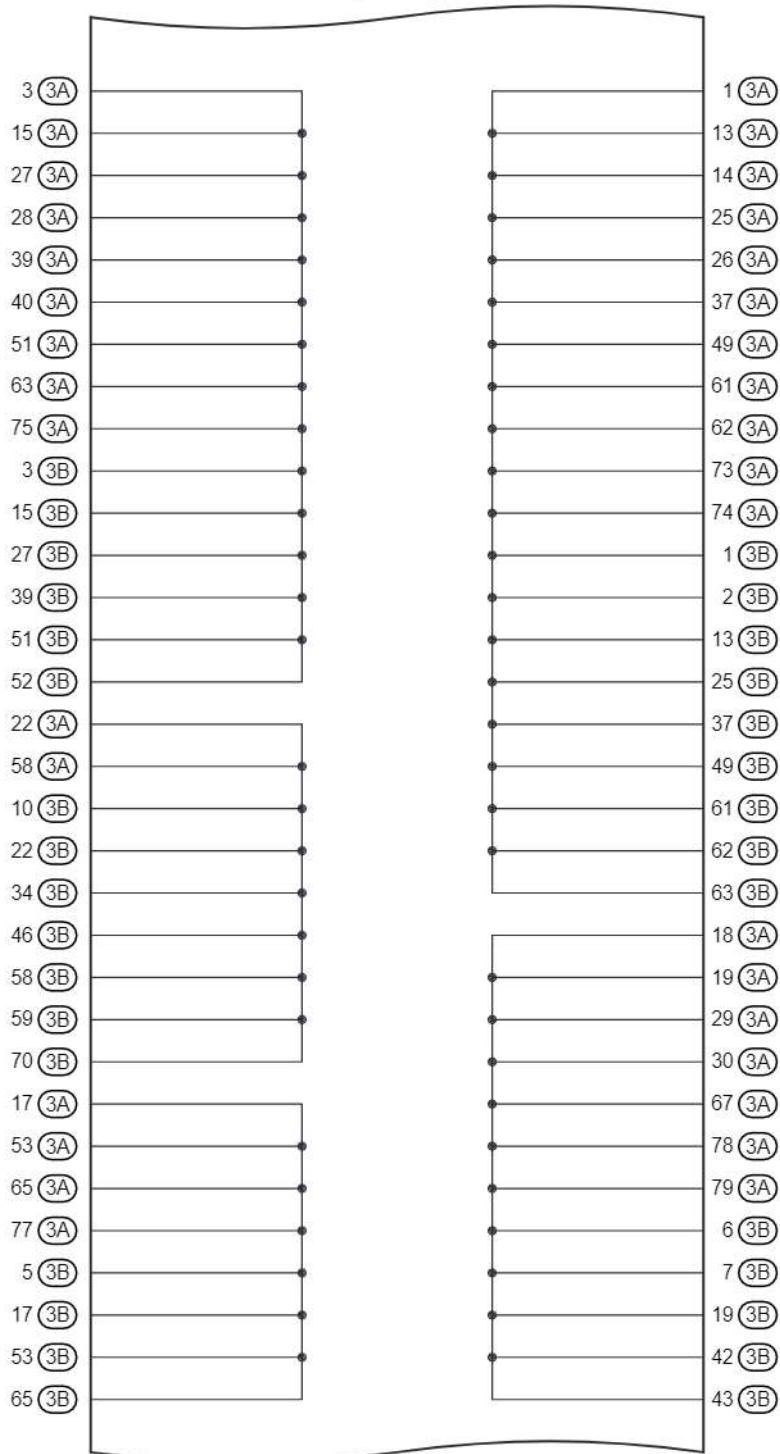

(Cont. Next Page)

F RELAY LOCATIONS


[J/B No.3 Inner Circuit]
(Australia)

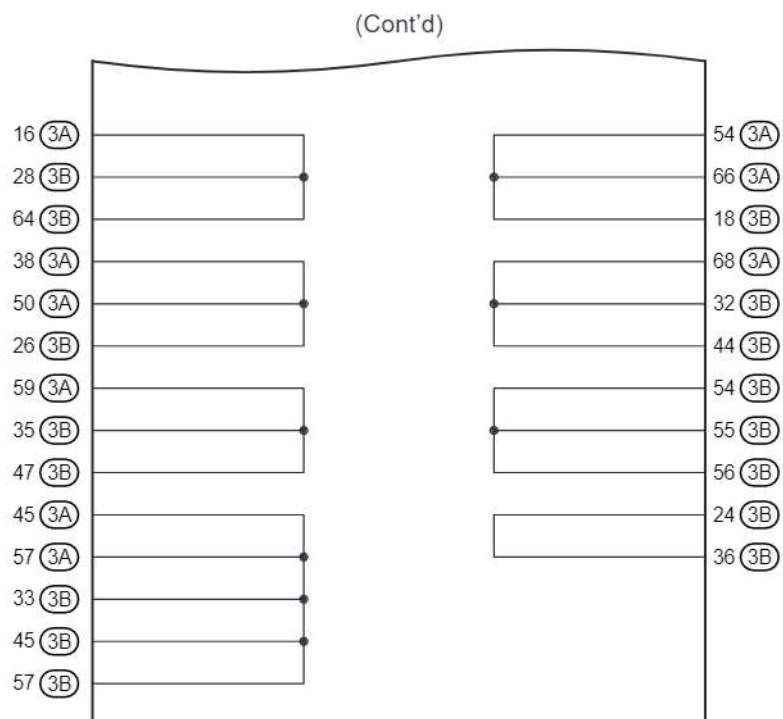

F RELAY LOCATIONS


○ : J/B No.4

Instrument Panel Center (See Page 21)

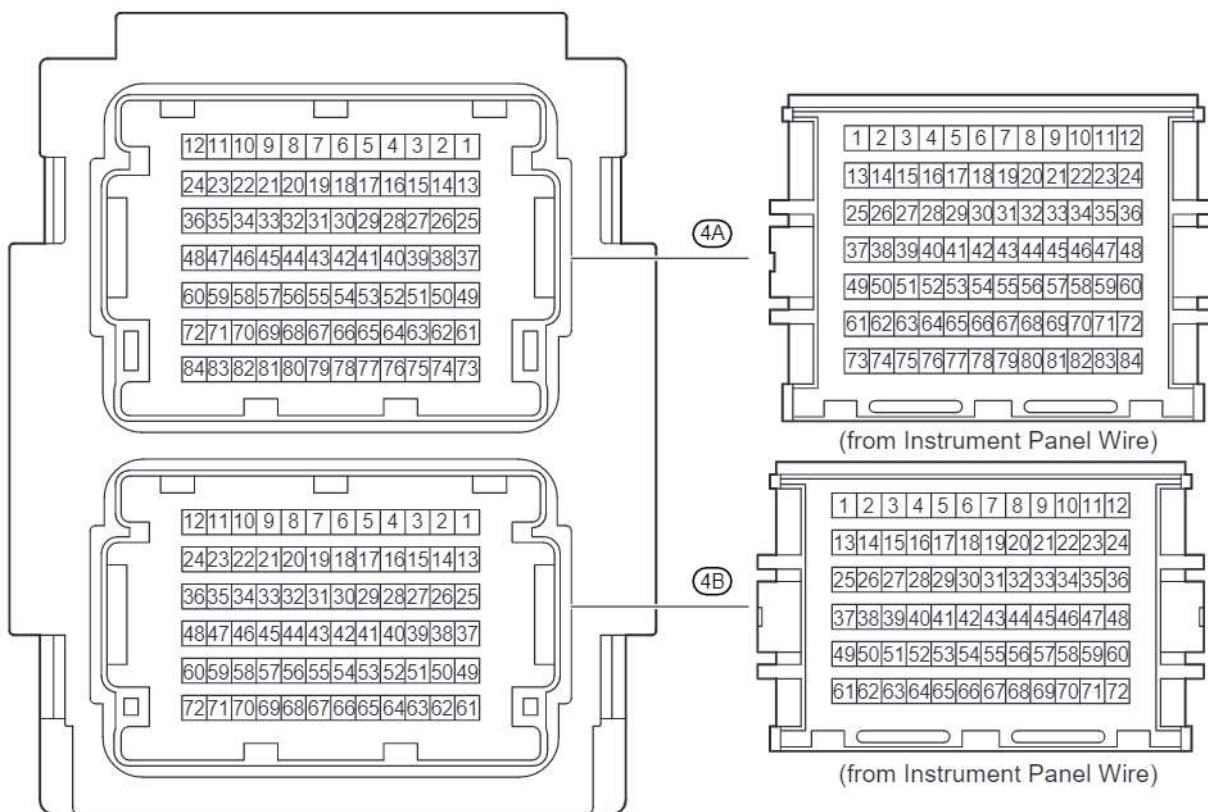


F RELAY LOCATIONS

[J/B No.4 Inner Circuit]
(LHD)

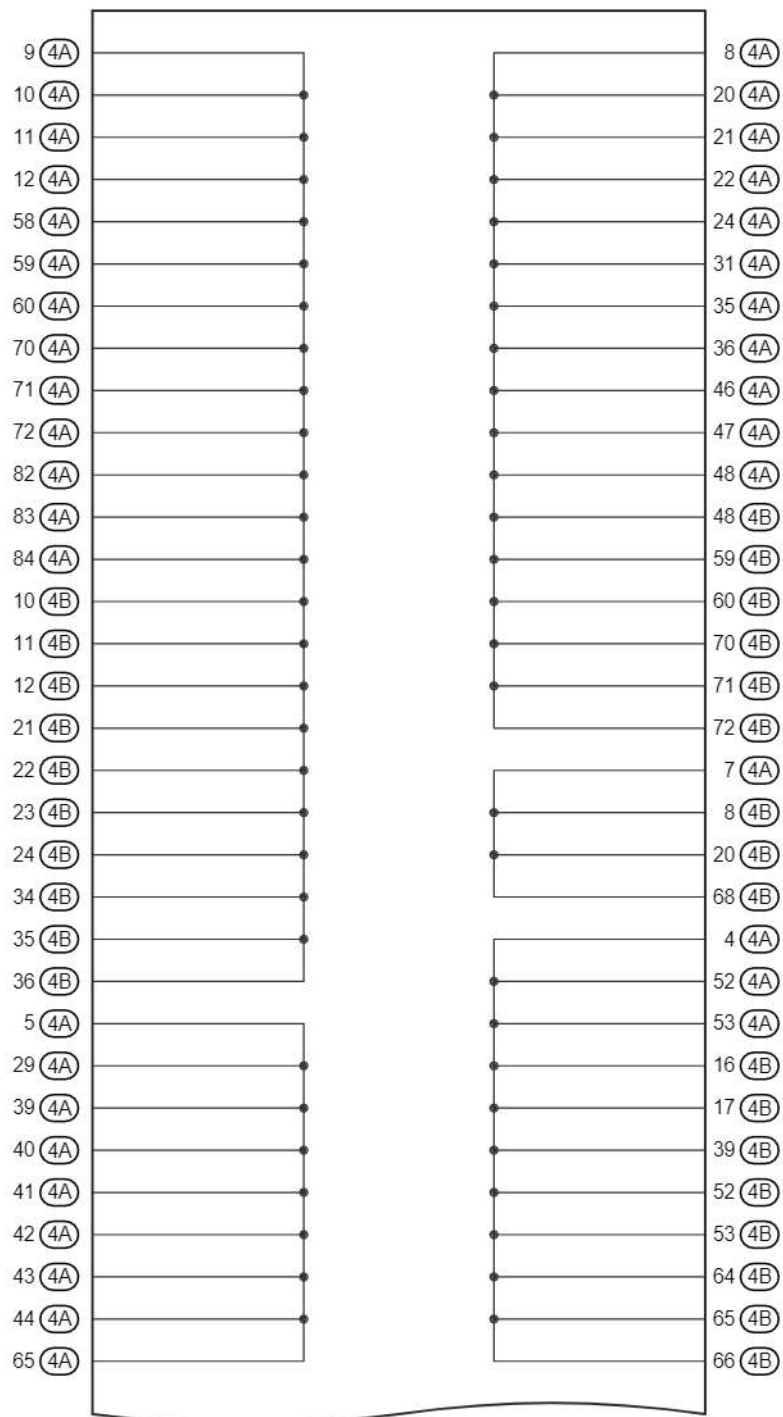

(Cont. Next Page)

(Cont'd)

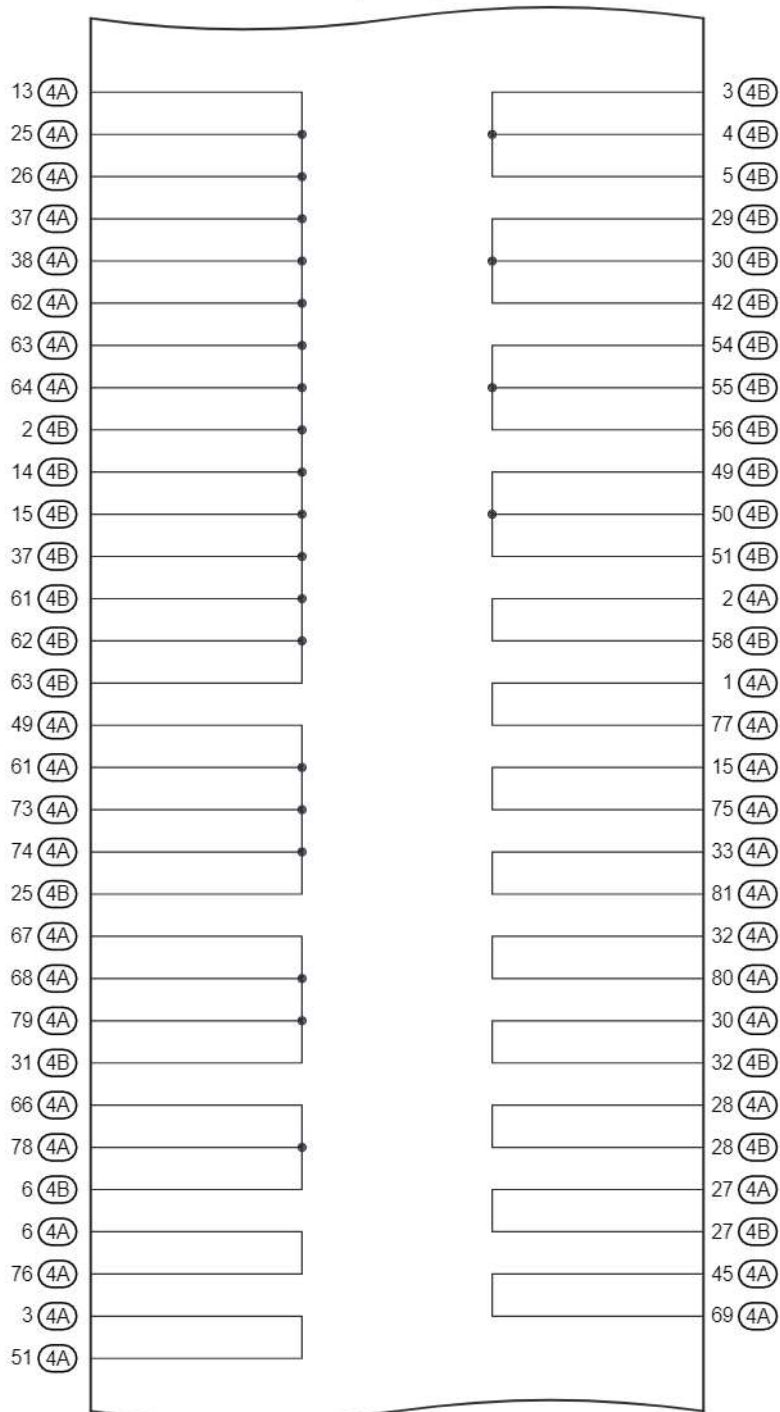


(Cont. Next Page)

F RELAY LOCATIONS


[J/B No.4 Inner Circuit]
(LHD)

(Cont'd)

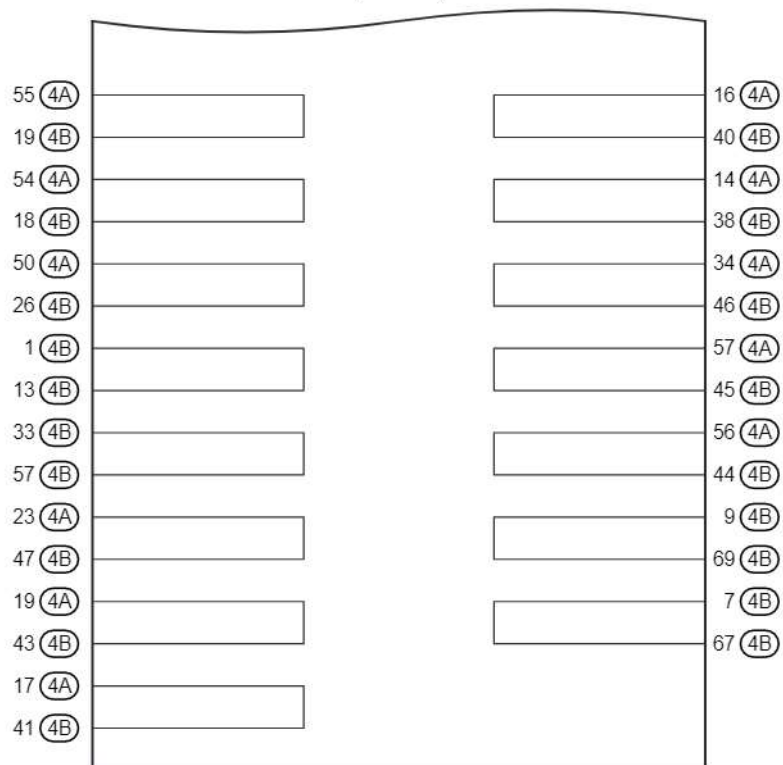


F RELAY LOCATIONS

[J/B No.4 Inner Circuit]
(RHD Except Australia)

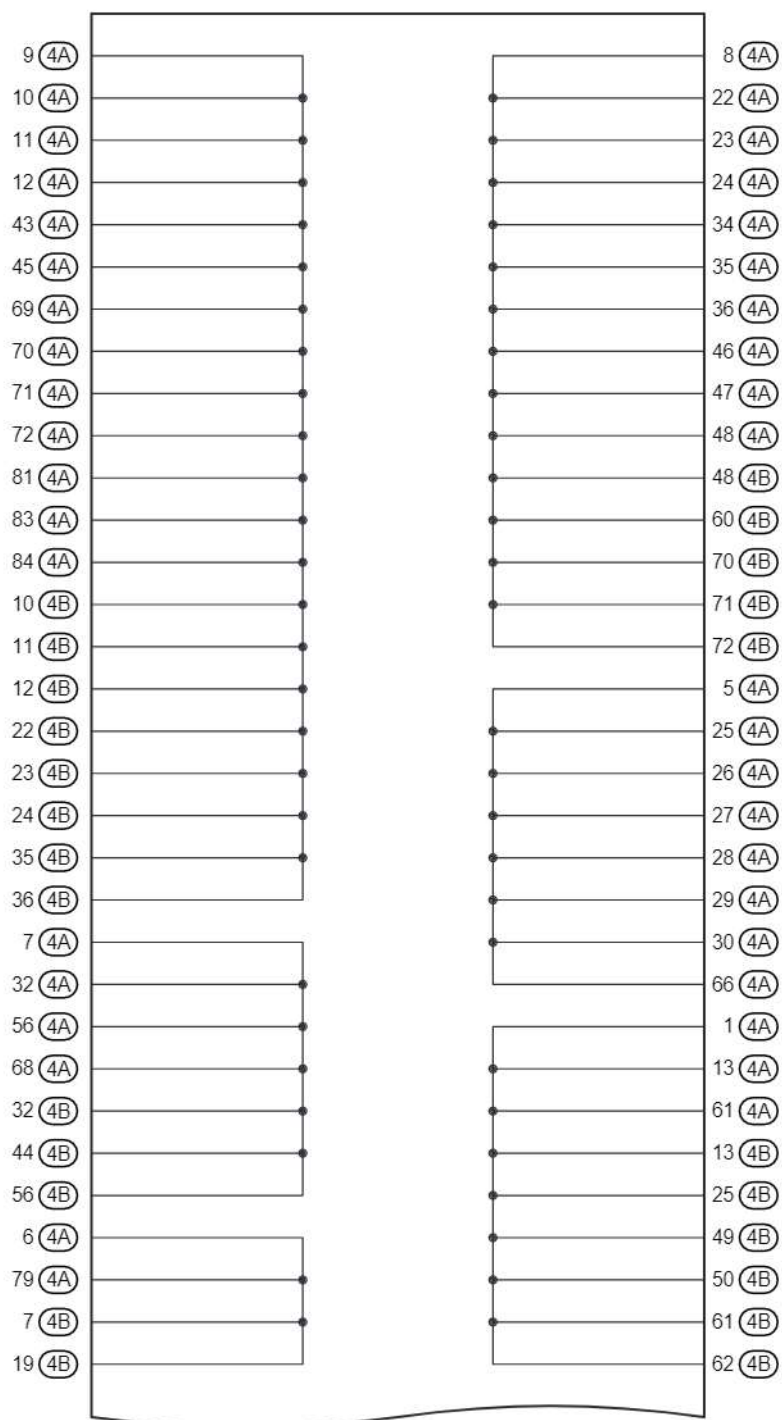

(Cont. Next Page)


(Cont'd)

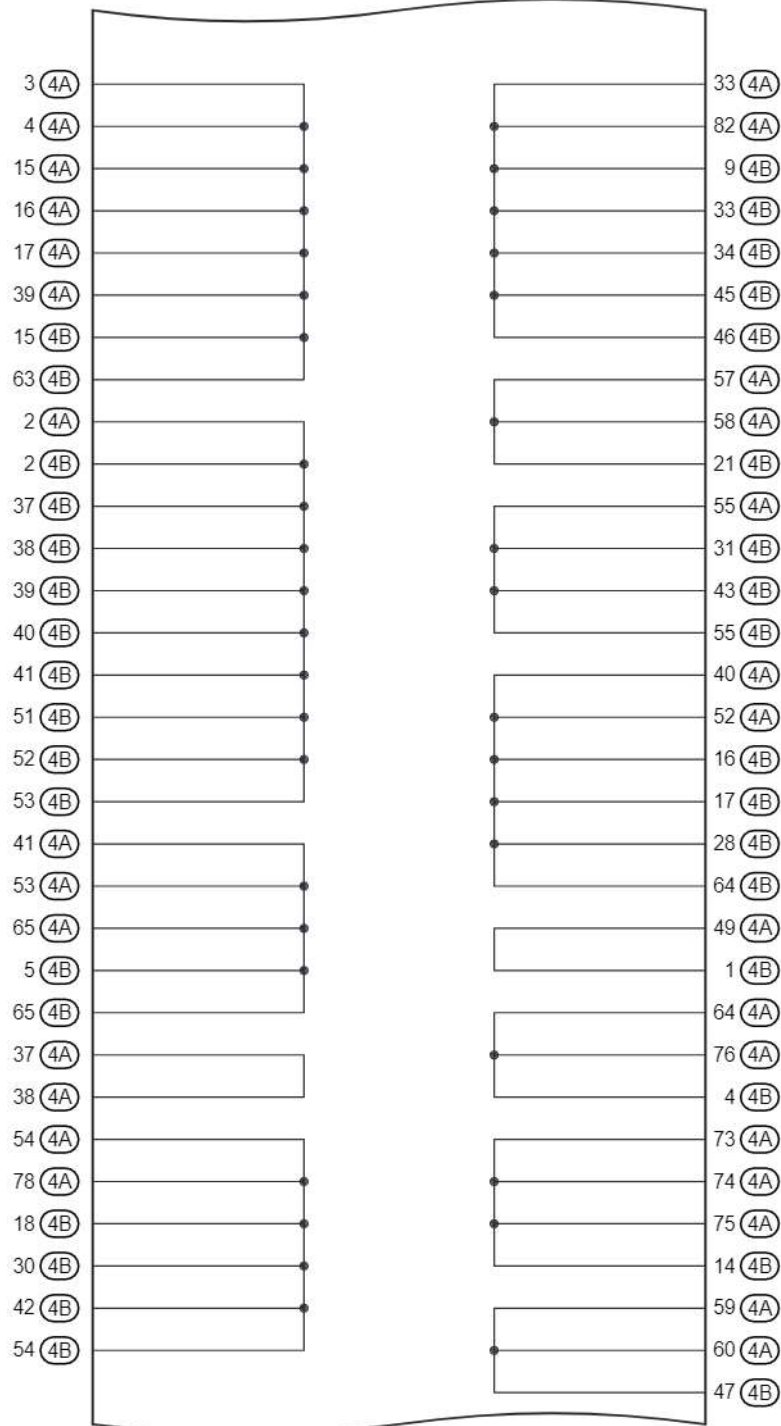

(Cont. Next Page)


F RELAY LOCATIONS

[J/B No.4 Inner Circuit]
(RHD Except Australia)

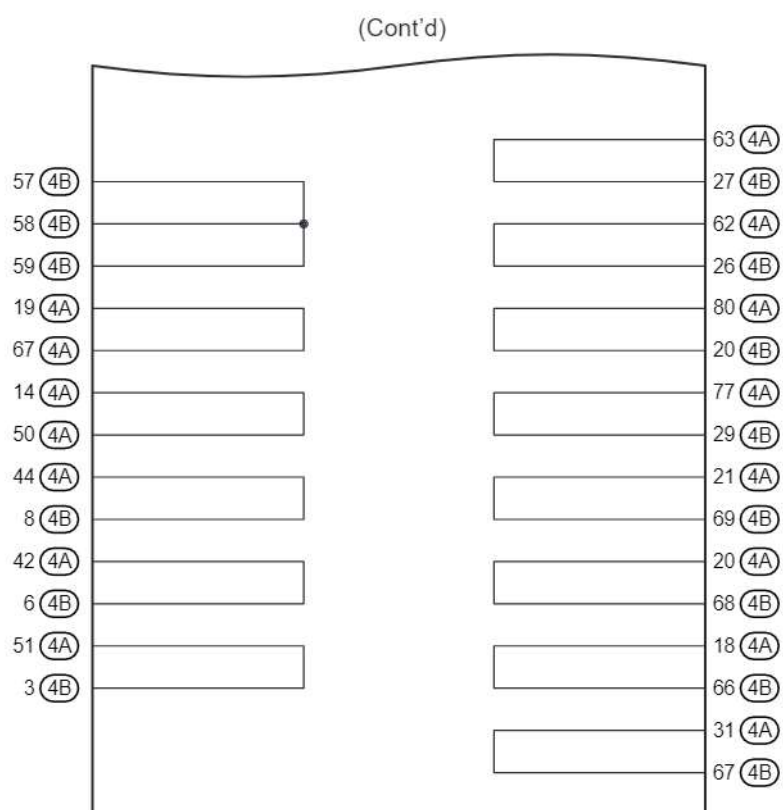

F RELAY LOCATIONS

[J/B No.4 Inner Circuit]
(Australia)

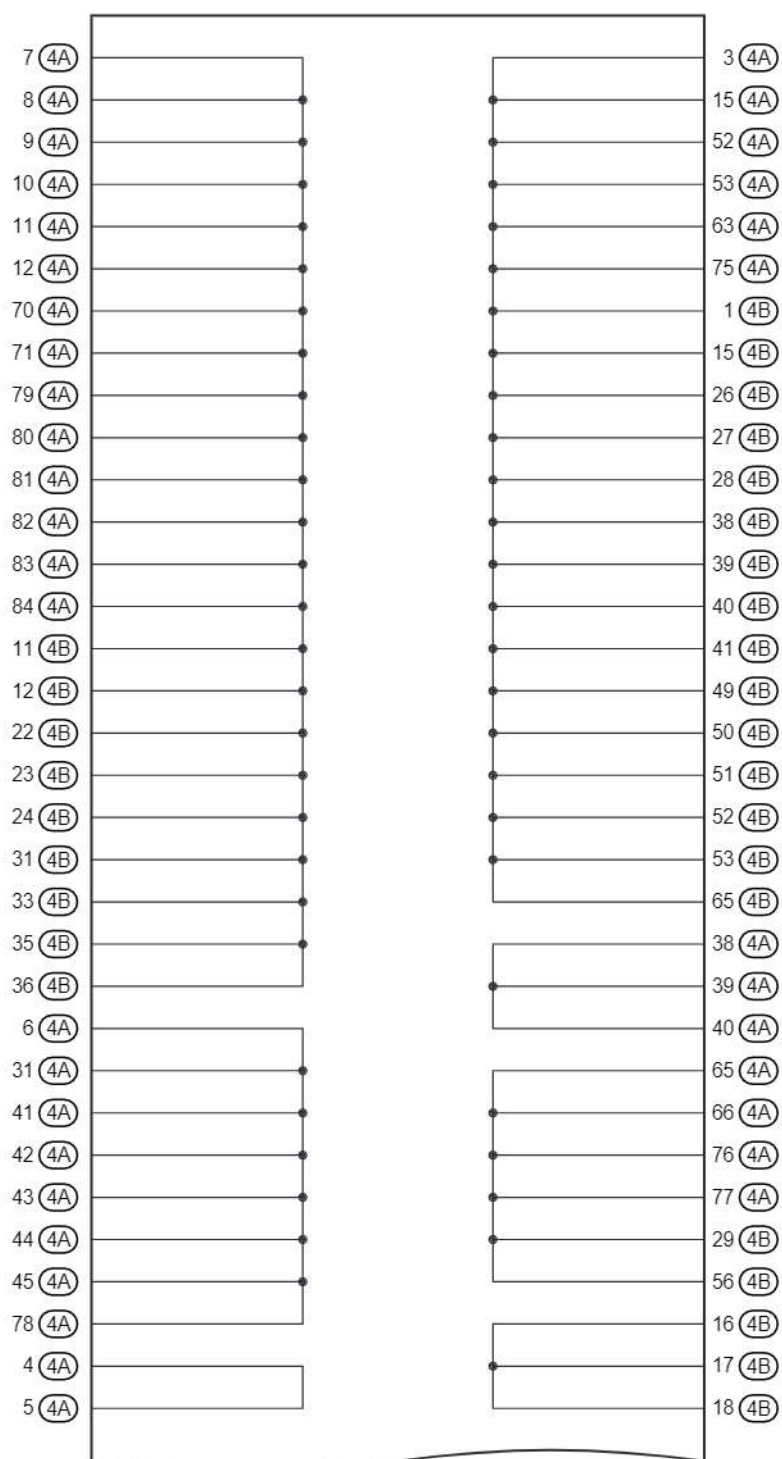

(Cont. Next Page)


(Cont'd)

22 (4A)			24 (4A)
46 (4A)			57 (4B)
47 (4A)			23 (4A)
48 (4A)			4 (4B)
56 (4A)			21 (4A)
57 (4A)			21 (4B)
58 (4A)			20 (4A)
59 (4A)			32 (4A)
60 (4A)			19 (4A)
67 (4A)			55 (4B)
68 (4A)			18 (4A)
69 (4A)			30 (4A)
72 (4A)			17 (4A)
42 (4B)			54 (4B)
43 (4B)			16 (4A)
44 (4B)			64 (4B)
47 (4B)			14 (4A)
48 (4B)			14 (4B)
59 (4B)			13 (4A)
60 (4B)			25 (4A)
37 (4A)			33 (4A)
49 (4A)			69 (4B)
61 (4A)			29 (4A)
62 (4A)			5 (4B)
13 (4B)			28 (4A)
25 (4B)			64 (4A)
37 (4B)			26 (4A)
61 (4B)			62 (4B)
1 (4A)			55 (4A)
2 (4A)			7 (4B)
73 (4A)			51 (4A)
74 (4A)			3 (4B)

(Cont. Next Page)


F RELAY LOCATIONS

[J/B No.4 Inner Circuit]
(Australia)

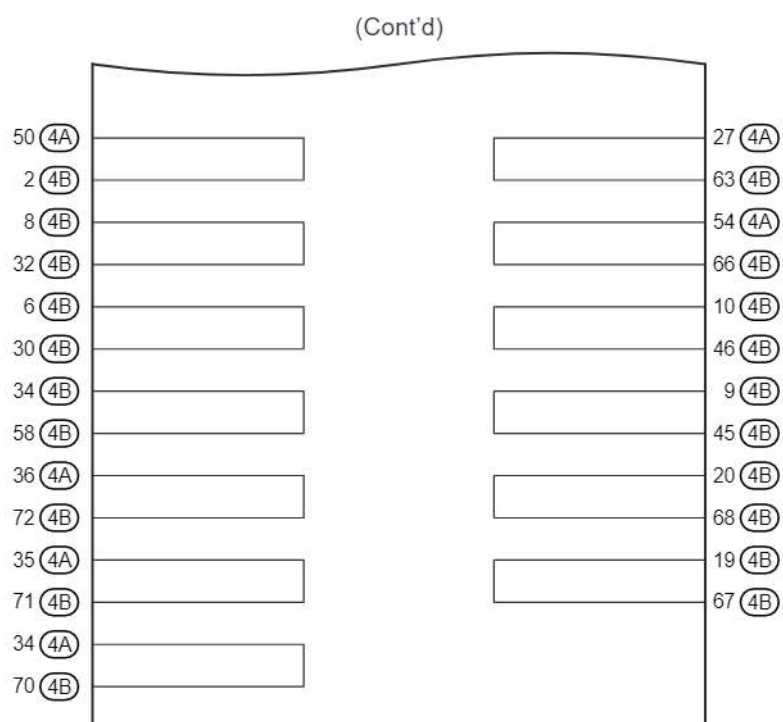


⑤ : R/B No.5

Cowl Side Left (See Page 21)

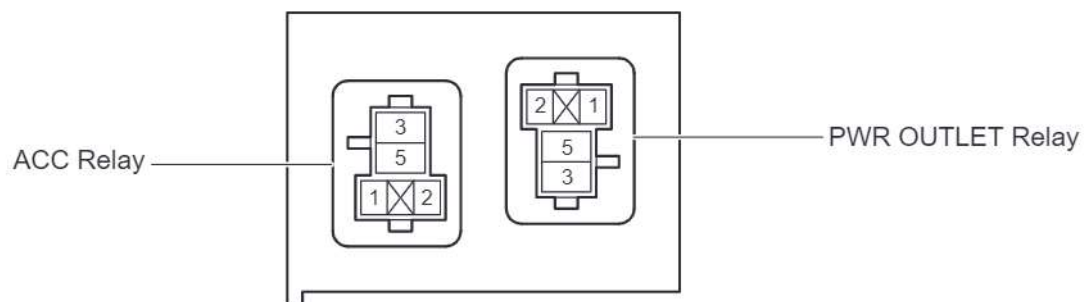


⑥ : R/B No.6

Cowl Side Left (See Page 21)

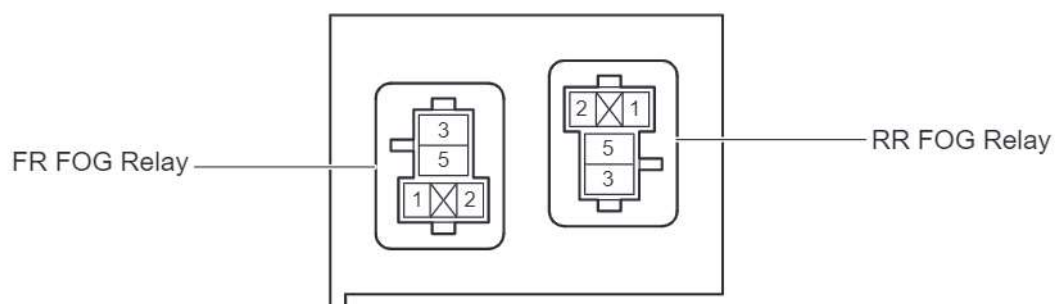


⑤ : R/B No.5

Cowl Side Left (See Page 21)

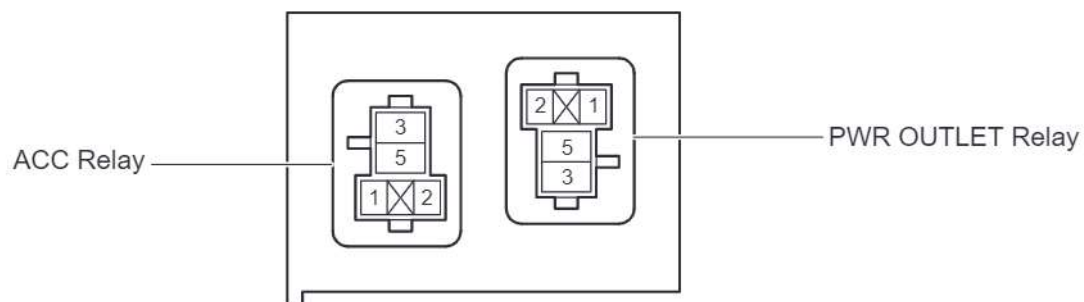

⑥ : R/B No.6

Cowl Side Left (See Page 21)

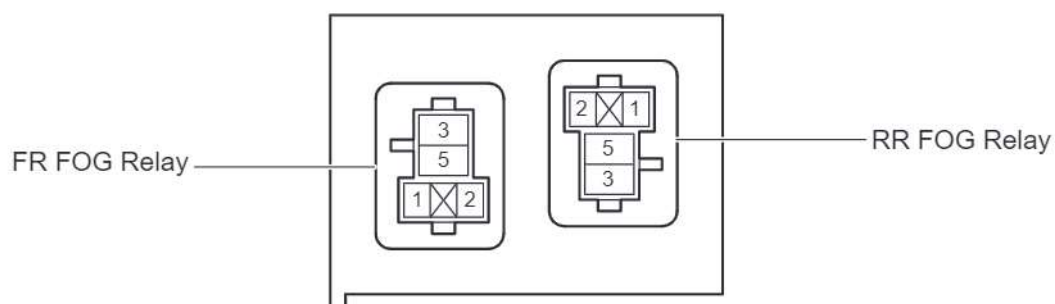


F RELAY LOCATIONS

⑦ : R/B No.7

Cowl Side Left (See Page 21)


- *1:LHD Gasoline, LHD Before Dec. 2008 Production Diesel w/ Entry & Start System,
From Dec. 2008 Production Diesel
*2:LHD Before Dec. 2008 Production Diesel w/o Entry & Start System

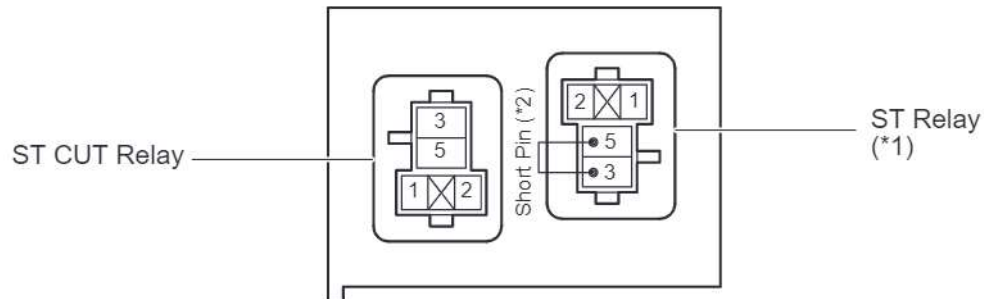

⑧ : R/B No.8

Cowl Side Left (See Page 21)

- *1:RHD Gasoline, RHD Before Dec. 2008 Production Diesel w/ Entry & Start System,
From Dec. 2008 Production Diesel
*2:RHD Before Dec. 2008 Production Diesel w/o Entry & Start System

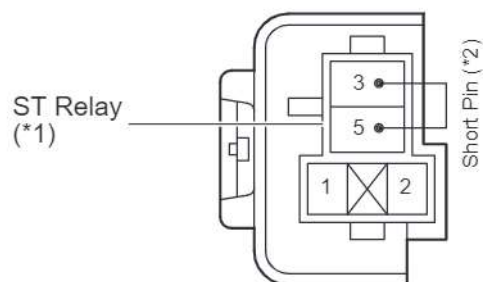


F RELAY LOCATIONS

⑦ : R/B No.7

Cowl Side Left (See Page 21)


- *1:LHD Gasoline, LHD Before Dec. 2008 Production Diesel w/ Entry & Start System,
From Dec. 2008 Production Diesel
*2:LHD Before Dec. 2008 Production Diesel w/o Entry & Start System

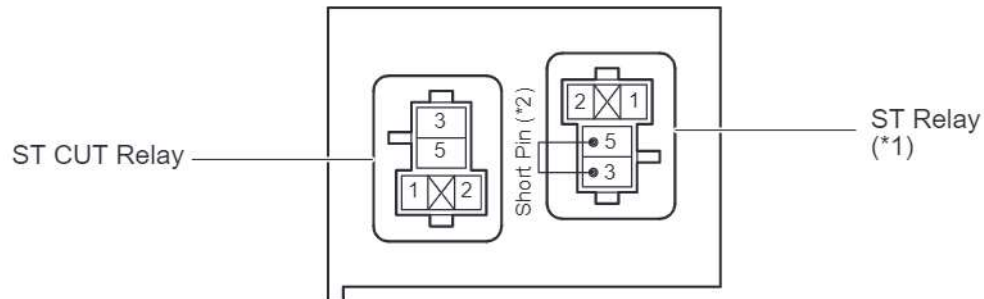

⑧ : R/B No.8

Cowl Side Left (See Page 21)

- *1:RHD Gasoline, RHD Before Dec. 2008 Production Diesel w/ Entry & Start System,
From Dec. 2008 Production Diesel
*2:RHD Before Dec. 2008 Production Diesel w/o Entry & Start System

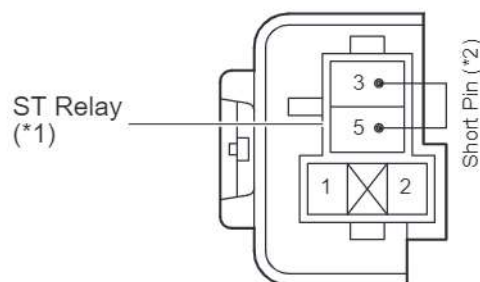

⑨ : R/B No.9

Cowl Side Left (See Page 21)

