

GROUP 70

COMPONENT
LOCATIONS


CONTENTS

RELAY	70-2	FUSIBLE LINK, FUSE AND IOD OR STORAGE CONNECTOR	70-13
CONTROL UNIT.....	70-3	INSPECTION TERMINAL.....	70-15
SENSOR.....	70-6	GROUNDING CABLE.....	70-16
SOLENOID AND SOLENOID VALVE	70-11	GROUNDING	70-17


RELAY

M1701000402514


Name	Symbol	Name	Symbol
A/C compressor relay	A	IG1 relay <Vehicles with KOS>	C
ACC relay <Vehicles with KOS>	C	IG2 relay <Vehicles with KOS>	C
Blower relay	D	MFI relay	A
Cooling fan control relay (High)	A	Power window relay	A
Cooling fan control relay (Low)	A	PTC heater relay 1	B
Fog light relay	A	PTC heater relay 2	B
Fuel pump relay	D	PTC heater relay 3	B
Headlight relay (High)	A	Rear window defogger relay	D
Headlight relay (Low)	A	Starter relay	A
Heated seat relay	D	Throttle actuator control motor relay	A
Horn relay	A		

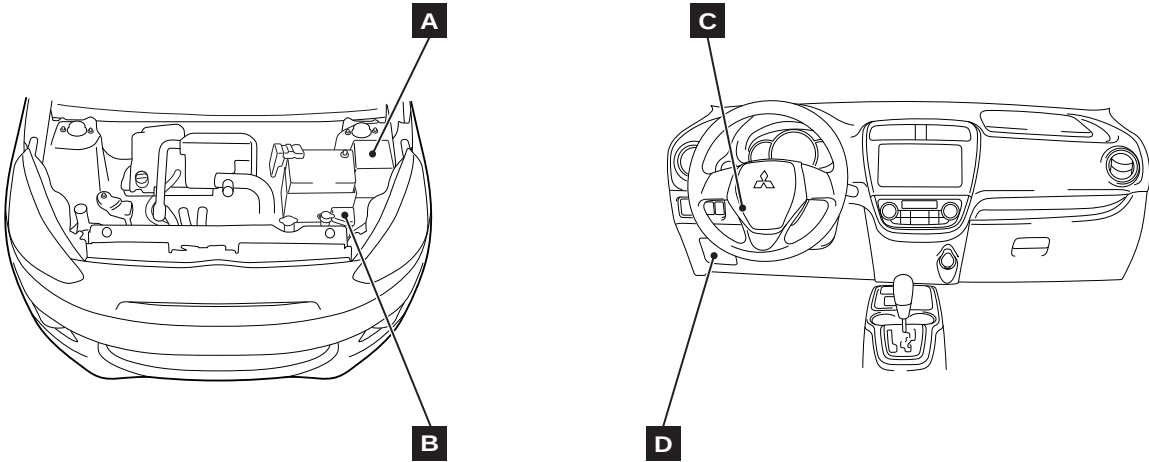




ACC06698AB

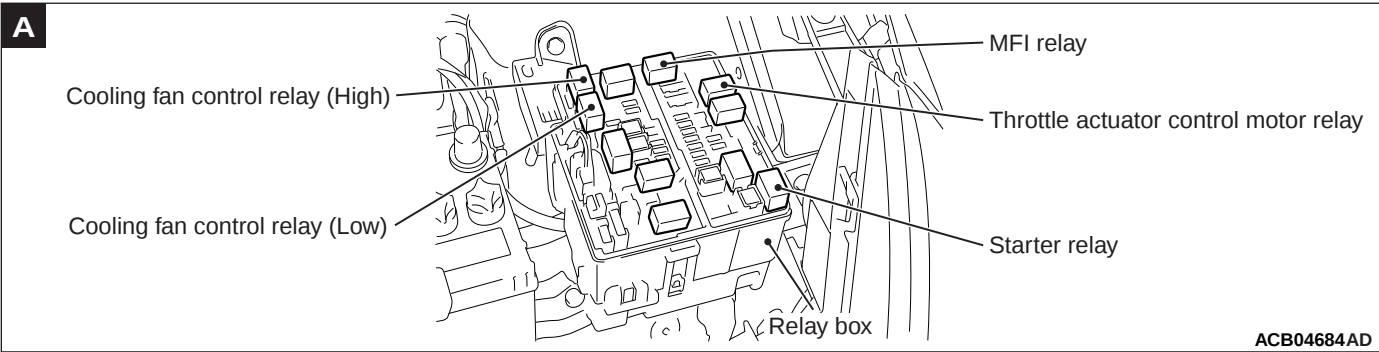

ACB04684AD

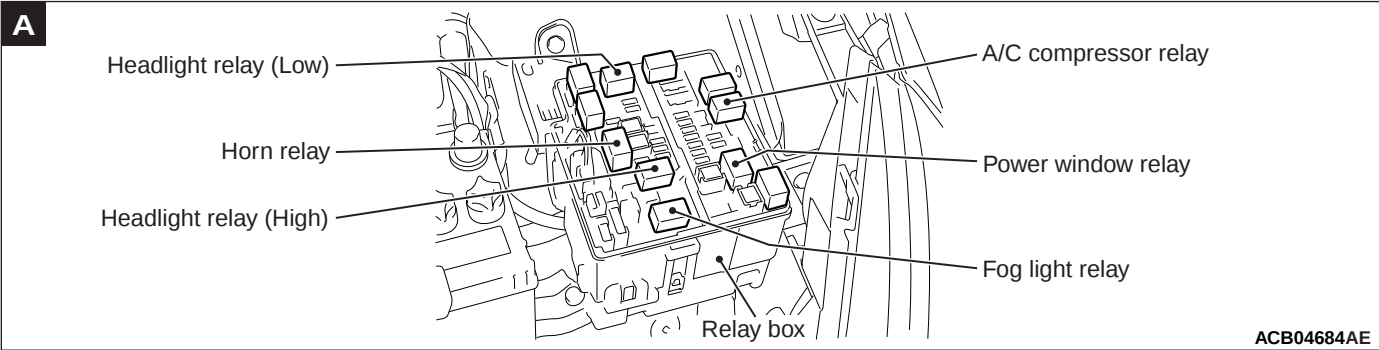



ACB04684AE

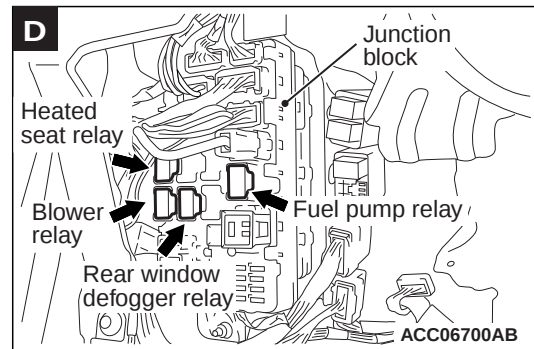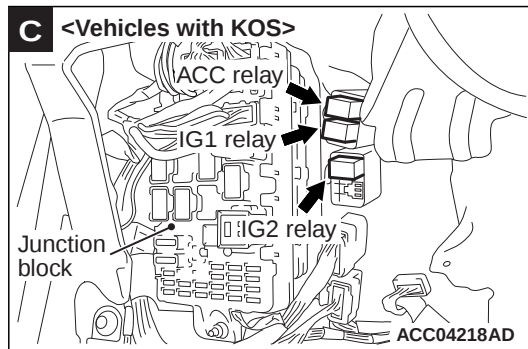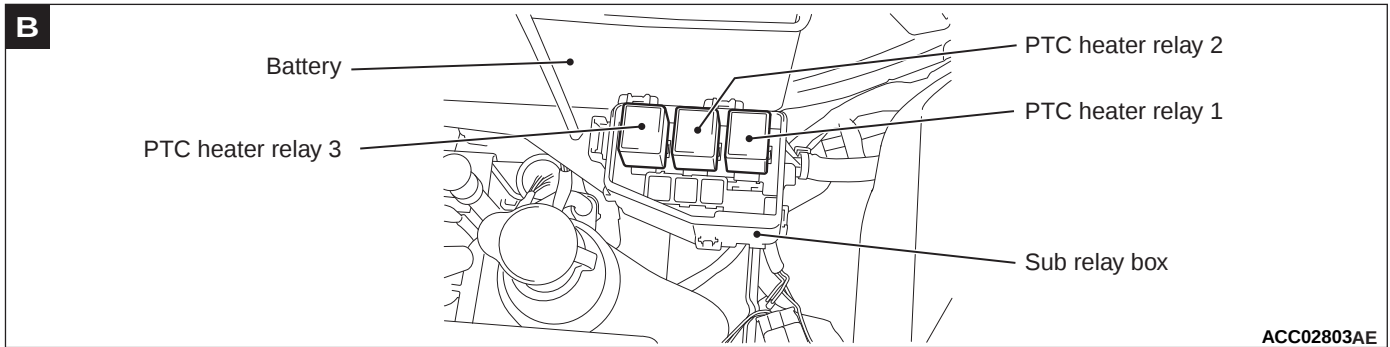


CONTROL UNIT

M1701000701288


Name	Symbol	Name	Symbol
ASC-ECU	A	ETACS-ECU	G
Auto A/C controller assembly (A/C-ECU)	E	Hands free module	D
Column switch (incorporating column-ECU)	B	KOS and OSS-ECU	F
Combination meter (incorporating CPU)	C	Occupant classification-ECU	L
Transaxle control module <CVT>	H	PTC heater control unit	K
Engine control module	H	Power window main switch (incorporating CPU) <Vehicles with safety system>	M
Electric power steering-ECU	I	SRS-ECU	J

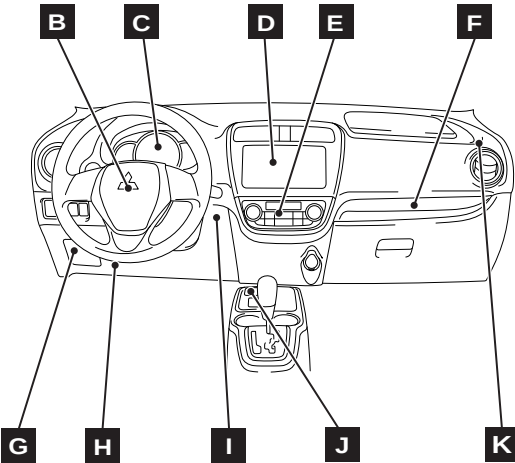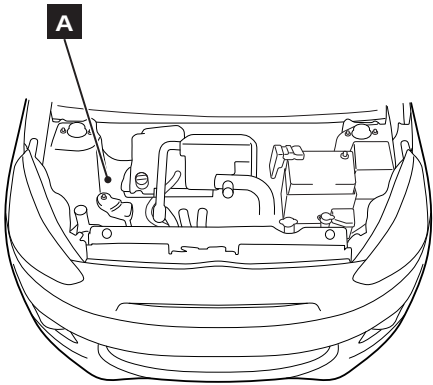


ACC06698AC

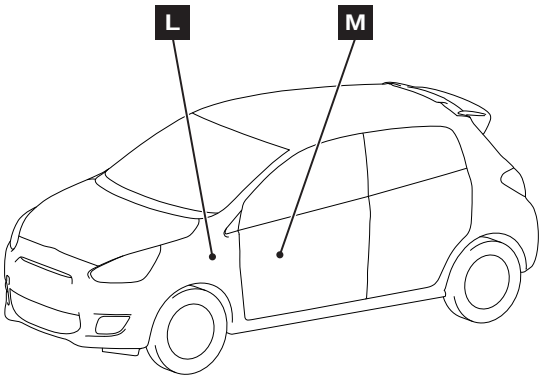


ACB05565AH

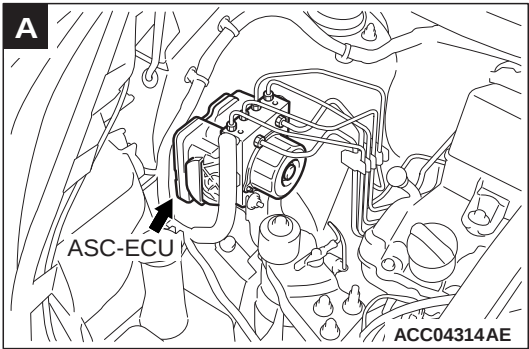


ACC04314AE

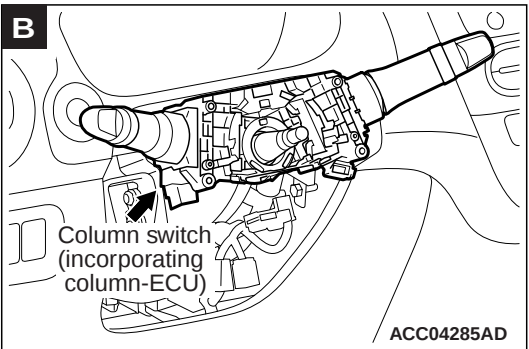









ACC04285AD

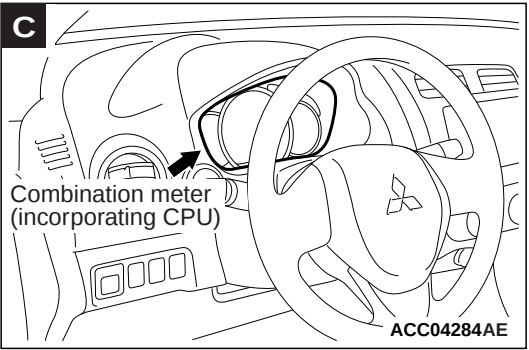


ACC04284AE

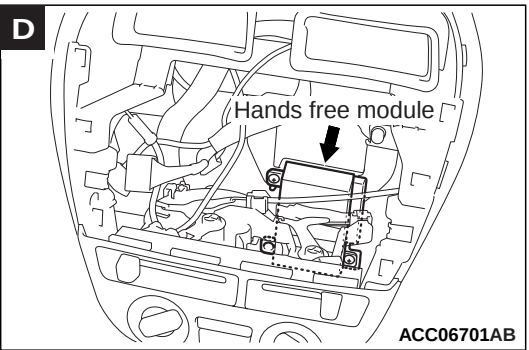

ACC06701AB

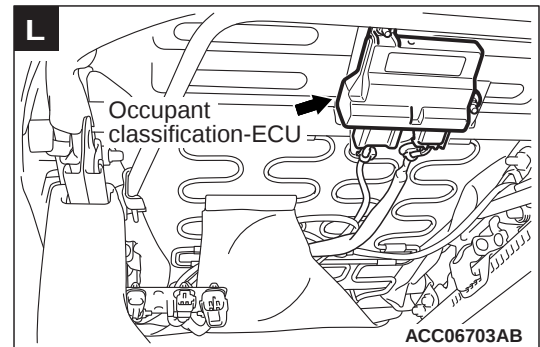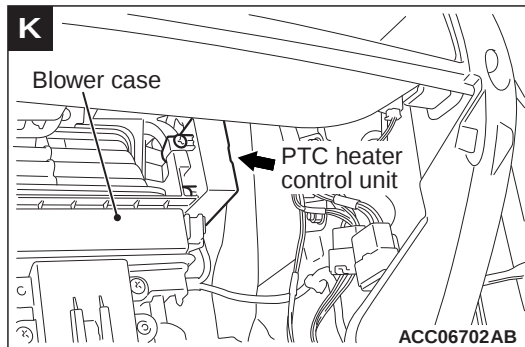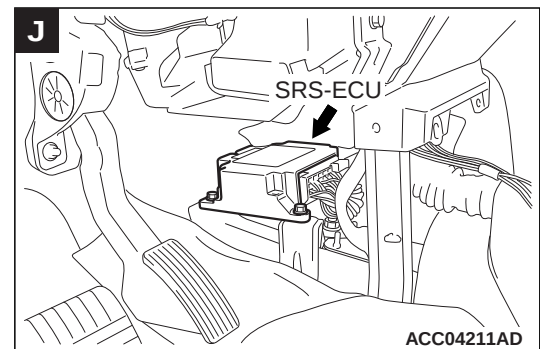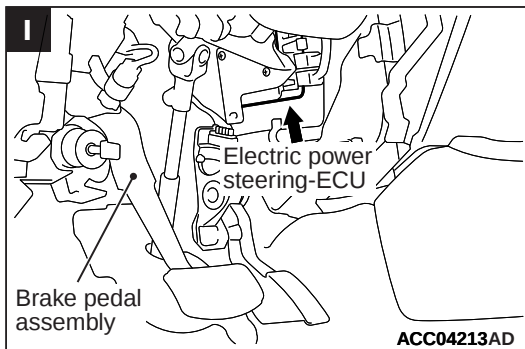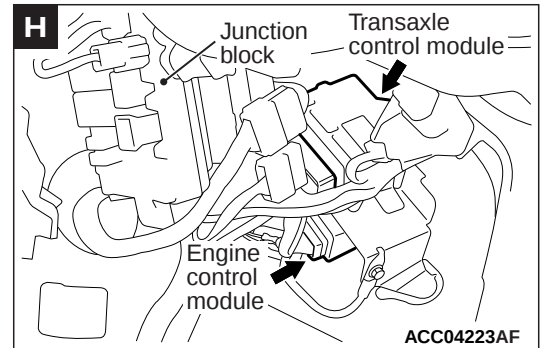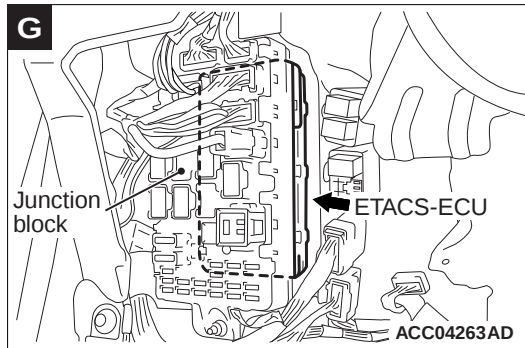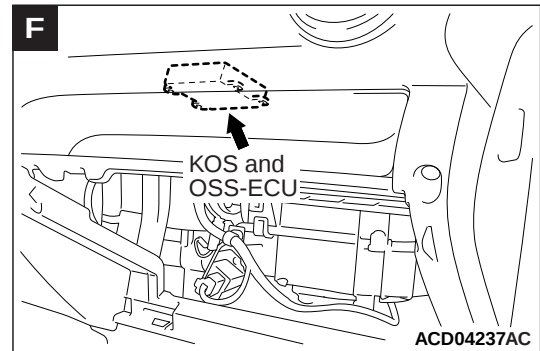
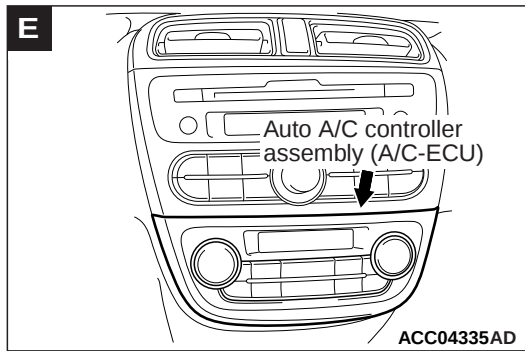


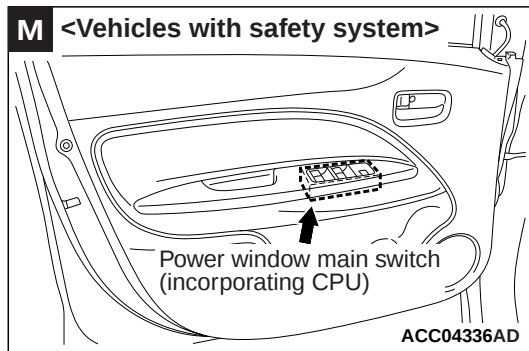



SENSOR

M1701000603793

Name	Symbol	Name	Symbol
A/C pressure sensor	H	Interior temperature sensor (integrated in auto A/C controller assembly (A/C-ECU))	Q
Accelerator pedal position sensor	P	Knock sensor	J
Ambient temperature sensor	L	Linear air-fuel ratio sensor	D
Brake vacuum sensor	F	Manifold absolute pressure sensor	B
Camshaft position sensor	B	Mass airflow sensor	C
Crankshaft position sensor	I	Occupant classification sensor	V
CVT assembly (incorporating CVT fluid temperature sensor and secondary pressure sensor)	S	Output speed sensor <CVT>	T
Engine coolant temperature sensor	E	Primary speed sensor <CVT>	N
Fin thermo sensor	R	Rear wheel speed sensor	a
Front impact sensor	M	Secondary speed sensor <CVT>	G
Front wheel speed sensor	X	Side impact sensor	Y
Fuel pump module (incorporating fuel level sensor and fuel tank temperature sensor)	Z	Steering wheel sensor	O
Fuel tank differential pressure sensor	Z	Throttle body assembly (incorporating throttle position sensor)	K
G and yaw rate sensor (integrated in ASC-ECU)	A	TPMS transmitter (incorporating tire pressure sensor)	W
Heated oxygen sensor (rear)	U		


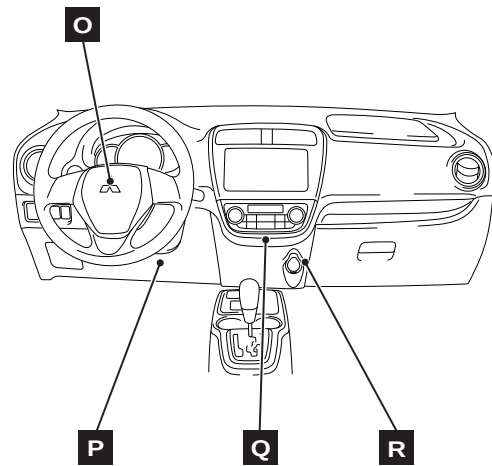
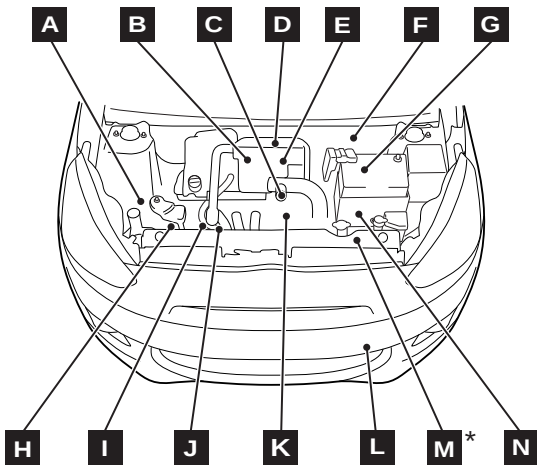




ACC06698AD

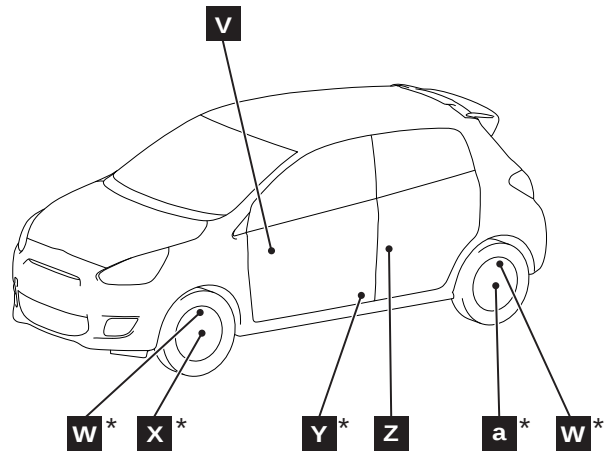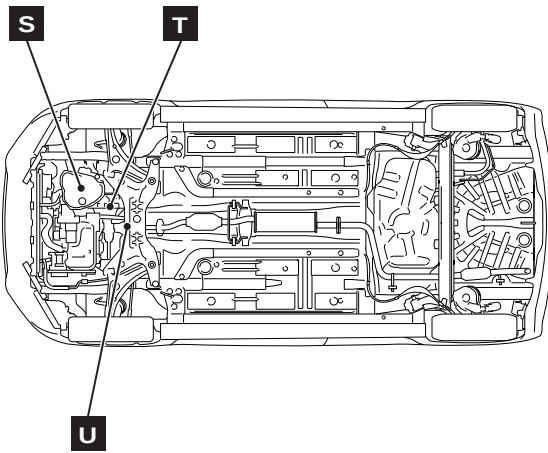


ACB05646AF

NOTE: *:also equipped at the right side.

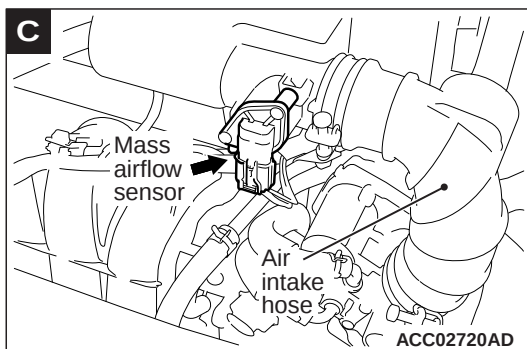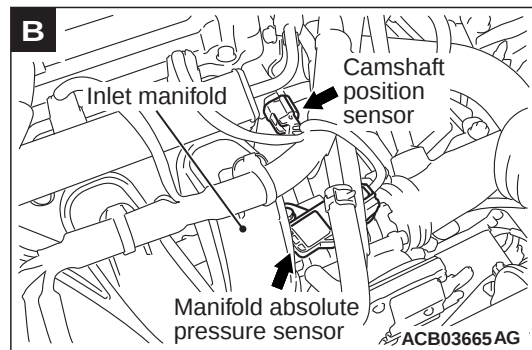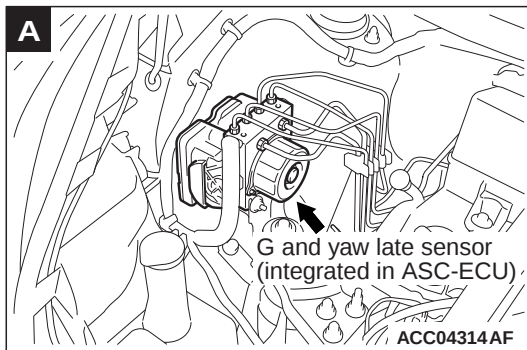


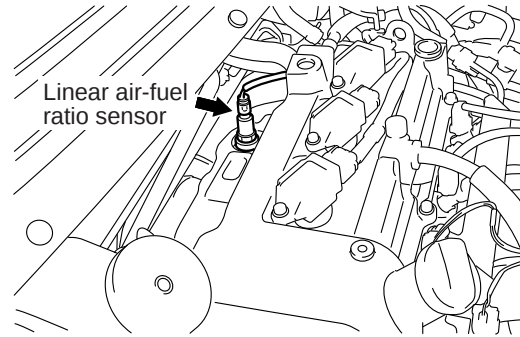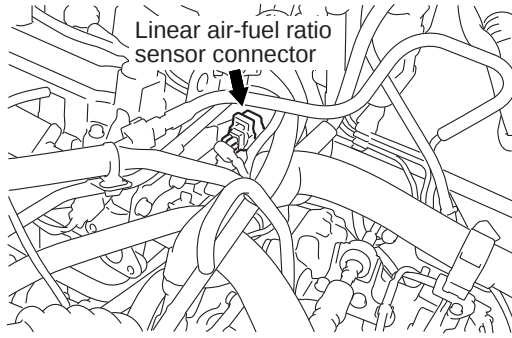D


ACC05840AC

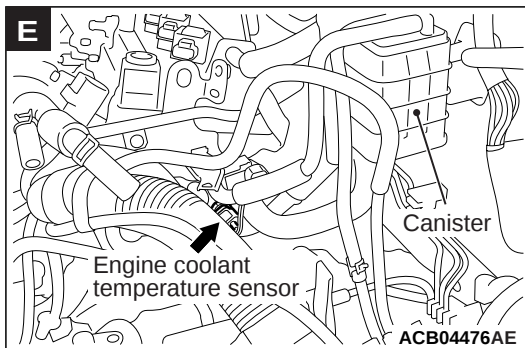E


ACB04476AE

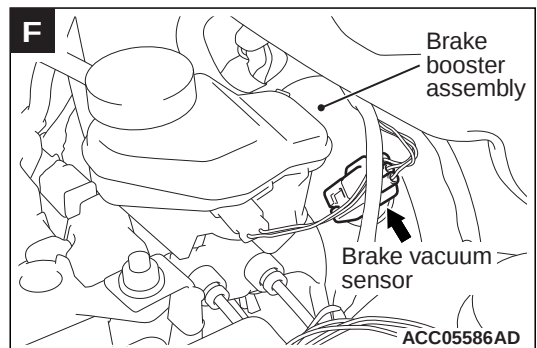F


ACC05586AD

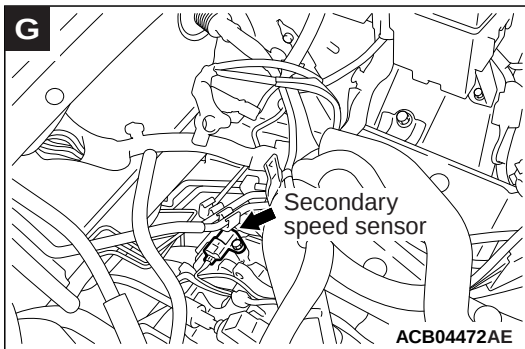G


ACB04472AE

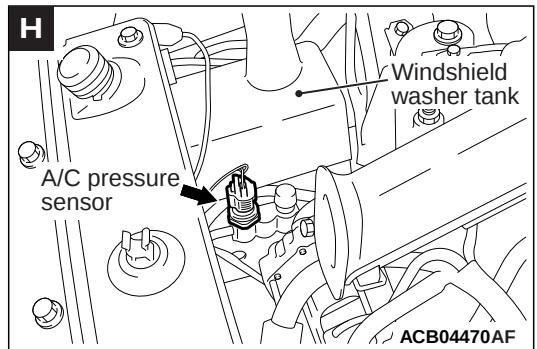H









ACB04470AF

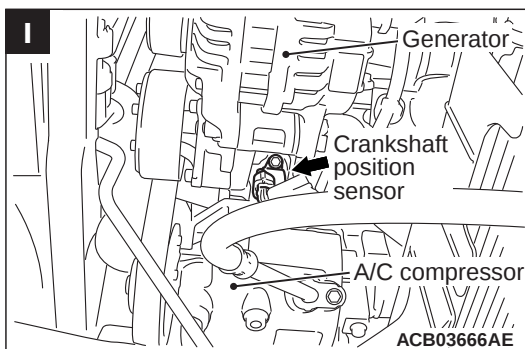
I

ACB03666AE

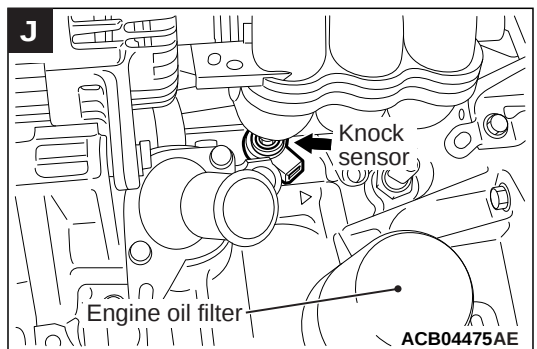J

ACB04475AE

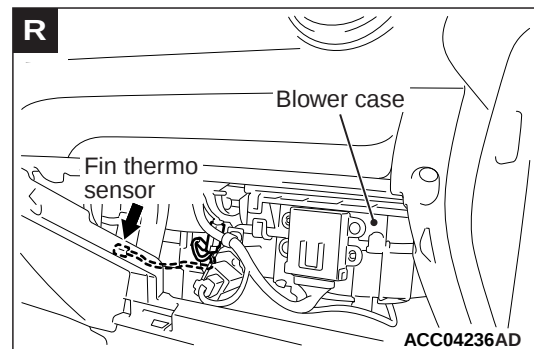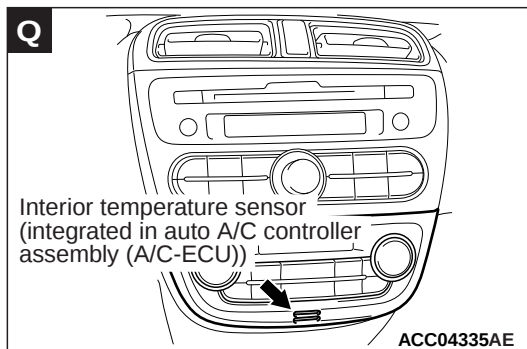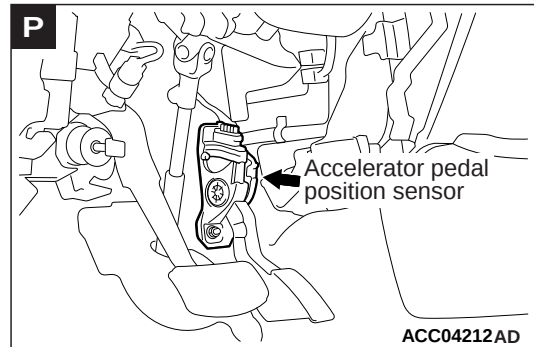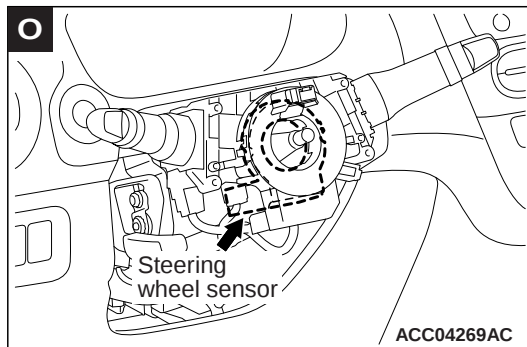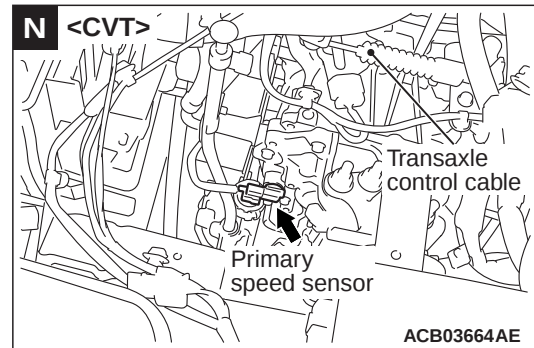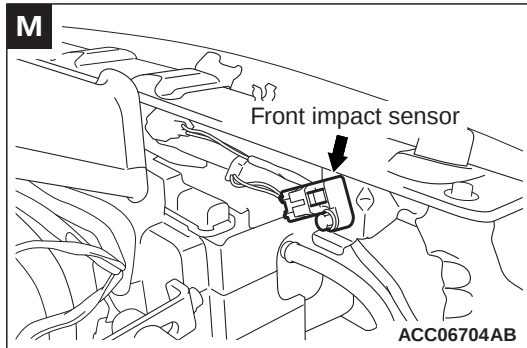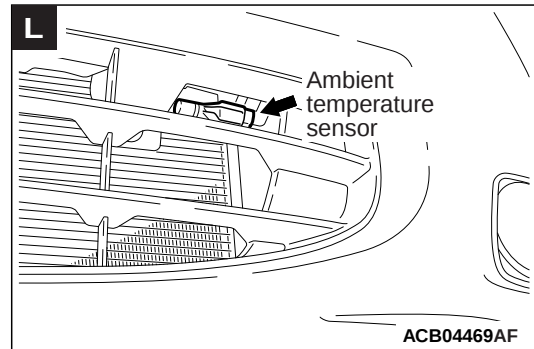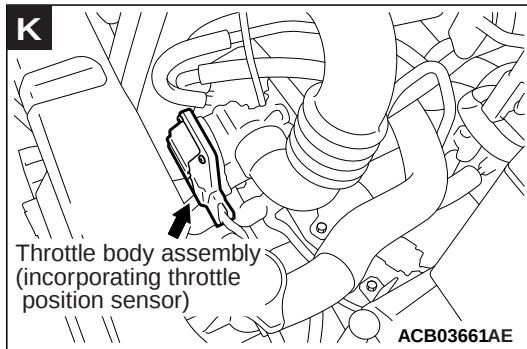


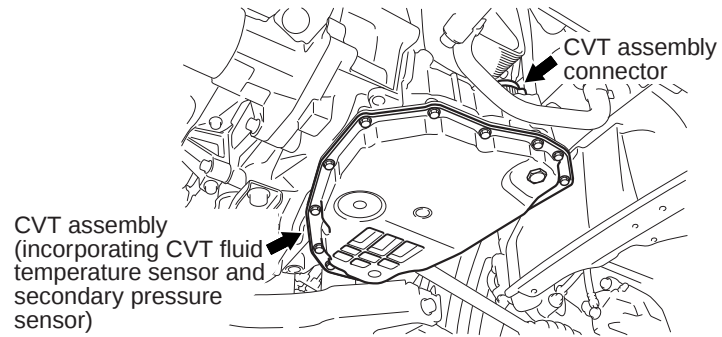S



ACB04687AG

T


<CVT>

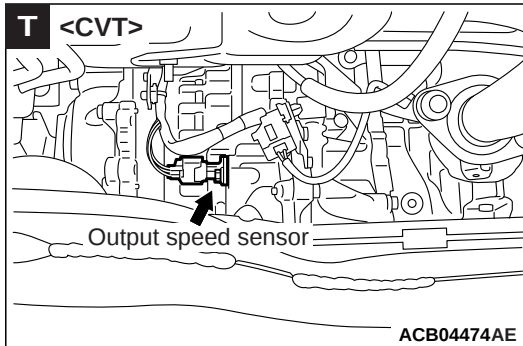


ACB04474AE

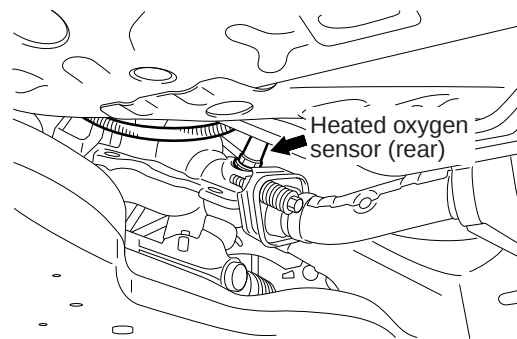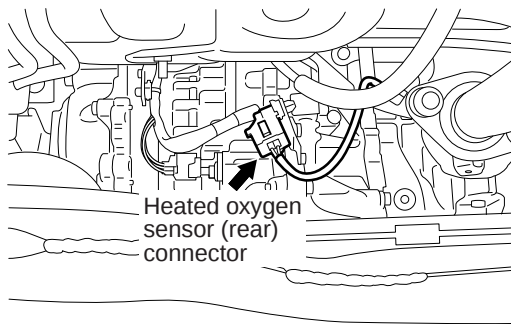U


ACC05842AC

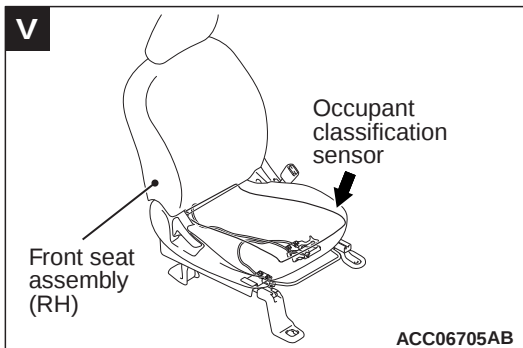V

ACC06705AB

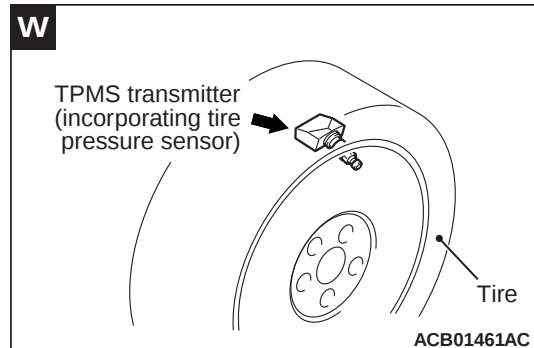W



ACB01461AC

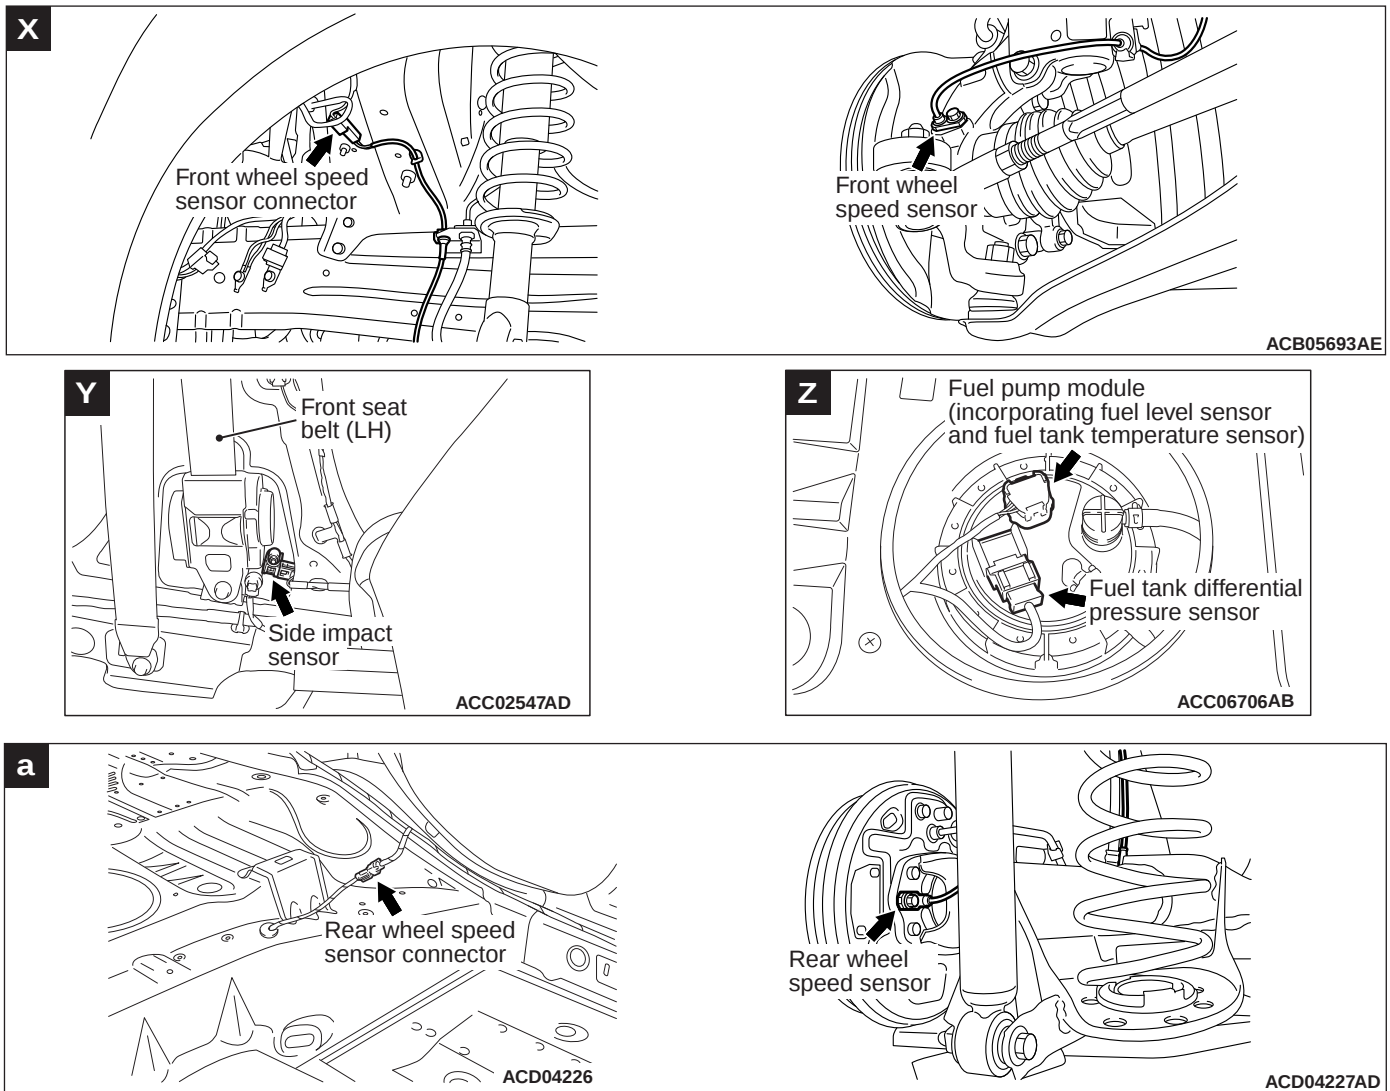


SOLENOID AND SOLENOID VALVE

M1701000802512




Name	Symbol	Name	Symbol
CVT assembly (incorporating CVT control solenoid valve)	D	Oil feeder control valve	C
Evaporative emission purge solenoid	B	Selector lever assembly (incorporating shift lock solenoid) <CVT>	F
Evaporative emission ventilation solenoid	G	Steering lock solenoid <Vehicles without KOS>	E
Hydraulic unit (incorporating solenoid valve)	A		



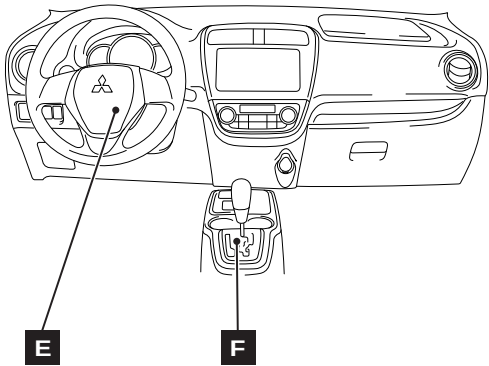
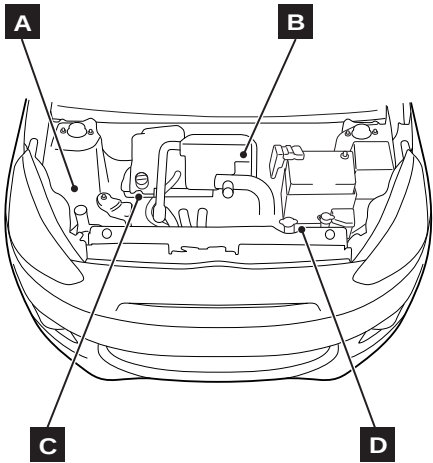


ACC06698AE

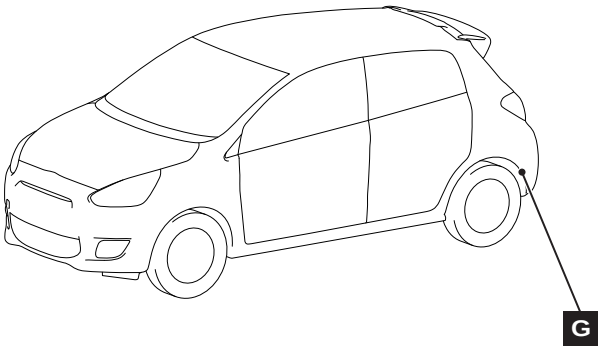

ACB05565AI

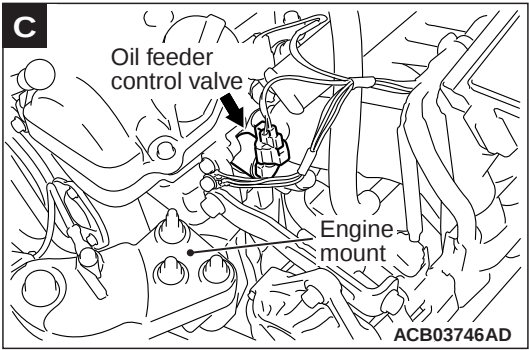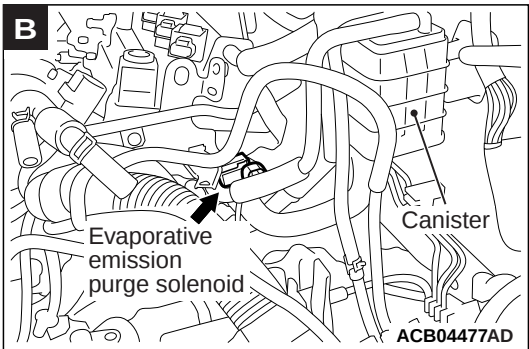
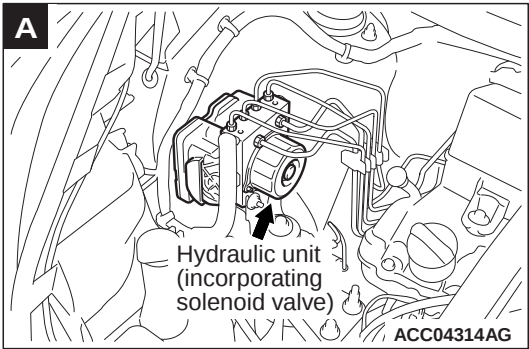


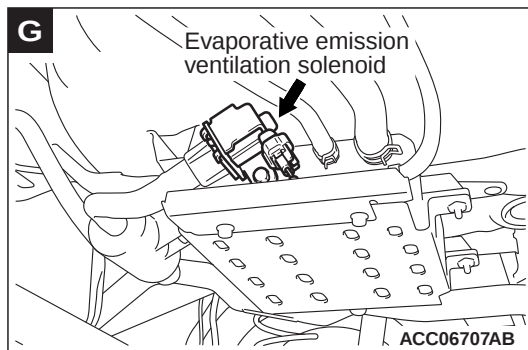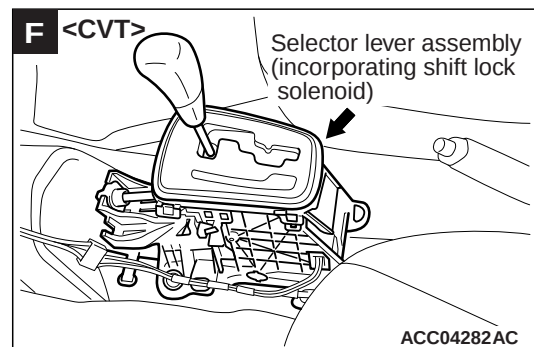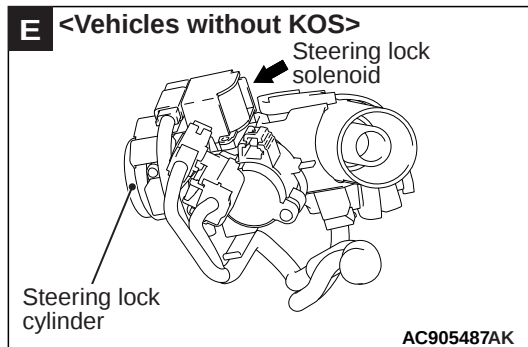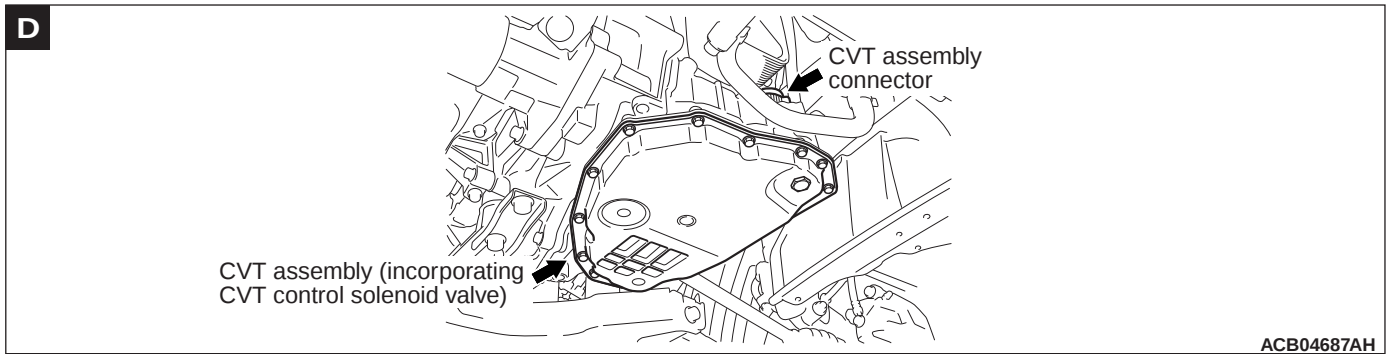






FUSIBLE LINK, FUSE AND IOD OR STORAGE CONNECTOR

M1701000101811

Name	Symbol	Name	Symbol
Fuse Nos. BF1, BF2 and F1 to F24 (Engine compartment)	B	Fusible link Nos. SBF1 to SBF4 (Engine compartment)	B
Fuse Nos.1 to 26 (Passenger compartment)	D	Fusible link Nos. SBF5 to SBF7 (Engine compartment)	C
Fusible link Nos.1 to 7 (Engine compartment)	A	IOD or storage connector (Passenger compartment)	D

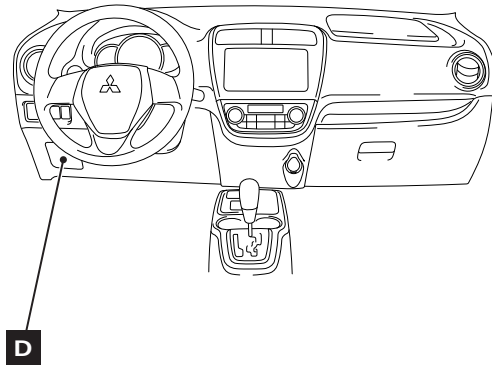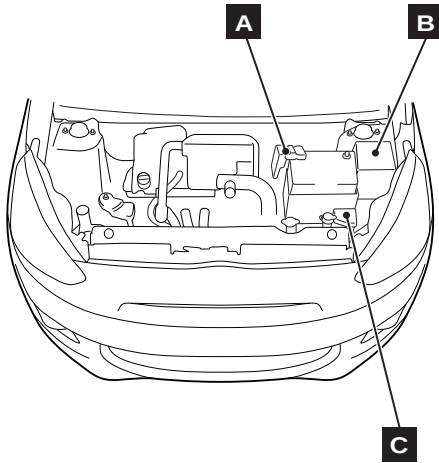



ACC06698AF

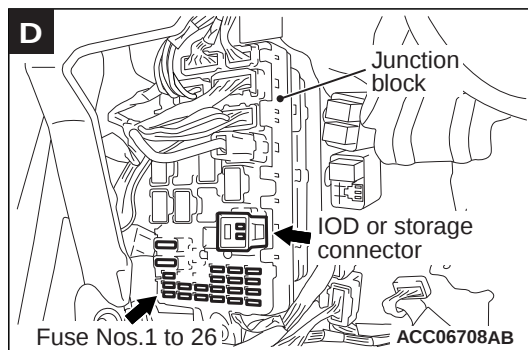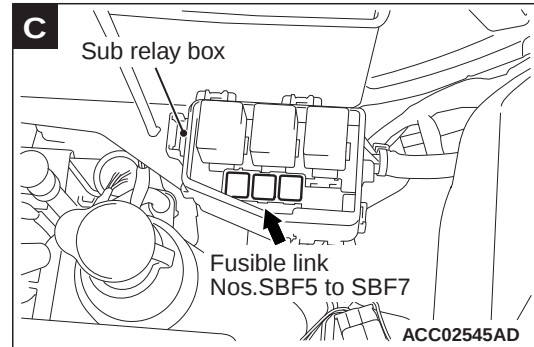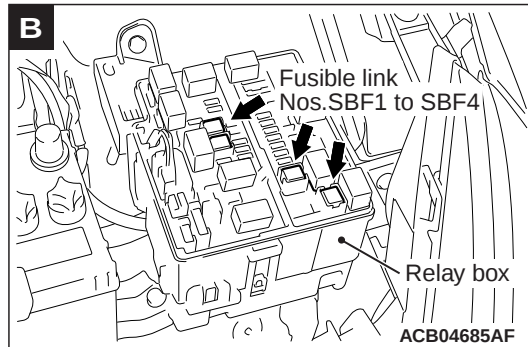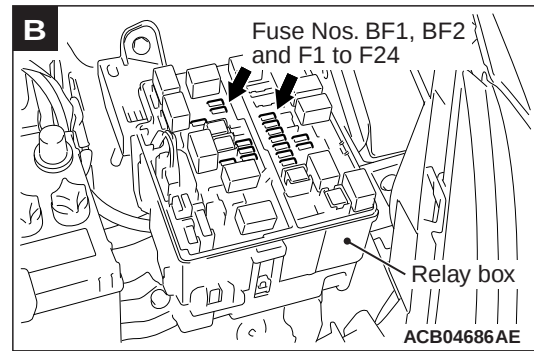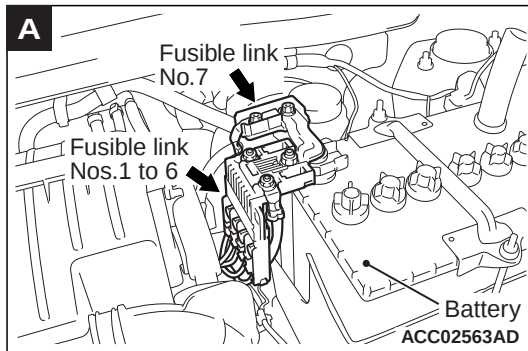





INSPECTION TERMINAL


M1701000201313

Name	Symbol	Name	Symbol
Data link connector	E	Spare connector (for audio)	D
Spare connector	B	Spare connector <Vehicles with KOS>	A
Spare connector	C		

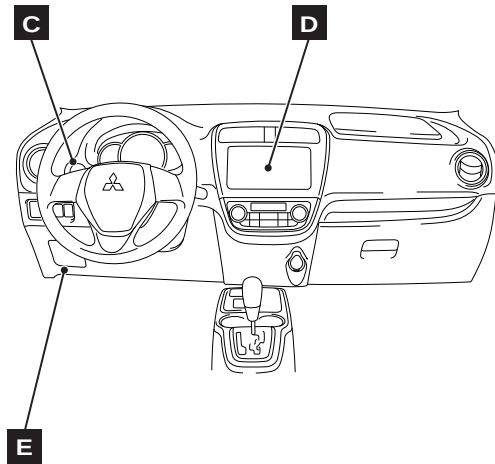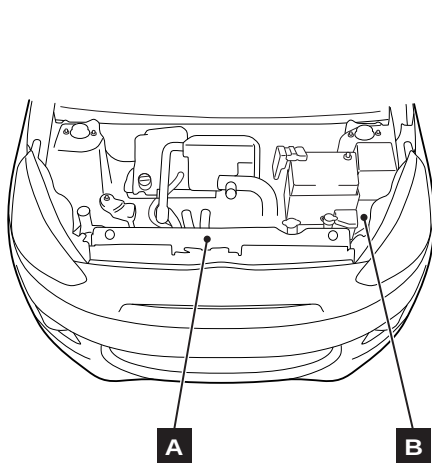


ACC06698AG

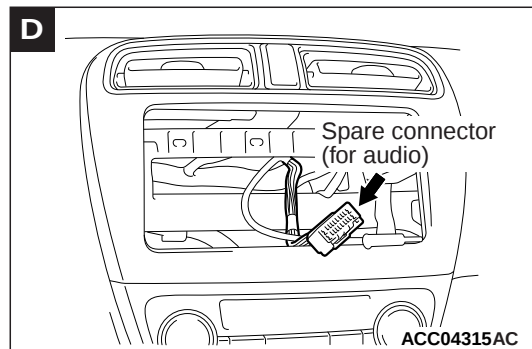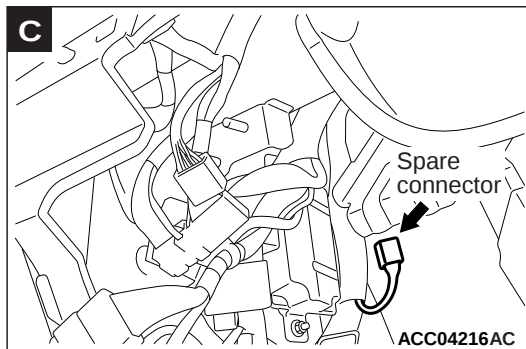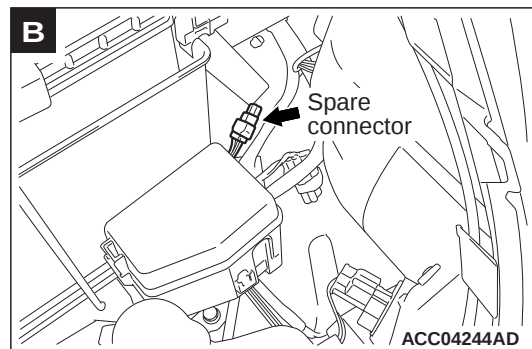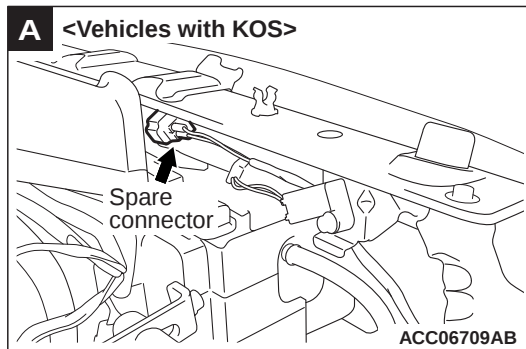

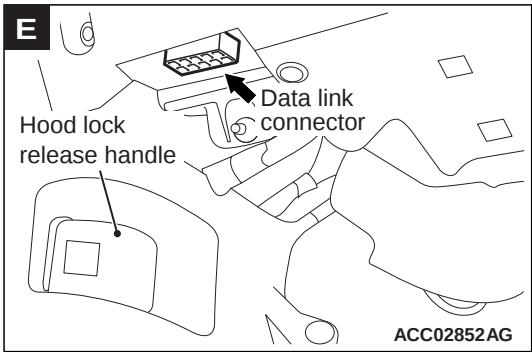


GROUNDING CABLE

M1701001001646

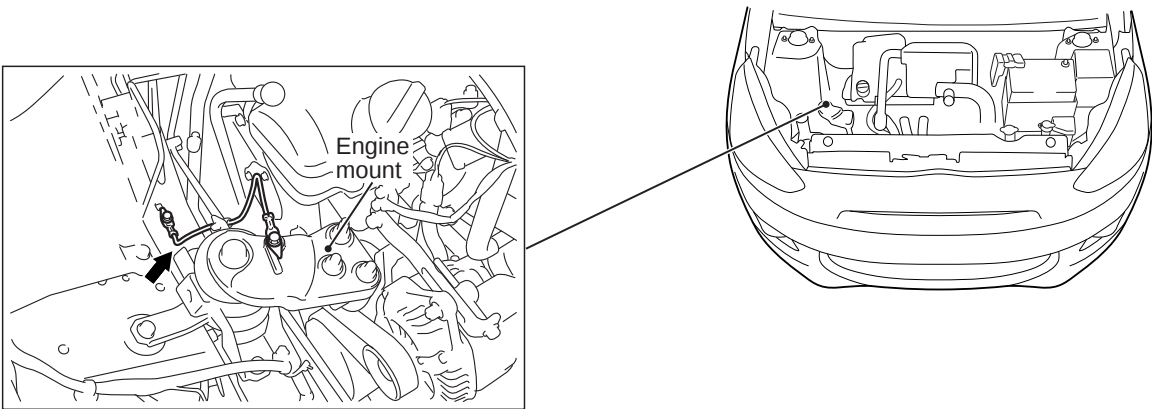



GROUNDING









M1701000302346





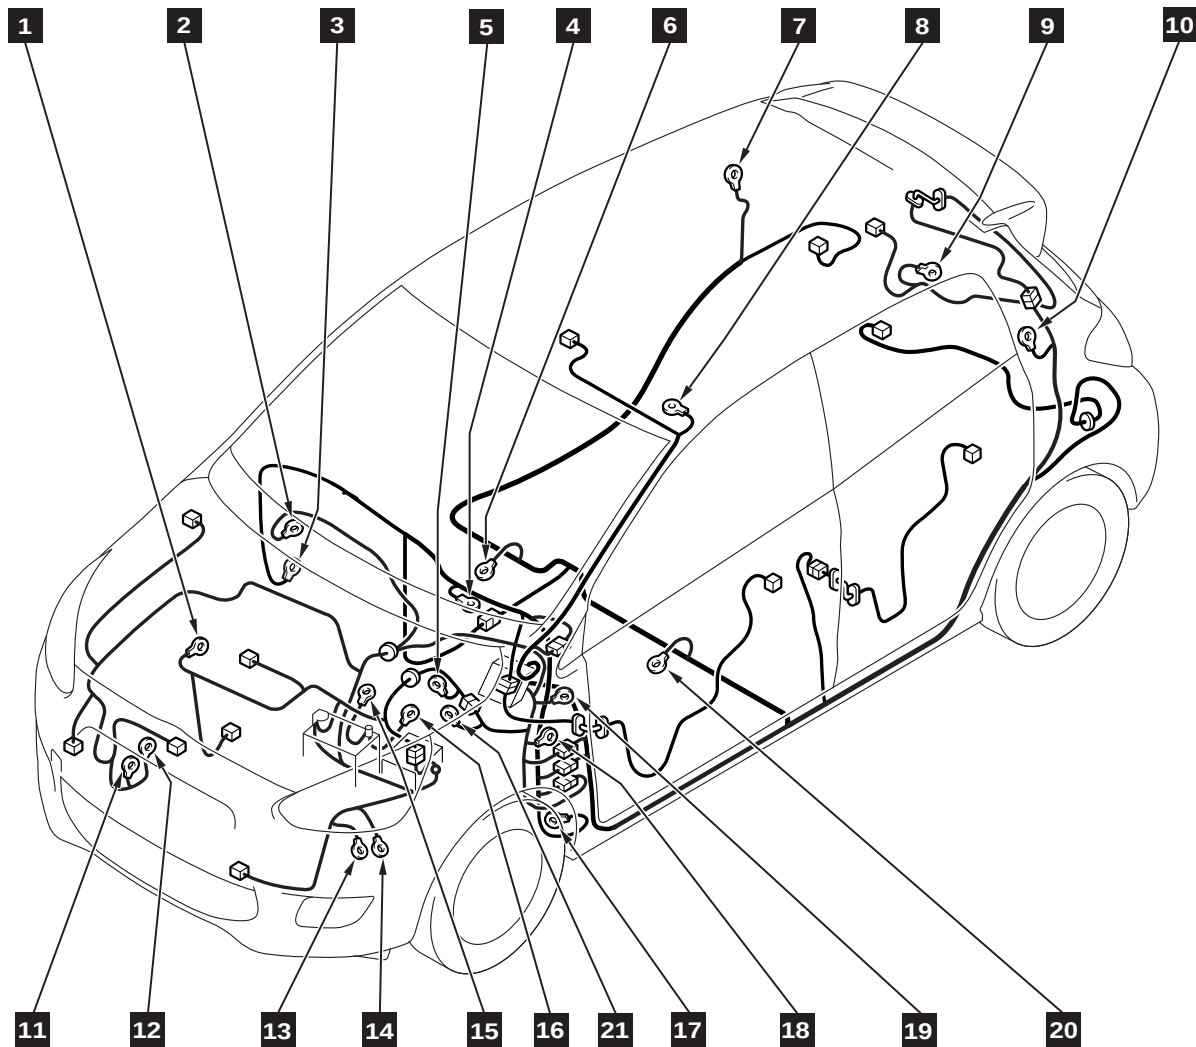


ACC04191AD

NOTE: Same ground numbers are used in the circuit diagram.

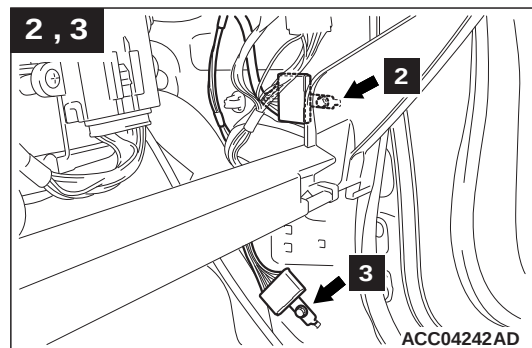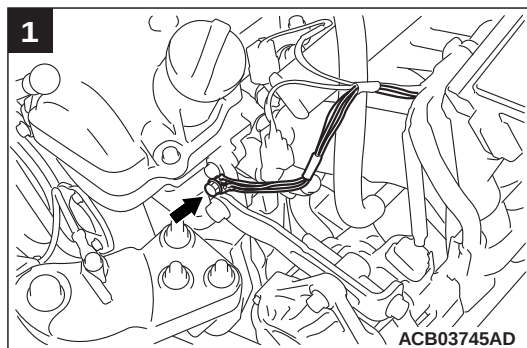

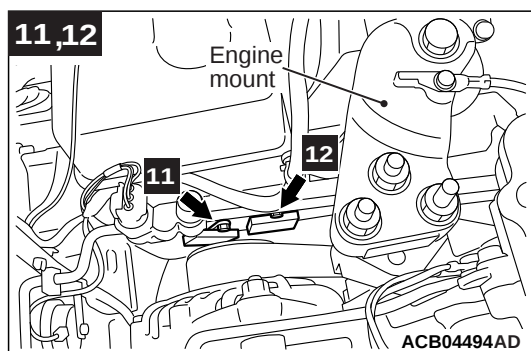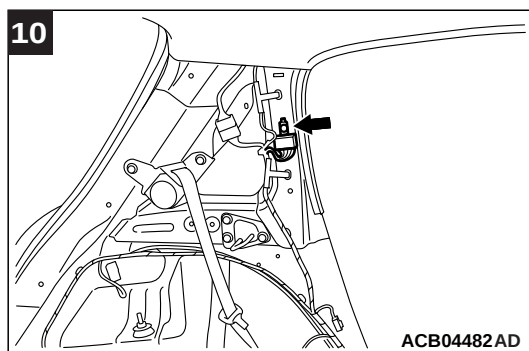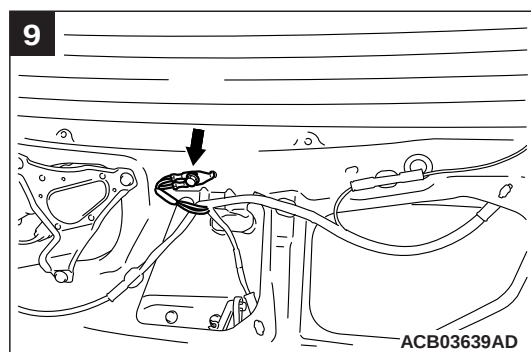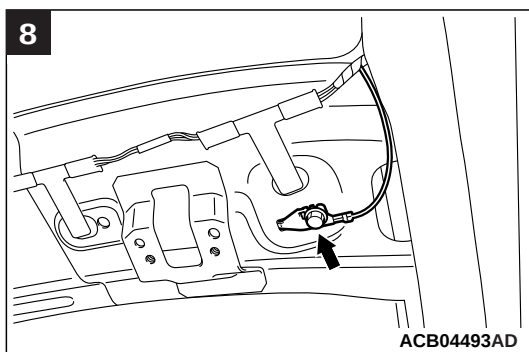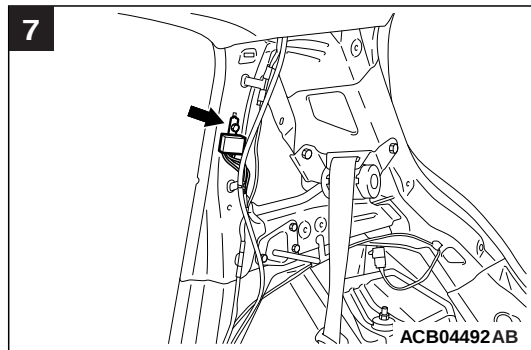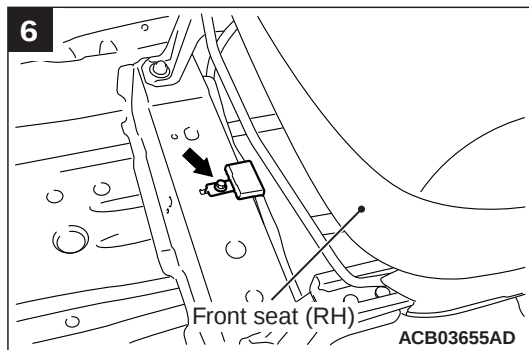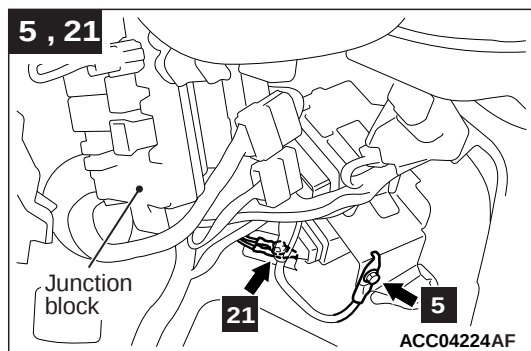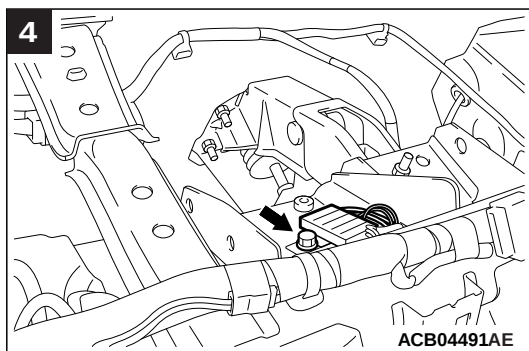

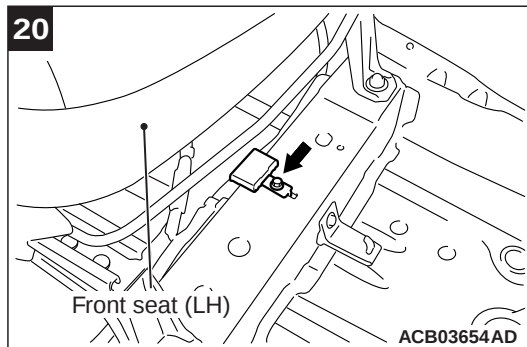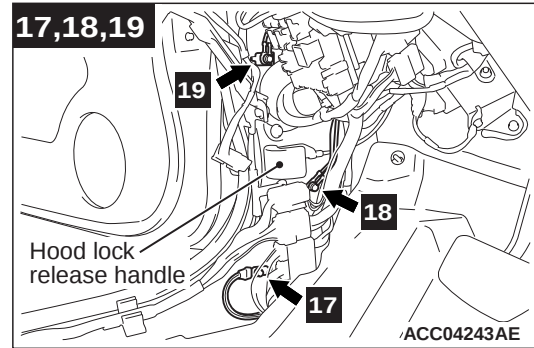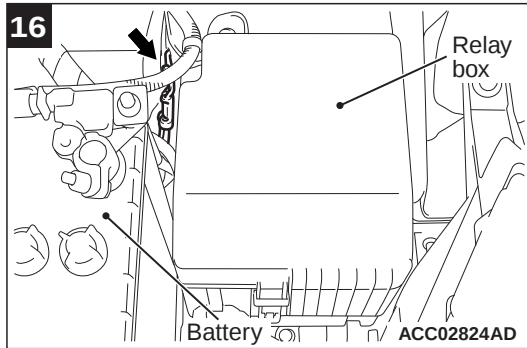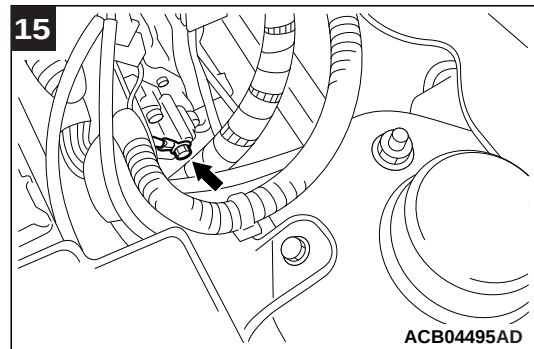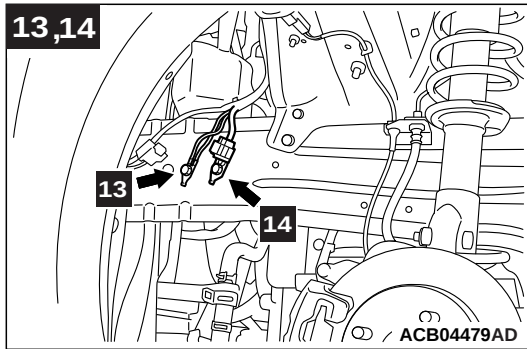

NOTES