

GROUP 80B

SPLICE LOCATIONS

CONTENTS

HOW TO READ SPLICE LOCATIONS.....	80B-2	INSTRUMENT PANEL	80B-4
INDEX.....	80B-3	FLOOR	80B-5
ENGINE COMPARTMENT.....	80B-3	DOOR	80B-6
		LIFTGATE.....	80B-7

HOW TO READ SPlice LOCATIONS

M1802000100454

"Splice locations" describes splice points of each wiring harness on an actual vehicle. Some variations are included in one splice location. Accordingly, some locations may not be applicable for individual vehicles.


Indicates a splice point number.

The splice point numbers are identical to those in "CIRCUIT DIAGRAMS," making them easy to use. In addition, the splice point numbers are usually numbered clockwise.

Example: S 013

Sequential number

Prefix meaning splice point

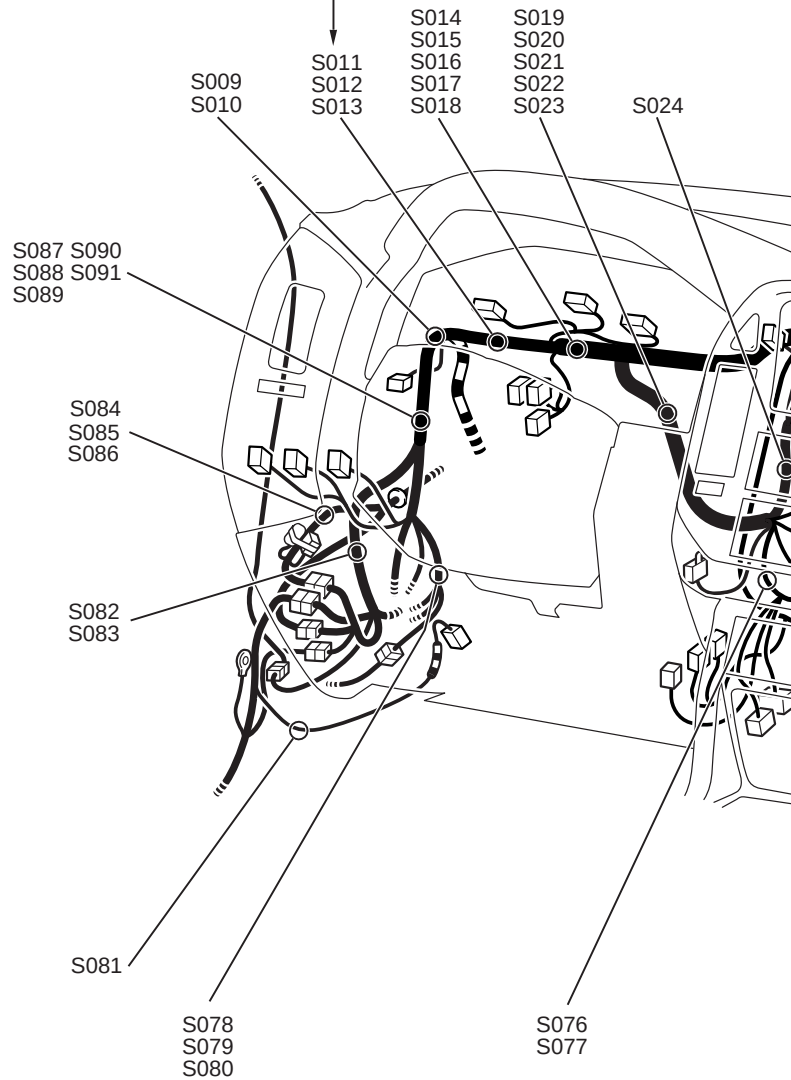

ACX02177 AC

INDEX


M1802000901691

This index shows the page numbers where the splice locations are.

Splice location NO.	Page	Splice location NO.	Page	Splice location NO.	Page	Splice location NO.	Page
S001	P.80B-3	S002	P.80B-3	S003	P.80B-3	S004	P.80B-3
S005	P.80B-3	S006	P.80B-4	S007	P.80B-4	S008	P.80B-4
S009	P.80B-4	S010	P.80B-4	S011	P.80B-4	S012	P.80B-4
S013	P.80B-4	S014	P.80B-4	S017	P.80B-4	S018	P.80B-4
S019	P.80B-4	S020	P.80B-4	S021	P.80B-4	S022	P.80B-4
S023	P.80B-4	S024	P.80B-4	S025	P.80B-4	S026	P.80B-4
S027	P.80B-4	S028	P.80B-4	S029	P.80B-4	S030	P.80B-4
S031	P.80B-4	S032	P.80B-5	S033	P.80B-5	S034	P.80B-6
S035	P.80B-6	S036	P.80B-7	S037	P.80B-7	S038	P.80B-7
S039	P.80B-4	S040	P.80B-4	S041	P.80B-4	S042	P.80B-4

ENGINE COMPARTMENT


M1801000309429

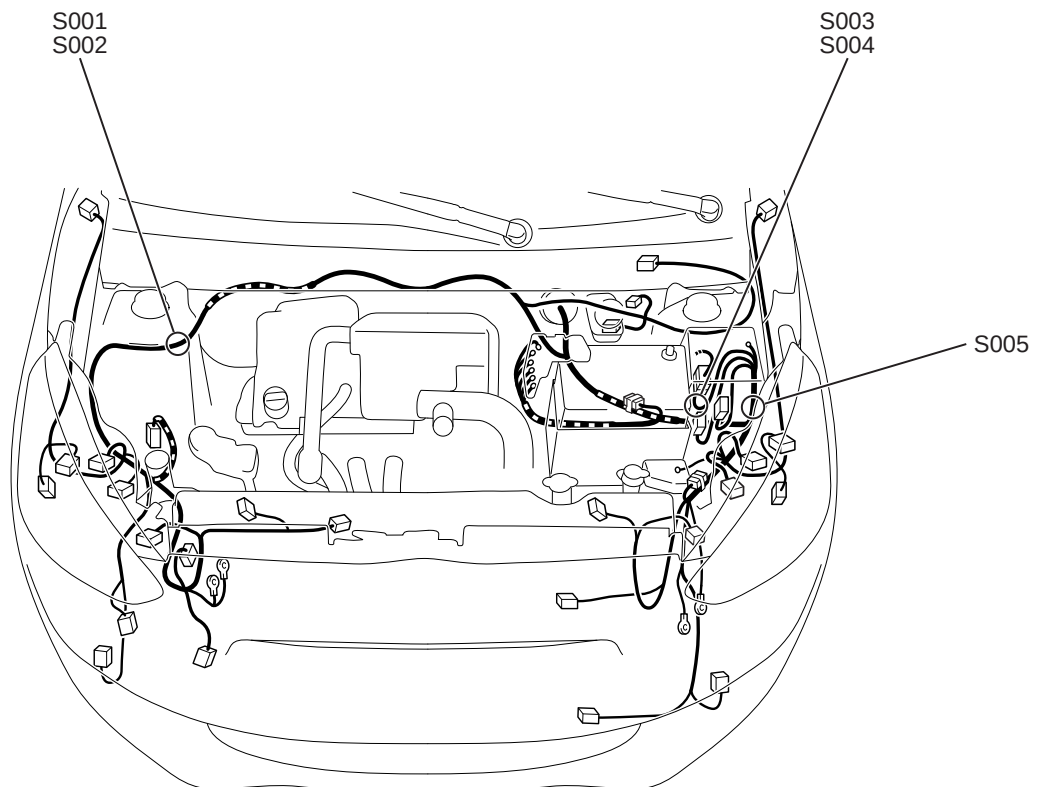

ACC06710AB

INSTRUMENT PANEL


M1801000703559

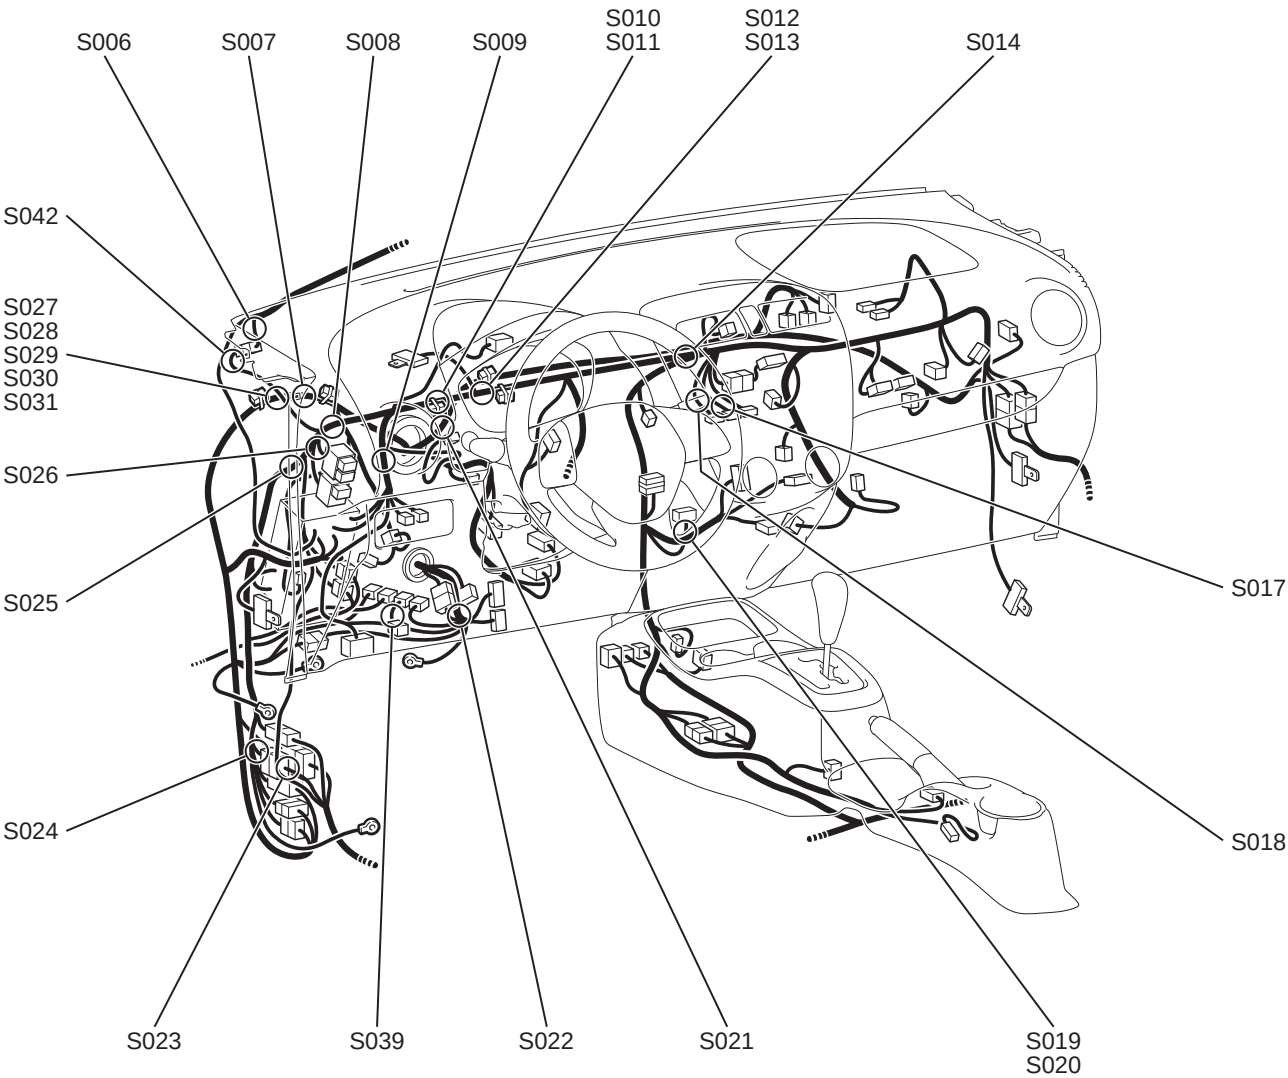

ACD03454AB

M1801003300120


FLOOR

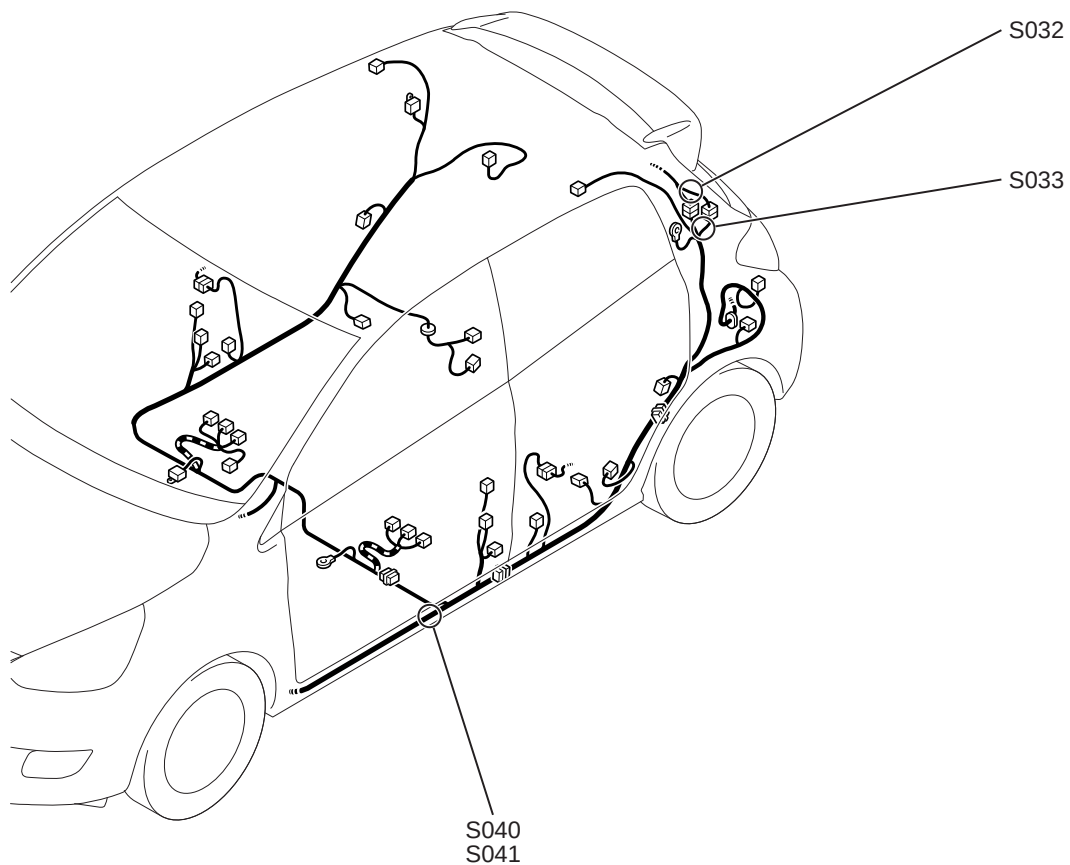

ACD03455AB

DOOR


M1801001403904

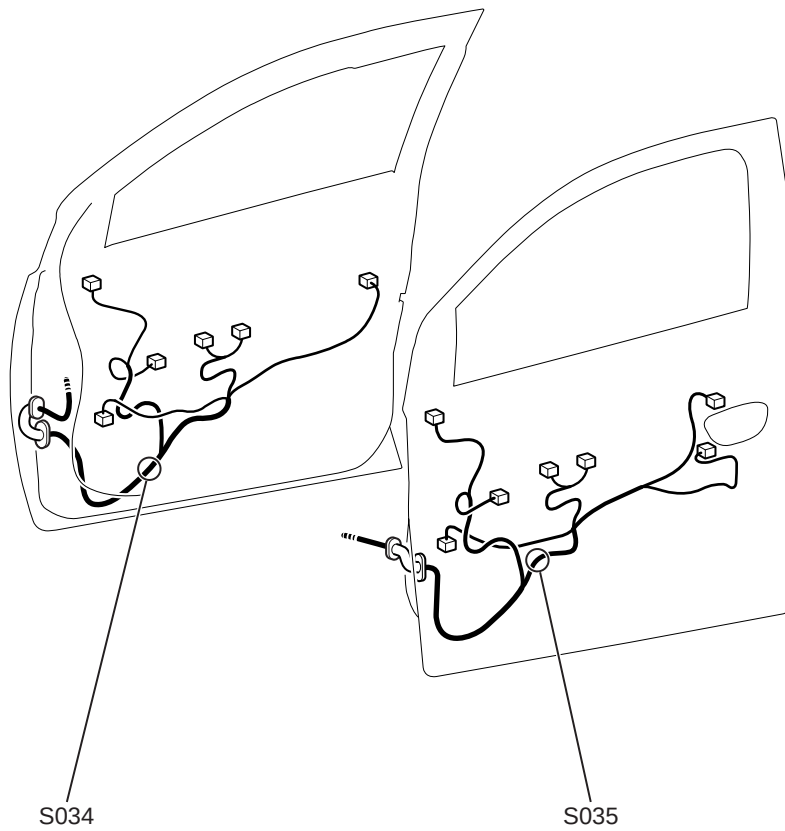

ACC06713AB

LIFTGATE

M1801001901776

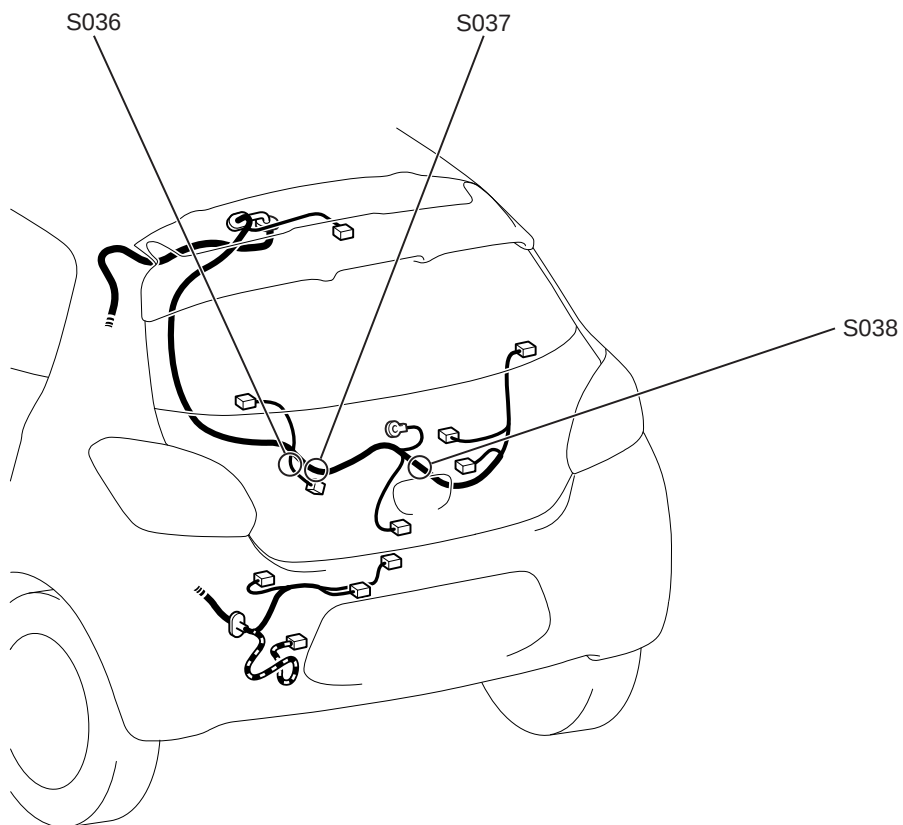

ACC06714AB

NOTES