

# HOW TO USE THIS MANUAL

B3E000000001M01

## Range of Topics

• This manual contains procedures for performing all required service operations. The procedures are divided into the following five basic operations:


- Removal/Installation
- Disassembly/Assembly
- Replacement
- Inspection
- Adjustment

• Simple operations which can be performed easily just by looking at the vehicle (i.e., removal/installation of parts, jacking, vehicle lifting, cleaning of parts, and visual inspection) have been omitted.

## Service Procedure

### Inspection, adjustment

• Inspection and adjustment procedures are divided into steps. Important points regarding the location and contents of the procedures are explained in detail and shown in the illustrations.

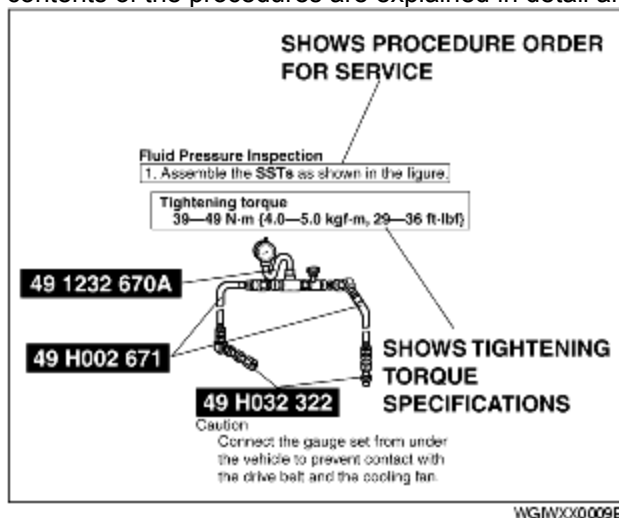


## Repair procedure

1. Most repair operations begin with an overview illustration. It identifies the components, shows how the parts fit together, and describes visual part inspection. However, only removal/installation procedures that need to be performed methodically have written instructions.

2. Expendable parts, tightening torques, and symbols for oil, grease, and sealant are shown in the overview illustration. In addition, symbols indicating parts requiring the use of special service tools or equivalent are also shown.

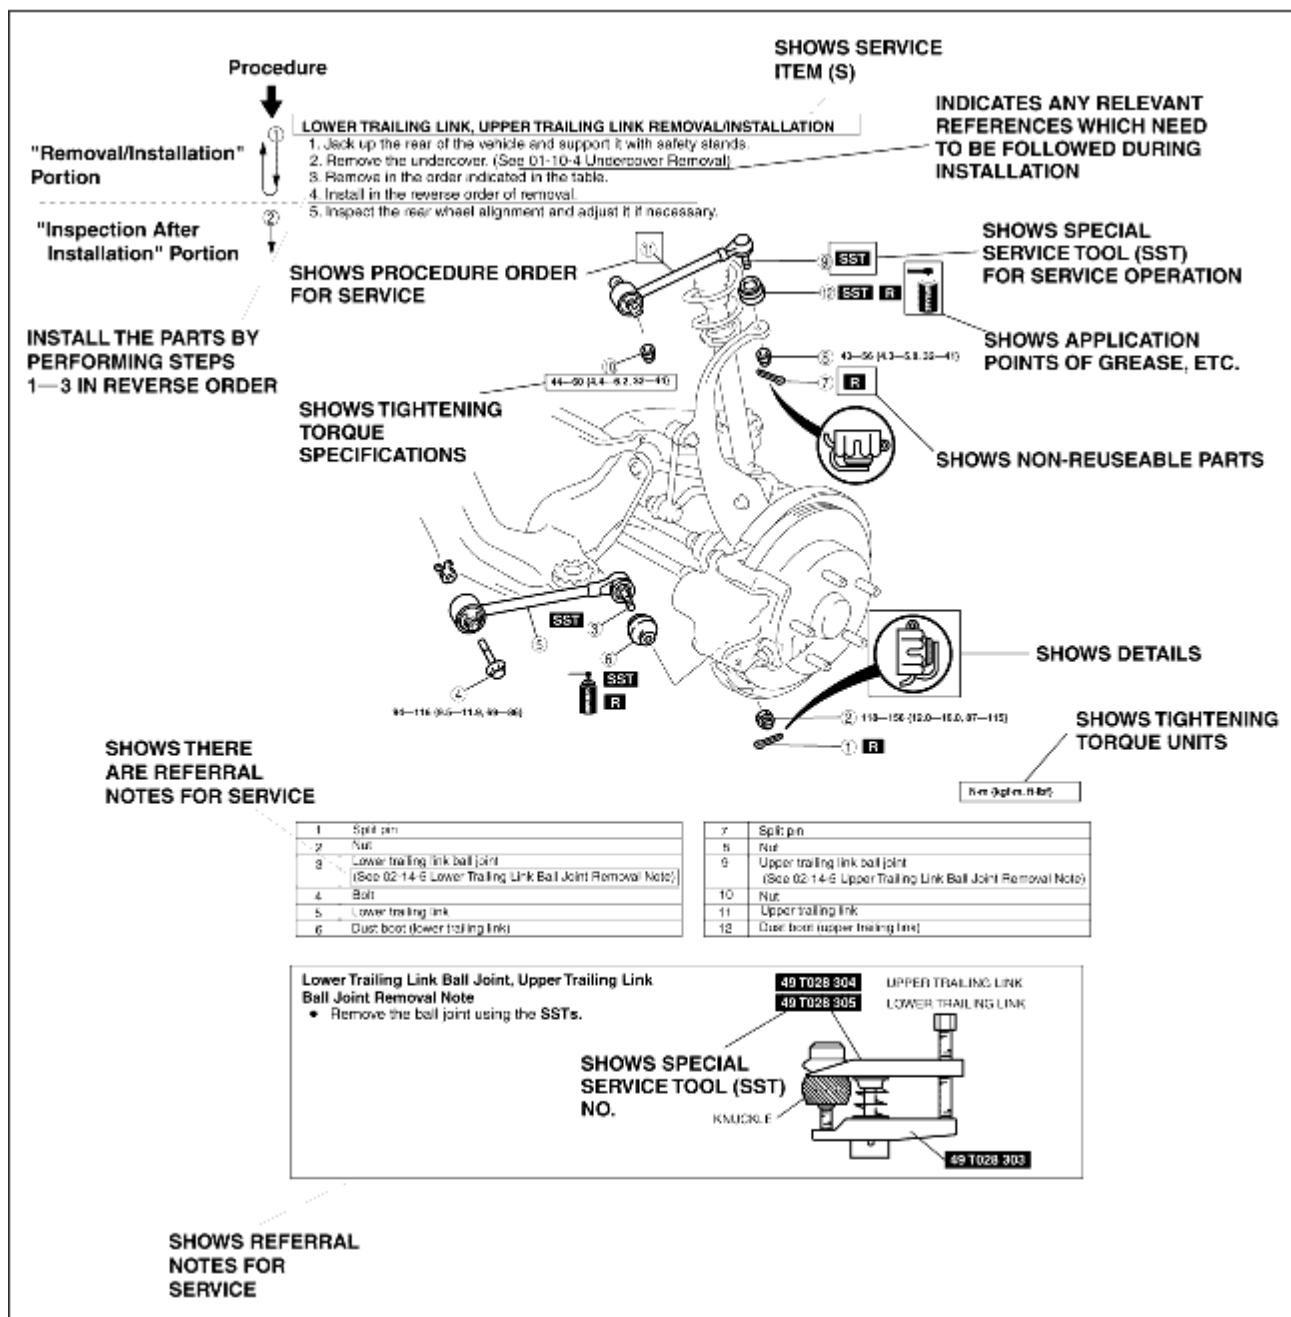

3. Procedure steps are numbered and the part that is the main point of that procedure is shown in the illustration with the corresponding number. Occasionally, there are important points or additional information concerning a procedure. Refer to this information when servicing the related part.









BHE00001W104

## Symbols

- There are eight symbols indicating oil, grease, fluids, sealant, and the use of **SST** or equivalent. These symbols show application points or use of these materials during service.

Symbol	Meaning	Kind
	Apply oil	New appropriate engine oil or gear oil
	Apply brake fluid	New appropriate brake fluid
	Apply automatic transaxle/	New appropriate automatic transaxle/

	transmission fluid	transmission fluid
	Apply grease	Appropriate grease
	Apply sealant	Appropriate sealant
	Apply petroleum jelly	Appropriate petroleum jelly
	Replace part	O-ring, gasket, etc.
	Use SST or equivalent	Appropriate tools

## Advisory Messages

• You will find several **Warnings**, **Cautions**, **Notes**, **Specifications** and **Upper and Lower Limits** in this manual.

### Warning

• A Warning indicates a situation in which serious injury or death could result if the warning is ignored.

### Caution

• A Caution indicates a situation in which damage to the vehicle or parts could result if the caution is ignored.

### Note

• A Note provides added information that will help you to complete a particular procedure.

### Specification

• The values indicate the allowable range when performing inspections or adjustments.

### Upper and lower limits

• The values indicate the upper and lower limits that must not be exceeded when performing inspections or adjustments.