
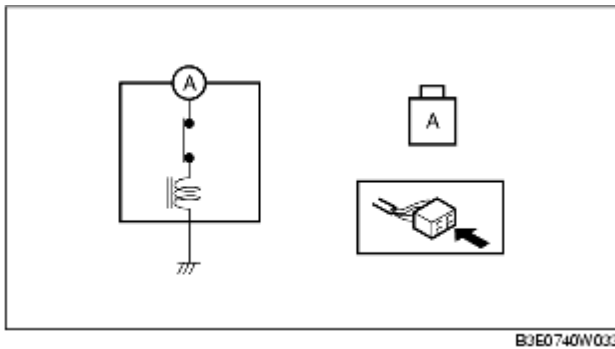


## MAGNETIC CLUTCH INSPECTION [Z6, ZJ]

---

B3E074061010W04

1. Connect battery positive voltage to magnetic clutch terminal A and the A/C compressor body to ground.

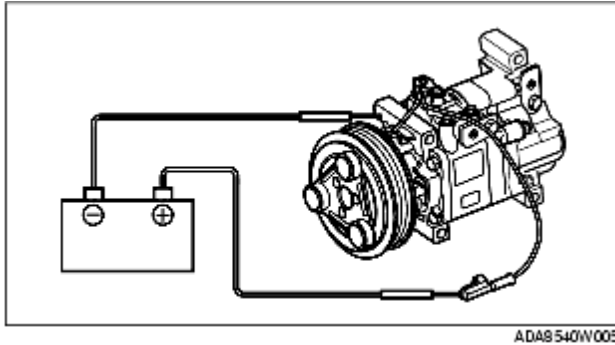

2. Verify that the magnetic clutch operates.

- If there is any malfunction, replace the stator and thermal protector.