



REMOVAL

1. REMOVE THESE PARTS:

- (a) Front seat
Torque: 37 N·m (375 kgf-cm, 27 ft-lbf)
- (b) Rear seat cushion
- (c) Rear seat belt lower side bolt
Torque: 41 N·m (420 kgf-cm, 30 ft-lbf)
- (d) Rear seatback
Torque: 18 N·m (185 kgf-cm, 13 ft-lbf)
- (e) Front door scuff plates
- (f) Rear door scuff plates
- (g) Rear seat side garnishes
- (h) Center pillar garnishes

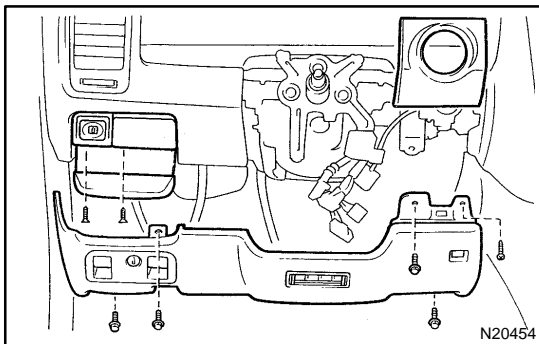

- (i) No.1 under cover
- (j) Finish plate
- (k) End pad
- (l) No.1 safety pad
- (m) No.2 under cover

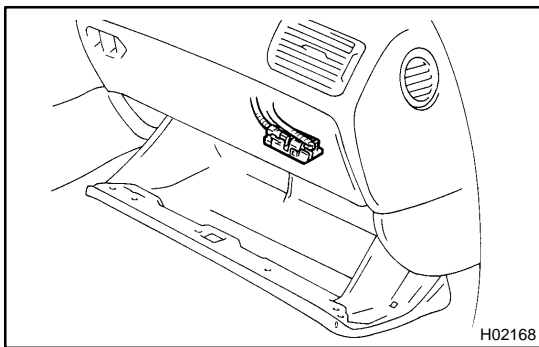


2. REMOVE INSTRUMENT PANEL BOX ASSEMBLY

- (a) Using a screwdriver, pry out the glove compartment door finish plate.


HINT:

Tape the screwdriver tip before use.

- (b) Remove the connector from the glove compartment door finish plate.

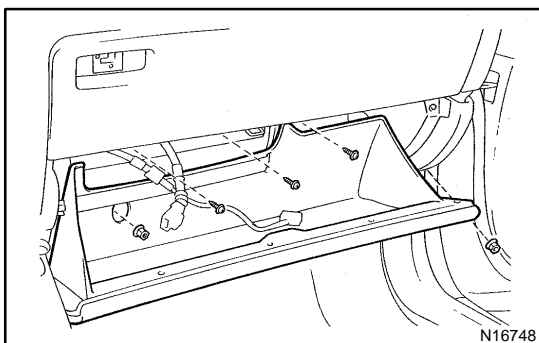

- (c) Remove the 3 screws and 2 nuts.
- (d) Disconnect the connector, remove the instrument panel box assembly.

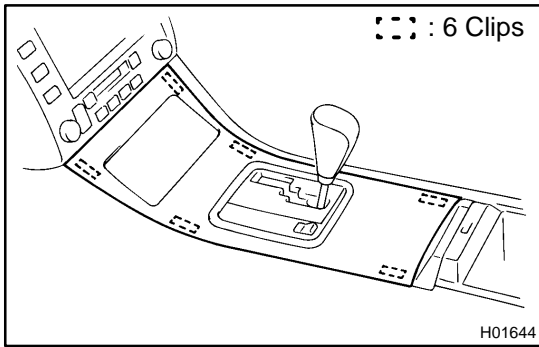

3. REMOVE CLUSTER FINISH PANEL


- (a) Using a screwdriver, remove the cluster finish panel.

HINT:

Tape the screwdriver tip before use.

- (b) Disconnect the connector.

4. REMOVE CUP HOLDER

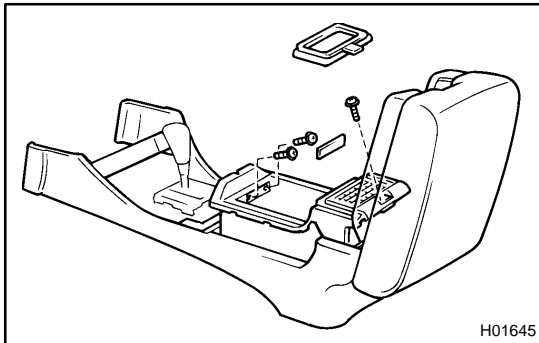


5. REMOVE LOWER REAR CONSOLE BOX

- (a) Remove the lower console cover.

- (b) Remove the rear console cover.

- (c) Disconnect the connector.

- (d) Remove the 3 screws and lower rear console box.

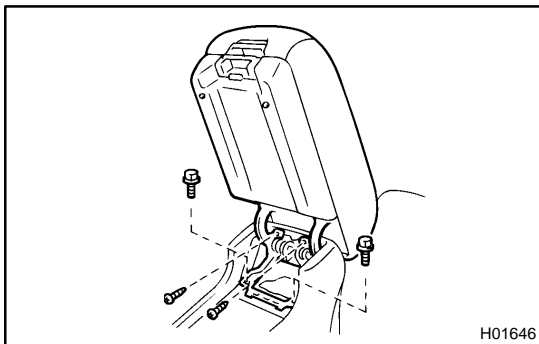


6. REMOVE REAR CONSOLE ARMREST

- (a) Remove the No.3 console box duct.

- (b) Remove the 2 bolts, 2 screws and rear console armrest.

7. REMOVE CONSOLE BOX

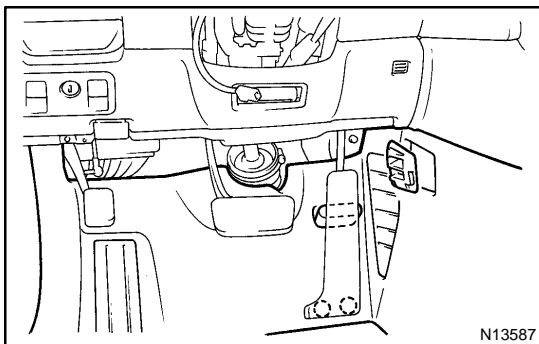

8. REMOVE FLOOR CARPET


- (a) Observe the following items.(Driver's side)

- (1) Remove the heater air duct guide.

- (2) Pull out the accelerator pedal.

- (3) Raise the carpet and disconnect the hook.

- (4) Using a clip remover, remove the clip.

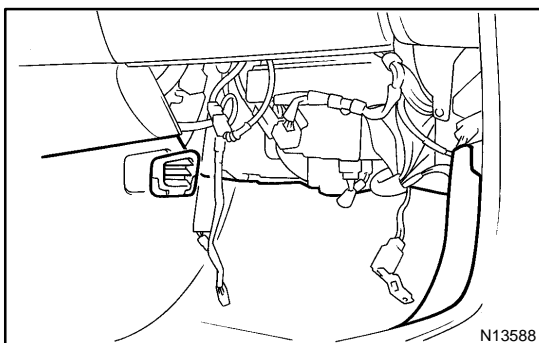


- (b) Observe the following items.(Passenger's side)

- (1) Remove the heater air duct guide.

- (2) Raise the carpet and disconnect the hook.

- (3) Using a clip remover, remove the clip.

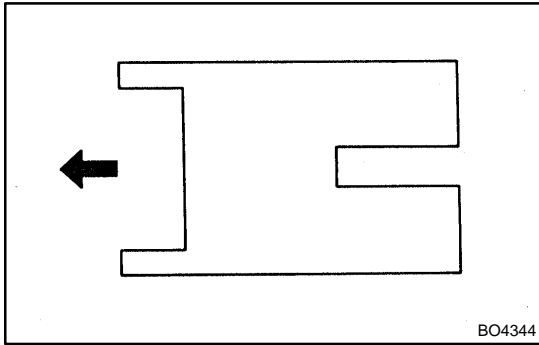

(c) Slide the carpet backward and remove it.