

Published : Jun 2, 2005

Cellular Phone Antenna - Vehicles With: Glass Roof Panel (86.53.11)

Special Service Tools

419-002

E57688

Torx bit, phone/SDARS antenna
419-002

Removal

NOTE :


For certain markets, the SDARS antenna is also part of the cellular phone antenna.

1. Remove the rear headliner trim panel.
 - Release the 7 clips.
 - Disconnect the interior light electrical connector.



E49690

2. Remove the cellular phone antenna.
 - Disconnect the electrical connector.
 - Using the special tool, remove the 2 Torx bolts.

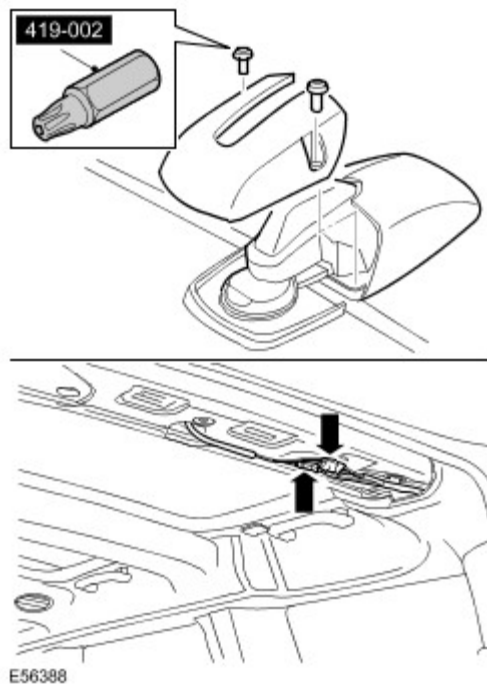

Installation

- 1 . Install the cellular phone antenna.
 - Tighten the bolts to 6 Nm (4 lb.ft).
 - Connect the electrical connector.
- 2 . Install the rear headliner trim panel.
 - Secure in the clips.
 - Connect the electrical connector.