

Cellular Phone Antenna - Vehicles With: Metal Roof Panel (86.53.11)

Removal


NOTE :

For certain markets, the SDARS antenna is also part of the cellular phone antenna.


- 1 . Remove the rear headliner trim panel.
 - Release the 7 clips.
 - Disconnect the interior light electrical connector.




- 2 . If installed remove the LH third row seat passenger assist handle.
 - Carefully release the screw covers.
 - Remove the 2 screws.
- 3 . If installed, remove the RH third row seat passenger assist handle.
 - Carefully release the screw covers.
 - Remove the 2 screws.

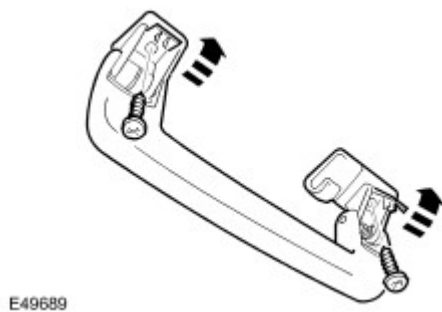

- 4 . Release the rear of the headliner.
 - Release the 2 clips.

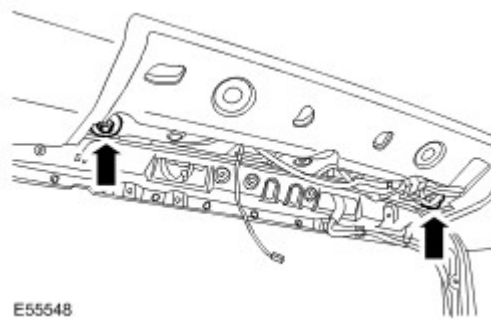

5. Remove the cellular phone antenna.
 - Disconnect the electrical connector.
 - Remove the 2 nuts.

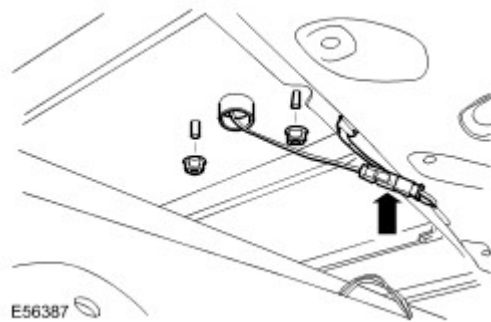

Installation

1. Install the cellular phone antenna.
 - Tighten the nuts to 10 Nm (7 lb.ft).
 - Connect the electrical connector.
2. Attach the rear of the headliner.
 - Secure with the clips.
3. Install the RH third row seat passenger assist handle, if installed.
 - Tighten the screws.
 - Attach the covers.
4. Install the LH third row seat passenger assist handle, if installed.
 - Tighten the screws.
 - Attach the covers.
5. Install the rear headliner trim panel.
 - Secure in the clips.
 - Connect the electrical connector.