

Published : Nov 8, 2005

Transceiver Module


Removal

1. Remove the RH lower rear quarter trim panel. For additional information, refer to [Rear Quarter Trim Panel \(76.13.12\)](#) (Section 501-05)

2.  **CAUTION: Cover fibre optic cable connectors to minimise dust ingress and avoid bending the cables in a radius of less than 30 mm.**

Remove the cellular phone module.

- Remove the Torx bolt.
- Disconnect the 2 electrical connectors.

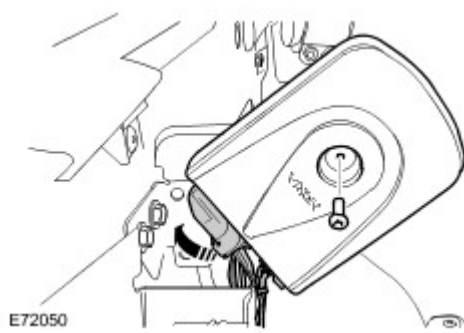

Installation

1. Install the cellular phone module.
 - Connect the electrical connectors.
 - Tighten the Torx bolt to 10 Nm (7 lb.ft).
2. Install the RH lower rear quarter trim panel. For additional information, refer to [Rear Quarter Trim Panel \(76.13.12\)](#) (Section 501-05)
3. Using WDS, configure a new module.