


# REFRIGERANT SYSTEM GENERAL PROCEDURES

---

B3E071001038W03

1. Fully close the valves of the **SST** (49 C061 001A).
2. Connect the **SSTs** (49 C061 002, 49 C061 003) to the high- and low-pressure side joints of the **SST** (49 C061 001A).

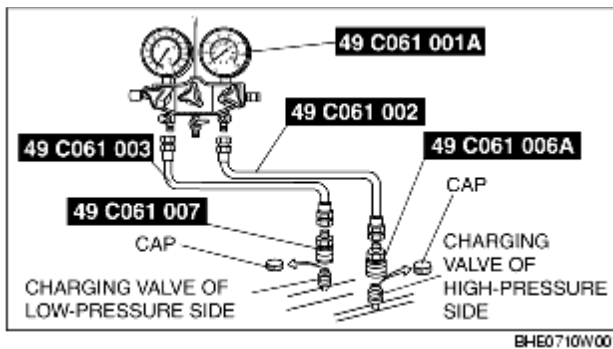

3. Connect the **SSTs** (49 C061 006A, 49 C061 007) to the ends of the **SSTs** (49 C061 002, 49 C061 003).
4. Connect the **SSTs** (49 C061 006A, 49 C061 007) to the charging valves.