


SHROUD PANEL REMOVAL/INSTALLATION

B3E091053580W02

1. Disconnect the negative battery cable.
2. Remove the front bumper. (See [FRONT BUMPER REMOVAL/INSTALLATION](#).)
3. Remove the front combination lights. (See [FRONT COMBINATION LIGHT REMOVAL/INSTALLATION](#).)
4. Remove the front bumper reinforcement. (See [FRONT BUMPER REINFORCEMENT REMOVAL/INSTALLATION](#).)
5. Remove the bonnet latch. (See [BONNET LATCH AND RELEASE LEVER REMOVAL/INSTALLATION \[L.H.D.\]](#), [BONNET LATCH AND RELEASE LEVER REMOVAL/INSTALLATION \[R.H.D.\]](#).)
6. Remove in the order indicated in the table.

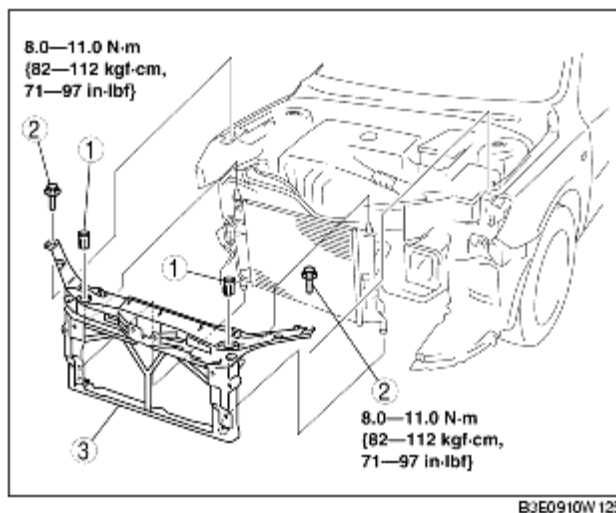

1	Radiator mount cap
2	Bolt
3	Shroud panel

7. Install in the reverse order of removal.