

SIDE PROTECTOR INSTALLATION

B3E091650680W02

1. Remove the adhesive remaining on the side protector and the body using a razor.


Warning

- Using a razor with bare hands can cause injury. Always wear gloves when using a razor.

2. Remove any grease or dirt from the adhesion surface of the side protector and the body.
3. Attach double-sided adhesive tape to the side protector as shown in the figure.

Clearance

- a: 30 mm {1.2 in}
- b: 2.0 mm {0.08 in}
- c: 12 mm {0.47 in}
- d: 3.0 mm {0.12 in}
- e: 3.0 mm {0.12 in}
- f: 1.0-3.0 mm {0.04-0.11 in}
- g: 5.0 mm {0.2 in}
- h: 1.0 mm {0.04 in}

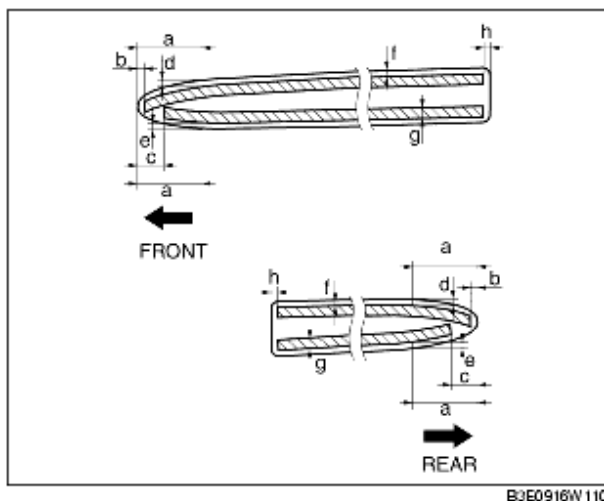

B3E0916W110

4. Peel off the backing paper from the double-sided adhesive tape and attach the side protector onto the body as shown in the figure.

Clearance

- a: 1.4-4.4 mm {0.056-0.17 in}
- b: 3.0-6.0 mm {0.12-0.23 in}

