


HORN REMOVAL/INSTALLATION

B3E092266790W01

1. Disconnect the negative battery cable.
2. Slightly bend back the mudguard.
3. Remove in the order indicated in the table.

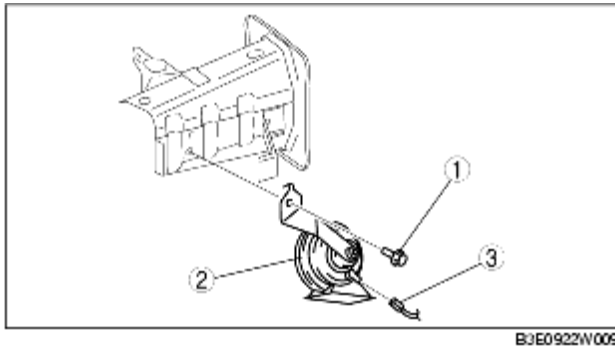

1	Bolt
2	Horn
3	Connector

4. Install in the reverse order of removal.