


## WHEEL APRON PANEL (FRONT) INSTALLATION

B3E098053210B02

1. When installing new parts, measure and adjust the body as necessary to conform with standard dimensions.
2. Drill holes for plug welds before installing new parts.
3. After temporarily installing new parts, make sure the related parts fit properly.

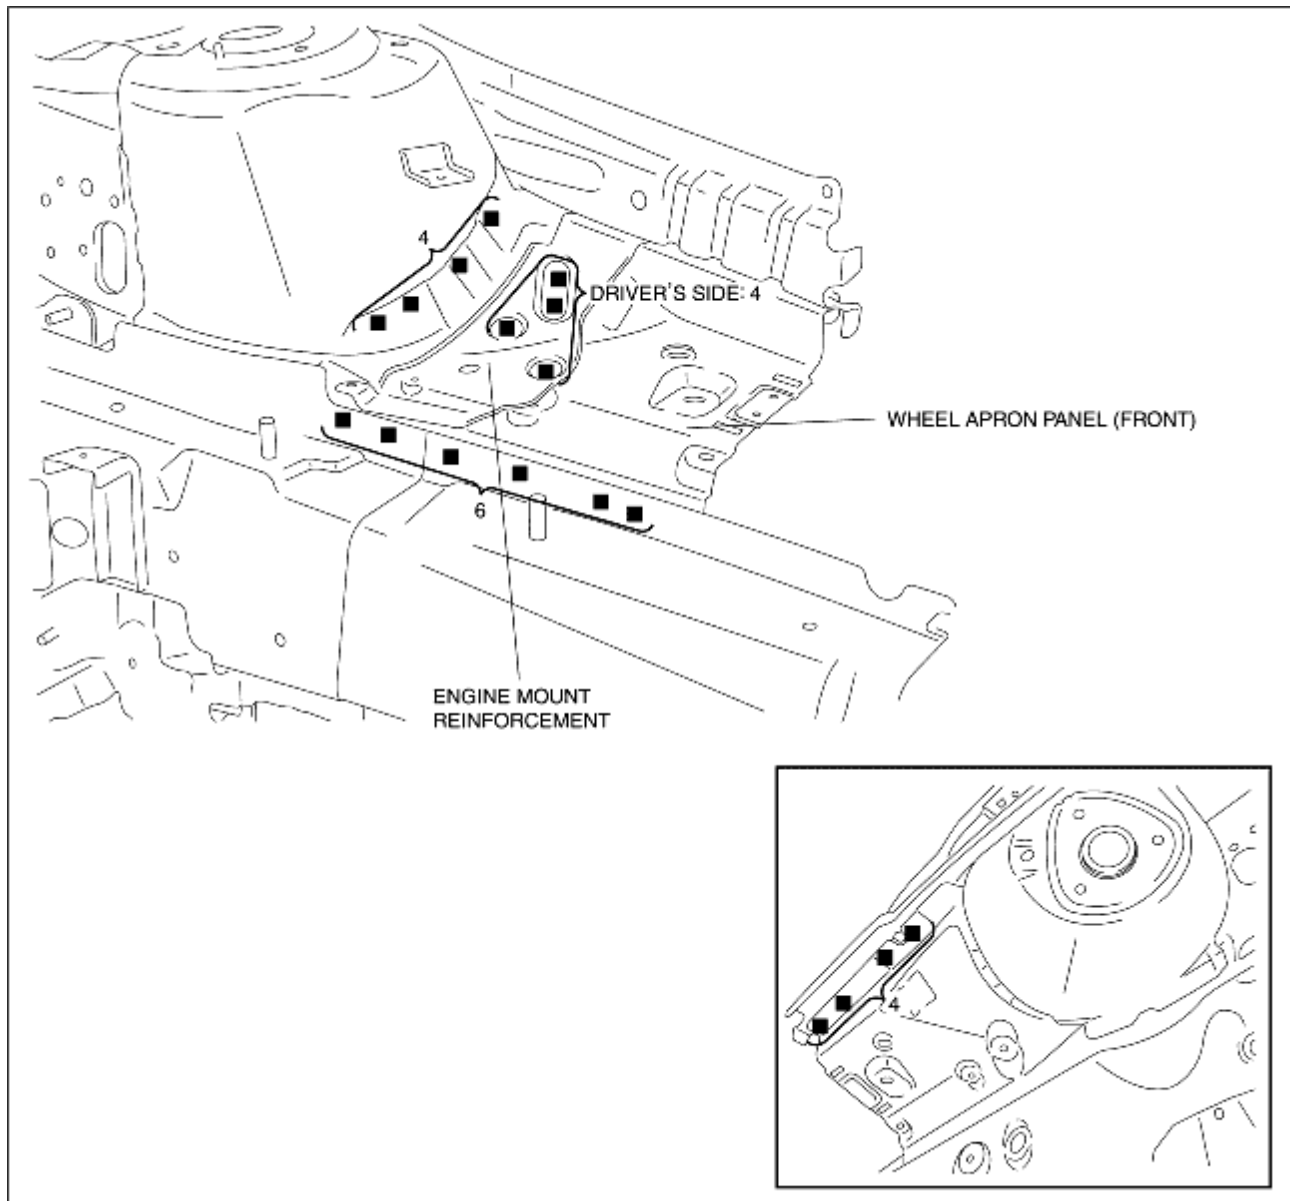

B3E0980B060