


# APRON REINFORCEMENT (PARTIAL CUTTING) INSTALLATION

---

B3E098053260B04

1. When installing new parts, measure and adjust the body as necessary to conform with standard dimensions.
2. Drill holes for plug welds before installing new parts.
3. After temporarily installing new parts, make sure the related parts fit properly.

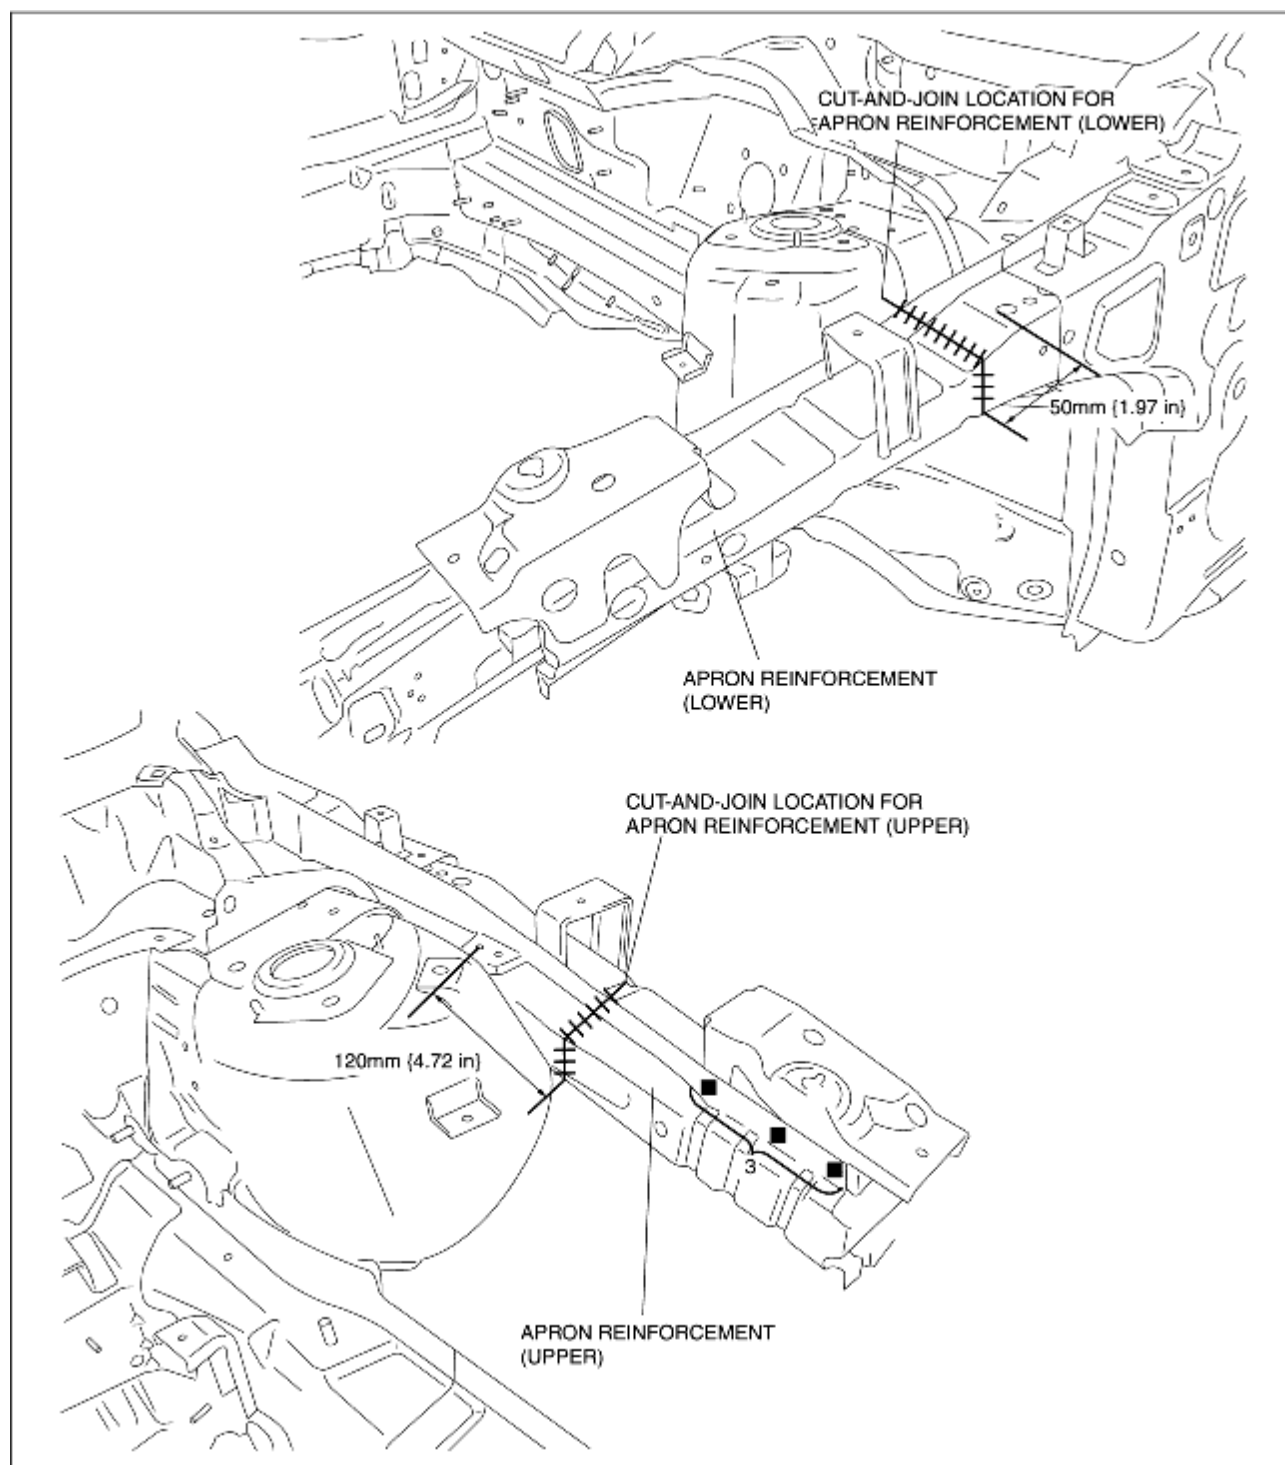

B3E0980B057

