


REAR FENDER PANEL INSTALLATION

B3E098074100B02

4SD

1. When joining and cutting the new and existing parts, trial fit the new part in position, and then measure and adjust the body as necessary to conform with standard dimensions.
2. Drill holes for plug welds before installing new parts.
3. Before installing new parts, apply spot weld sealer to the wheel arch line.
4. After temporarily installing new parts, make sure the related parts fit properly.

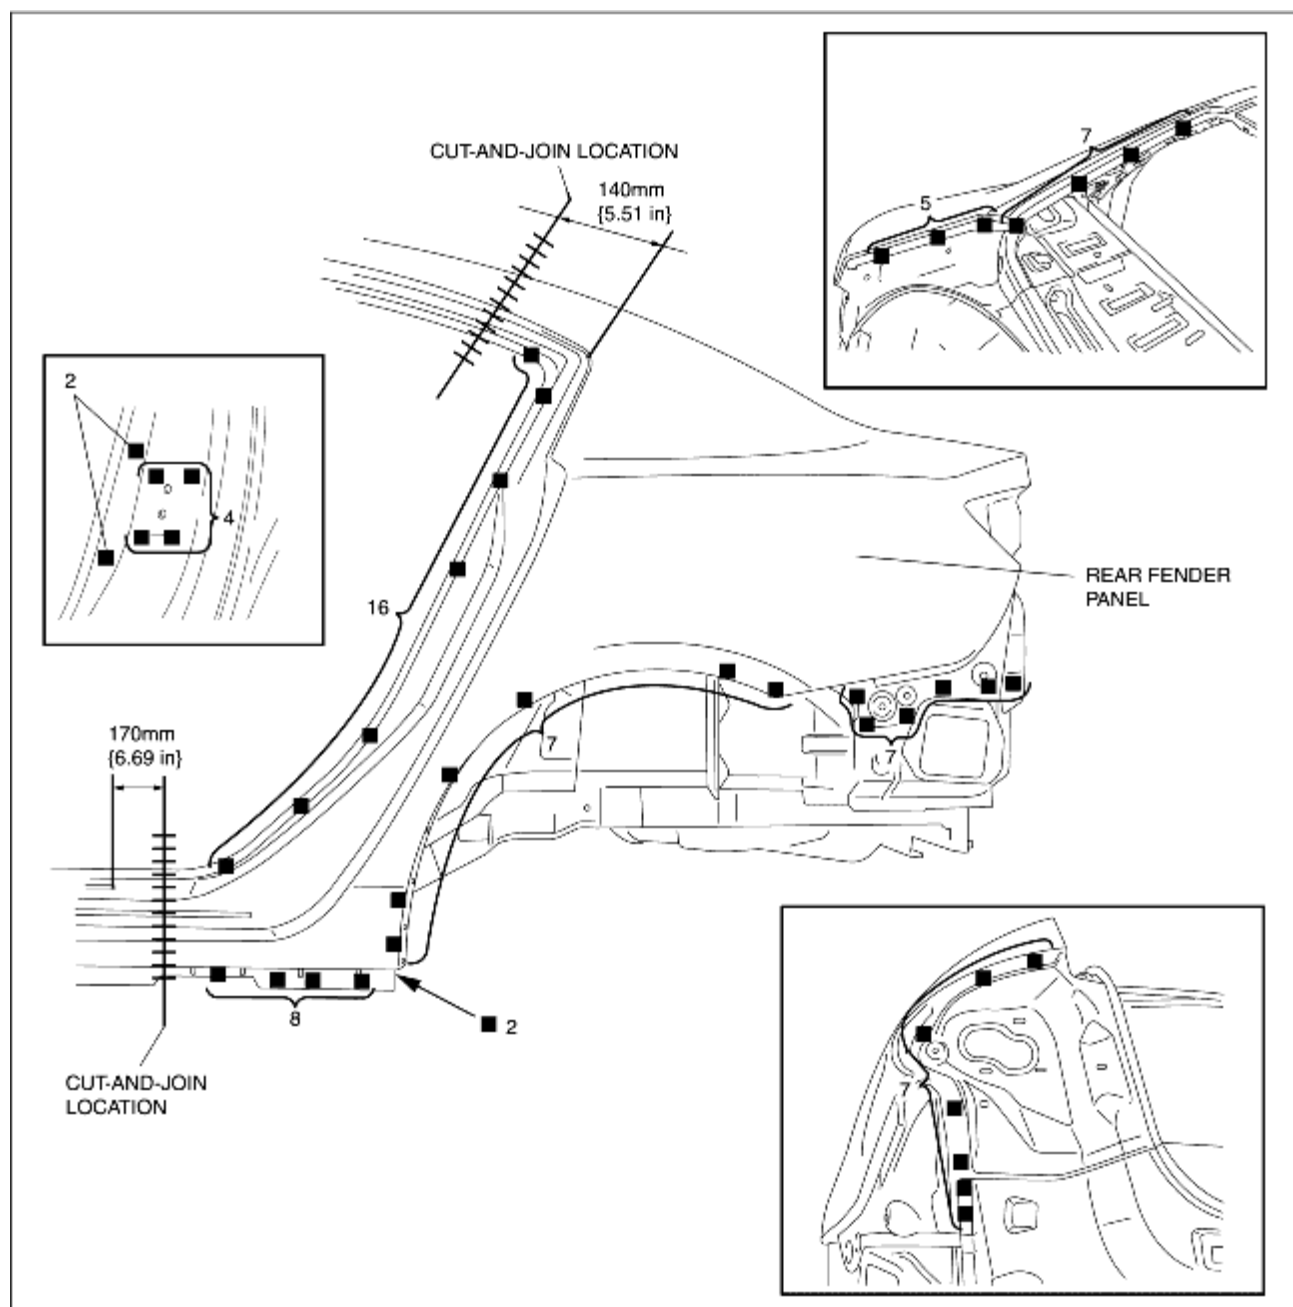

B3E0980B086

5HB

1. When joining and cutting the new and existing parts, trial fit the new part in position, and then measure and adjust the body as necessary to conform with standard dimensions.
2. Drill holes for plug welds before installing new parts.
3. Before installing new parts, apply spot weld sealer to the wheel arch line.
4. After temporarily installing new parts, make sure the related parts fit properly.

