




Evaporative Emission Canister (17.15.13)


Removal

1. Remove the spare wheel and tire.

2.  **WARNING:** Do not work on or under a vehicle supported only by a jack. Always support the vehicle on safety stands.

Raise and support the vehicle.

3. Remove the evaporative emissions canister.
 - Remove the 2 bolts.
 - Disconnect the 3 lines.
 - Disconnect the electrical connector.

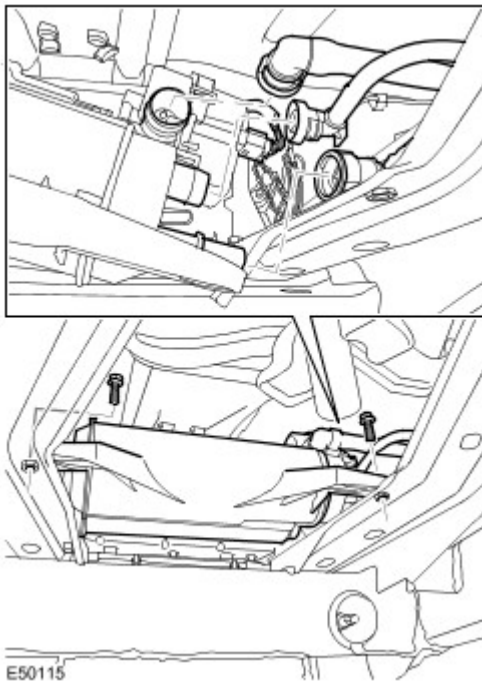

4. **NOTE :**
 - Do not disassemble further if the component is removed for access only.
 - NAS vehicles: Remove the fuel tank leakage detection module.
 - Remove the 3 screws.



Installation

- 1 . NAS vehicles: Install the fuel tank leakage detection module.
 - ▶ Install the screws.
- 2 . Install the evaporative emissions canister.
 - ▶ Connect the electrical connector.
 - ▶ Connect the lines.
 - ▶ Tighten the bolts to 23 Nm (17 lb.ft).
- 3 . Install the spare wheel and tire.