



Liftgate Wiring Harness (86.70.84)

Removal

- 1 . Open the liftgate and tailgate.
- 2 . Disconnect the battery ground cable. For additional information, refer to [Specifications](#) (Section 414-00)
- 3 . Remove the liftgate lower trim panel. For additional information, refer to [Liftgate Trim Panel \(76.34.11\)](#) (Section 501-05)
- 4 . Remove the liftgate upper trim panel.
 - ▶ Release the 4 clips.

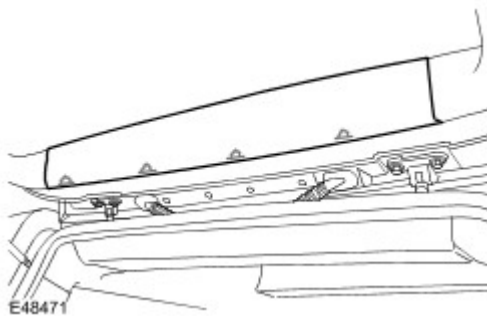


- 5 . Remove the liftgate side trim panel.
 - ▶ Release the 5 clips.
 - ▶ Repeat the above procedure for the other side.

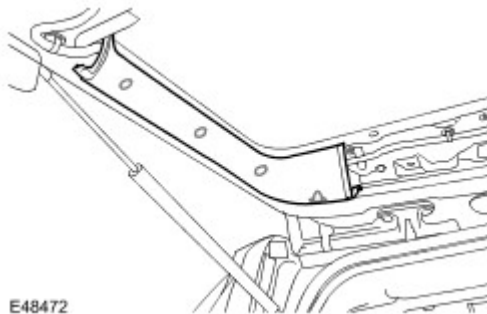


- 6 . Remove the rear headliner trim panel.
 - ▶ Release the 7 clips.
 - ▶ Disconnect the electrical connector.




- 7 . Release the liftgate wiring harness.
- Disconnect the 2 electrical connectors.
 - Release the grommet.

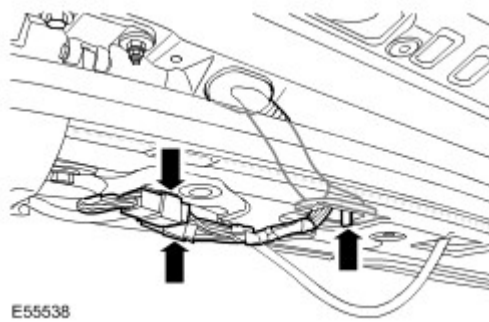


- 8 . Disconnect the high mounted stoplamp electrical connector.

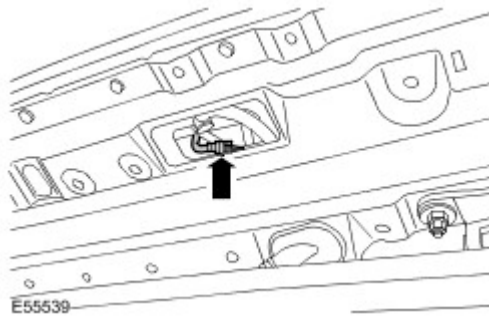


- 9 . Disconnect both heated rear window electrical connectors.

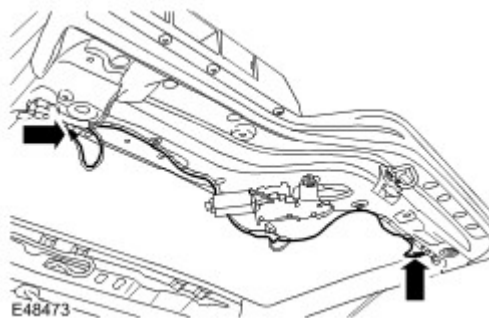


- 10 . Disconnect the license plate lamp electrical connector.

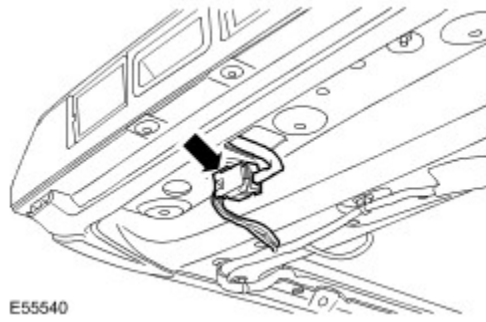


11. Disconnect the wiper motor electrical connector.

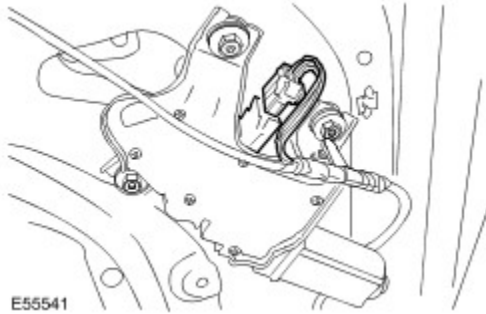

12. If installed, disconnect the diversity amplifier electrical connector and antenna cable.

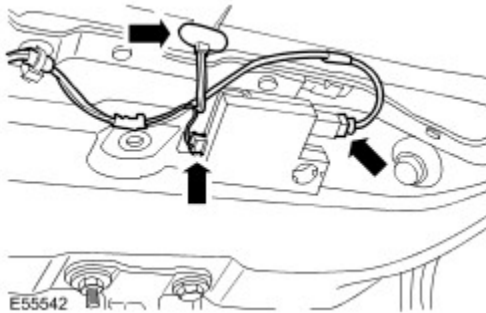


13. If installed, disconnect the navigation system traffic amplifier electrical connector and antenna cable.

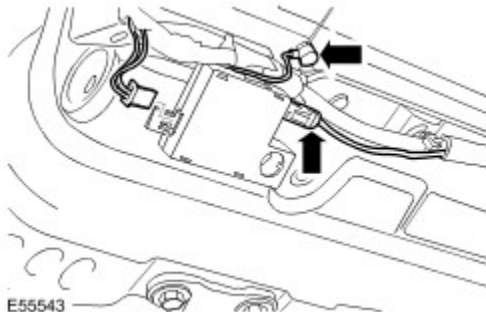

14. Remove the liftgate wiring harness.

➤ Release the 15 clips.

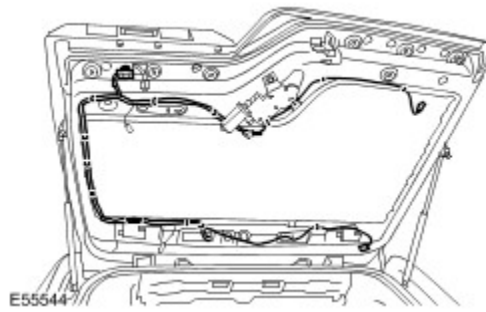

Installation

- 1 . Install the liftgate wiring harness.
 - Secure the clips.
- 2 . If installed, connect the navigation system traffic amplifier electrical connector and antenna cable.
- 3 . If installed, connect the diversity amplifier electrical connector and antenna cable.
- 4 . Connect the wiper motor electrical connector.
- 5 . Connect the license plate lamp electrical connector.
- 6 . Connect the heated rear window electrical connectors.
- 7 . Connect the high mounted stoplamp electrical connector.
- 8 . Attach the liftgate wiring harness.
 - Install the grommet.
 - Connect the electrical connectors.
- 9 . Install the rear headliner trim panel.
 - Connect the electrical connector.
 - Secure with the clips.
- 10 . Install the liftgate side trim panel.
 - Secure with the clips.
 - Repeat the above procedure for the other side.
- 11 . Install the liftgate upper trim panel.
 - Secure with the clips.
- 12 . Install the liftgate lower trim panel. For additional information, refer to [Liftgate Trim Panel \(76.34.11\)](#) (Section 501-05)

- 13 . Connect the battery ground cable. For additional information, refer to [Specifications](#) (Section 414-00)