


Tailgate Trim Panel (76.49.23)

Removal


1. Remove the tailgate upper trim panel.
 - ▶ Remove the 4 screw covers.
 - ▶ Remove the 4 screws.
 - ▶ Release the 2 clips.

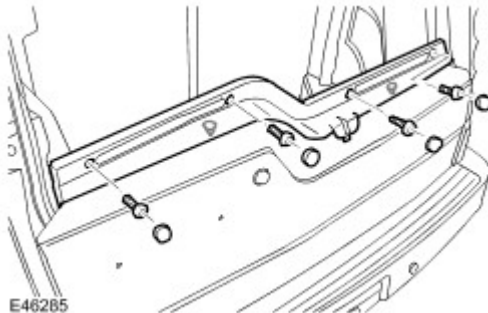


2.  **CAUTION: To protect the paintwork, the tailgate must be supported at all times.**

Release the 2 support cables from the tailgate.

- ▶ Release the 2 clips.

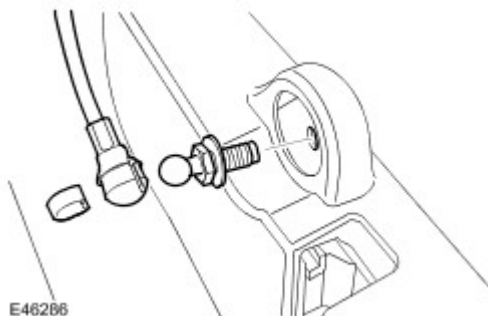

3. Remove the 2 support cable spigots from the tailgate.
4. Lift the tailgate hinge cover for access.
5. Remove the tailgate trim panel.
 - ▶ Release from the 12 clips.

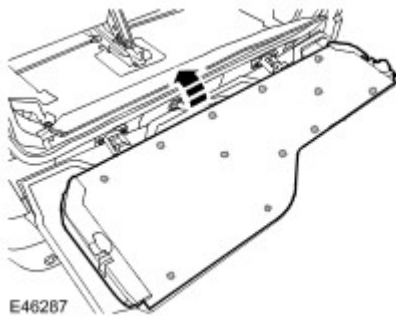


6 .

NOTE :

Do not disassemble further if the component is removed for access only.

Remove the 12 clips from the tailgate trim panel.

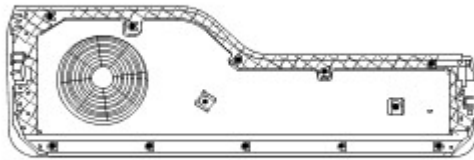

E46268

Installation

1 .

Install the tailgate trim panel.



Install the clips.

2 .

Lower the tailgate hinge cover.

3 .

Tighten the support strut spigot to 25 Nm (18 lb.ft).

4 .

Position the support cables to the tailgate and secure with the clips.

5 .

Install the tailgate upper trim panel.



Secure with the clips.



Install the screws.



Install the screw covers.