

Published : Mar 23, 2004




## Tailgate Striker Adjustment (76.28.03)

- 1 . Check for an equal gap and alignment to the adjacent panels. If incorrect, follow the adjust procedure below.



E46273

- 2 . Remove the tailgate striker trim panel.
- 3 . Loosen the 2 tailgate striker bolts.

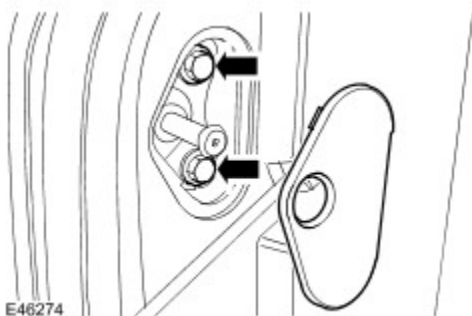

E46274

- 4 . Close the tailgate and check for an equal gap and alignment to the adjacent panels.
- 5 . Open the tailgate and tighten the tailgate striker bolts to 25 Nm (18 lb.ft).
- 6 . Install the tailgate striker trim panel.