



NEUTRAL SWITCH REMOVAL/INSTALLATION [G35M-R]

B3E051501029W06

1. Remove the under cover.
2. Remove the No.1 engine mount rubber and No.1 engine mount bracket.

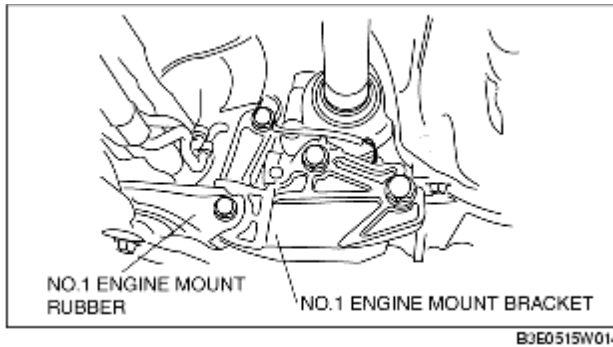

3. Remove the neutral switch.

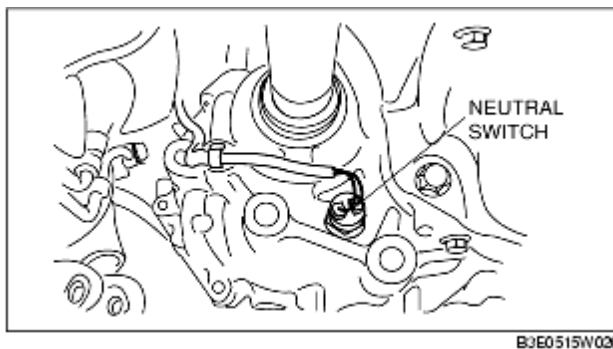

4. Install the neutral switch (with a new packing) to the transmission case.

Tightening torque
19.6-29.4 N·m
{2.0-2.9 kgf·m, 14.5-21.6 ft·lbf}

5. Install the No.1 engine mount bracket and No.1 engine mount rubber.

